

Watch Instructional Manual

RUGGED WATCH.

Specifications

 
MOVEMENT	BJK618
CASE SIZE	44.00MM
CASE THICKNESS	14.35MM
DIAL TYPE	Analog - Digital
WATER RESISTANCE	5ATM
WATCH FUNCTIONS	3 Hand / Alarm / Date / Chronograph
HOURL MARKERS	Steel with White Lume
DATE FUNCTION	Digital
STEEL	316L Stainless Steel
GLASS	Mineral Crystal
WARRANTY	1 Year

General Functions



Setting Main Time - Primary Crown


- (1). Pull Crown to Position 1.
Turn crown clockwise until you get to the day before today.
- (2). Push the crown in. Your watch is set.

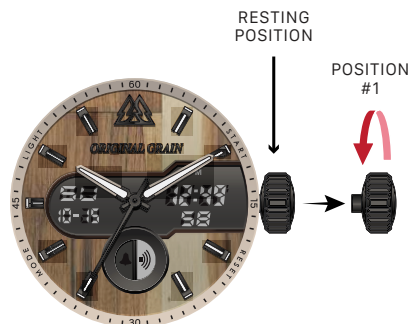

Watch Instructional Manual

RUGGED WATCH.

 Setting Digital Functions

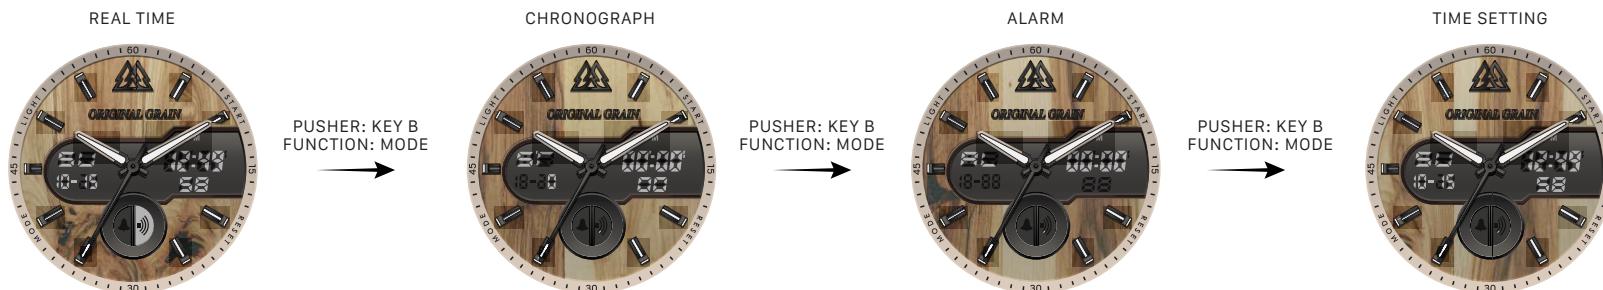

Setting Digital Functions

1. At any state ,press KEY A, EL backlught for 3s .

2. Chronograph

- Press D key to Start/Stop running ;
- When stop, press C key to zero.
- When running ,press C key to split count. Indicator "SP" showing
- Then press D key to exit split count ,and stop counting ; press C key again to zero ;
- When running ,press B key to return to Real Time Mode ,and it running at back .

3. Daily Alarm

- Turn On / Off Alarm and Chime

Press D key to turn on/off Alarm (🔊) or Chime (🔔)

- Alarm setting : Press C key to select "Hour " or "Minute "setting, Press D key to adjust the flashing item, Press C key to confirm, Press B key to return to Real Time mode.

- Alarm Snooze ON/OFF

At Alarm sounding state ,press C key or D key to stop sounding ,and press B key to ON/OFF snooze function .When Snooze function be ON, it will sound five minutes later ,and auto stop after sounding for 20 Second.

4. Time Setting

- "Second " flashing when loading ,press D key to zero ; Press C key to select item as following sequence :

Hour → Minute → Month → Day → Week → Second

 
- When setting "Hour " ,"H" display for 2 4H format ;"A" or "P" for 1 2H format .

- Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 29, the minutes are unchanged.

Watch Instructional Manual

RUGGED WATCH.

Sizing Bracelet Links

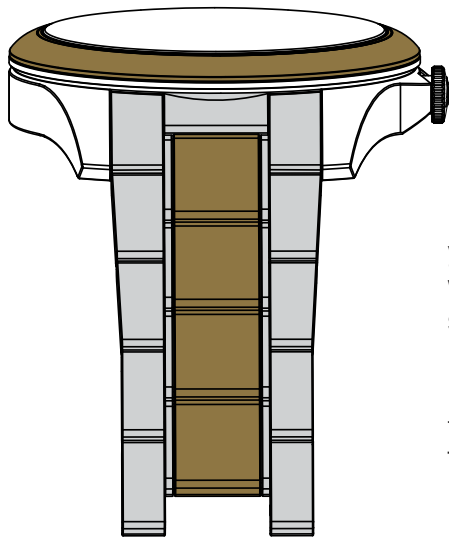

Please do not add/remove links yourself, as we do not cover any wear and tear that may occur when sizing links.

Please visit your local Jeweler to properly size your timepiece. Thank you.

Changing your Battery

This watch contains two batteries. Please do not change the battery yourself, as we do not cover any wear and tear, or lost parts that may occur when changing the battery.

Please visit your local Jeweler to properly size your timepiece. Thank you.

Water Resistance Chart

	The Rugged Collection	
	30M 3 ATM	50M 5 ATM
Accidental Splashes	✓	✓
Pool Swimming	✗	✓
Water Sports	✗	✗
Scuba Diving	✗	✗

*Wood is not recommended to be fully submerged in water for long periods.



Watch Instructional Manual

RUGGED WATCH.

What is covered under the Manufacturer's Warranty?

We want to ensure that our craftsmanship holds up to a high standard. Original Grain covers all non-final sale watches sold via OriginalGrain.com for a 12-month period after the date of sale. If the watch proves to be defective in material or workmanship under normal use, it will be repaired or replaced free of charge at the discretion of the Original Grain Warranty Department.

The Manufacturer's warranty covers Malfunction or Breakage of:

- Movements
- Dial - Indices, OG Logo
- Hands - Hour, minute, second
- Links - Separation or breakage
- Clasp - Attachments and closure
- Strap - Connections

If the watch proves to be defective in material or workmanship under normal use, it will be repaired or replaced free of charge at the discretion of the Original Grain Warranty Department. All watches outside of our 12-month manufacturer's warranty may apply for an extended warranty at www.originalgrain.com/warranty.

What is NOT covered under the Manufacturer's Warranty?

- Damage to the crystal, bezels/case, watch strap/links or bracelets
- Damage resulting from lack of care, accidents, improper handling or normal wear and tear such as scratches, scuffs, and cracks
- Water damage
- Any watch or bracelet not purchased from an authorized Original Grain retailer
- Final Sale items or discontinued watches
- Theft or lost packages
- This warranty is void if the watch has been damaged by accident, negligence, unauthorized service, or other factors not due to defects in material or workmanship.
- Any items received as a Gift With Purchase is not valid under warranty or return.