


| | Crown position | | |
|-----------|---|---|--------------|
| | 0 click | 1st click | 2nd click |
| Crown | Free | Turn clockwise for date change | Time setting |
| 2H button | Chronograph Start/Stop Restart | Chronograph Start/Stop Restart | [*1] |
| 4H button | Chronograph Reset Split Split release | Chronograph Reset Split Split release | [*1] |

[*1] How to set the "0" position / System-reset (Crown position : 2nd click)

How to set the "0" position.

Pull crown out to the 2nd click position.

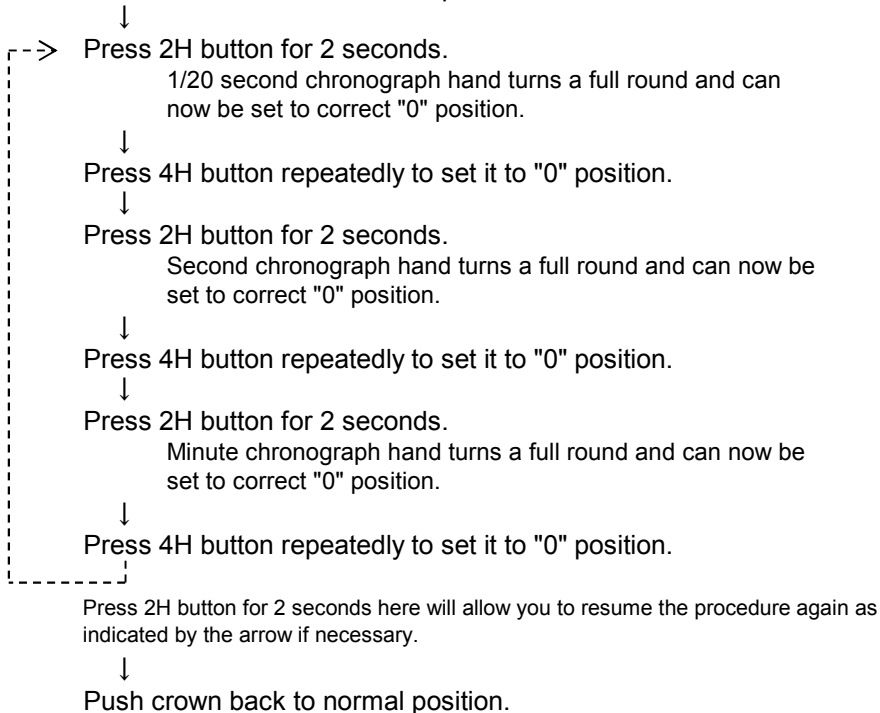

System-reset

Pull crown out to the 2nd click position.

 
↓
Press 2H and 4H buttons at the same time for longer than 2 seconds.

It is necessary to set the "0" position after system-reset.


Chronograph function

- The chronograph can measure up to 60 minutes in 1/20 second increments.
- After the chronograph is started or restarted or split time is released, 1/20 second chronograph hand moves about 1 minute and automatically stops at the "0" position. When the measurement is stopped or split time is measured, it moves to indicate the elapsed 1/20 seconds.
- When the measurement reaches 60 minutes, the chronograph automatically stops counting.

■ Standard measurement



■ Accumulated elapsed time measurement

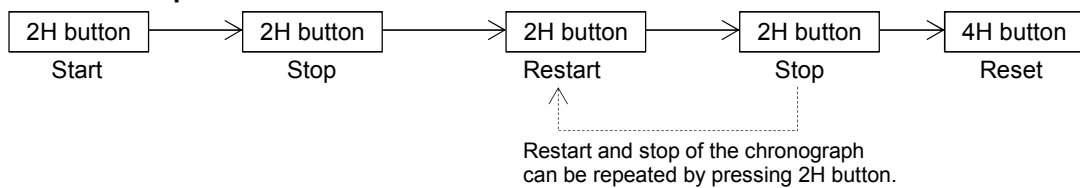

■ Split time measurement

