 
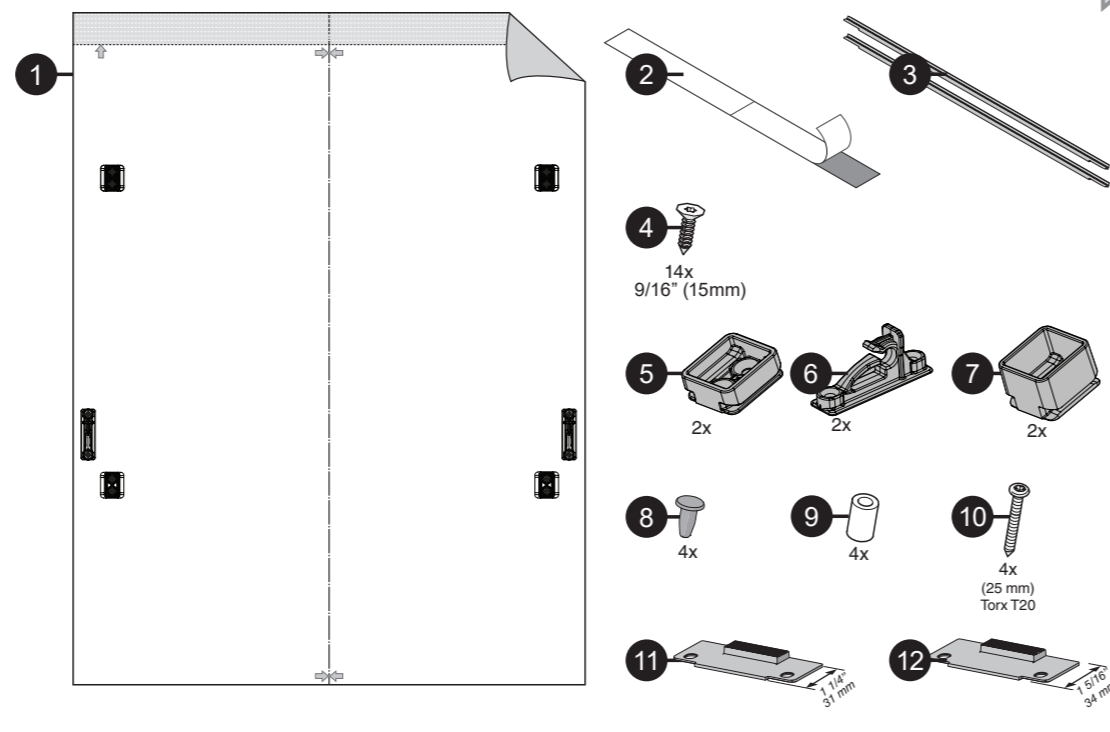 


X  
Inch  
mm




**A**

   EN Cover door with slide function fitted  
ES Panel de la puerta con puerta deslizante instalada  
FR Porte décorative à glissières avec système de coulissement


























X  
Inch  
mm

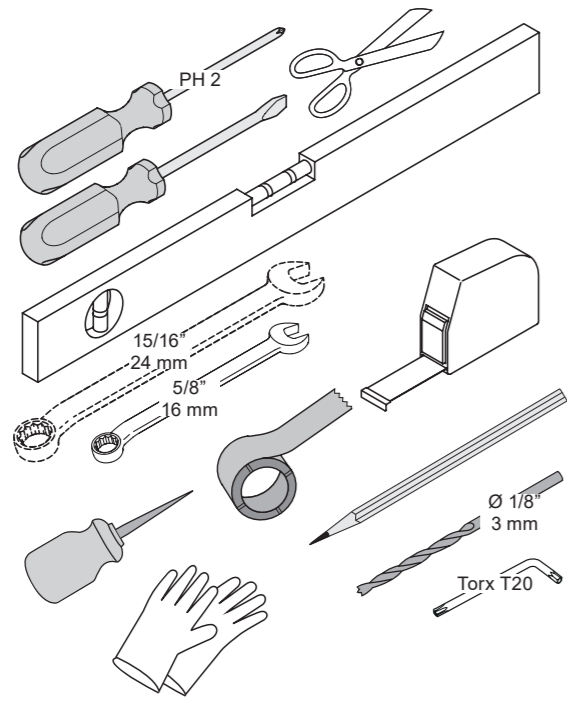

878513-03

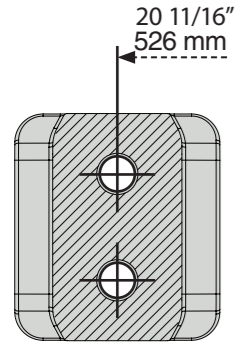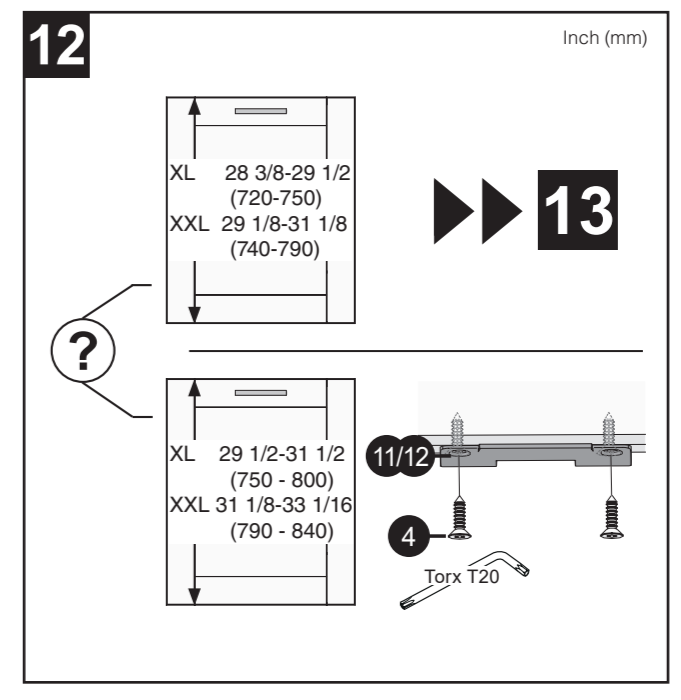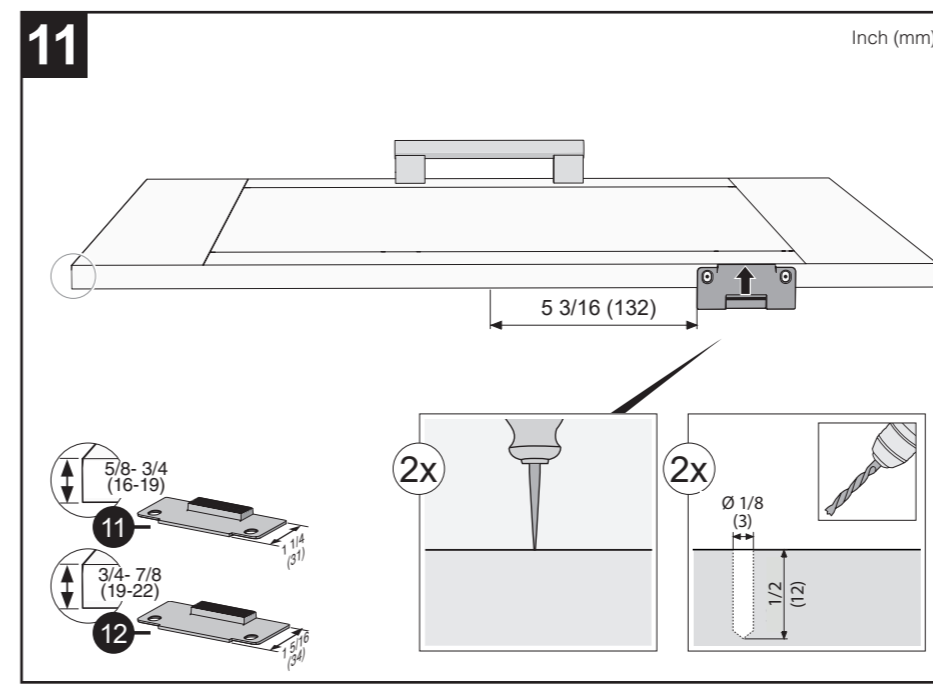

                         \* EN Only certain models. If the following parts are not supplied with your dishwasher, they are not intended for your specific model.  
ES Sólo se aplica a determinados modelos.  
FR Uniquement pour certains modèles.

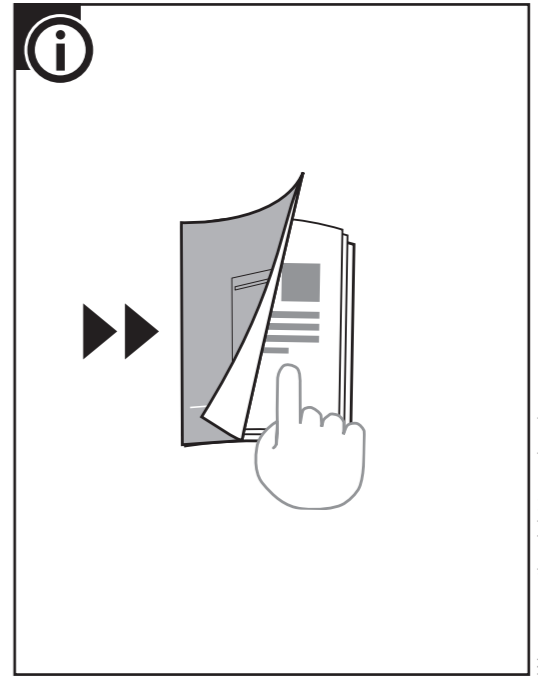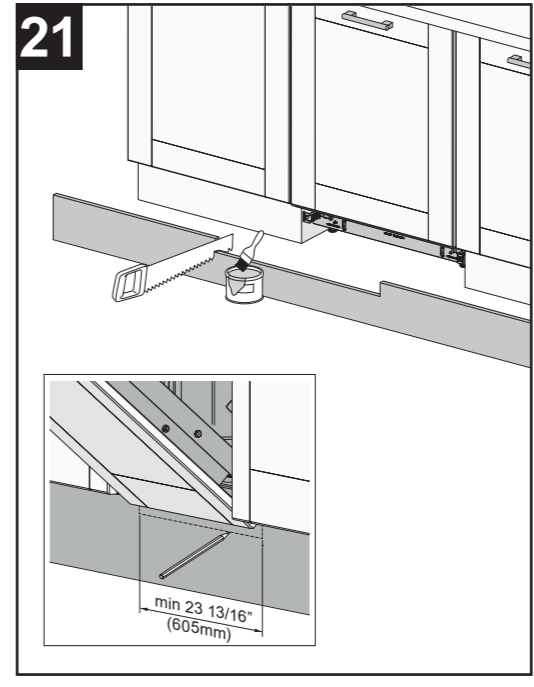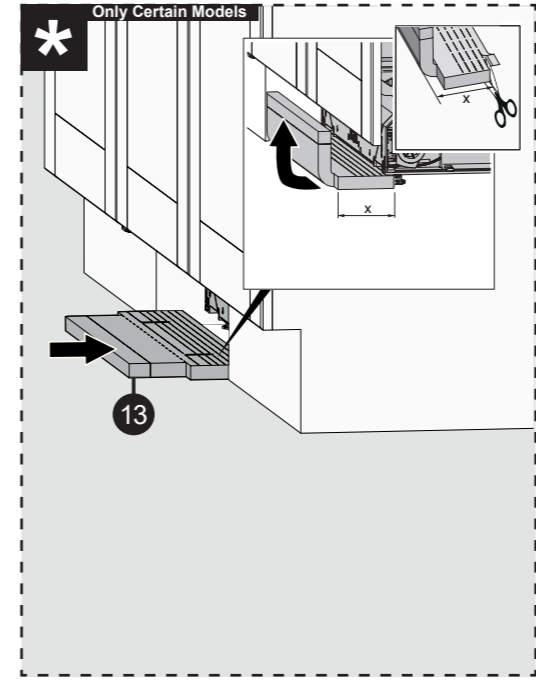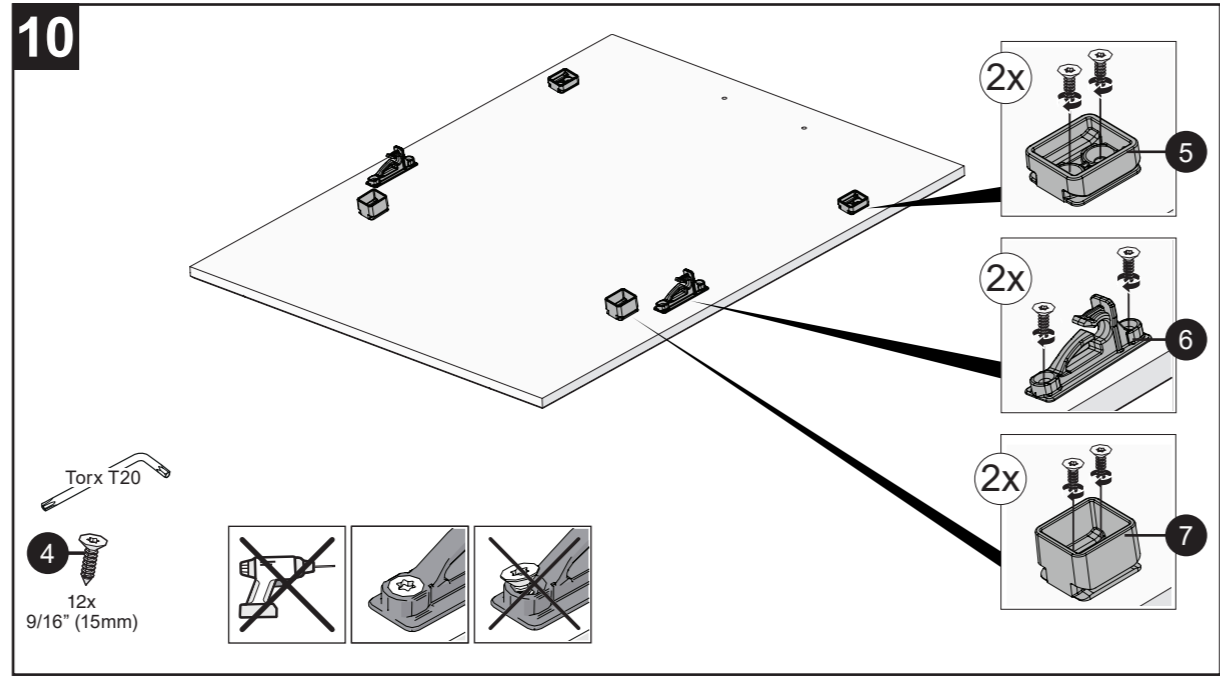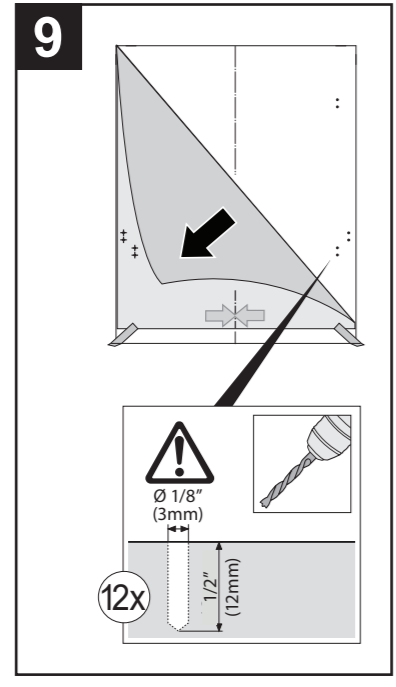
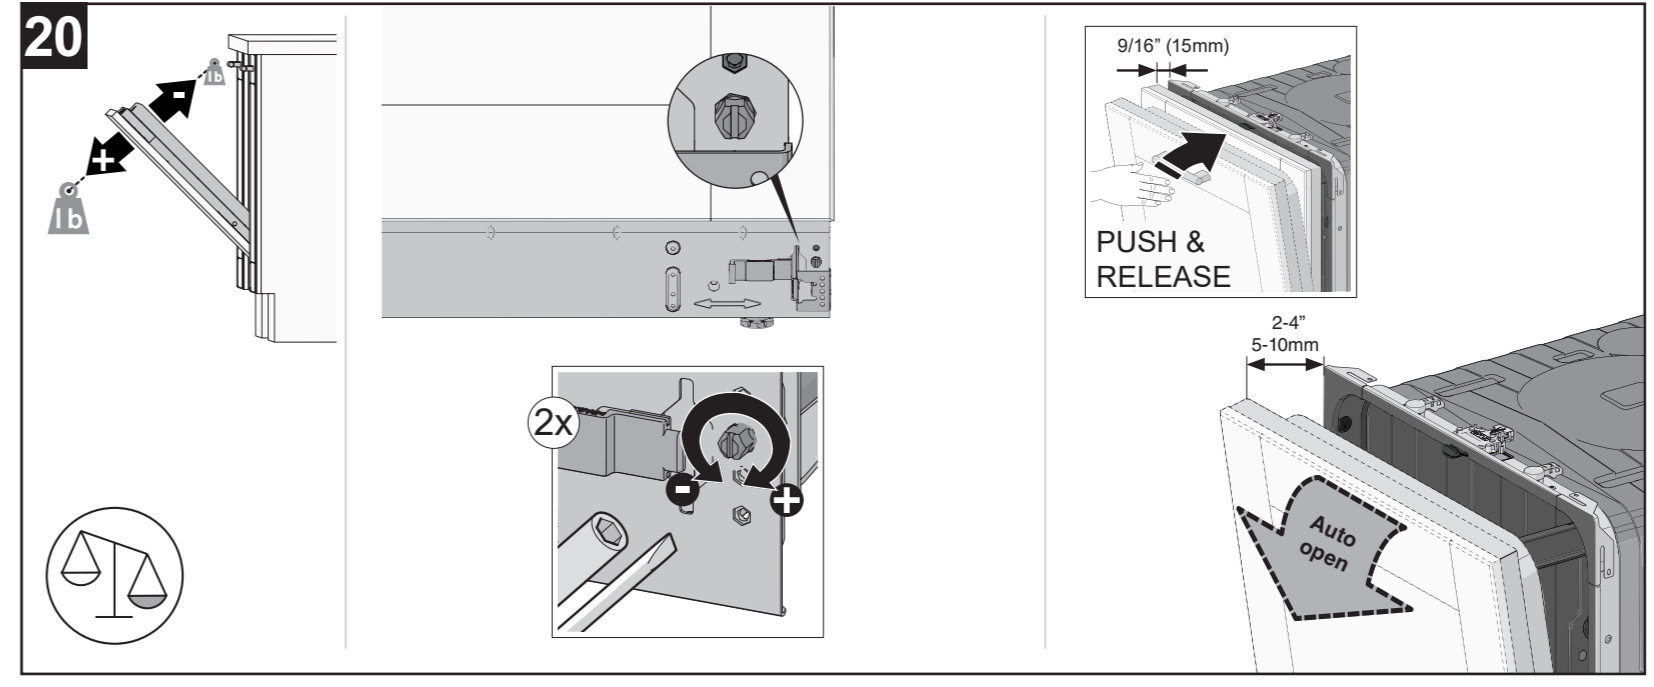
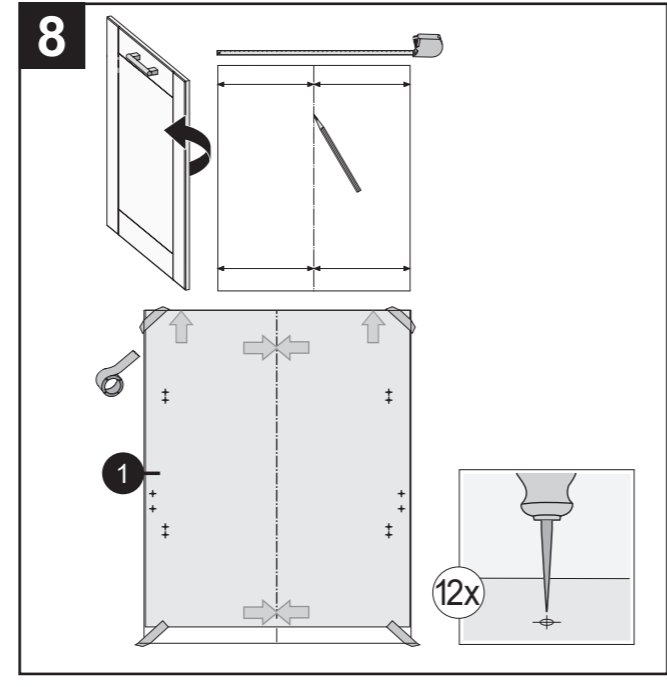
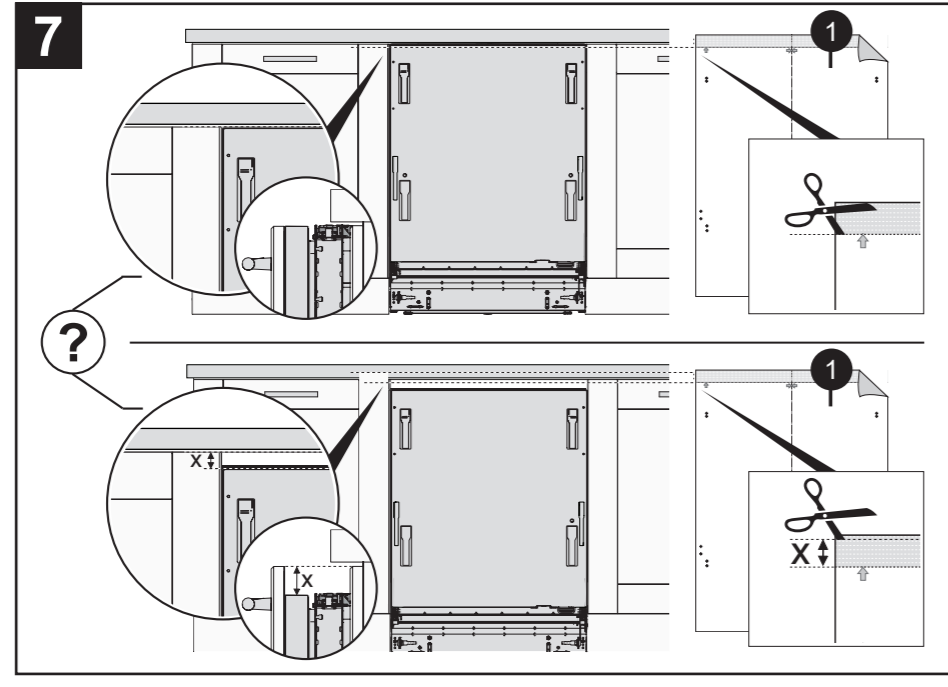
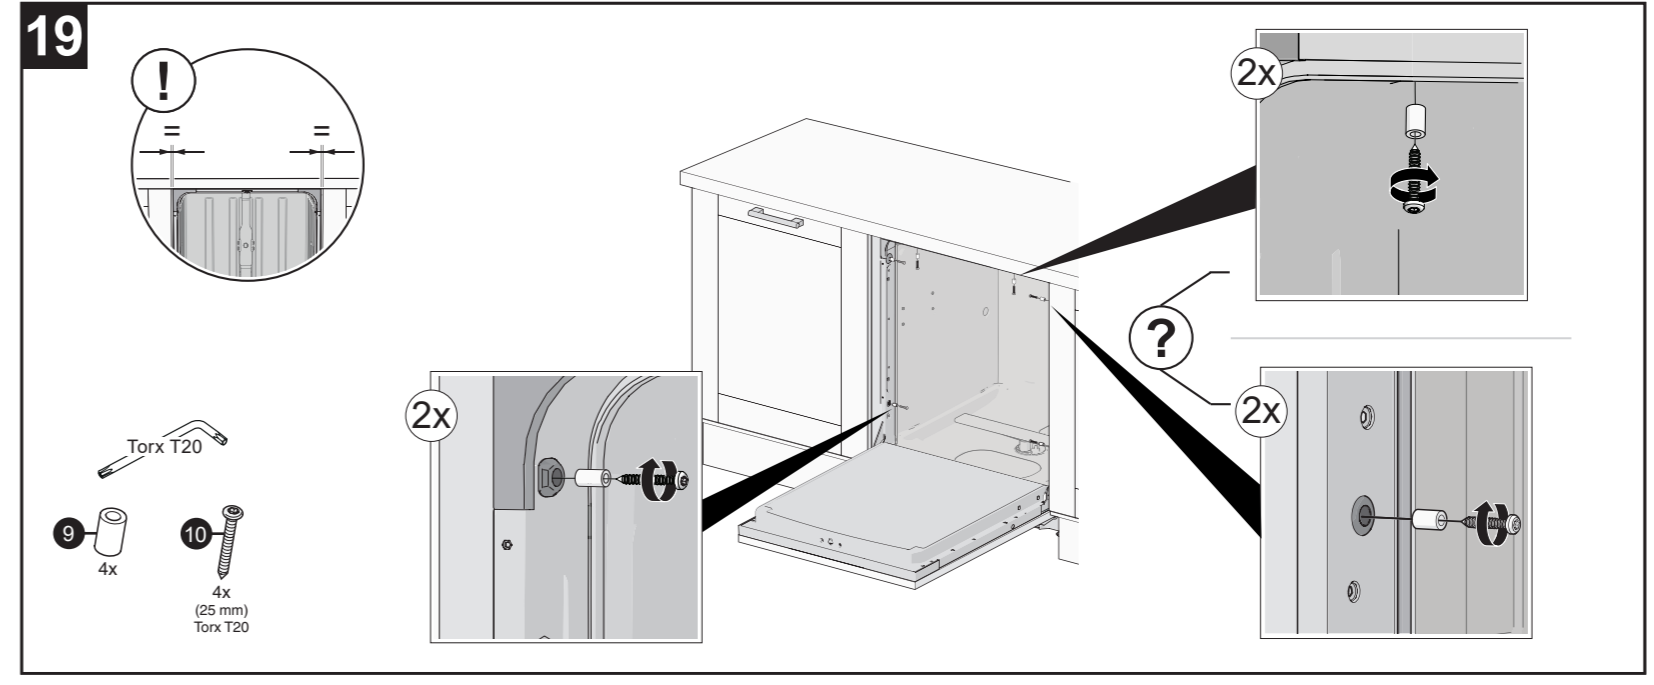
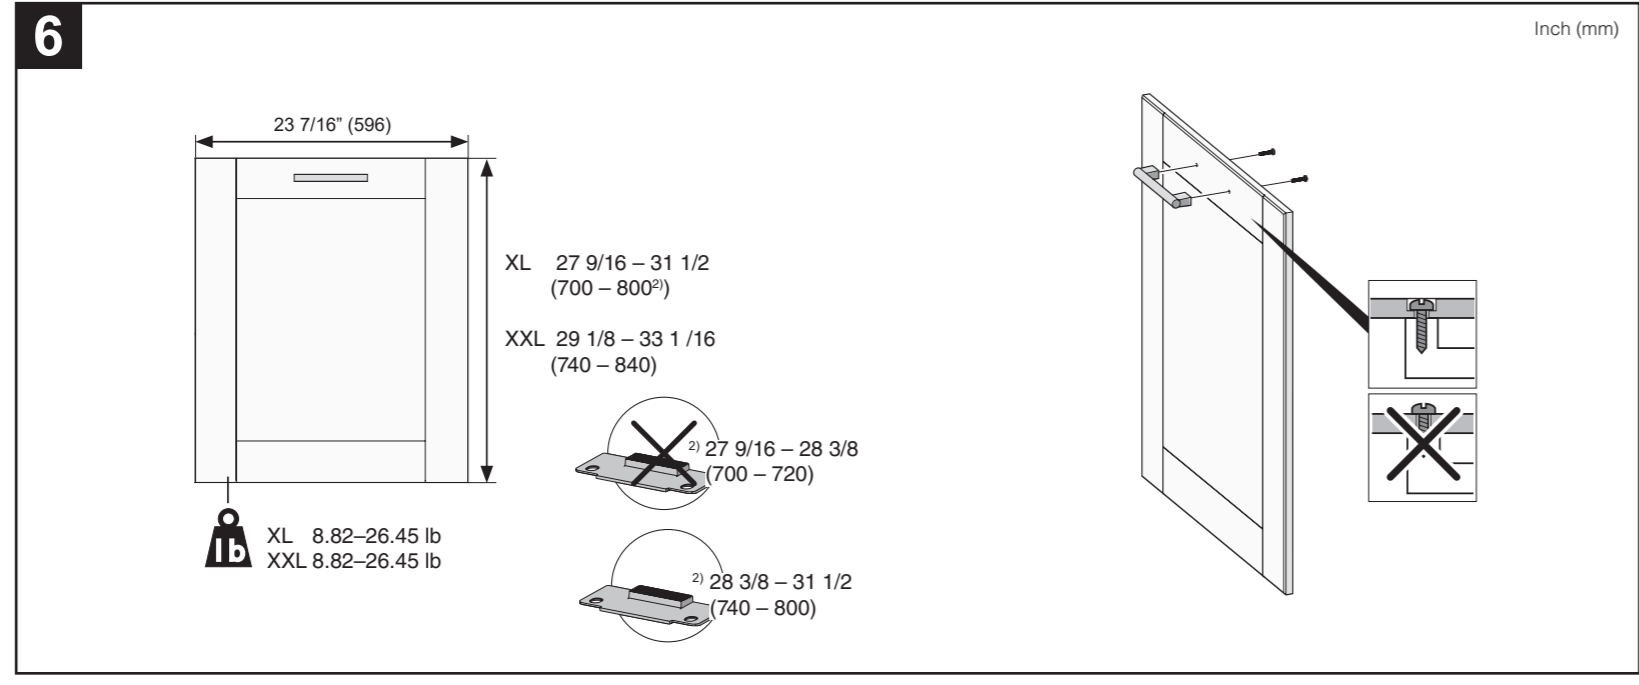
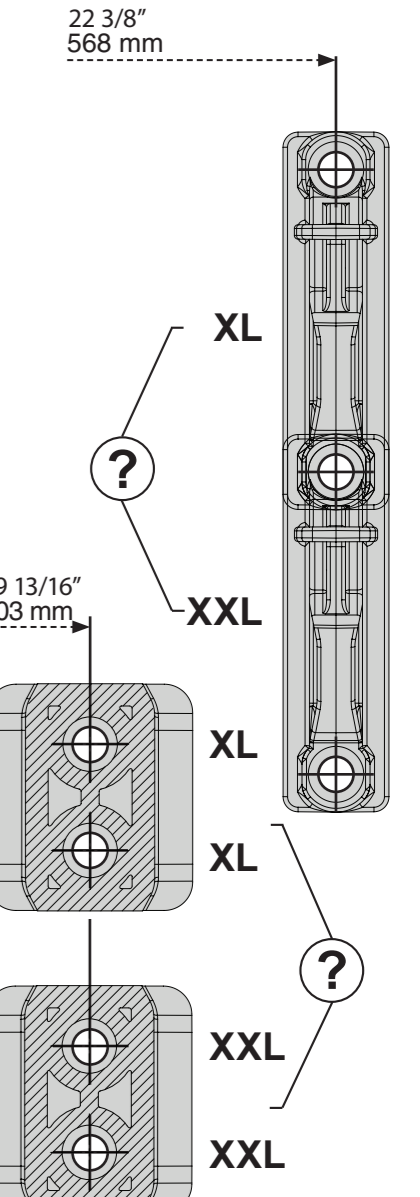
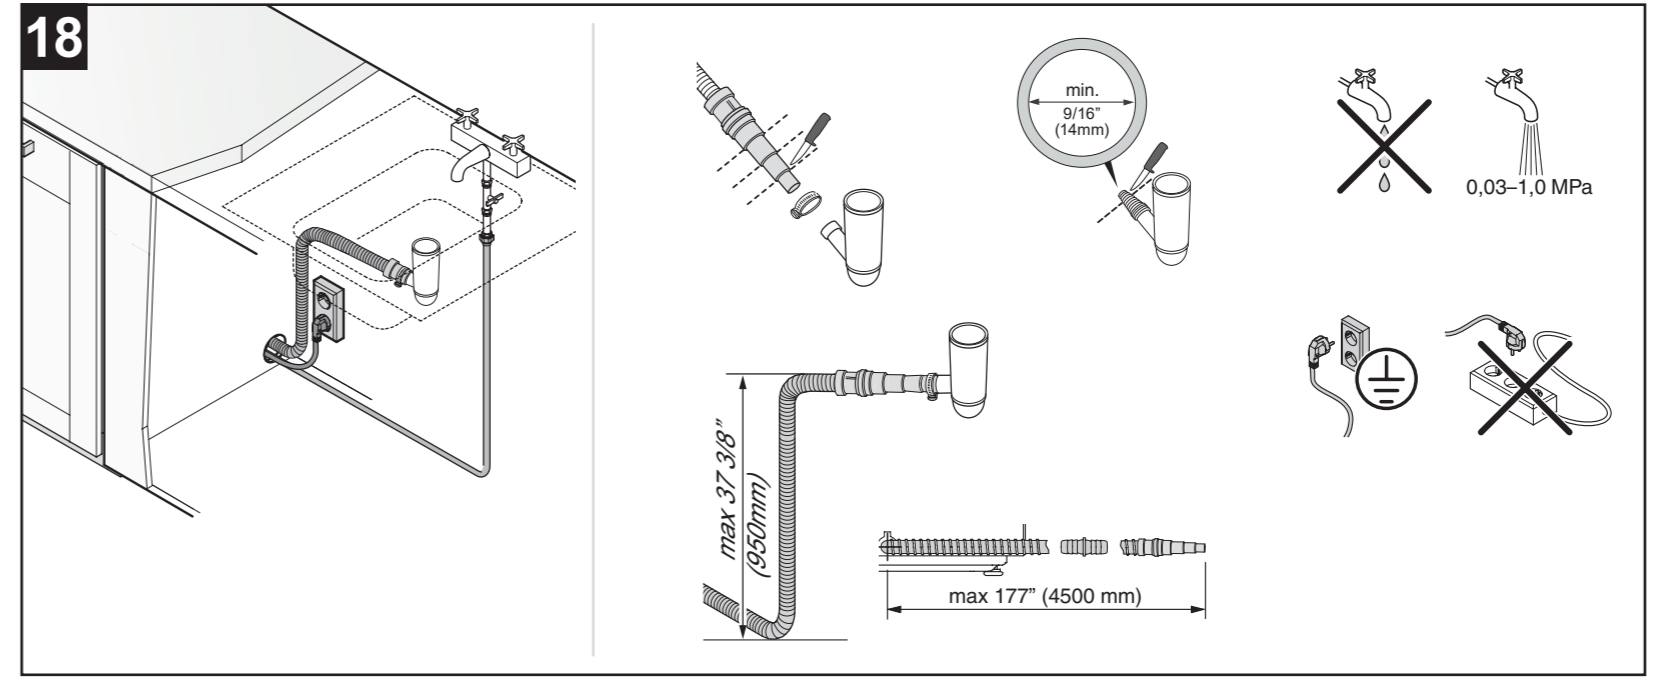
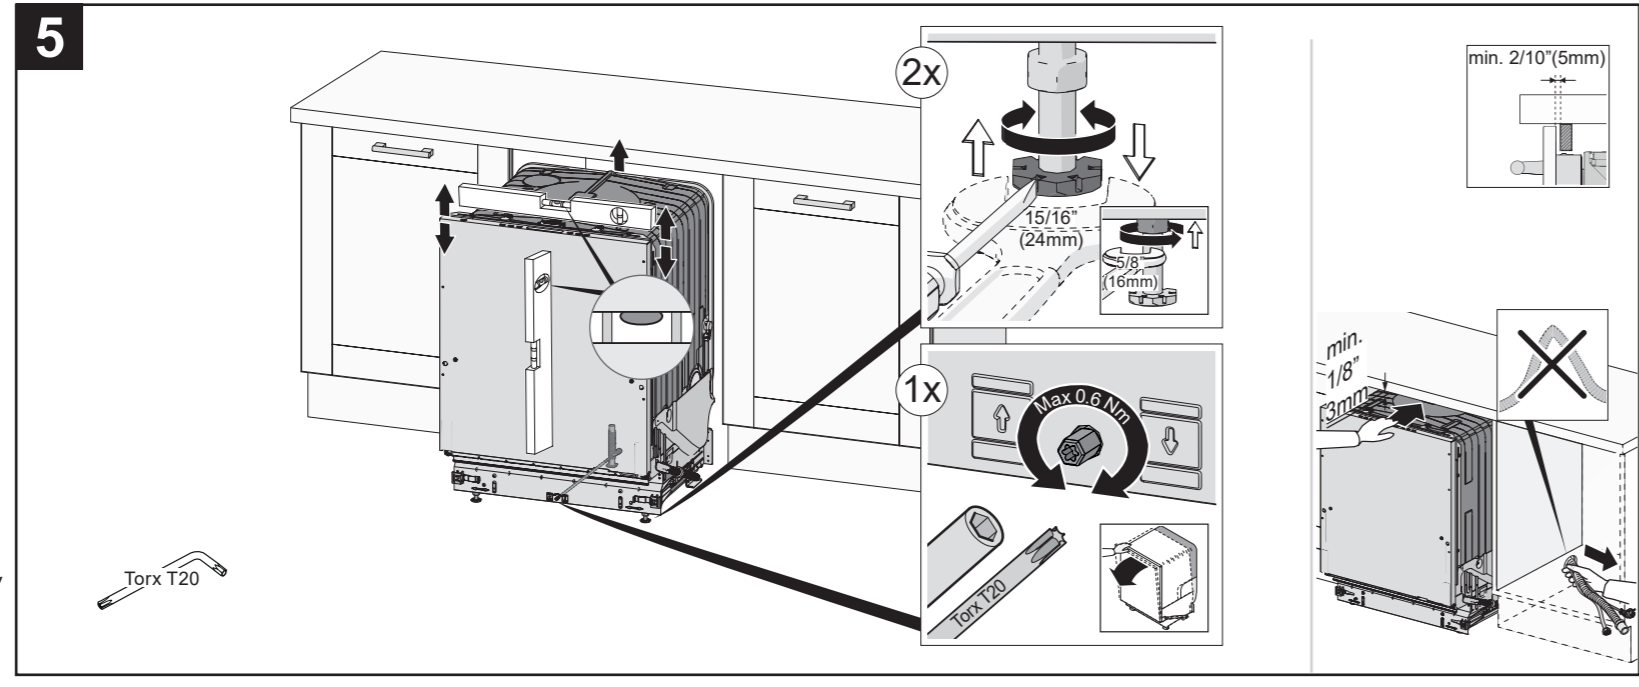
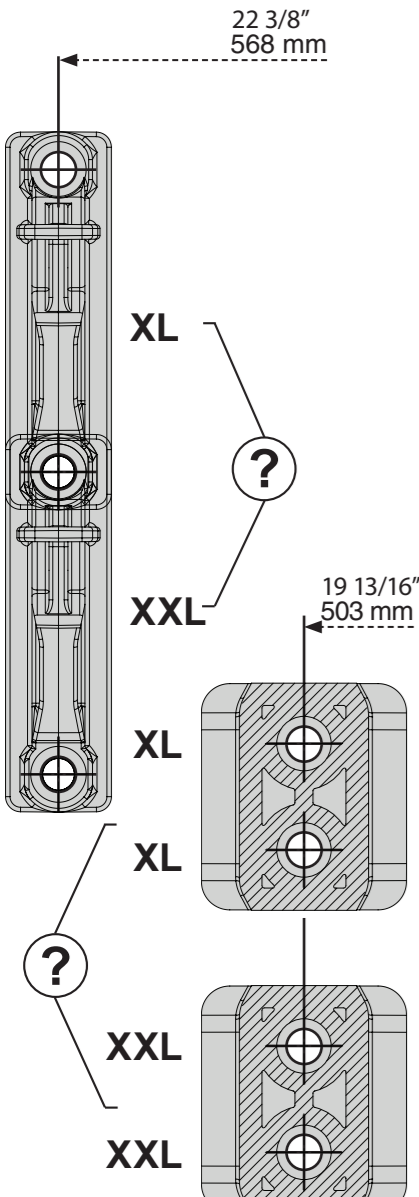
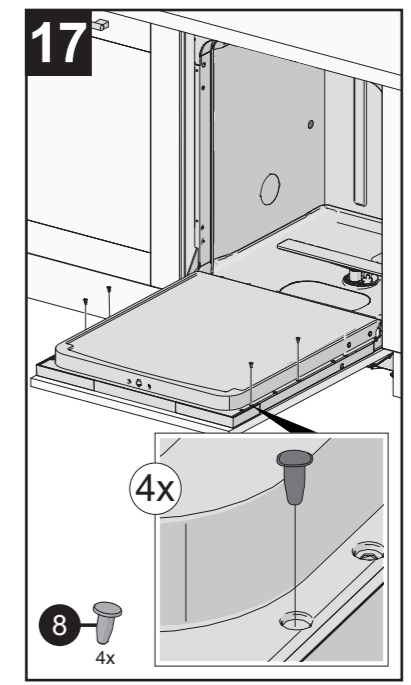
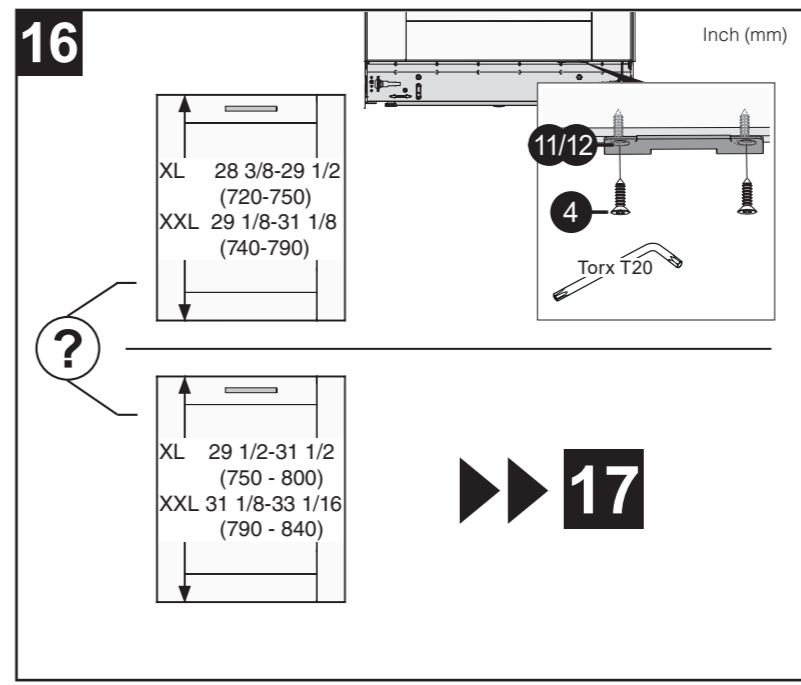
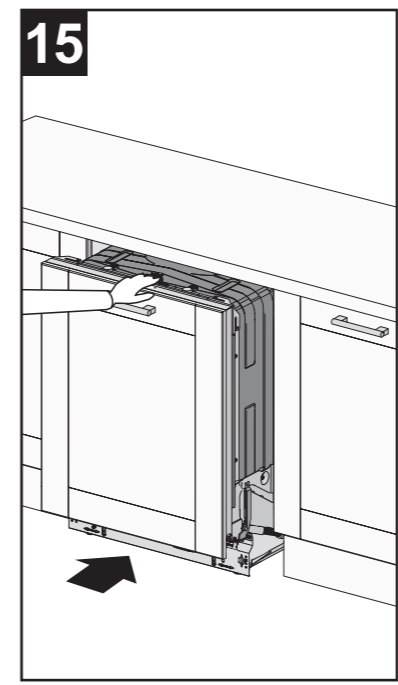
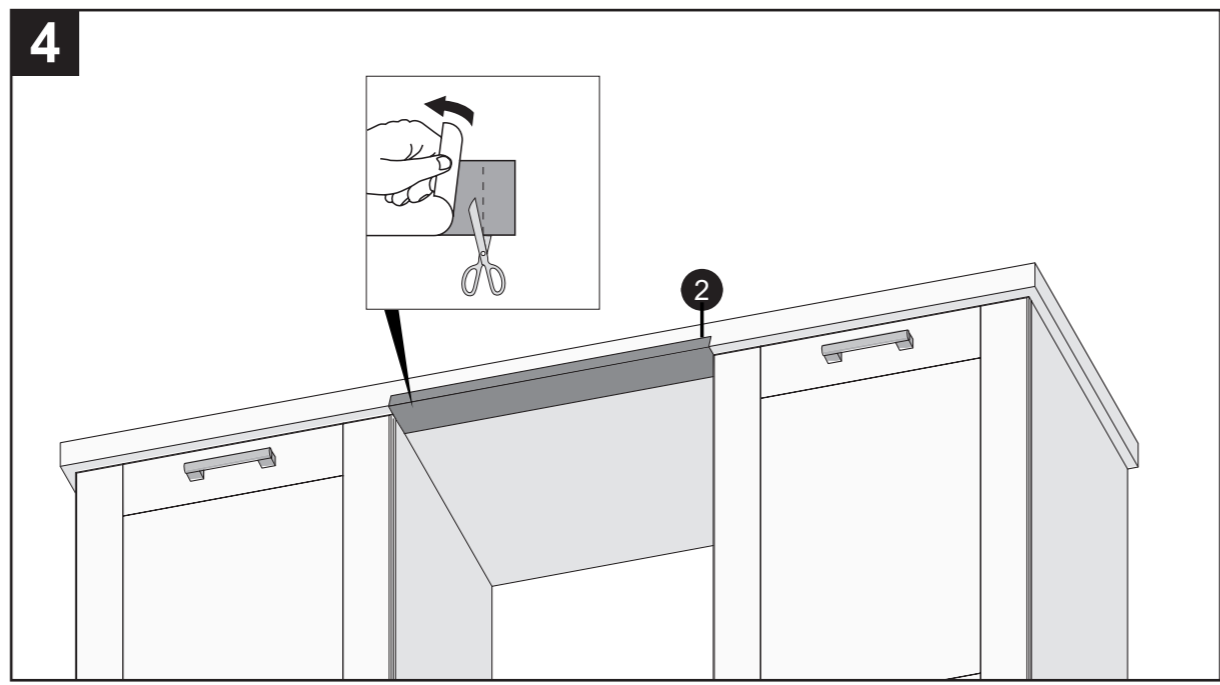
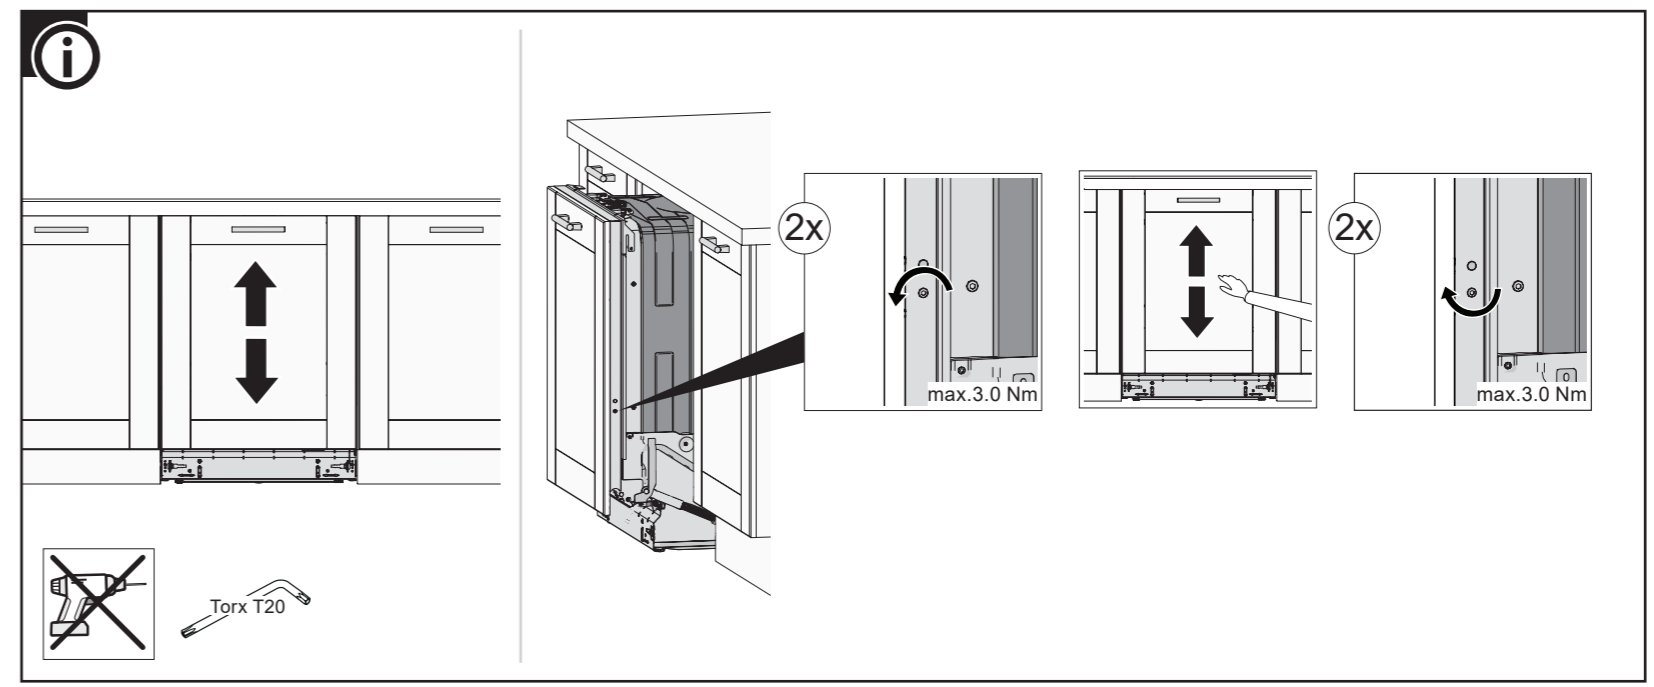
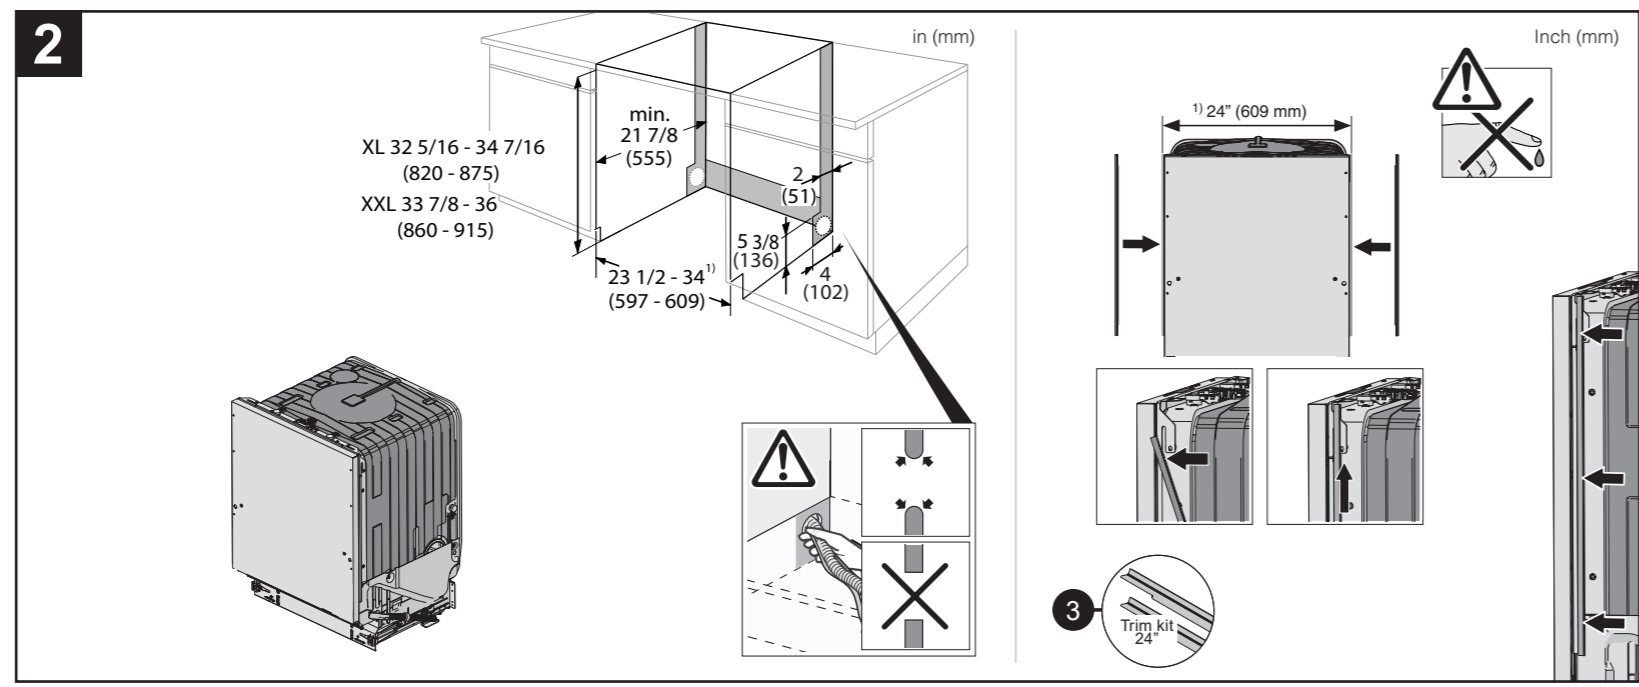
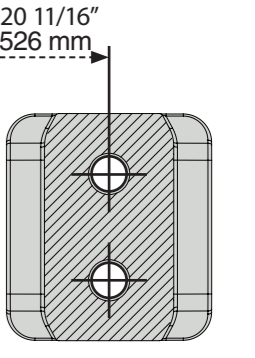
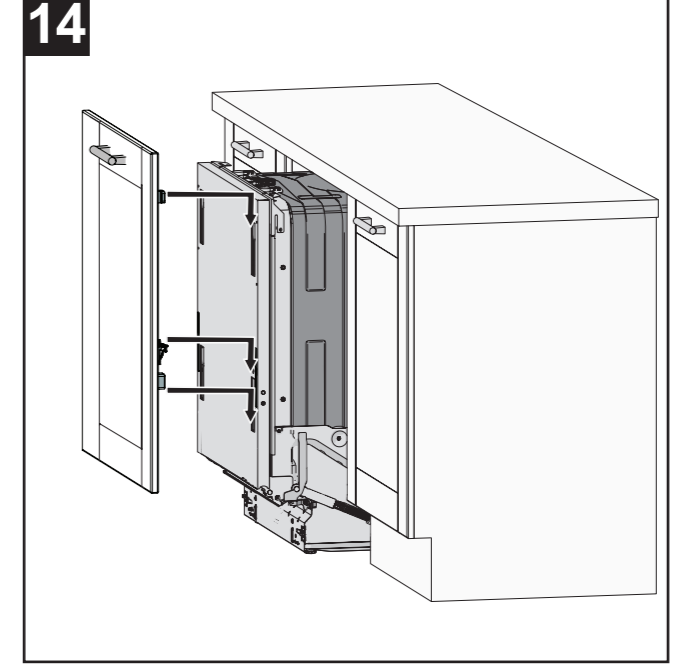
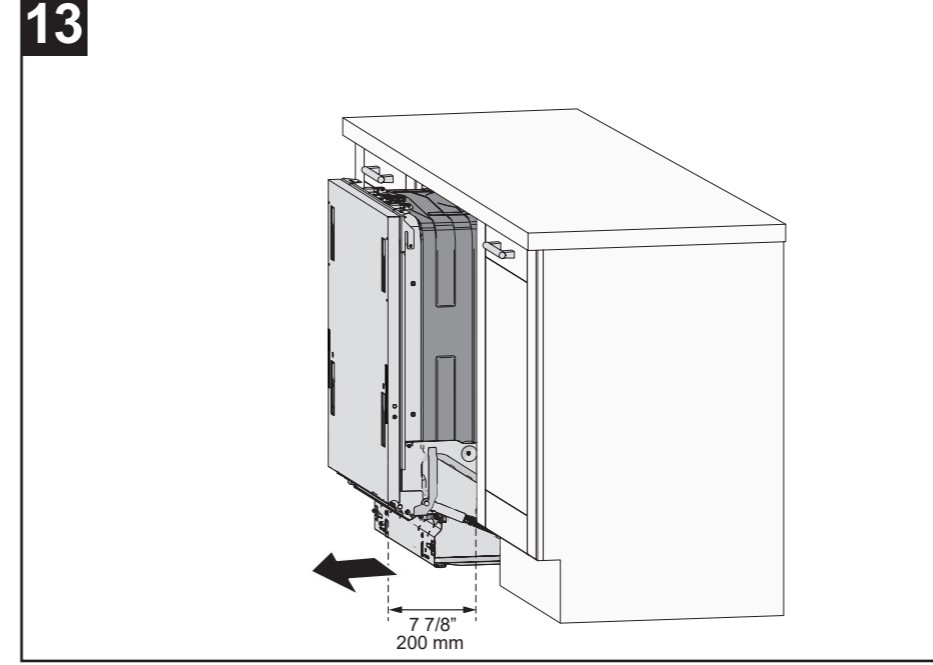
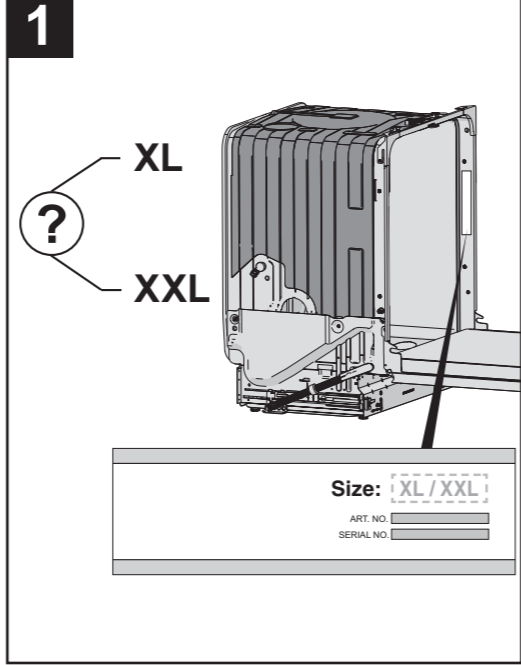
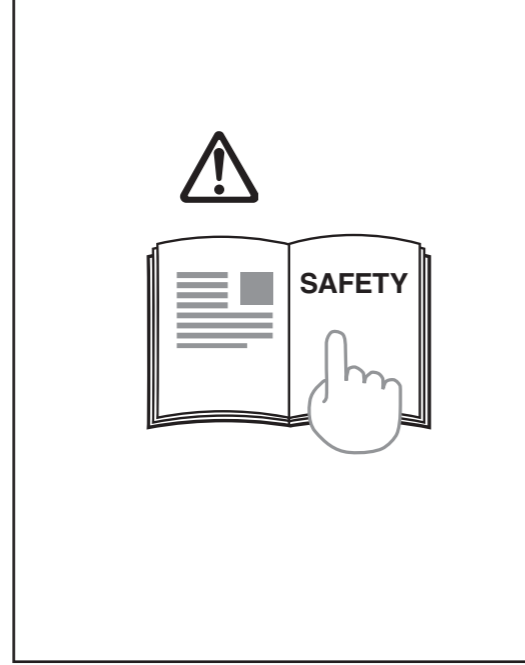


We reserve the right to make changes.

X  
Inch  
mm

**B**

                     EN Fixed cover door  
ES Panel de la puerta fijo  
FR Porte fixe

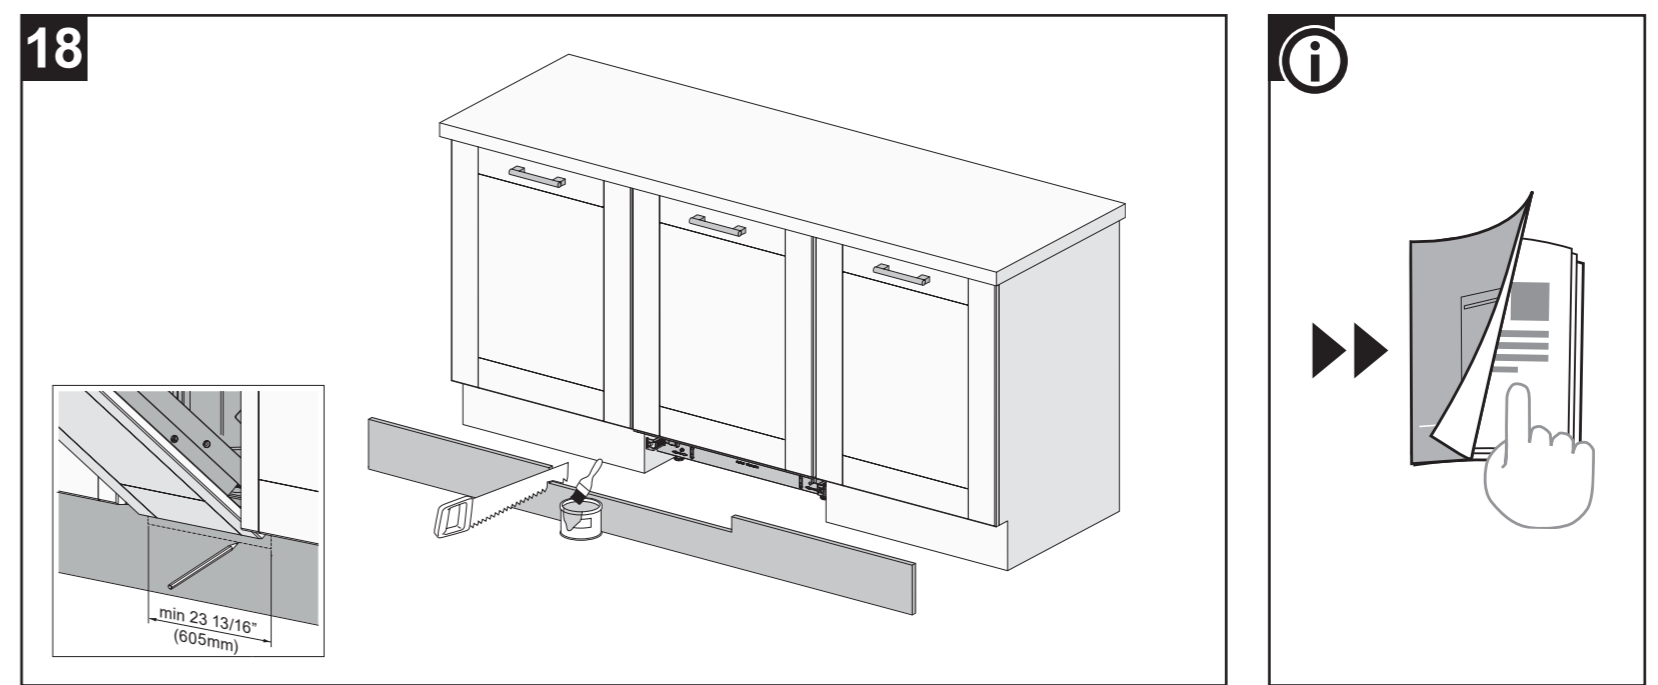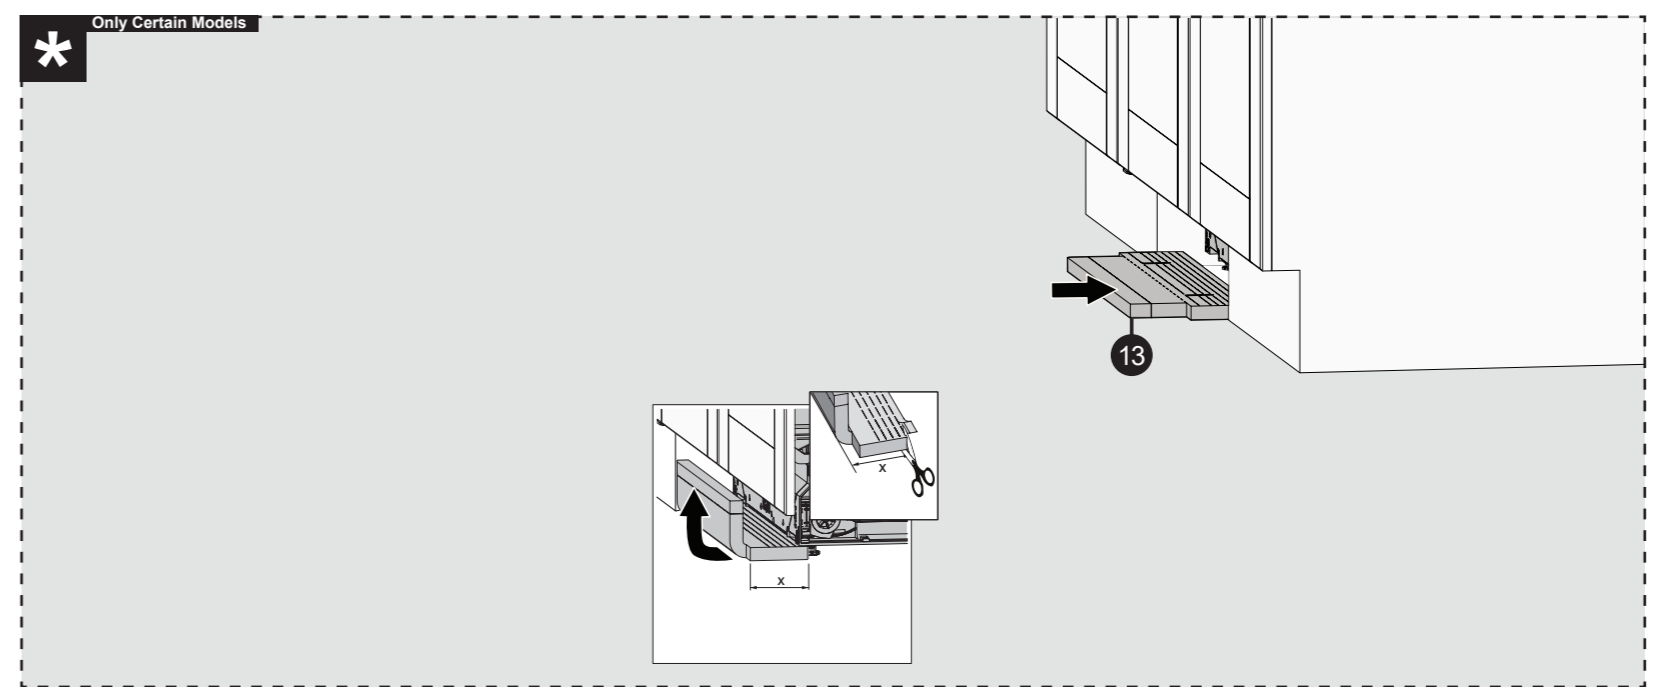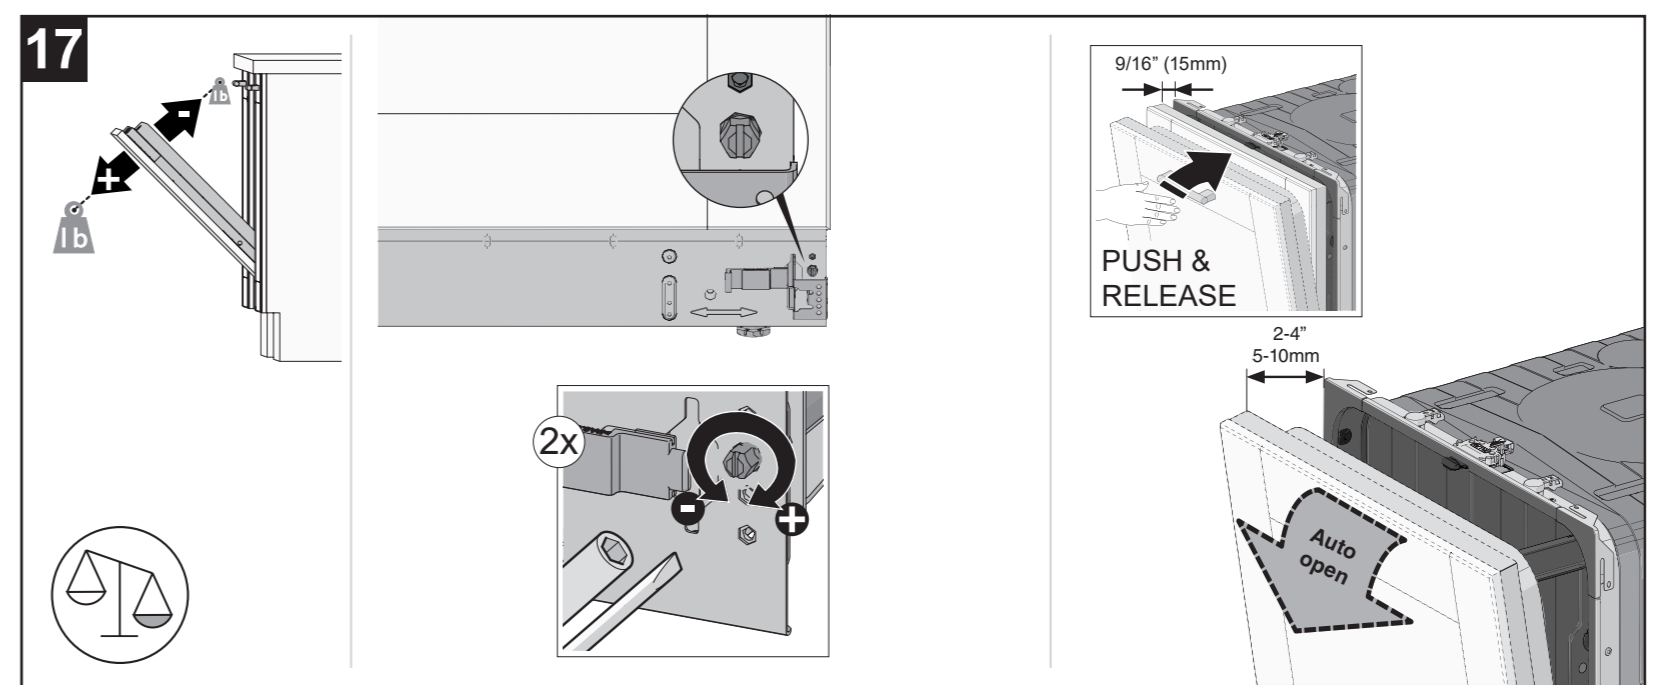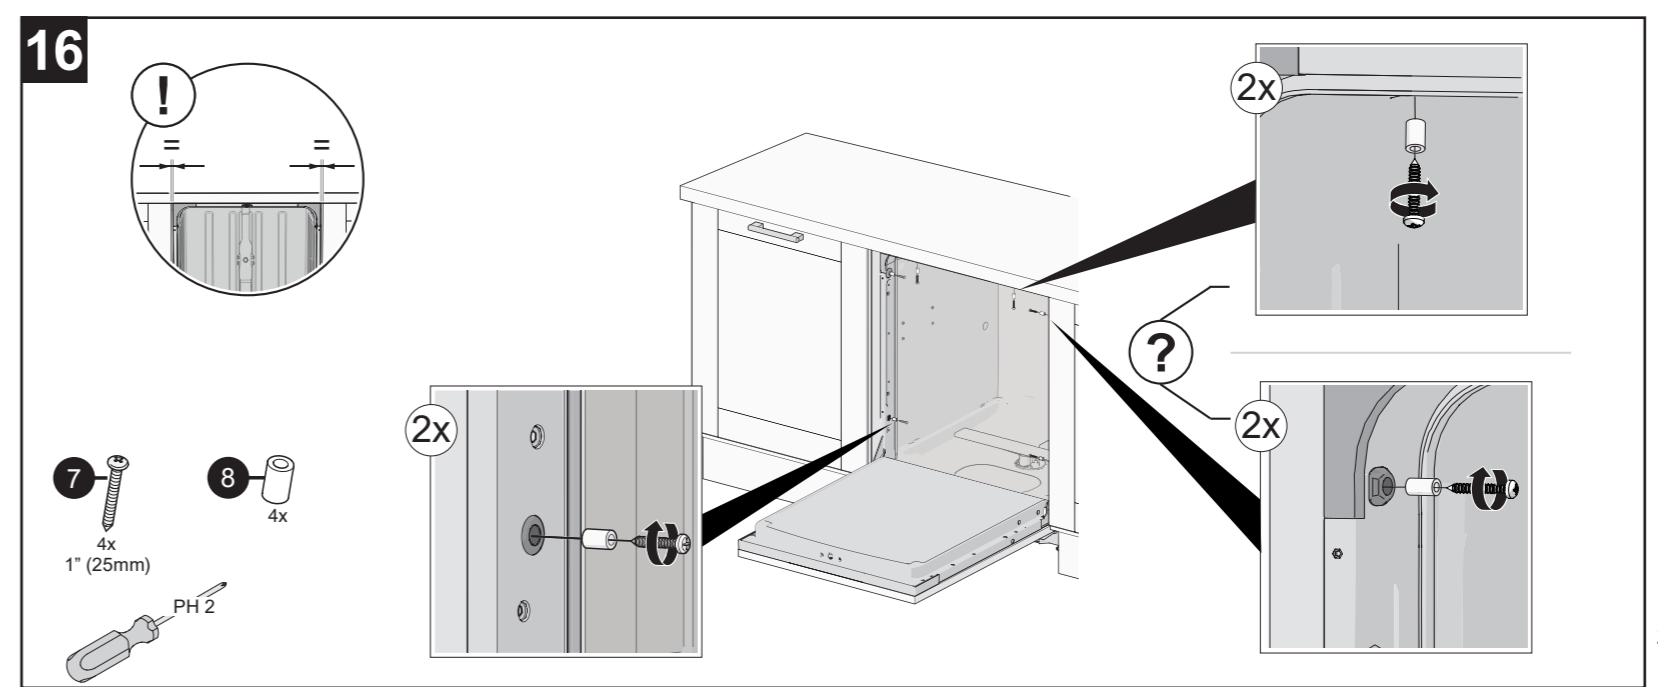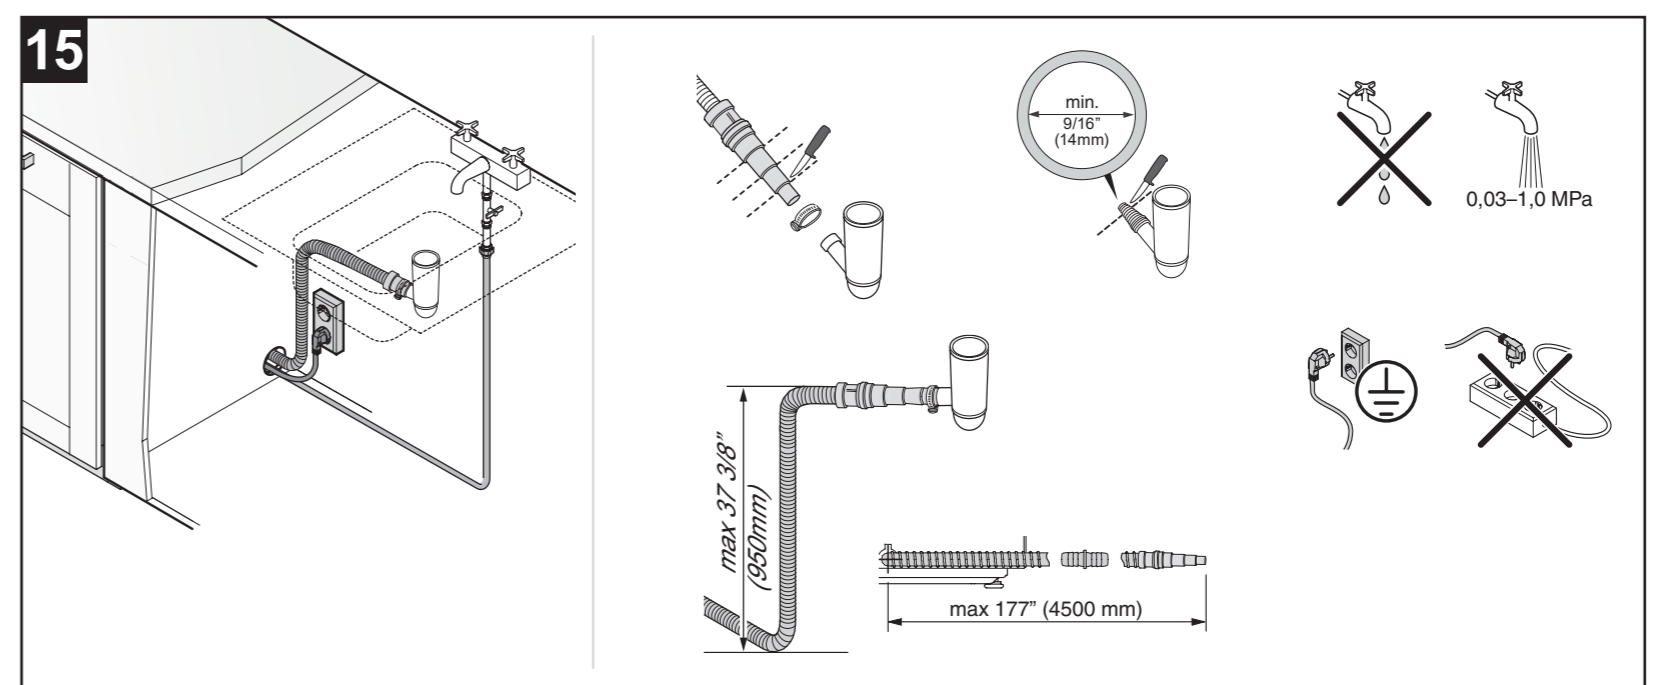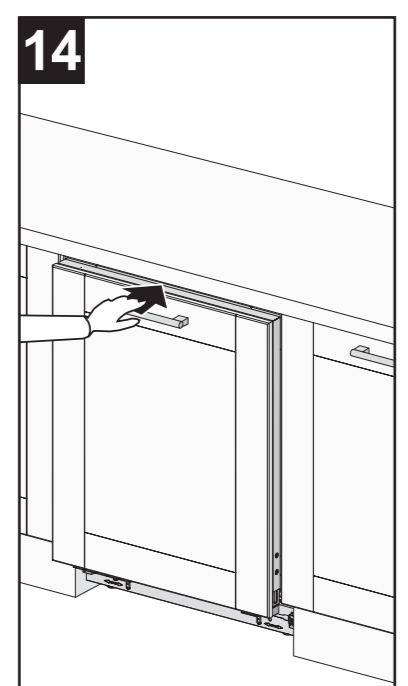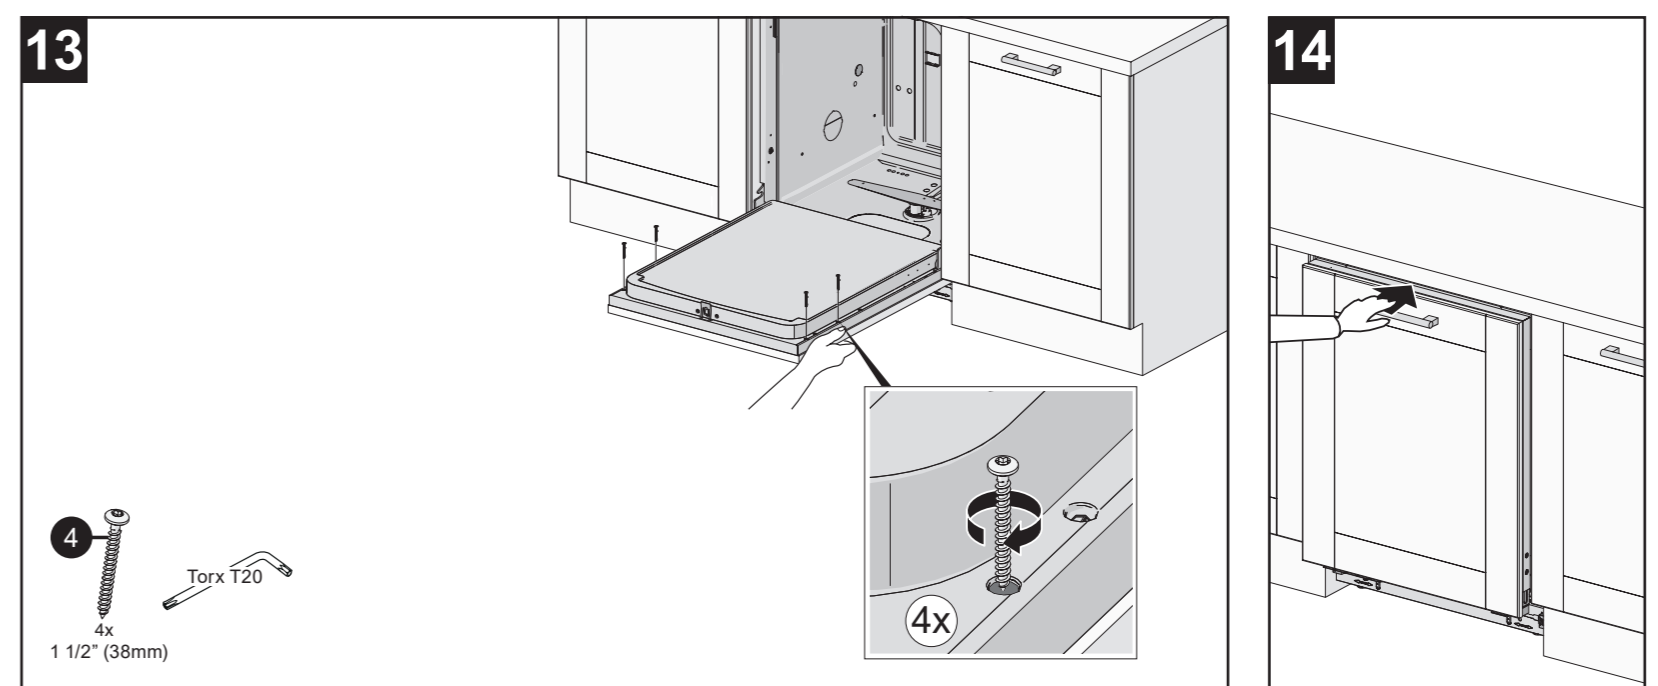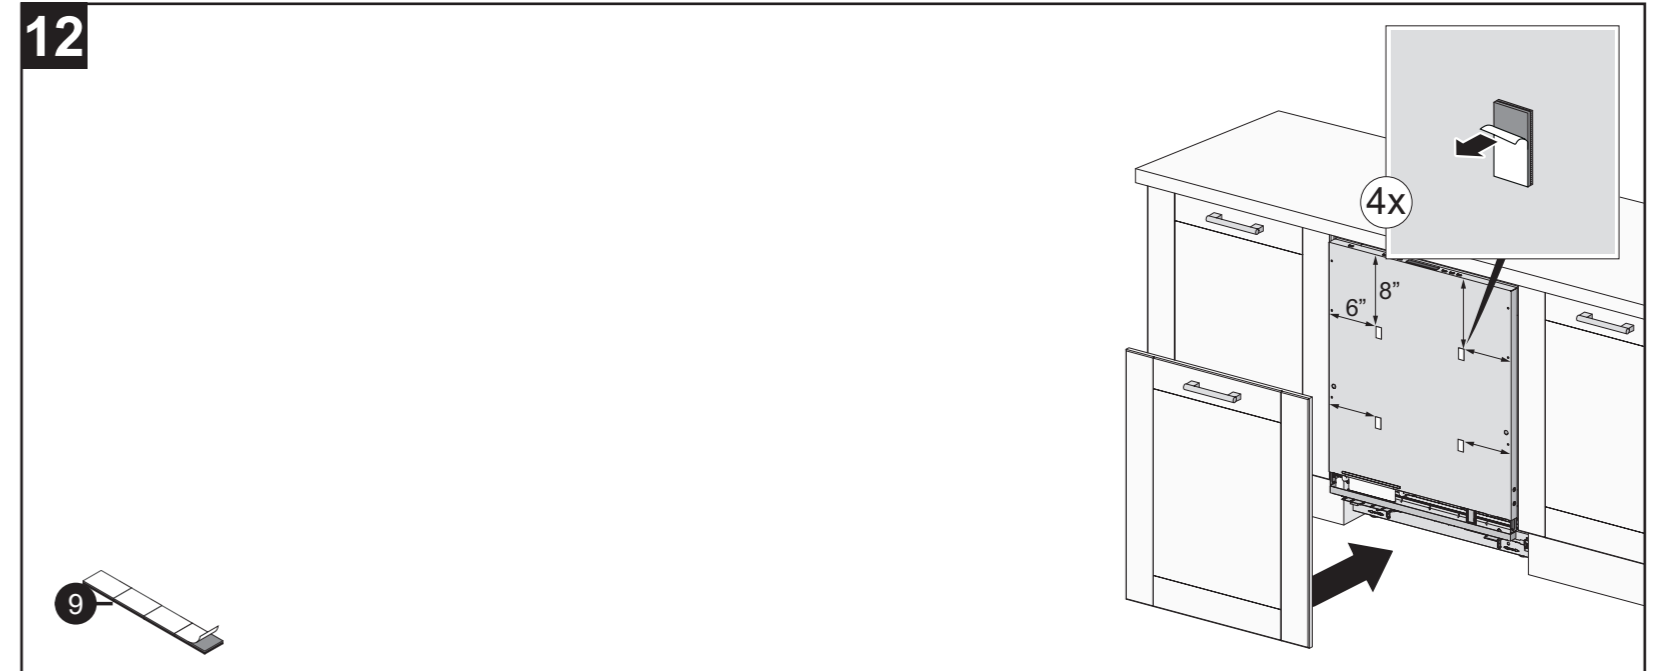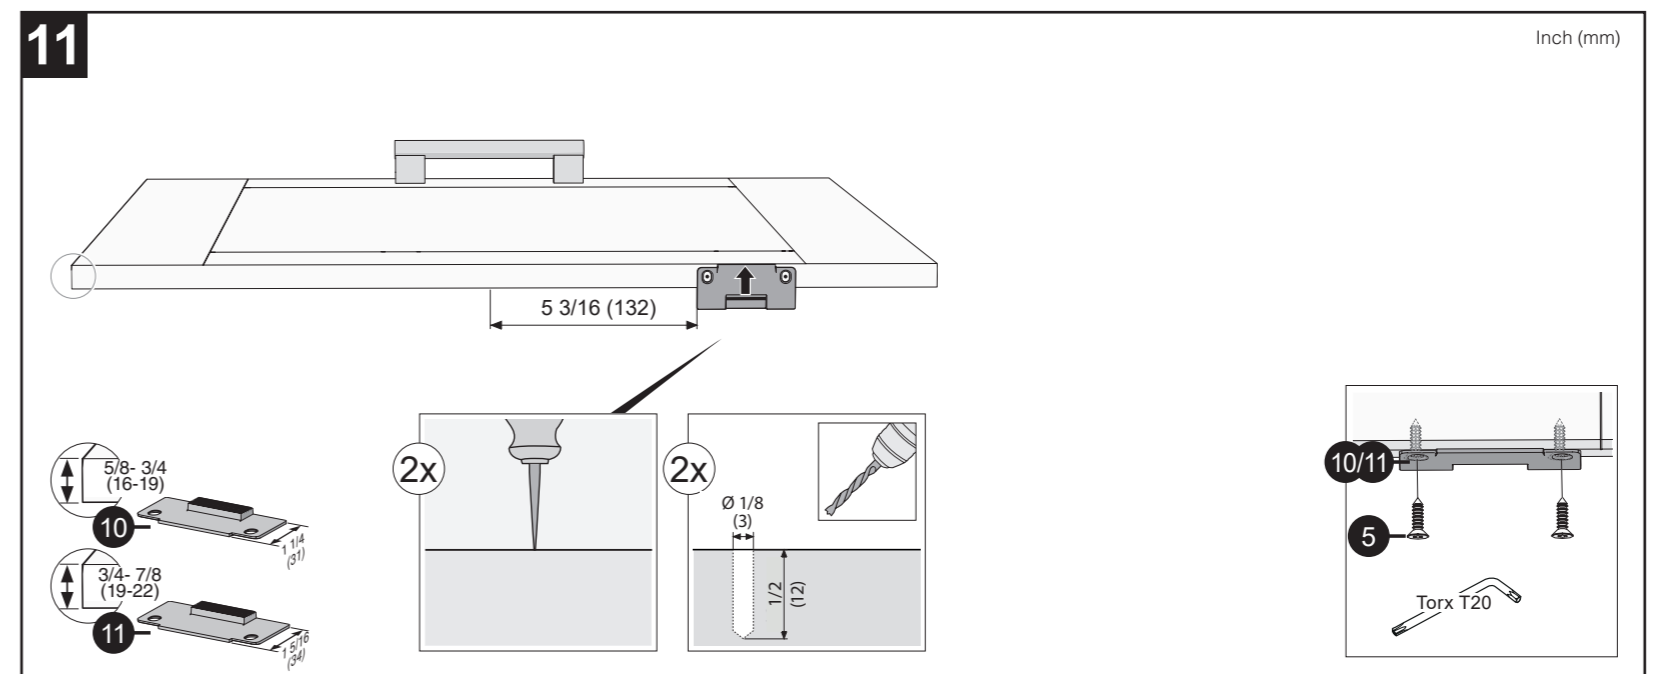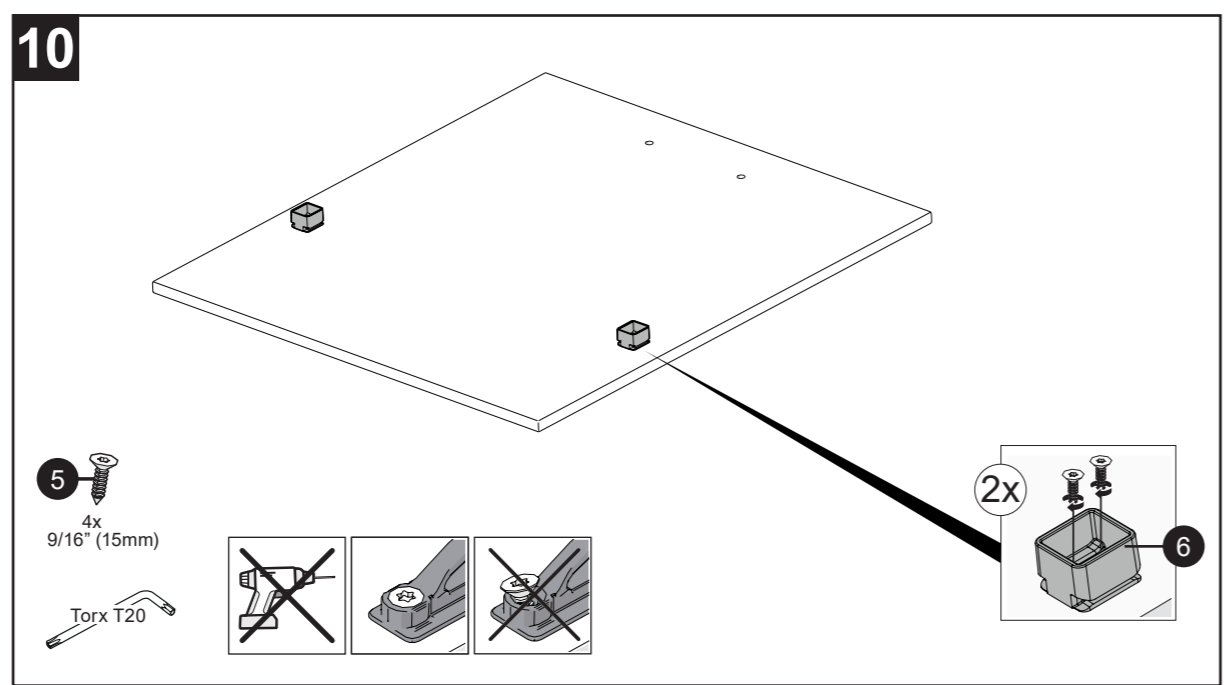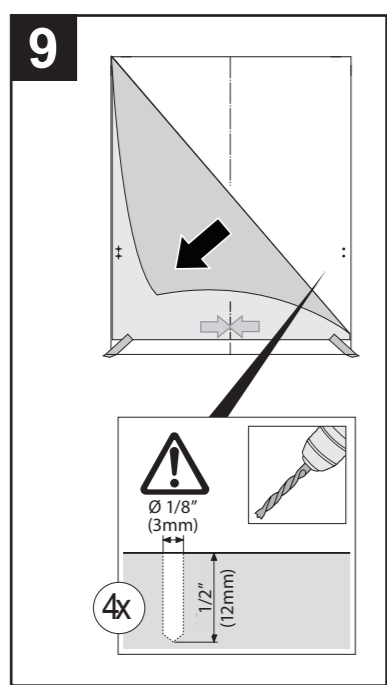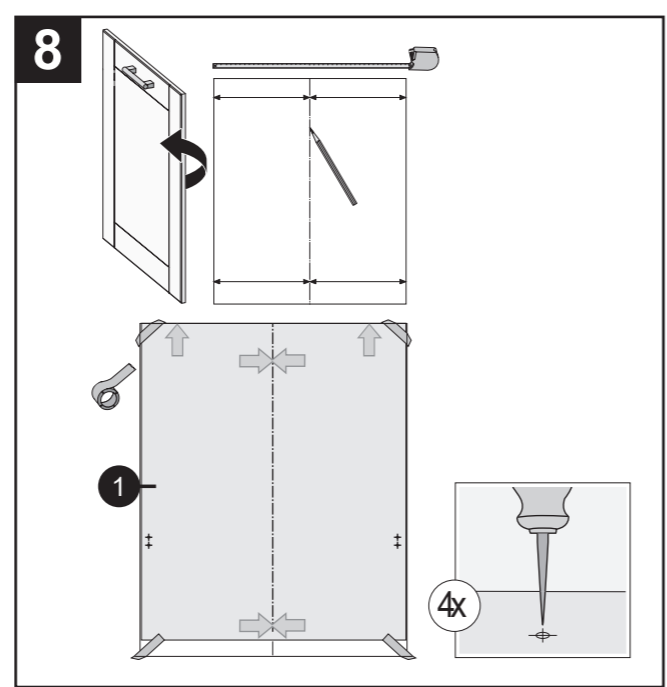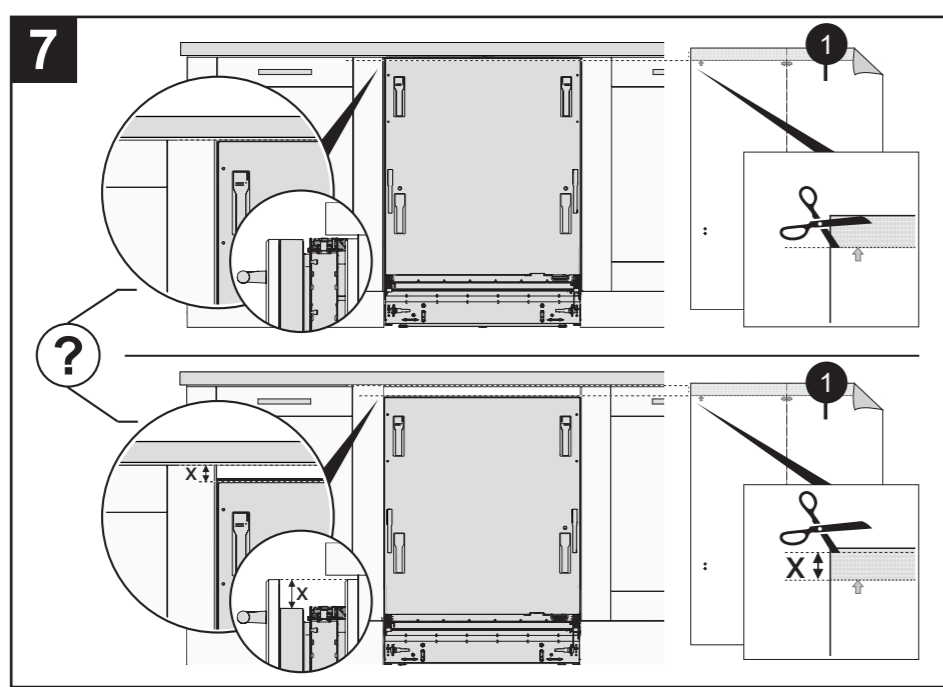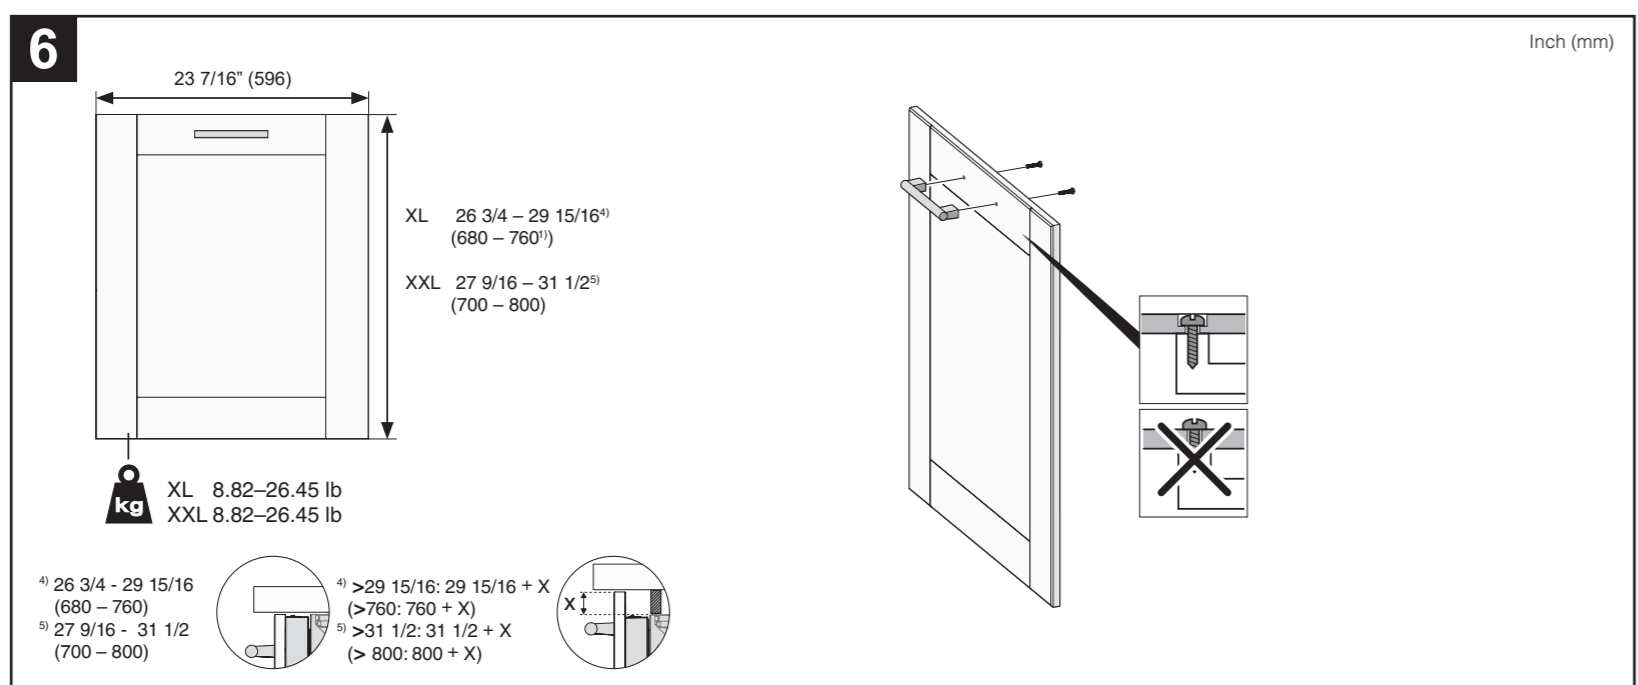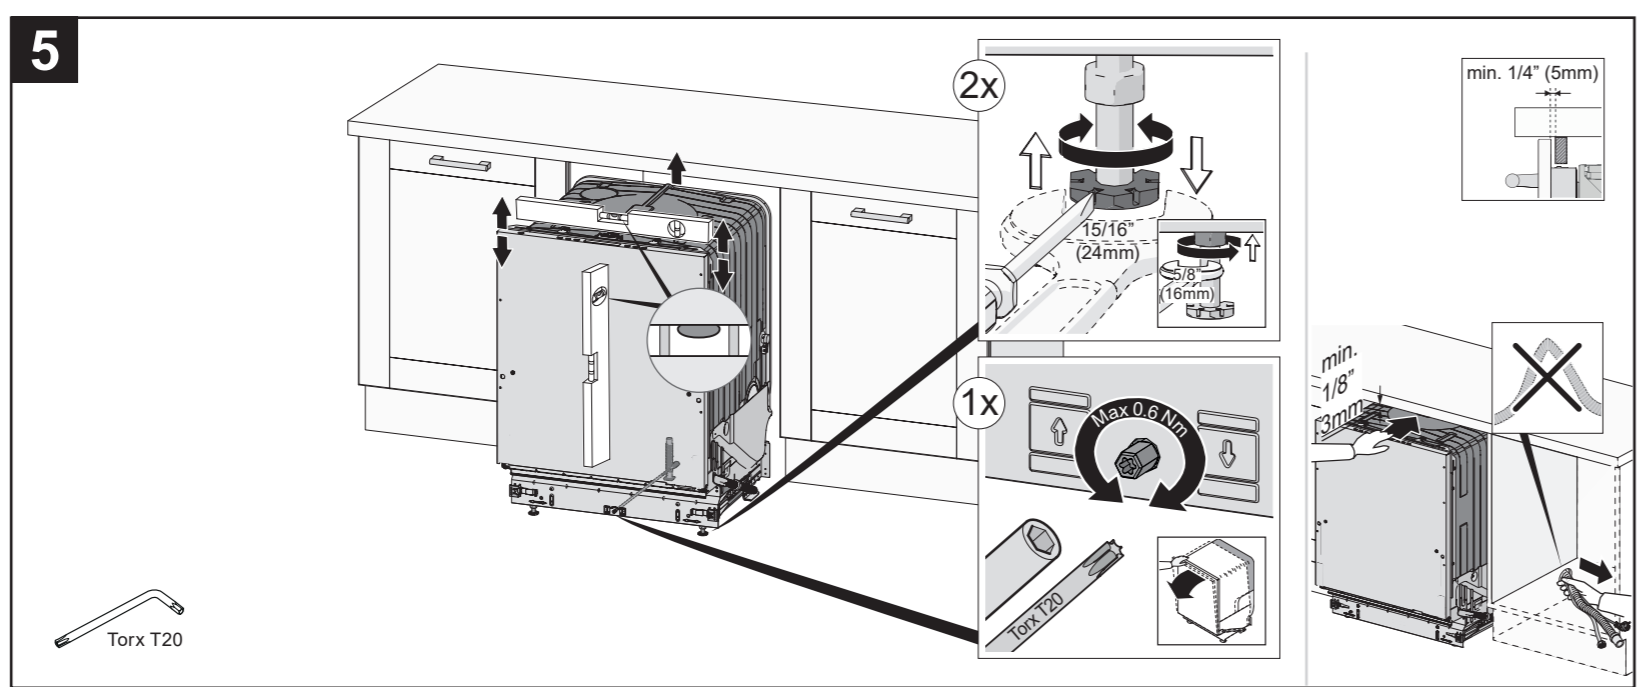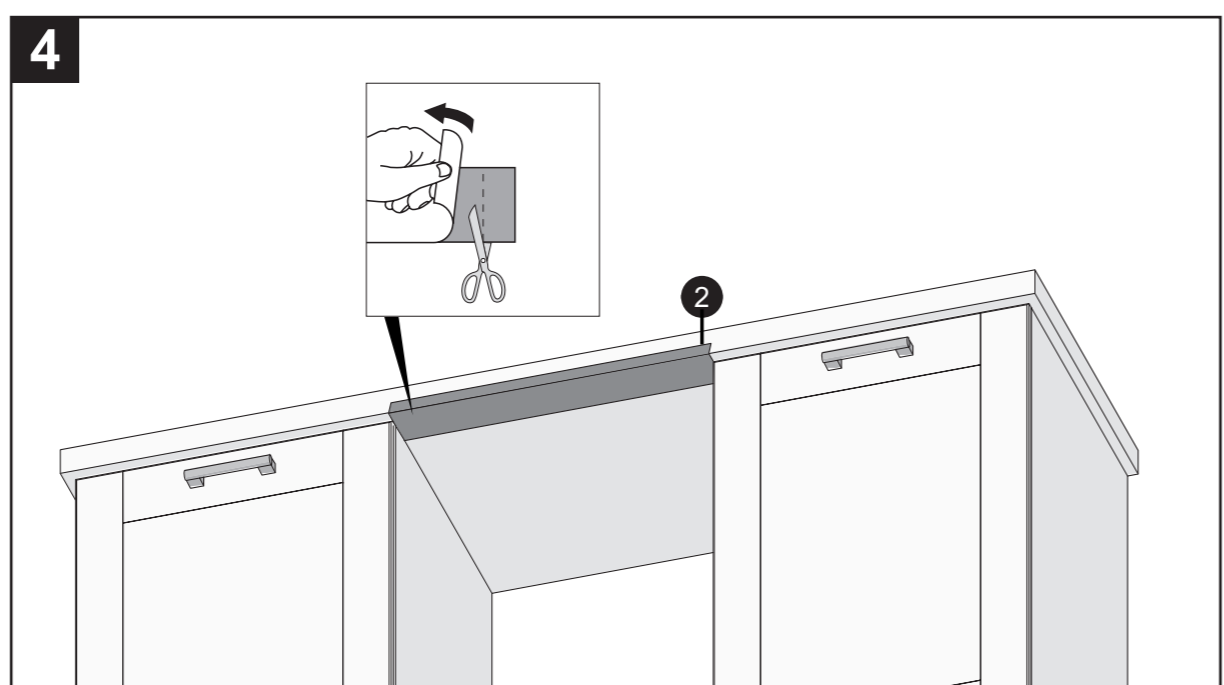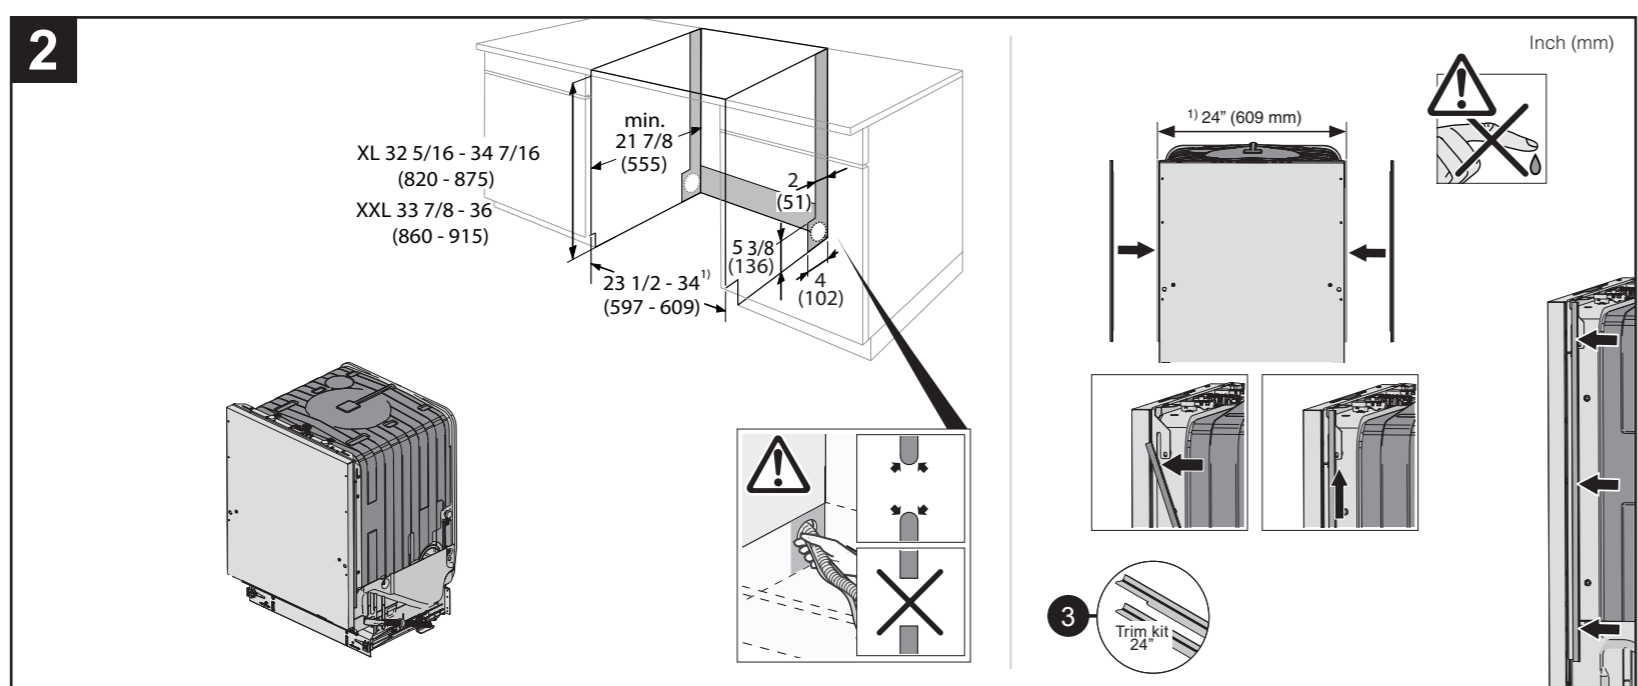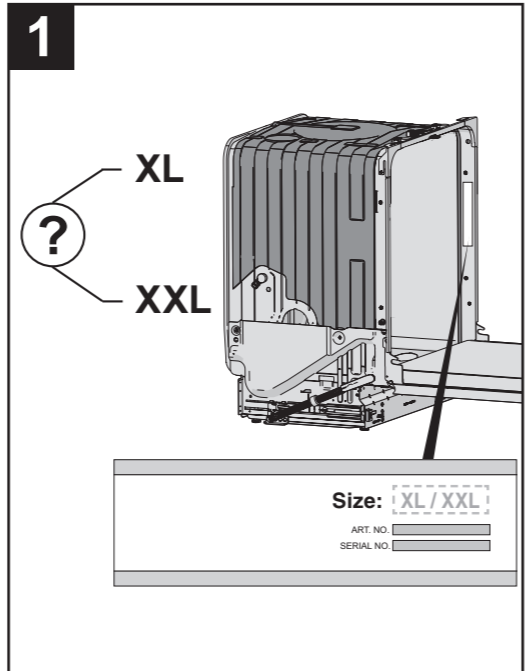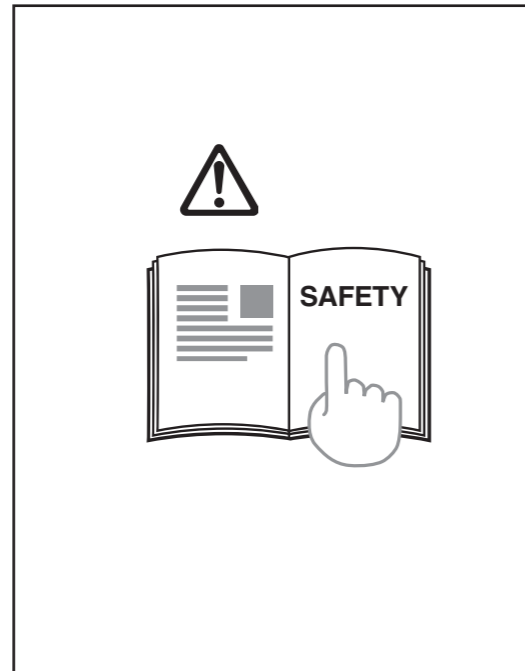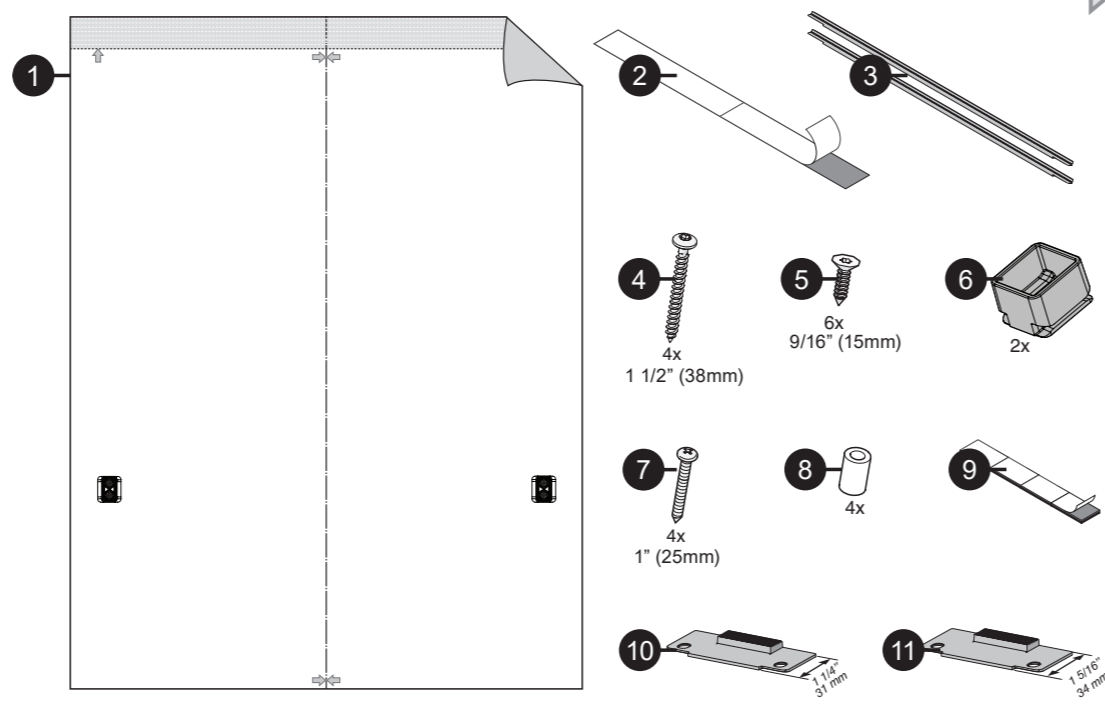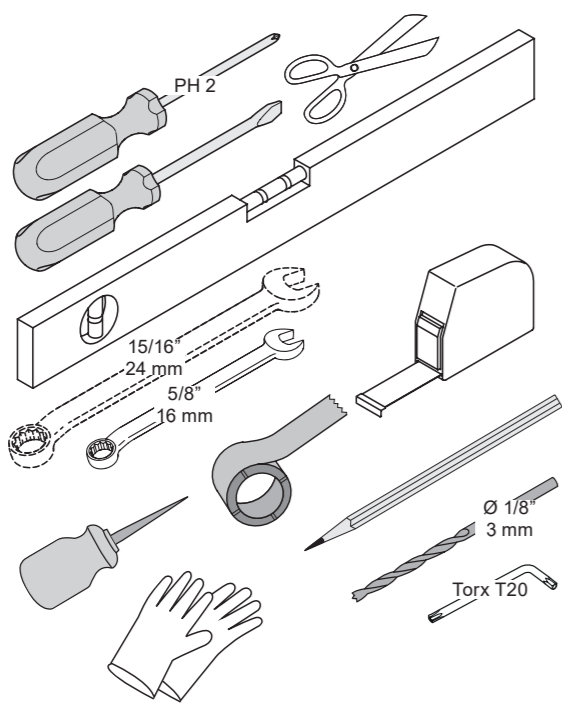

X  
Inch  
mm

