

Elite Hair Steamer (SKU16541)



SKIN+ACT

Toll Free: 1.800.418.0830

www.skinact.com
www.spaandequipment.com

International: 818.834.6640

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

SKIN+ACT

Toll Free: 1.800.418.0830	www.skinact.com www.spaandequipment.com	International: 818.834.6640
---------------------------	--	-----------------------------

Thank you for purchasing our hair oiling machine. Please read this manual carefully before use to fully understand the functions, operation, and safety instructions.

Part 1. Functions

The steam hair oiling machine helps expand hair microcells and allows the nutrients from hair oil to penetrate deeply into the scalp. This promotes blood circulation, making hair smooth, shiny, and healthy.

Regular use helps:

- Remove dandruff and impurities
- Keep hair clean and comfortable
- Improve scalp condition
- Leave hair glowing and lustrous




Part 2. How to Use

1. Assembly

- Remove the drawtube and base parts from the packaging.
- Fix the drawtube to the horse (base stand) using screws and gaskets.
- For vertical models, insert the drawtube into the jack of the base cover.

2. Water Filling & Seal Test

- Fill the water jug and check that the seal ring is properly fitted.
- Secure the nut tightly. To test the seal, immerse the water-drop pole into the jug of water.
- If bubbles appear, the jug is not sealed properly—tighten the nut until airtight.
- Attach the wastewater cup.

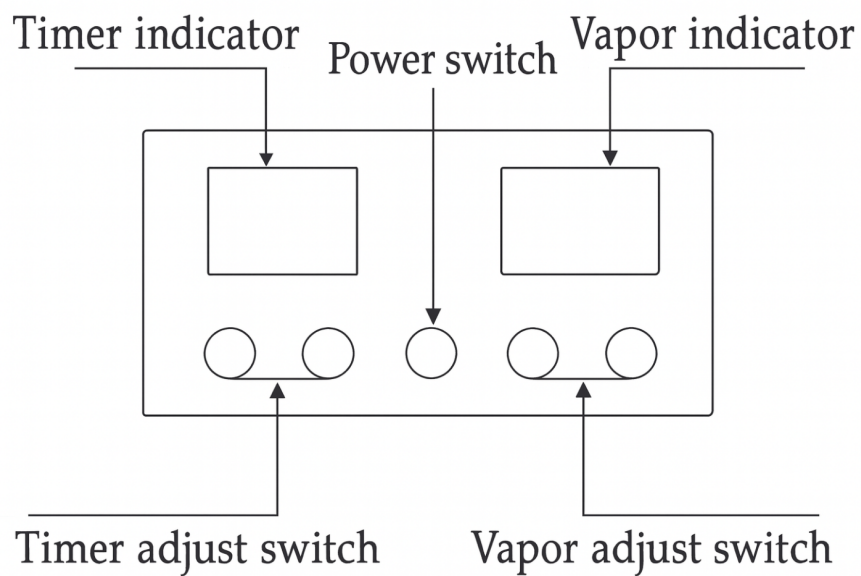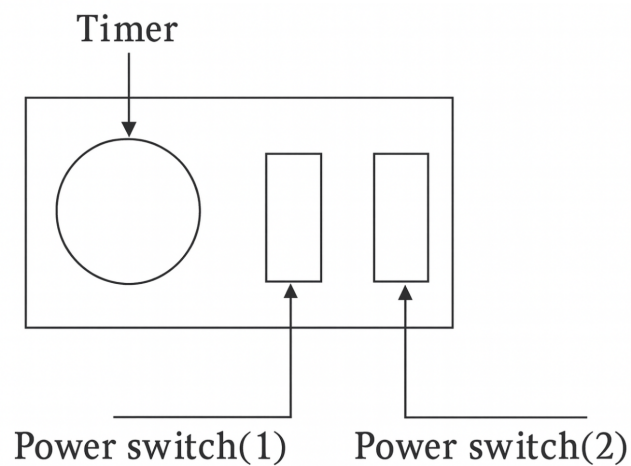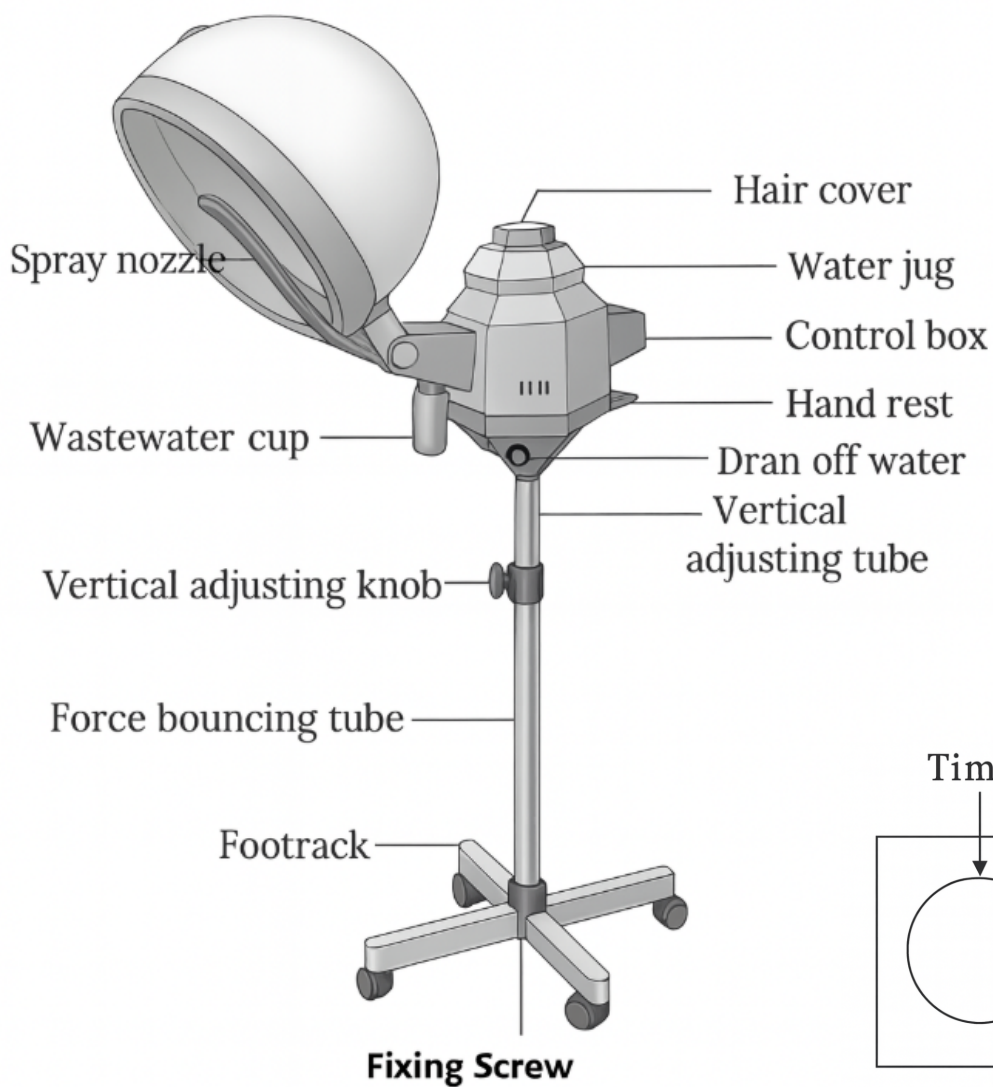

3. Powering On

- Plug the power cord into the socket with the correct voltage.
- Set the timer and press the power switch (① or ② depending on the model).
- Adjust the steam output using the control knob.
- (Model M-1037A has 2-level steam regulation. Model M-1037B has 1–9 level indicators.)

4. Operation

- Apply the steam evenly to the hair under the hood.
- Adjust the height of the hood by regulating the vertical adjusting tube.

5. Automatic Shut-Off


- When water runs out, the machine will shut off automatically.
- To continue use, refill the jug and restart.

Part 3. Safety & Notices

- During installation, ensure the lift tube is securely pressed and adjusted to the desired height.
- The water-drop pole automatically regulates water levels. Do not force the jug to release water.
- Empty the wastewater cup after each use.
- Always switch off and unplug the machine after use.
- In case of electrical damage, only replace parts with the same model/material, and repairs must be carried out by professionals.
- Use only as instructed. Damage from misuse is not covered under warranty.

Part 4. Accessories

- Main Machine – 1 unit
- Base (Horse) – 1 set
- Drawtube – 1
- Lift Tube – 1
- Fixed Drawtube – 1
- Screw – 1
- Gasket – 1
- Water Jug – 1
- Wastewater Cup – 1
- Operation Manual – 1 copy
- Certificate – 1 copy

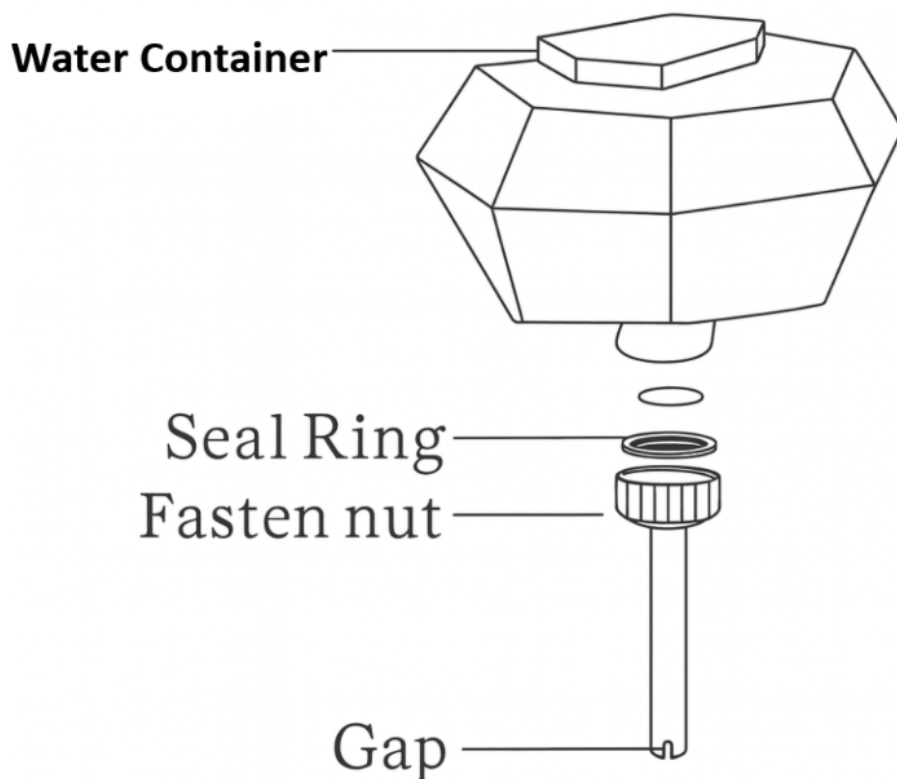

Part 5. Seal Test Method

1. Fix the water-drop pole nut to the water jug.
2. Reverse the jug so that the water-drop pole is immersed in water.
3. If bubbles appear, the jug is not fully sealed—tighten the nut further until it is airtight.

SKIN+ACT

Toll Free: 1.800.418.0830	www.skinact.com www.spaandequipment.com	International: 818.834.6640
---------------------------	--	-----------------------------