




www.BestSprayers.co.uk  
01673 895130  
info@spcb.co.uk  
PO Box 1349, Lincoln, Lincolnshire, LN2 3XS

# 0002 - Atlas 12 Pump Action

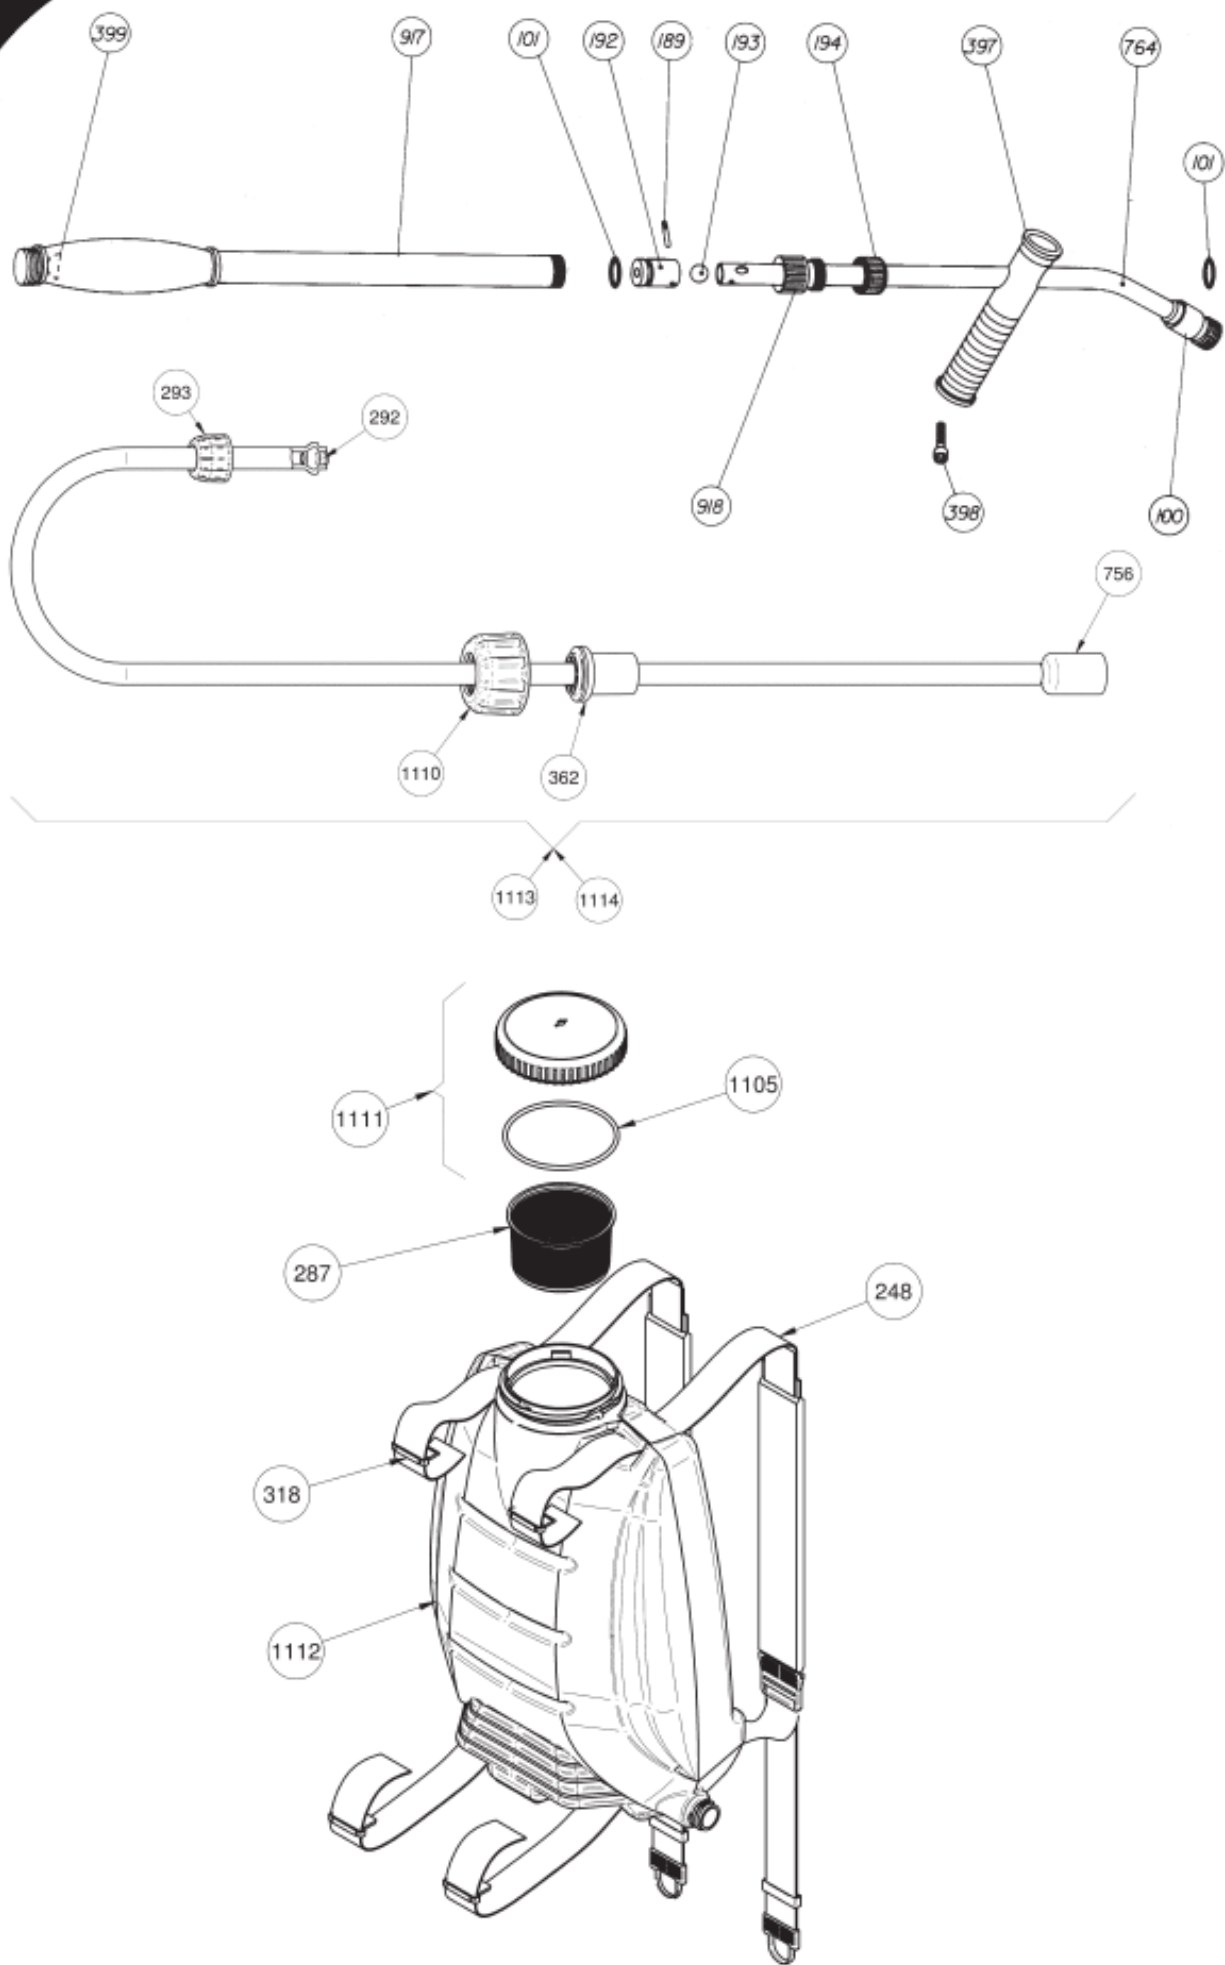

| Nº  | COD.        | Q | EN                       |      |             |   |                            |
|-----|-------------|---|--------------------------|------|-------------|---|----------------------------|
| 100 | 8.39.05.015 | 1 | 1.5 NOZZLE               |      |             |   |                            |
| 101 | 2.23.15.908 | 4 | ROUND GASKET AN-8        | 399  | 8.39.18.314 | 1 | CLOSING BALL               |
| 189 | 8.39.05.004 | 1 | PIN                      | 756  | 8.39.05.808 | 1 | WEIGHT                     |
| 192 | 8.39.05.007 | 1 | PISTON                   | 764  | 8.39.05.802 | 1 | TUBE WITH NOZZLE           |
| 193 | 2.20.08.901 | 1 | STAINLESS STEEL BALL Ø 6 | 917  | 8.36.45.801 | 1 | BODY, COMPLETE             |
| 194 | 8.39.05.312 | 1 | NUT WITH LUBRICATOR      | 918  | 8.36.45.804 | 1 | GREASING NIPPLE            |
| 248 | 8.39.41.364 | 1 | STRAP                    | 920  | 8.36.45.322 | 1 | SPRAYER ATLAS WITHOUT HOSE |
| 287 | 8.39.06.303 | 1 | TANK FILTER              | 1105 | 2.23.15.101 | 1 | ROUND GASKET Ø 101         |
| 292 | 8.38.08.328 | 1 | HOSE BUSHING             | 1110 | 8.39.08.304 | 1 | NUT                        |
| 293 | 8.38.12.312 | 1 | NUT                      | 1111 | 8.39.08.602 | 1 | CAP WITH SEAL              |
| 318 | 8.39.43.316 | 4 | STRAP WEDGE              | 1112 | 8.37.49.338 | 1 | 12 L.TANK                  |
| 362 | 2.23.15.915 | 1 | ROUND GASKET AN-15       | 1113 | 8.36.45.809 | 1 | ATLAS COMPLETE HOSE        |
| 397 | 8.36.45.306 | 1 | GRIP                     | 1114 | 8.36.48.808 | 1 | 4M ATLAS COMPLETE HOSE     |
| 398 | 2.59.26.740 | 1 | SCREW                    |      |             |   |                            |

## EN

### 1 CHARACTERISTICS

A sprayer manufactured from top quality materials, incorruptible by treatment products, including copper derivatives. Adjustable nozzle. Double-action sprayer, hydronette type. Suction filter with counterweight. Stainless steel ball.

### 2 SETTING UP

- 1) Tighten nut (293) at the end of the pump body (917)
- 2) Insert the counterweight (756) into the liquid tank and operate the sprayer, pointing the sprayer upwards so that the pump starts. After two or three strokes the liquid will flow. Adjust the nozzle (100) to obtain the desired spray.

### 3 MAINTENANCE

- 1) Clean the sprayer and its liquid circuits, including the filters, at the end of each working day. This can be done by working the device using clean water, or even adding a little household detergent if so desired.
- 2) Nozzle (100) obstructed. Clean the nozzle using a jet of water or non metallic objects.
- 3) Dirty filter (756). Clean it.
- 4) The inside of the nut (194) has been filled with heavy grease. To ensure that the piston is well greased, tighten the nut (194) half a turn from time to time and regrease.

### 4 SAFETY REGULATIONS

- 1) Do not use chemical products out of the indicated application field
- 2) Always follow the instructions and dosage, on the packaging labels, that the manufacturer recommends for the treatment product that you will be using.
- 3) Do not eat, drink or smoke during the preparation and the treatment.
- 4) Do not use the spray on persons, animals, or electric installations.
- 5) Do not use the treatment when there is strong wind or extreme heat.
- 6) In case of poisoning, consult your doctor, taking the treatment product packaging with you.
- 7) Do not dump product or cleaning residues near courses of water, wells, etc. that are intended to be used for human or animal consumption.
- 8) Use suitable protective equipment, masks, glasses, gloves, footwear, etc.
- 9) Do not modify the sprayer. Do not use the device if it is damaged, deformed or if its original shape has been altered.
- 10) Store the sprayer indoors protected from frost and extreme heat (between 5° and 30° C).

### WARRANTY

Our goods have a five year warranty from the user's purchase date against all manufacture or material flaws. The warranty is strictly limited to the free replacement of parts that our services consider defective. The warranty shall not apply in case of improper use of our materials, disassembly and/or alterations performed to our devices, and to those parts of normal wear and tear that require maintenance. The warranty shall not apply in case of negligence, imprudence and irrational use of the material. Dispatch and transportation costs of parts under warranty as well as workmanship that were not performed in our factory shall be borne by the user. To invoke this warranty, send us the faulty part, carriage free, together with the receipt or the purchasing invoice.