



www.inkjetbiz.com
orders@inkjetbiz.com
(408) 394 -7595


XPress 1620CS

USER MANUAL



NOTICE

1. Use the heat transfer press only as intend
2. Please keep children away from the machine
3. Use correct power outlet before plugging in the device
4. Burns can occur from contact with hot surface
5. Please hold the handle firmly when machine is opening
6. Turn off the device when not in use and remove the power plug

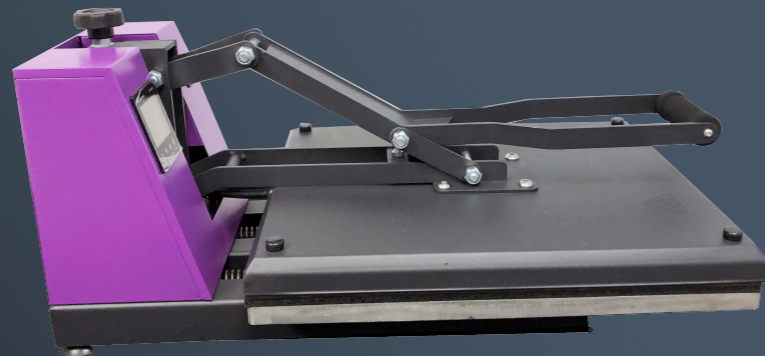

CONTENT

● In the Box	03
● Product Features	04
● Display Settings	05/06
● Transfer Parameters	07
● Troubleshooting	08

XPress 1620CS Clamshell Heat Press (110v)



In the box

1 x XPress 1620CS

1 x Power Cable

1 x Silicon Mat

1 x User Manual

MACHINE INTRODUCTION



1. Control Display

2. Heating Plate Cover

3. Silicone Mat

4. Alu. Lower Plate

5. Handle Grip

6. Handle Bar


7. Power Switch

8. Machine Base

9. Power Outlet

10. Pressure Knob

CONTROLLER PROGRAM

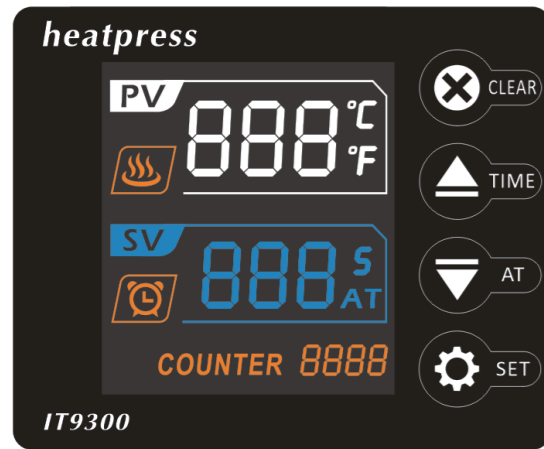

- PV** : Present Value
- SV** : Set Value
- °C** : Celsius Read-out
- °F** : Fahrenheit Read-out
- S** : Timing in Seconds
- 888** : Temperature Digits
- : Heating Indicator
- : Timing
- : Plus Digits
- : Decrease Digits
(Long hold for temperature calibration)
- : Set Mode
- : Counter Clearance
(Long Hold)

CONTROL SETTING



Control Panel Display



P-1 : Temp. Setting Mode
Touch SET & ↑↓ buttons to set desired Temp.



P-2 : Time Setting Mode
Touch SET & ↑↓ buttons to set desired time.



P-3 : °C or °F Read-out
Touch SET & ↑↓ buttons to set °C or °F



P-3 : °C or °F Read-out
Touch SET & ↑↓ buttons to set °C or °F



P-4 : Auto Power-off Mode
Touch SET & ↑↓ buttons to set auto-off time with 0-120 mins range



Auto-off Introduction
It reads OFF and machine starts to cool down after machine raises to SET temp. and remains no operation for P-4 set time. Operation like control panel setting or heat pressing.



Wake Machine from Sleepy Mode
You can wake up the heat press from sleepy mode by touching any button on the control panel, and machine starts to heat again.



Clear Counter NO.
You can long hold the CLEAR button to clear the COUNTER NO. on the panel.

Transfer Parameters

TRANSFERS	PRINTHEAD	MARK	TEMP.	TIME	PRESSURE
SubliMate Paper	TFP, DX	Polyester Fabric	392°F	35sec.	Low to Medium
Fuze Fabric	TFP, DX	Cotton	385°F	35-40 sec.	Low to Medium

For any further help, please contact our support team.

**support@inkjetbiz.com
(408) 394-7595**

Troubleshooting

Q: When image is pressed onto garments, the color of the design is faded, or transfers are not fully transferred onto the garments.

A: Test different points to get the right temperature, time and pressure.

Q: The dye sub paper is stuck on the heating platen.

A: You should use a Teflon sheet or parchment paper to cover the dye sublimation paper.

Q: LCD control panel shows “000”.

A: That refers the thermocouple wire is disconnected. Turn to support team for help by calling or emailing us directly.

Q: How to get a reasonable pressure.

A: Adjust the pressure by turning the knob and lock down the handle. There should be a larger resistant force soon after.

Q: Turn on the power, but the heat press does not work.

A: Pls check the power plug connected well to the socket, you may turn to support team if problem is still remaining.

Q: Pressure knob is too hard to adjust.

A: Adding lubricant oil to make the joint smooth.