

MADE BY ZEN®



KASPER

Ceramic origami Aroma Diffuser with a soft ambient breathing light

TABLE OF CONTENTS:

- A. ABOUT THE KASPER
- B. TECHNICAL SPECIFICATION
- C. OPERATING INSTRUCTIONS
- D. FEATURES
- E. MAINTENANCE
- F. TROUBLESHOOTING
- G. WARRANTY

Congratulations on purchasing your MADE BY ZEN® Kasper Aroma Diffuser. Please keep this manual to help you get the most out of your diffuser and for maintenance.

ABOUT THE KASPER

Achieving the perfect balance of aesthetics, simplicity and functionality, your Kasper Aroma Diffuser adds sophisticated elegance to any décor. It creates a calm, serene space and an inviting atmosphere for relaxing or socialising. Kasper's soft, warm light and fragrance diffusion, controlled by a remote control, ensures you are lulled into a blissfully relaxed state of mind.

Using state of the art technology, natural ceramic and modern design, Kasper adds a touch of luxury to any home and décor with its warm light and plume of divine fragrance and humidifying mist.

Simply add tap water, a few drops of your favourite fragrance or essential oil and switch on the Kasper to instantly release a cool, fragrant fine mist into the atmosphere to stimulate your senses:



Warm ambient LED lighting with a variety of settings:

- > Breathing light, can be used to aid mindful meditation.
- > Preferred light intensity setting.
- > Sleep mode (no light) option.
- > Lamp only mode can be operated without water.



Releases a humidifying mist.

Ideal for counteracting some of the dryness created by today's central heating and air conditioning systems.



Safety feature (operates only when using mist function).

Auto Shut C



Two operating modes:

- > Intermittent mist control will automatically switch the diffusion of scent and mist, on and off every few seconds, which is ideal when using stronger scents.
- > Constant Mist

Thank you for purchasing the MADE BY ZEN® Kasper Aroma Diffuser.



TECHNICAL SPECIFICATIONS

Model Name: Kasper Aroma Diffuser Model No: EW055

Product Size: ⊕160 x 227mm Voltage: DC 24V

Power: 12W Water Capacity: 120ml

Run Time: 6+ hours

1. Mist Outlet

2. Inner Cover

3. Ceramic Cover

4. Base

5. Buttons

6. Water Reservoir

7. Ceramic Disc


8. Vent Hole

9. Max. Water Level Line

10. Water Drain Side

11. DC Jack inlet

12. DC Jack

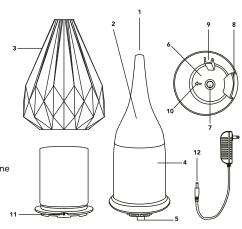

IMPORTANT NOTES BEFORE USE:

The Aroma Diffuser MUST be cleaned before and after each use. When stored the unit should always be kept clean and dry. NEVER leave stagnant oil and water in the water tank for any prolonged period.

Whilst using your diffuser, you MUST clean the water tank every 3 days:



Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can develop in the water reservoir, and expelled into the air when next used causing very serious health risks. To prevent this the water tank MUST be cleaned properly every 3 days.

Der Aromadiffuser MUSS vor und nach jeder Verwendung gereinigt werden. Das Gerät sollte immer in einem sauberen und trockenen Zustand gelagert werden. Lassen Sie NIE über einen längeren Zeitraum Öl und Wasser im Wassertank stehen.

Während der Verwendung Ihres Diffusers MÜSSEN Sie den Wassertank alle drei Tagen reinigen:



Eventuell im Wasser oder der Umgebung, in der das Gerät verwendet bzw. gelagert wird, vorhandene Mikroorganismen können sich im Wassertank weiterentwickeln, bei der nächsten Verwendung in die Luft austreten und somit äußerst ernsthafte Gesundheitsrisiken hervorrufen. Zur Vermeidung dessen MUSS der Wassertank alle drei Tage ordentlich gereinigt werden.

يجب تنظيف الغواحة العطرية قِبل وبعد كل استعمال. في حال حفظ وتخزين الجهاز ، يجب دومًا المحافظة عليه نظيفًا وجافًا. لا تترك بقايا الزيت والماء الراكد أنّذا في خزان الماء لمدة طويلة حدًا.



أثناء استعمال الغواحة العطرية، يجب عليك تنظيف خزان الماء كل ٣ أيام.

يمكن للكاثلات الدقيقة التي قد تكون موجودة في الماء أو في البيئة في حال استخدام الجهاز أو تخرينه أن تلمو في خزان الماء، وتنتشر في الفواء، وسوف يتسبب الاستعمال التالي للجهاز بأخطار صحية كبيرة جذا. لحماية خزان الماء، يجب تنظيفه على لحو مناسب كل ٣ أيام (٧/ ساعة).

 
- 1. Keep the Aroma Diffuser in a clear space to allow the mist to freely spread and away from the appliances especially those sensitive to water to avoid unnecessary accidents.
- 2. Place the Aroma Diffuser on a flat surface, at least 60cm away from the floor and at least 10cm away from the wall. DO NOT place the Aroma Diffuser on wooden or polished furniture that may be damaged by water moisture.
- 3. Always unplug the Aroma Diffuser from the mains electrical supply when cleaning or filling with water. Always use the power adaptor supplied. Ensure the cable is secure to avoid tripping or knocking over the Aroma Diffuser. If the power adaptor is damaged, it must be replaced with a suitable adaptor provided by the manufacturer or its agent. Alternatively, a new adaptor can be purchased from your retailer.
- 4. Use a suitable measuring cup to fill the water into the water reservoir. Never attempt to fill water under a running tap or whilst plugged in. Do not fill the water beyond the max water level line. If overfilled, carefully remove the excess water from the water reservoir in the direction of the drainage side and away from the vent hole.
- 5. The Aroma Diffuser must be kept out of reach of children and pets to avoid risk of injury. Children should be supervised at all times to ensure they do not play with the appliance.
- 6. The Aroma Diffuser is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 7. The Aroma Diffuser must be cleaned after each use and should always be kept clean and dry when not in use. Never leave stagnant oil and water in the water tank for prolonged periods.
- Never attempt to disassemble your Aroma Diffuser or repair the product, as this will void your warranty and create a shock hazard. Contact your retailer if your Aroma Diffuser develops a fault.

- 9. In case of abnormal observations such as smoke, peculiar smells or noise, stop using the Aroma Diffuser immediately and contact the retailer from where you purchased it. Never wrap the adaptor with cloth or paper as blocking ventilation could increase the risk of fire.
- 10. Always handle the Aroma Diffuser with care, particularly the ceramic cover accidental damage is not covered under the warranty.
- 11. Always use water at room temperature and use only fresh, clean water from a reliable source. Do not fill the water tank with other chemicals or liquids other than water and a few drops of fragrance or essential oils.
- 12. Never touch the water within the water tank when the diffuser is in operation as the water may become warm. It is perfectly normal for the water temperature to increase over time. Especially if it has been running for a few hours. This is caused by the energy created from the vibrating disc. The water should not exceed 40°c but for some models it can increase to 50°c (+/- 5°c). However, as the mist dissipates from the mist outlet, the water temperature cools rapidly due to the large surface area of each droplet, hence the mist is referred to as a 'cool mist'.
- 13. Always plug the adaptor into the DC jack inlet before plugging into the mains.
- 14. Do not remove the covers during operation.
- 15. NEVER touch the ultrasonic ceramic disc while the diffuser is plugged in as this could cause serious injury.
- 15. Do not immerse the unit in water or other liquids and do not attempt to clean in a dishwasher.
- 16. When using the light only mode, the auto shut off will not operate. Switch off the light as per the instructions below.
- 17. Remove the plastic insert to activate the battery before using the remote control (as shown right). The Kasper comes with the battery already fitted.






OPERATING INSTRUCTIONS



 1. Place the diffuser upright on a firm and flat surface. Remove both the ceramic cover and inner cover carefully upwards as shown. You may need to hold the base firmly with your hand, before removing the covers.




3. Add tap water to the water reservoir using a suitable filling cup, to the max level line.



2. Plug in the DC Jack.



 4. Add 3-5 drops of your favourite fragrance or essential oil into the water.



5. Replace both the inner and ceramic cover. To switch on the unit, please see 'Button Function' below.



Note: Do not lean or move or attempt to empty or refill the diffuser during operation.

BUTTON FUNCTIONS

LIGHT MIST

For your convenience, we have included Light and Mist buttons on the base of the Kasper. These can be used in the event when your remote control is not available. To use the Kasper to its full functionality; always use the remote control.

MIST CONTROL

Press Mist button once:

> The Aroma Diffuser will mist on high intensity.

Press Mist button twice:

> The Aroma diffuser will mist on low intensity (the mist output will reduce after a few seconds).

Press Mist button three times:

> The Aroma Diffuser will now stop misting.

LIGHT CONTROL

>Press Light button once:

 
An ambient breathing light will activate. The light will gradually fade from bright to dim and from dim to bright.

Press Light button twice:

> Ambient light will freeze on your choice of light intensity.

Press Light button three times:

>Light will switch off.



On/Off Button ()

Switch on the Kasper, using the On/Off button on the remote control panel.

Press On/Off button once:

>To switch on the unit and continuous Ambient light mode.

Press On/Off button twice:

>To switch off the unit.

Light Button *

(This button will activate only after switching on the unit using the On/Off button).

Press Light button once:

An ambient breathing light will activate. The light will gradually fade from bright to dim and from dim to bright.

Press Light button twice:

>Ambient light will freeze on your choice of light intensity.

Press Light button three times:

>the light will switch off.

Mist Button III

(This button will activate only when unit is switched on).

Press Mist button once:

> The Aroma Diffuser will mist on high intensity.

Press Mist button twice:

> The Aroma diffuser will mist on low intensity.

Press Mist button three times:

>To switch off the Mist.

Intermittent Mist Button X

(This button will activate only when unit is on and the mist function is on).

You can set the Mist function to operate intermittently;

Switch on the Aroma Diffuser (using the On/Off Button) and the Mist function (using the Mist button);

Then press Intermittent Mist button once:

>The Aroma Diffuser will now mist intermittently; 20 seconds on/ 40 seconds off.

Press Intermittent Mist button twice:

> This will deactivate the intermittent misting mode. Aroma Diffuser will now mist continuously on high intensity mode.

Note: Under normal operation, the Aroma Diffuser will switch off automatically when the water level runs low. When using the light only mode, the unit will need to be switched off manually as shown above.



The Kasper Ultrasonic Aroma Diffuser provides a revolutionary way to fragrance your surroundings. It works by creating high frequency vibrations that breaks down the water and oil into minute particles which are then effectively diffused into the immediate surroundings.

- Unique patented design.
- · Low energy LED lights.
- · Mini humidifier.
- Aroma Diffuser: Can be used with ambient lighting or without the light, ideal for night time use.
- Night Lamp: Can be used without the mist, ideal as a night light.
- Decorative Lamp: can be used independently with and without the mist function.
- · Quiet operation.
- Auto-shut off when water runs out for an additional safety.
- Easy to clean and use.



MAINTENANCE



1. Switch off the unit using the On/Off button on the remote control (or press the MIST and LIGHT button on the base of the unit), and unplug the power adaptor from the mains.



Remove the ceramic cover and inner cover carefully.



WARNING: DO NOT EMPTY WATER FROM THE SIDE OF THE VENT HOLE AS WATER MAY ENTER INTO THE UNIT.

3. Empty water in the direction of the water drainage side, as shown by the arrow at the base of the water tank.



4. Use a clean swab or cloth to clean the unit.

Caution: Always switch off the appliance and disconnect the power source from electrical outlet before cleaning.

Always keep your aroma diffuser clean and dry when not in use.

Never leave stagnant oil and water inside the tank for prolonged periods.

For stubborn oil build up, use sanitary alcohol on a cotton bud if required.

If the aroma diffuser does not generate mist (or generates little mist), clean the ceramic disc. When cleaning, always take extra care to ensure water does not enter DC Jack power port. Allow the unit to dry thoroughly as advised below if water accidentally enters the electrical port.

Accidental Leakage: In the event of the aroma diffuser being knocked over during use, please follow the steps below to avoid malfunction.

- Unplug the diffuser from the mains and remove the cover carefully.
- · Pour out any remaining water from the tank.
- Shake the diffuser gently to drain any water from inside, then leave for 24 hours for the diffuser to dry thoroughly in a well-ventilated area.



TROUBLESHOOTING

Prob l em	Possible Cause	Solution
No Mist or mist volume significantly reduced	Power supply is not connected.	Plug in the power adaptor and press the mist button on the base.
	Water is lower than the water level sensor.	Refill the tank with ordinary tap water. Take care not to fill past the max water level line.
	Water is exceeding the max water level line.	Carefully pour out excess water via the water drain side.
	There may be a build-up of oil on the ceramic disc.	Clean the ceramic disc with water and a clean cloth.
	Mist outlet is blocked.	Clean the mist outlet by thoroughly cleaning the inside of the cover with clean water. Ensure the ceramic cover is aligned correctly and not blocking the mist.
Unit wi ll not switch on	There is insufficient water in the reservoir.	Carefully fill the reservoir with water to the max water level line. Do not overfill.
	The power cable may not be connected properly.	Disconnect the cable and try connecting properly.
Water is leaking from the product	The covers are not positioned correctly.	Remove the covers and replace correctly allowing mist to release correctly.
	The unit has been tipped or knocked over.	Follow the accidental leakage instructions.
	The temperature is l ow or there is high humidity.	Under these conditions the mist can sometimes condense into water droplets.
Remote Control not working	The battery may have stopped working.	Please unscrew the battery section on back of the remote and change the battery (screwdriver not included).

The intensity and amount of mist may vary, but this is not unusual and should not be considered as a fault. Factors that may affect this include water type, humidity, temperature, air currents etc.



This product carries a 12-month warranty for proper use in accordance with this manual against any manufacturing defects. Accidental damage is not covered under the warranty, including glass breakage. The warranty period is 12 months from the date of purchase. In case of any problems arising during the warranty period, please contact your retailer for maintenance or claims. Proof of purchase will be required, so it is vital that you keep your receipt of purchase with this manual safely.

Corrosive oils such as Citronella may cause damage to the unit if left in the water tank. This type of damage is not covered under the warranty. This aroma diffuser must be cleaned after each use.



IMPORTANT! MADE BY ZETN® Ultrasonic Aroma Diffusers comply with the WEEE Directive (Waste from Electrical and Electronic Equipment Directive) 2019/19/EU.

Electrical equipment is a large source of waste and if not properly recycled could have damaging effects on the environment, whereas if it is recycled, the resources could be used again.

Electronic waste needs to be separated from other waste to be recycled properly. When the Kasper Aroma Diffuser reaches the end of its working life, please deposit at an appropriate collection point for recycling of electrical products. You can also recycle used electronics at Household Waste Recycling Centres.

Caring for our planet is important to us, so please help us by disposing of the Kasper correctly. Thank You.

MADE BY ZEN®