

2023 Damien LightSaber Xenopixel XENO3.0 User Manual

Awake: Hold the button for two second until button turns red to enter awake mode

Ignition: Click button once to ignite the saber

One flash = 0.5 seconds

One flash = Countdown sound one time

The Functions below will be activated when the blade is ON

Block Mode: Click once to block (imitate the effect when lightsaber takes shooting)

Tip Drag: Release after one flash(button), then click once to exit

Infinite Color-Changing: Release after two flashes(button),click to choose color

Fast Color-Changing: Twist hilt clockwise+anticlockwise when pointing DOWN,release to choose color

The Force: Hold the button and twist quickly when pointing UP

Duel Mode: Hold the button and tap the hilt within 1.5 seconds to enter duel mode

Turn off the blade: Hold until the blade turns off

Motion Control turning on/off: Twist hilt clockwise+anticlockwise/ Stab+pull back/Swing

The Functions below will be activated when the blade is OFF

Volume Adjustment: Release after one flash to adjust the volume(3 Levels)

Light Effects Changing: Release after two flashes to change light effects(8 Kinds)
(Pulse,Rainbow Blade,Candy Blade,Unstable,Crack Blade,Fire Blade,Flash Blade,Steady)

Ignition Styles Changing: Release after three flashes to change ignition styles(12 Kinds)

(Stack Ignition,FoldTile Ignition,Word Ignition,Faser Ignition,Scavenger Ignition,

Hunter Ignition,Standard Blade,Velocity Blade,Torch Blade,Blaster Blade,Ghost Blade,Broken Ignition)

Sound fonts Changing: Release after three flashes to change sound fonts
(Or use motion:Twist hilt anticlockwise+clockwise when pointing DOWN)

Change To Last Font: Hold button 2 seconds/button led flash four times/count down sound four times, then release

BGM Playing: Twist hilt anticlockwise+clockwise when pointing UP to turn on/off

PIXEL TO RGB/RGB TO PIXEL: hold button 13 seconds when saber blade is off

(After switched to RGB mode, the blade only lights up the bottom is normal, you need to use a converter and baselit blade)

Sleep Mode: **Hold** the button for **10 seconds** until button **light vanishes**
(The lightsaber will automatically turn off after 10 minutes of not-using)

XENO3.0 Motion Control

When the blade is OFF

Rotate to Turn On/OFF: **Twist hilt clockwise + anticlockwise**

Stab & Pull to Turn On/OFF: **Pull and stab forward in parallel to turn on, stab and pull to turn off**

Swing to Turn On: **Swing the lightsaber vigorously in a circle to turn on, rotate or stab and pull to turn off**

Fast Sound Fonts Changing: Point **DOWN** hilt and Twist anticlockwise+clockwise

When the blade is ON

Jump Color-Changing: Press and hold the button, quickly twist the hilt anticlockwise + clockwise, click the button to fix the color

Rotate Color-Changing: **Point DOWN hilt**, Press and hold the button, quickly rotate the saber, click the button to fix the color

Force Mode: **Point UP hilt**, Press the button, quickly twist hilt **clockwise + anticlockwise**

Melt Mode: Press and hold the button **Fast Push forward**, twist to change melt color

Lighting Block:**Hold button and pull hilt forwards**

Multi Block Mode: **Hold button and swing saber**. Same control to exit mode.

Multi Lock Mode: Enter into **LOCK UP first**, then hold the button 0.5 second/button led flash one time/countdown sound one time, then release. Same control to exit mode.

Notice:

Below functions are OFF by default. You need find these filed names and change "0" into "1" in the configuration file.

Blade mode: Velocity,Torch,Blaster,Ghost.

Lighting Block,Multi Block, Multi Lock Mode.

Switch control sound.

These specifications can be modified when you plug SD card into computer using SD card reader.

#Main blade length(Need to modify if blade length is not 92cms)

#Side blade length(For cross guard and double blade saber only)

#Side blade delay time(ms)(For cross guard and double blade saber only)

#Power on and power off time(ms)

PowerOnTime=2000 PowerOffTime=10000

#preon time(ms) Preon1Time=1400
 #Channel volume,MAX 16384,Default 8192
 #Mixer volume,Default 1900,data over 4500 may destory the speaker
 #Sensitivity of clash
 #Pulling stabbing/stabbing pulling motion on/off,1 is on,0 is off
 #Twist power on/off,1 is on,0 is off
 #Sensitivity of twist, bigger more sensitive,MIN60
 #Swing power on/off,1 is on,0 is off
 #Sensitivity of swing,bigger more big strength
 #Default light effect of each font
 (fire blade=0, steady blade=1, pulse blade=2, rainbow blade=3, candy blade=4,
 unstable blade=5, crack blade=6)
 #Default style of each font
 (Standard blade=0, blaster blade=1, ghost blade=2, special preon=3/4/5/6/7/8/9)

#Please notice the symbol

Color-1= (255,0,0), 1, 300, 800, 3

Color Data

default light effect,

on speed,

off speed,

default style

[Latest Xenopixel 34 Sets of Sound fonts]

- 01- Cyber Terror
- 02- Codex of Light
- 03- Luke Skywalker
- 04- "Five more steps"
- 05- Rey Skywalker
- 06- Master Yoda
- 07- Ascension Gun
- 08- Starlight-Vadar can't stop me now, nothing can.
- 09- Revan?
- 10- LOR SAN TEKKA
- 11- Cal Kestis(Fallen Order)
- 12- Darth Vader-Your destiny lies with me,Skywalker.
- 13- "Darkness"
- 14- Obiwan Kenobi- Hello there/Your

- move/So uncivilized/I have the high ground
- 15- Count Dooku+
- 16- Palpatine
- 17- Kylo Ren+
- 18- Mark Pontillas" You overstep your bows"
- 19- Darth Maul
- 20- Obiwan Kenobi-There's a cunning warrior.
- 21- The Dark Sword
- 22- Scavenger Rey
- 23- Kylo Ren1
- 24- Sailor Moon
- 25- Whispers of Power
- 26- The Teacher
- 27- The Second

- 28- The Learner
- 29- The Dark Lord Revisited
- 30- The Champion
- 31- Serenity
- 32- Idyll
- 33- Hatred
- 34- Dark Ages