

2023 Damien LightSaber XRGB3.0 User Manual

Awake: Hold the button for two seconds until button turns red to enter awake mode

Ignition: Click button once to ignite the saber

One flash = 0.5 seconds

One flash = Countdown sound one time

The Functions below will be activated when the blade is ON

Block Mode: Click once to block (imitate the effect when lightsaber takes shooting)

Lockup Mode: Release after one flash(button), then click once to exit

Infinite Color-Changing: Release after two flashes(button), click to choose color

Fast Color-Changing: Release after three flashes(button), click to choose color

Turn off the blade: Hold until the blade turns off

The Functions below will be activated when the blade is OFF

Volume Adjustment: Release after one flash to adjust the volume(3 Levels)

Light Effects Changing: Release after two flashes to change light effects(3 Kinds)

Ignition Styles Changing: Release after three flashes to change ignition styles(1 Kind)

Flash on Clash: Release after four flashes to turn on/off FOC.

Motion Control: Release after three flashes to turn on/off motion control.

3 Kinds: Twist hilt clockwise+anticlockwise/ Stab+pull back/ Swing

Sound fonts Changing: Hold until heard the sound of the character

(Or use motion: Twist hilt clockwise+anticlockwise when blade pointing up)

BGM Playing: Twist hilt anticlockwise+clockwise when pointing UP to turn on/off

Sleep Mode: Hold the button for 10 seconds until button light vanishes

(The lightsaber will automatically turn off after 10 minutes of not-using)

XRGB3.0 Motion Control Details

When the blade is OFF

Rotate to Turn On/OFF: Twist hilt clockwise + anticlockwise

Stab & Pull to Turn On/OFF: Pull and stab forward in parallel to turn on, stab and pull to turn off

Swing to Turn On: Swing the lightsaber vigorously in a circle to turn on, rotate or stab and pull to turn off

Fast Sound Fonts Changing: Twist hilt anticlockwise+clockwise when pointing **DOWN**

When the blade is ON

Jump Color-Changing: Press and hold the button, **quickly twist the hilt anticlockwise + clockwise**, click the button to fix the color

Rotate Color-Changing: **Point DOWN hilt**, Press and hold the button, **quickly rotate the saber**, click the button to fix the color

Force Mode: **Point UP hilt**, Press the button, quickly twist hilt **clockwise + anticlockwise**

Melt Mode: Press and hold the button **Fast Push forward**, twist to change melt color

Lighting Block: **Hold button and pull hilt forwards**

Multi Block Mode: **Hold button and swing saber**. Same control to exit mode.

Multi Lock Mode: Enter into **LOCK UP first**, then **hold the button 0.5 second/button led flash one time/countdown sound one time**, then release. Same control to exit mode.

Notice:

Below functions are OFF by default. You need find these filed names and change "0" to "1" in the configuration file.

Blade mode: Blaster,Ghost.

Lighting Block,Multi Block, Multi Lock Mode.

Switch control sound.

XRGB3.0 16 Sets of Sound fonts:

- 1.The Chosen
- 2.New Horizon
- 3.The Dark Sword
- 4.The Assassin
- 5.The Knight
- 6.Wanderer
- 7.The Protector
- 8.The Dark Empress
- 9.The Son
- 10.The Third Hunter
- 11.The Master
- 12.The Dark Lord Order
- 13.Magenta
- 14.The Princess

15.Double Agent

16.Truly Lost