



QUICK SETUP GUIDE (e-Twow Eco/Booster)

Setting sequence to toggle features like speed limit, cruise control and zero start function

1) How to set your scooter to Standard Unit and Imperial Unit

P0 = 0 means Standard Unit, eg. km/h

P0 = 1 means Imperial Unit, eg. miles/hr

P1 = 0 means lights are on manual mode

P1 = 1 means lights are on auto mode

Step 1: Make sure your scooter is OFF

Step 2: Switch ON the scooter and press the "S" button at the same time

Step 3: Toggle between P0 and P1 by pressing "S" button

Step 4: Toggle between 0 and 1 by pressing "On" button

2) How to use Cruise Control

Step 1: Maintain the same speed for 3 seconds and release accelerator

Step 2: To cancel Cruise Control, press brake

3) What is Zero Start

- It is a safety feature that prevents accident if the user presses the accelerator by mistake.
- When stationary, the scooter will not move even when accelerator is pressed.
- To move, the user will need to manually kick and move the scooter first before the motor can be activated

4) How to activate Speed Limit, Cruise Control and Zero Start Function

Step 1: Make sure your scooter is OFF

Step 2: Press and HOLD the left brake and turn ON the scooter

Step 3: Press the accelerator (Follow the below table for number of times to press the accelerator)

| | Eco/Booster |
|----------------|---------------------------|
| Cruise Control | 2 times |
| Zero Start | 3 times |
| Speed Limit | Limit to 12km/h = 8 times |
| | Limit to 20km/h = 6 times |
| | Limit to 25km/h = 5 times |
| | Undo Limit = 4 times |