

SECURAM SafeLogic Basic Operating Instructions

1. MANUFACTURER DEFAULT CODE 1-2-3-4-5-6

2. WRONG ENTRY PENALTY (PENALTY LOCK-OUT)

Entry of four (4) consecutive invalid codes results in a 5-minute penalty time period.

- The unit beeps at 5 second intervals indicating that it is still in the penalty time period.
- While the system is in penalty time, the EntryPad buttons remain unresponsive. Pressing buttons during penalty will not restart or lengthen the penalty time period. It will continue to count through the 5 minute penalty time period.
- While the system is in penalty time, removal of the batteries will interrupt the penalty time countdown. Upon re-installation of the batteries, the EntryPad continues to count down until the 5 minute penalty time period expires.

3. AUTOMATIC RE-LOCK

The safe lock system automatically relocks after 6 seconds of being opened by a valid code.

4. LOW BATTERY ALERT

- Repeated beeping (8 beeps) during an unlock operation indicates that the battery is low and needs immediate replacement.
- Manufacturer recommends the use of 9-Volt standard alkaline batteries (Duracell or Energizer brands are recommend) replaced annually.

USER PROGRAMMING INSTRUCTIONS

ALWAYS PERFORM OPERATIONS WITH THE SAFE LOCK SYSTEM UNLOCKED AND THE SAFE DOOR OPEN.

TO CHANGE CODE

1. Enter "0" six times. Two beeps will sound, indicating the entry is valid and the system is awaiting the code change.
2. Next, enter the existing six (6) digit code. Two beeps will sound, indicating the entry is valid.
3. Enter the new six (6) digit code. One beep will sound, indicating the entry is valid.
4. Re-enter the new six (6) digit code.
5. One beep will sound, indicating the codes entered in steps 3 and 4 are the same and the code changing process is successful.
6. If Three Beeps sound, the code change process has been unsuccessful. The existing code is still valid. Repeat steps 1 to 4

NOTE:

- Verify the new code at least 3 times before closing the door to make sure the code has been programmed correctly.

SECURAM SafeLogic Basic Operating Instructions

Important:

- **Battery Low Voltage Warning.** Repeated beeping (8 beeps) during an unlock operation indicates that the battery is low and needs immediate replacement.
- **PLEASE REPLACE THE BATTERY IMMEDIATELY.**
- **IF POSSIBLE, Always Open the Door Prior to Changing the Battery and Test Lock Operation With Door Open**


Battery Replacement Instructions

One 9V alkaline battery (Duracell or Energizer) is installed in the Battery Management compartment in the bottom of the Keypad


- To replace the battery, pull out the battery compartment first, See Fig. 1.

- Follow these steps:

- Release the latch of the battery compartment, by pulling lever downward, See Fig. 2.

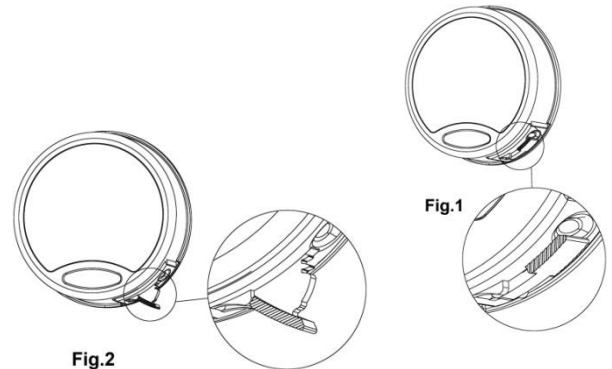

- Pull out the battery compartment from the bottom of the Keypad, See Fig. 3.

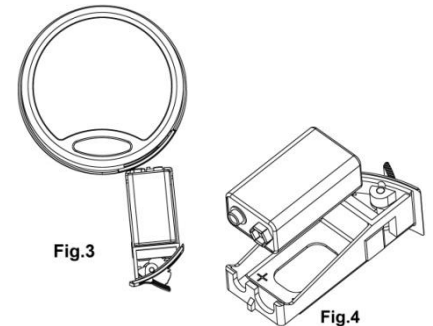

- Take out the battery and replace with a **new 9V ALKALINE battery (Duracell or Energizer brands are recommended)**. The battery compartment will receive the battery, orienting the positive and negative terminals correctly. See Fig.4.

- Put the battery compartment back into the keypad. Push up the latch of the battery compartment until it snaps closed. See Fig. 1.

- With the door open, test lock operation for proper functionality at least 3 times, before closing and locking the safe.