 





## Desk Light Pro

Desk Lamp with Clock

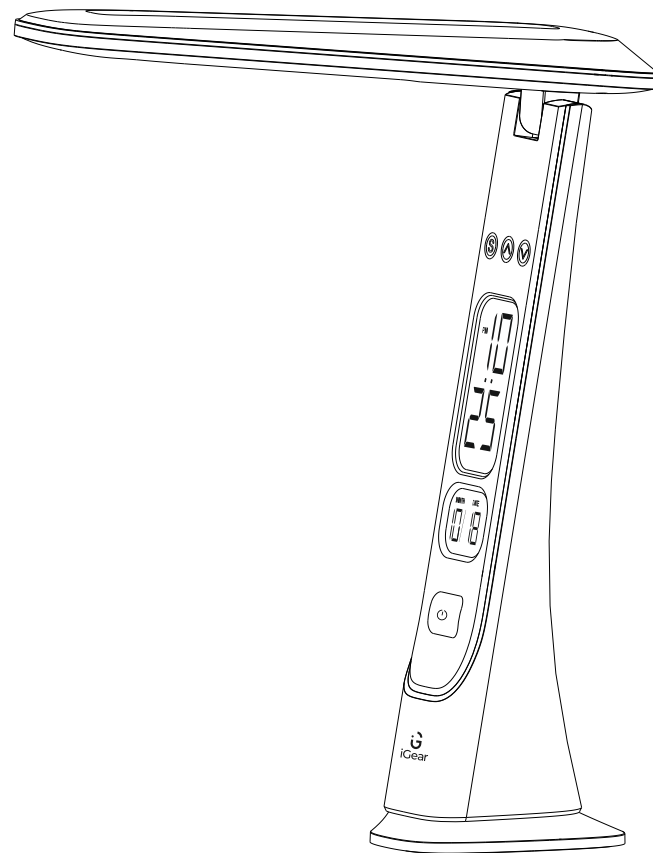


Please read all information carefully before you use the product and keep the manual for future reference.
 
## Product Structure

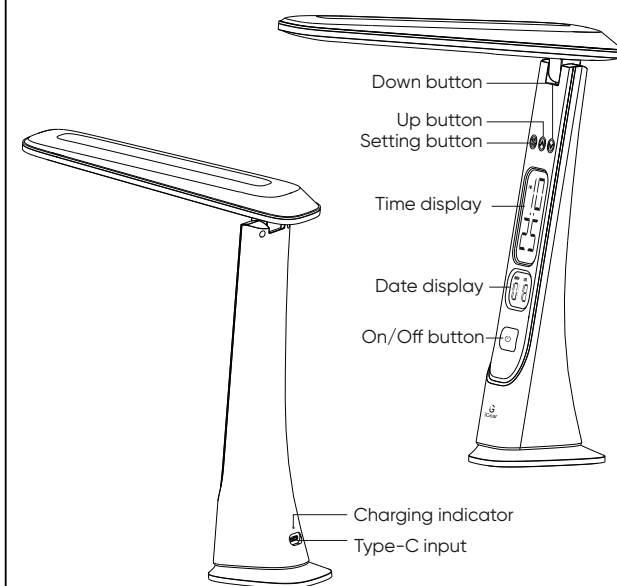

## Includes

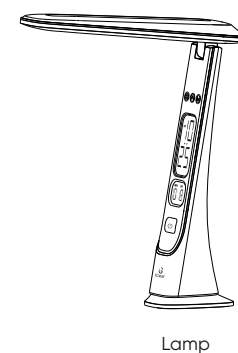 

Lamp




Type-C cord

## Specifications

 Type-C:	Input: 100-240V 50-60Hz	Output: 5V 1A
Battery:	1800mAh	

## Product charging instruction

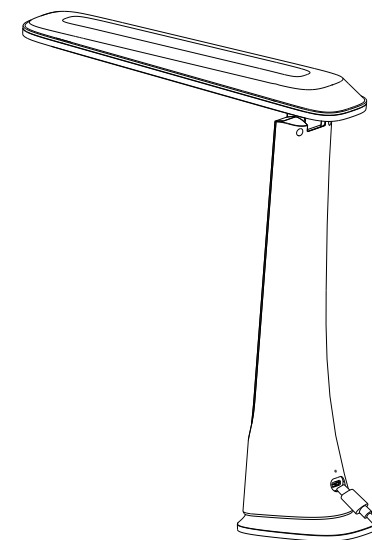


Connect the Type-C cord and plug it into the socket.

A red charging indicator signifies that the lamp is charging, while a green charging indicator indicates that the lamp is fully charged.

## Light Setting

 Short press the On/Off button to cycle through the light temperatures in the following order: Natural Light, Cool Light, Warm Light.  
Long press the On/Off button to enter stepless dimming mode, where brightness is memorized as per the last used brightness level




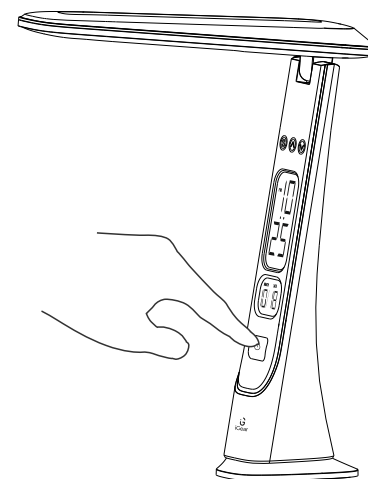


## Time and Date Setting




In the time display mode, short press the setting button sequentially to enter the setting mode for Hour, Minute, Year, Month, Day and Off.

    Example: If you want to set the time to 11:38 PM on October 25, 2023, as shown in the picture, press the setting button once to enter the Hour setting mode. The existing numbers on the display will start flashing. Use the Up or Down button to adjust the hour to 11, completing the hour setting. Then, press the button again to enter the Minute setting mode, following the same procedure as in the Hour mode. Repeat this process for the Year, Month, and Day setting modes.

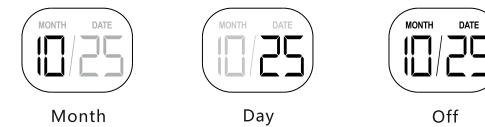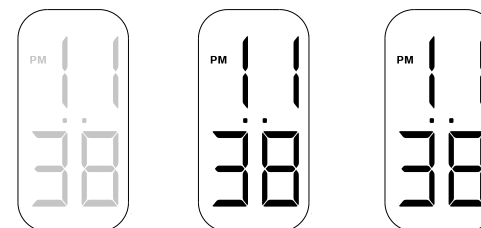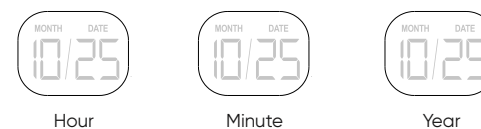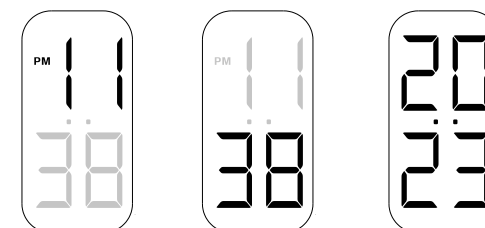

- If there is no setting activity for 10 seconds in the setting mode, the setting mode will exit, and the display will return to the current time and date.
- In the time display mode, short press the Up button to toggle between 12 hours mode and 24 hours mode. Long press the Up button for 1.5 seconds for quick setting.
- In the setting mode, short press the Down button to switch between hour, minute, and date settings in turn. Long press the Up button for 1.5 seconds for quick setting.

## Light direction setting

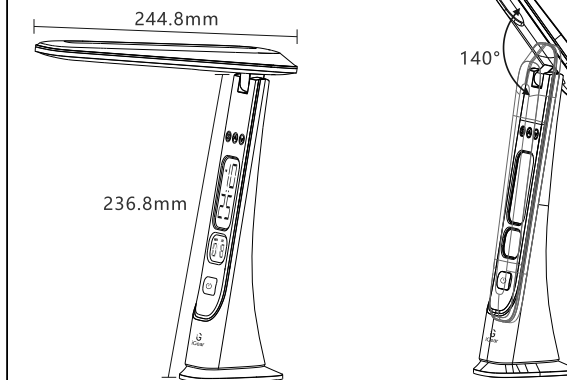 

Please hold the lamp body when adjusting the angle of the shade.  
**Note:** \*Note: adjusting beyond the specified angle range may result in damage to the connections.

## Caution

- If the external flexible cable or cord of this lamp is damaged, it must be exclusively replaced by the manufacturer, its service agent, or a similarly qualified person to avoid hazards. Please use it on a horizontal table.
- To reduce the risk of fire, electric shock, or injury to persons, do not use the lamp in hot and humid environments.
- The light source of this lamp is not replaceable; when the light source reaches the end of its life, the entire lamp must be replaced. The LED panel might become hot after several hours of continuous use. DO NOT place paper or cloth directly on the LED light panel.
- To clean it, please use a damp cloth.
- If the following situations occur, please pull out the power cord and stop using it:
  - Type-C cord or plug is damaged.
  - The lamp gets wet.
  - The lamp body or connections are broken.
  - The lamp emits smoke and sparks.
  - LED bulb is broken or shows abnormal flashing.

**NOTE:** The important safety instructions appearing in this instruction sheet are not meant to cover all possible conditions and situations that may occur. It must be understood that caution, and care must be used with any electrical product.

## Warranty

Warranty period: 1 Year  
In case of consumer complaints:  
Customer Care - +91 9324058553  
Email: support@igear.asia  
(Between 10am to 5pm, Mon-Fri)  
www.igearworld.com

For Warranty Support,  
Scan the QR Code

