



EVOKE
Mp3 PLAYER + RADIO



USING OPERATION

RADIO:

ON/OFF KNOB

- A. Turn the Volume knob to turn on the radio
- B. Volume is adjusted with the Volume knob to desired sound level.

Select the mode by sliding the mode selector to FM/AM/SW mode.

Tune in the desired station by turning the tuning knob to search for the available FM/AM/SW stations.

ANTENNA:

For FM and AM signal reception a telescopic antenna is provided and for SW signal reception a ferrite antenna has been built in. These antennas are direction oriented, and it is recommended to rotate the set for proper signal reception.

SOLAR PANEL:

A solar panel is provided on top of radio to charge the set using Solar energy.

MEDIA PLAYER:

Slide the mode selector to Music option. Music can be played via Bluetooth or by Inserting USB drive or TF/SD card.

Press Next/FF (▶▶) or Prev/REW (◀◀) button to choose desired song.

BLUETOOTH:

Change from Radio mode to Bluetooth mode by sliding the mode selector to Music mode. Turn on the Bluetooth of your digital device (mobile phone/Tablet) and search for the name "iGear Evoke" and connect it.

POWER OPERATION

DC OPERATION: Plug the Charging cord into a wall outlet.

Note: Please check carefully that the voltage of your household matches with the voltage on your set.

SPECIAL ATTENTION

- This unit must not be exposed to moisture or rain.
- Ensure all connections are properly made before operating the unit.
- This unit should be positioned so that it is properly ventilated areas.
- Do not expose this unit to direct sunlight for prolonged period or heat radiation sources.

Warranty Period: 1 Year

In case of consumer complaints:

Customer Support: +91 93726 67193

Email: support@igear.asia

(Between 10am to 5pm, Mon to Fri)

www.igearworld.com

