



TECHNICAL SPECIFICATIONS

Bluetooth version: v5.0
 Output: 60W (30W*2)
 Frequency response: 100Hz - 20KHz
 Wireless range: 10 meters
 Max memory USB/SD: 32GB
 USB Charging: DC 5V
 Battery capacity: 3000 mAh (7.4V)
 Playtime via Bluetooth: Approx 1.5 hours at max volume
 Charging time via USB port (PC): 3-4 hours

Accessory

Charging Cable
 3.5mm Audio Cable
 Rechargeable Bluetooth Mic
 Remote

OPERATING INSTRUCTIONS

How to connect to a Bluetooth Device?

- Turn on the speaker. Turn on Bluetooth on your mobile device, then search for "XBass - 60" and pair the device.
- Once the device is paired, Bluetooth will automatically connect when the Speaker is turned on thereafter.



Power Switch: To turn ON/OFF the speaker

MIC VOL: To control the volume of the Mic

VOL: To control the master volume

Echo - : Press to decrease Echo Effect in Mic

Echo+ : Press to increase Echo Effect in Mic

Light Button: Press to switch RGB light mode

Mute: Press to mute the volume

DC 5V: Plug the charging cable to the speaker and connect the other end USB port to the power source. (DC 5V or Type-C slot)
 USB slot: Used to read the mp3 files in FAT32 format with maximum size of 32GB.
 TF slot: Used to read the mp3 files in FAT32 format with maximum size of 32GB.
 3.5mm Jack: Aux-in, connect with mp3 or other outlet via audio cable.
 6.35mm jack: Microphone In

Play/Pause: When in USB/TF/Bluetooth Mode, Single Press to Play and Pause

Mode: To change modes during USB/TF, Bluetooth and Aux-In mode.

Prev: When in USB/TF/Bluetooth/FM mode: Press once to move to the previous track.

Next: When in USB/TF/Bluetooth/FM mode: Press once to move to the next track.

UMLAUT (Voice Mode): Press to change the voice effects (Reverb, Pop Reverb, Devil Voice, Baby Voice and Female Voice)

BLUETOOTH

When you turn the speaker on, it will be in Bluetooth mode by-default.

After you pair the device, it will play the music
 Press ▶ || once to Play/Pause, press ◀◀ and ▶▶ once to go to Prev and Next track.

TWS MODE

1. Turn on both the "Xbass - 60" speakers
2. Choose one of the speakers, press and hold the MODE button for 5-10 seconds, then a sound will indicate that the TWS function is turned on.
3. Wait for a few seconds and another sound will indicate that the speakers are connected through TWS successfully.

Note: TWS only works in Bluetooth mode.

AUX-IN

Use the audio cable to connect your device with the speaker, press MODE to switch to AUX Mode.

Note: In AUX mode, you can't use the Prev and Next buttons, but you can control from the device you connected.

USB/TF CARD

Insert a U-Disk or a Micro-TF card into the USB/TF slot. It will read all the mp3 files automatically and start playing.
 Press ▶ || to Play/Pause, press ◀◀ and ▶▶ to go to the Prev and Next songs.

CHARGING

Please use the original charging cable to charge the speaker
 You will see a Red LED turned on when the speaker is charging.

WARRANTY

Warranty period: 1 Year
 In case of consumer complaints:
 Customer Care - +91 9372667193
 Email: support@igear.asia
 (Between 10am to 5pm, Mon-Fri)
 www.igearworld.com

For warranty support, scan the QR code

