



X-BASS100



Bluetooth Version: v5.3
 Connectivity Range: 10 meters
 Wattage: 100W (50W*2)
 Playtime: 3-4 hours*
 Frequency: 80Hz-15kHz
 Input Power: 5V/2A
 Maximum Power Consumption: 2A
 Battery: 5400mAh

TECHNICAL SPECIFICATIONS

FEATURES

1. Bluetooth v5.3 - Wireless Connectivity
2. Volume Control and Play and Pause Buttons
3. USB, TF Card and AUX Inputs
4. Built-in FM Radio
5. Built-in Lithium Ion Battery
6. Support MP3/WAV/WMA/FLAC/APE formats
7. High-fidelity Speakers
8. IPX4 Splashproof
9. TWS Function

OPERATING INSTRUCTIONS

• BLUETOOTH MODE:

Press the BT button until you enter BT Pairing Mode. If your speaker is not already paired with another device, it will automatically enter pairing mode when you switch to Bluetooth mode. On your device, go to Bluetooth settings and search for the iGear X-Bass. Select it to establish a connection. Once connected, you can control your speaker using the controls on the top panel, through your device and with the remote provided in the box.

• AUX MODE:

Press the MODE button until you enter AUX mode. Connect a 3.5mm AUX cable from your audio device to the AUX port on the top of the speaker. In AUX mode, you can control the functions only through your audio device, but you can adjust the volume on either devices or with the remote.

• FM RADIO MODE:

Press the MODE button until you enter FM Radio mode. Use the P/P (Play/Pause) button to automatically scan and store FM radio stations. Navigate through FM radio stations using the NEXT or PREVIOUS buttons.

• USB AND TF CARD MODE:

NOTE: Ensure that you have connected a USB or TF Card drive to the USB/TF Card port on the top of the speaker. Press the MODE button until you enter USB/TF Card mode. Use the controls on the top of the speaker to navigate through songs (tracks), play/pause, and adjust the volume.


• TWS (True Wireless Stereo) MODE

NOTE: To enable TWS Mode, you need to have two identical speakers positioned together.

Perform the following steps on both speakers:


1. Power on both speakers.
2. Designate one speaker as the Primary model and the other as the Secondary model
3. Ensure that the Primary model is in Bluetooth mode.
4. Press the TWS button on one unit (Secondary model) briefly.
5. When the connection is successful, the LCD display on the Secondary model will show "SLAU" without flickering.
6. Use your Bluetooth device to connect to the other unit (Primary model).
7. Search for "iGear X-Bass" in your Bluetooth device and establish a connection.
8. The Primary model can control the mode of the Secondary model, so when you select USB/TF Card/Bluetooth/Aux/FM mode on the Primary model, the Secondary model will follow same functions
9. Both the Primary and Secondary speakers can control functions such as volume, previous tracks, pause/play, and next tracks.

TOP CONTROL PANEL

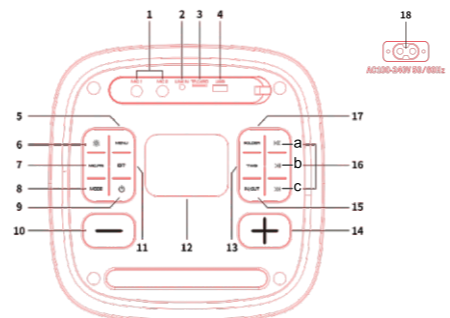

1. Wired Microphone input: Plug wired microphone into these jack
2. AUX in: Plays the music of the device connected to the AUX input
3. TF card input: Insert TF card to play
4. USB input: Insert USB to play.
5. MENU: Short press to control Bass/Treble/Mic Volume/Mic echo/Mic Treble/Mic Bass
6. Light switch: Press to change light color and light style
7. Mic. Pri. Microphone priority
8. Mode: Short press to select AUX/USB/FM /Wireless BT, Long press to on/off voice prompt.
9. Power ON/OFF
10. Volume Decrease
11. Bluetooth function
12. LED Display Screen
13. TWS: True Wireless Stereo, works with two X-Bass Speakers
14. Volume Increase
15. Outdoor/Indoor Mode: Press to choose outdoor and indoor mode.
16. a) Previous song: Short press to get previous sound/channel; long press to fast backward
 b) Pause&Play: Short press to Pause and Play music
 c) Next song: Short press to get next sound/channel; Long press to fast forward.
17. Folder function: Press to switch the folder and play the contents of the folder
18. Charging Slot

REMOTE CONTROL

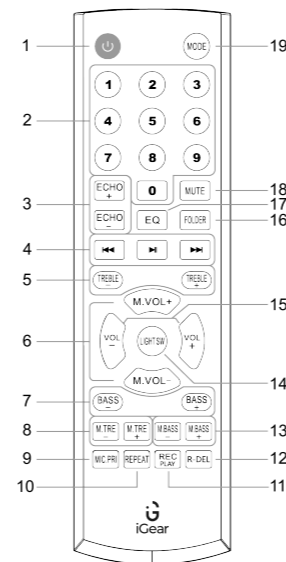

1. Power ON/OFF
2. Number buttons: In USB/TF mode, use them to choose songs.
3. Echo +/-
4. Previous Song/Station:
 In USB/TF card mode, previous song
 In Bluetooth mode, previous song
 In FM mode, previous station

 Pause & Play:
 Pause or Play the music
 In Fm mode, enter auto-scan function.

 Next Song/Station:
 In USB/TF card mode, next song
 In Bluetooth mode, next song
 In FM mode, next station.
5. Treble +/-
6. Microphone Volume +/-
7. BASS +/-
8. Microphone Treble +/-
9. Microphone Priority:
 While playing music and using a microphone at the same time, the microphone sound from the speaker will be prioritized.
10. Repeat: Repeat one song or all songs.
11. Record Function:
 In USB/TF card mode, press the REC button to record the sound through wired or wireless mic.
 The recording file will be saved in the USB/TF Card inserted.

 Record play: Long press to play the recording source.
12. Recording Delete:
 Delete the recording sources in the USB/TF Card
13. Microphone Bass +/-
14. Light Switch Button
15. Volume +/-
16. Switch to different folders

17. EQ Function:
 Press to select Pop/Rock/Jazz/Classical/Flat EQ mode.
18. MUTE:
 Mute in all modes
19. Mode:
 Press shortly to change to Bluetooth/AUX/USB/TF/FM Mode

INSTRUCTIONS FOR USE AND CARE

Safety Information

Before using the product, please carefully review this manual. Keep it in a secure location for future reference.

- a. This unit contains high voltage areas that can be harmful. Please refrain from opening the unit. In the event of a technical issue, contact the authorized service center.
- b. To prevent fire or electric shock, never expose the unit to rain or damp environments.
- c. The device utilizes a laser system. To avoid direct exposure to the laser beam, do not open the unit or stare directly at the laser.
- d. For any necessary technical maintenance, contact the authorized service center.
- e. If the power cord is damaged, have it replaced by the manufacturer, supplier, or a qualified electrician.

Caution

- a. Avoid placing the unit on an unstable surface to prevent it from falling and causing harm to people or pets.
- b. Prior to cleaning, disconnect the unit from the power source. Avoid using cleaning liquids or sprays. Use a soft, damp cloth only.
- c. To prevent potential equipment damage, unplug it during storms or extended periods of non-use.
- d. Do not insert any objects through the ventilation openings, as it may cause a short circuit and result in a fire. Additionally, refrain from pouring liquid on the speaker.
- e. To avoid damaging the charging device, refrain from charging the speaker while playing music at a volume exceeding 80%. Please note that this action is not covered under the warranty.

PRODUCT WARRANTY

Warranty period: 1 Year
 Email: support@igear.asia
 (Between 10am to 5pm, Mon-Fri)
 www.igearworld.com
 In case of consumer complaints:
 Customer Care: +91 93726 67193

For warranty support, scan the QR code

