



# IMMERSE

Bluetooth Soundbar Speaker




**20W** SPEAKER **EXTRA BASS**

## Product specifications

Bluetooth Name: iGear Immerse  
Charging voltage/current: 5V/1A  
Output power: 10W\* 2  
Battery capacity: 3.7V 2000mAh  
Transmission distance is of 10 meters (transmission distance varies between environmental factors and Bluetooth devices)

## Function Keys

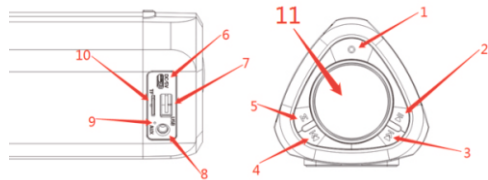

- |                      |                        |
|----------------------|------------------------|
| 1. Power button      | 7. USB pen-drive slot  |
| 2. Play/pause        | 8. AUX input           |
| 3. Next/Fast Forward | 9. Charging indicator  |
| 4. Previous/Rewind   | 10. TF/SD card slot    |
| 5. Mode button       | 11. Volume rotary knob |
| 6. Charging port     |                        |

## Packaging content

Includes the following items:  
1. Soundbar X 1 pc  
2. USB charging cable X 1 pc  
3. User manual X 1 pc

## Battery charging

Before using the soundbar for the first time, please charge it for minimum 2 hours by using the cable provided in the packaging.

Please select the charging adapter strictly according to the soundbar specifications.

While using the soundbar, please make sure to charge it when it gives a prompt for low power.

If not using the soundbar for a long time, be sure to charge at least twice a month to protect the battery and extend the battery life.

**Note: Be sure to charge using 5V output adapter, charging the soundbar using adapter below 5V or above 5V will damage the soundbar.**

## Power On and Power Off

Power On: Press the key for 3 seconds, and the device turns on  
Power Off: Press the key for 3 seconds, and the device turns off

## Volume adjustment

Rotate the knob clockwise to increase the volume and rotate the knob anti-clockwise to reduce the volume

## Bluetooth connection to a device

Default mode is Bluetooth mode  
If the product is not in Bluetooth mode, follow the below steps

## Bluetooth connection

1. Switch the soundbar to Bluetooth mode (short press M button to switch to Bluetooth mode).
2. Turn on the Bluetooth device (mobile phone/tablet, etc.) and search for the device pairing name "iGear Immerse", click to pair it with the device.
3. Combination key long press to disconnect and reconnect Bluetooth on the device

## Bluetooth call

1. When receiving a call, short press button to accept the call.
2. Volume can be adjusted during the call.
3. Press button again to end the call.
4. Double-click to redial the last called number.
5. Long press the button to reject the call.

## Music Playback

1. Click to play or pause the music.
2. Short press button to switch to the previous song.
3. Short press button to play the next song.

## External TF/SD card audio playback

TF Card: When turned on, insert the TF/SD card in the represented slot to play the music from the card (supports up-to 32 GB)

## External USB drive multimedia function

In Bluetooth mode, insert the USB drive into the represented slot, the product will automatically switch to the USB drive playback function

If songs do not play after inserting the drive, please check whether the USB drive has the file in Mp3 format or the USB drive is of 32GB.

## AUX In

Using Aux input: you can connect the AUX line directly and the device will automatically switch to AUX mode.

## TWS function

Power on two pieces of the iGear Immerse in Bluetooth mode and long press 'M' button on one of the soundbar. Once the process is complete both the soundbars will be connected to each other.

While connecting via Bluetooth search for the name "iGear Immerse" and connect with it. Once connected both the soundbars will play music at the same time.

## FM Mode

1. Short press "M" key to enter the FM radio mode.
2. Auto Search: Long Press the Play/Pause button to auto search radio stations, after station search is complete, it will automatically jump to the first saved channel and play.
3. After the channel search is complete, short press Next or Previous button for switching stations.
4. You can use USB charging cable as an external antenna for the soundbar to get better signal.

**"Note: Please use the soundbar in open environment, such as outdoors, window, balcony, etc., when using FM mode, to avoid interference and shielding effect from surrounding environment."**

## Safety instruction

Read this section for information and inform your child before using the product. For more detailed information, see the safety instructions and precautions.

- Do not try to open or repair the soundbar and accessories
- Keep the soundbar away from magnetic devices.
- Do not use soundbar at high temperature or near flammable gases.
- Do not use this soundbar in wet environment such as the bathroom and avoid this soundbar being soaked or washed by liquid.
- Follow the instructions in this manual when using the USB charging cable or it may damage your soundbar.

## Warranty

Warranty Period: 1 Year  
In case of consumer complaint  
Customer support: +91 9372667193  
Email: support@igear.asia  
(Between 10am to 5pm, Mon to Fri)  
www.igearworld.com