



WO-8574 Startup Guide

To initiate startup:

1. Ensure valves are in the correct position
2. Engage main power disconnect
3. Verify that there are no active alarms
4. Check for leak connections after pump starts

In the event of a motor overload, press the reset button located on the motor controller inside of the control panel.

Major Components

COMPONENT	MANUFACTURER	MODEL NUMBER	SERIAL NUMBER
210-PP-107 RAW LEACHATE SUPPLY PUMP	PRM	AMS370/2.2	
2" ELECTRICALLY ACTUATED PVC TRUE UNION BALL VALVE	BONOMI	8EPVCBV2-023-2	
PRESSURE TRANSMITTER	CERABAR	PMP-11-AA1L1HFVXJ	W1008315168
12" FAN	AC INFINITY	AC-ALT12	
HEATER	DAYTON	3UG76D	
VFD - PUMP	YASKAWA	GA50U4012ABA	J0236E950110067
TRANSFORMER	HAMMOND	Q002LEKF	AB00814500