


METERS WITH (1) PULSE OUTPUT (2 WIRE)

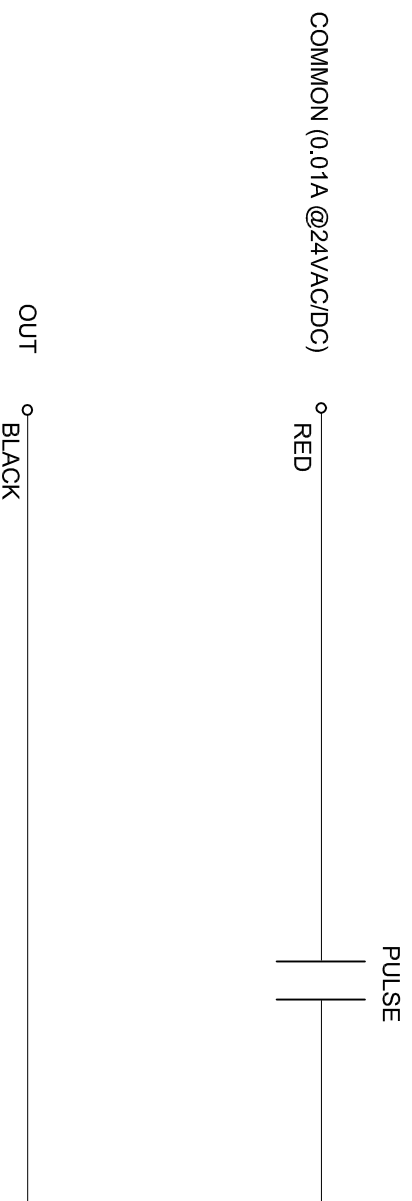


*NOTE
x0.1 = 1 PULSE PER 1 GALLON
x1 = 1 PULSE PER 10 GALLONS
x10 = 1 PULSE PER 100 GALLONS

*NOTE
SELECT METERS COME WITH (2) PULSE OUTPUTS.
BOTH ARE BASED ON THE SAME FLOW RATE. IF ONLY
ONE PULSE IS NEEDED, CAP OFF UNUSED WIRE.

*NOTE
PULSE SENSOR MAY BE MOVED, BASED ON REQUIRED
PULSE RATE.

METERS WITH (2) PULSE OUTPUTS (3 WIRE)

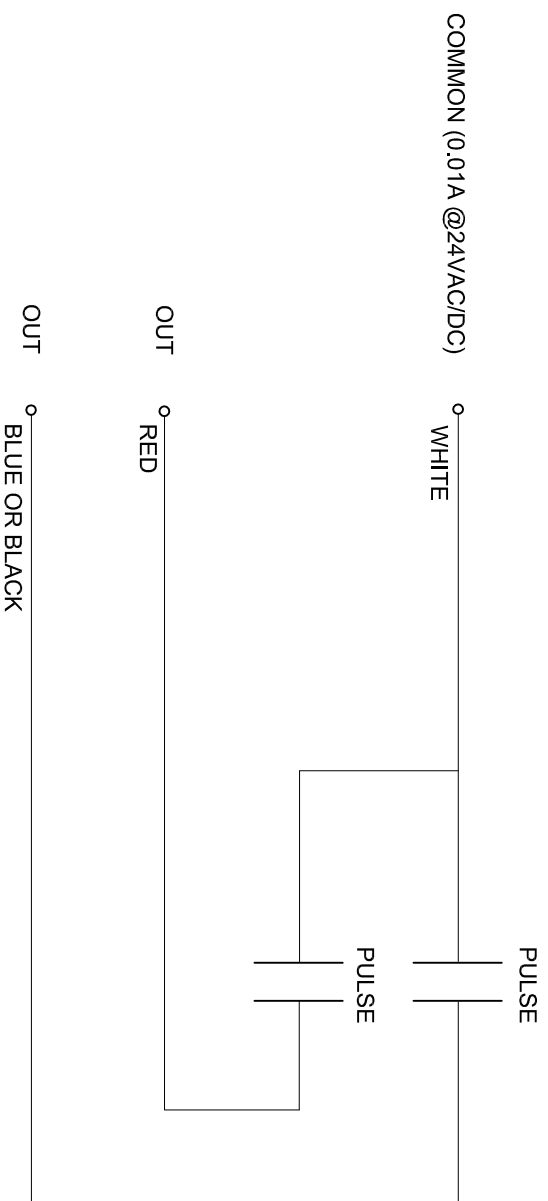

- 1) REMOVE BRASS CAP BY UNSCREWING COUNTER-CLOCKWISE.
- 2) 3 POSITIONS ARE INDICATED AS NOTCHES THAT CORRESPOND TO THE DESIRED DIAL.
- 3) WITH A SMALL FLATHEAD SCREWDRIVER, GENTLY PRY UP FROM THE CURRENTLY SELECTED NOTCH.
- 4) ONCE THE PLASTIC COVER IS REMOVED, THE CURRENT DIAL WILL HAVE A RED ARROW WITH A MAGNET ATTACHED. GENTLY, PULL STRAIGHT UP ON THE ARROW AND INSTALL GENTLY ON THE DESIRED DIAL.
- 5) PLACE THE PLASTIC COVER INTO THE NOTCH CORRESPONDING TO THE DESIRED DIAL.
- 6) REINSTALL BRASS CAP.



Product Recovery Management Inc.
200 20th Street
Buhler, NC, 27509
919-957-8890

PRM MULTI-JET WATERMETERS - TOTALIZING AND RATE INDICATION