

# ARIZER

## Air **MAX** Owner's Manual

Manuel d'utilisation du Air **Max** | Air **Max** Bedienungsanleitung  
Manuale di istruzioni Air **Max** | Manual de Usuario del Air **Max**



## LANGUAGE INDEX

English 20

French 32

German 45

Italian 58

Spanish 71

**Cautions, Disclaimers and Warnings (Read Before Use) 1**

Safety Certifications

Limitation of Liability (Read Before Use)

Battery Safety and Warnings (Read Before Use)

Counterfeit and Inferior - Quality Battery Warning

**What's Included 21**

**User Friendly Os 22**

Control Panel

Normal Mode

Dark Mode

**Operation 25**

Aromatherapy

Normal Mode

Dark Mode

Switching Between Dark Mode and Normal Mode

Using the Frosted Aroma Tube

**Battery Performance 30**

Battery Charge

Use While Charging

Battery Conservation

Battery Replacement

**Cleaning And Maintenance 31**

Warranty Information

Troubleshooting

Available Accessories

## WHAT'S INCLUDED

- |   |   |
|---|---|
| 1 x Air MAX Portable Micro-Heater           | 2 x Air MAX PVC Travel Tube w./ Cap (70mm Size)       |
| 1 x Air MAX Battery                         | 1 x Air MAX PVC Travel Tube w./ Cap (Aroma Dish Size) |
| 1 x Air MAX USB-C Charger / Power Adapter   | 1 x Air MAX Stainless Steel Stirring Tool             |
| 1 x Air MAX Glass Aroma Tube (70mm)         | 4 x Air MAX Stainless Steel Filter Screens            |
| 1 x Air MAX Frosted Glass Aroma Tube (14mm) | 1 x Sample Aromatic Botanicals                        |
| 1 x Air MAX Glass Aroma Dish                | 1 x Air MAX Owner's Manual                            |
| 2 x Air MAX Silicone Stem Caps              |   |



① Sample Aromatic Botanicals not included in Australian package

## USER FRIENDLY OS

### Control Panel

- ① OLED Display Screen
- ② Menu Button
- ③ Plus Button
- ④ Minus Button
- ⑤ Current Temperature
- ⑥ Battery Indicator



### **The Air MAX has two display modes:**

1. Normal Mode: Use Normal Mode for full display and complete Custom Session Settings.
2. Dark Mode: Use Dark Mode for discrete low-light display and customizable dark settings.

#### **Normal Mode Settings**

Use the Menu button to navigate through the different settings, then use the plus (+) and minus (-) buttons to adjust them.

#### **Temperature Settings**

The Air MAX's optimized heating system warms up in under a minute and has a wide temperature range of 50°C–220°C (122°F–428°F). The temperature is adjustable in 1° increments and 10° increments.

#### **Audio / Beep**

This function has three volume settings and can also be turned off. If the Audio / Beep is activated, a beep will be heard when the Air MAX is powered on or off.

#### **Temperature Alert**

This function has three volume settings and can also be turned off. If the Temperature Alert is activated, two beeps will be heard when the set temperature is reached.

#### **Automatic Shut-Off Timer**

The automatic shut-off timer safety feature ensures you don't forget to turn off the unit and helps conserve battery life. The shut-off timer can be adjusted between 5–15 minutes in 1 minute increments. The default setting is 10 minutes.

#### **Celsius or Fahrenheit**

The Air MAX display can be set to Celsius or Fahrenheit. The default setting is Celsius.

#### **Display Brightness**

The unit's display has three brightness settings: Low, Medium, and High. The default setting is high.

#### **Power-On Delay**

The power-on delay safety feature ensures you don't accidentally turn on the unit and has four settings for your convenience: 2 Seconds, 4 Seconds, 6 Seconds, and 8 Seconds. The default setting is 6 seconds.

### **Automatic Display Inversion**

Turn the unit upside down and the display automatically inverts.

### **Dark Mode Settings**

Use the Menu (M) button to navigate through the different settings, then use the plus (+) and minus (-) buttons to adjust them.

#### **Temperature Settings**

Adjust in 1° increments and 10° increments. Default setting is 200°C.

#### **Audio/Beep**

This function has two options: Low and Off. Default setting is Off.

#### **Temperature Alert**

This function has two options: Low and Off. Default setting is Off.

#### **Automatic Shut-Off Timer**

This function can be adjusted between 5–15 minutes in 1 minute increments. The default setting is 10 minutes.

#### **Celsius or Fahrenheit**

This feature cannot be changed in Dark Mode.

#### **Display Brightness**

In Dark Mode, screen brightness is always low. This setting is not displayed in the menu and cannot be adjusted.

#### **Power-On Delay**

This safety feature has four settings: 2, Seconds, 4 Seconds, 6 Seconds, and 8 Seconds. The default setting is 4 seconds.

#### **Automatic Display Inversion**

Turn the unit upside down and the display automatically inverts.

- ① **Dark Mode settings are independent and stored separately from Normal Mode settings.**

## OPERATION

### Aromatherapy

Botanicals such as Lavender, Chamomile, Orange Peels, and many more, can be vaporized for aromatherapy. By heating your favorite herbs and flowers to precise temperatures, the pleasing aromas, terpenes, and botanical compounds are released to promote and enhance energetic or relaxing environments.

1. Load the Glass Aromatherapy Dish with some dried Aromatic Botanicals.
2. Insert the Glass Aromatherapy Dish.
3. Press and hold the (M) and (+) buttons to turn on the unit. A timer will count down on the OLED screen showing the power-on delay and the text "Normal Mode" is displayed when the unit is powered on.
4. Use the (+) and (-) buttons to adjust the temperature to 50°C–160°C (122°F–320°F).
5. Hold the device below your nose and gently inhale and breathe in the pleasing aromas as the botanicals are warmed. Relax and enjoy!

### Normal Mode

1. Load Glass Aroma Tube. Put some coarsely ground botanicals in a small container then gently push and slightly twist the glass stem into the container to fill the dish.

⚠ Do not press too hard or pack too tightly.

ℹ Loading the Glass Aroma Tube this way takes advantage of it's design ensuring easy maintenance and optimal performance.

2. Insert the Glass Aroma Tube.

⚠ If the Glass Aroma Tube is difficult to insert, try preheating the unit first.



Glass Aromatherapy Dish



Insert Glass Aroma Tube



① You can carry pre-loaded Glass Aroma Tubes in the handy PVC Travel Tubes for quick and easy use on the go!

3. Press and hold the Menu (M) and Plus (+) buttons to turn on the unit in Normal Mode. A timer will count down on the OLED screen showing the power-on delay followed by a greeting when the unit is powered on.

4. Set the temperature and let the unit heat up. Press one of the plus or minus buttons on the right side and the Air MAX will start to heat up to the previously used Normal Mode temperature. Press the plus and minus buttons to adjust the temperature in 1° increments, or hold the button down to adjust the temperature in 10° increments.

① If active, the Temperature Alert will beep twice after set temperature is reached.

5. Inhale vapors. Inhale vapors through the Glass Aroma Tube in a slow steady draw. Varying factors will determine the temperature setting to use, such as the type of botanicals, moisture content, whole flower or ground form, etc.

① Try using different inhaling techniques with different temperatures to suit your personal needs and preferences.

6. Use the Air MAX until it shuts down automatically, or press and hold the Menu (M) button to power off the unit.



Press and hold Menu (M) and Plus (+) Buttons



Set the temperature

## Dark Mode

In Dark Mode, small icons represent the functions:

○ **Top Right Corner:** Power On Delay.

□ **Top Left Corner:** Idle.

+ **Bottom Left Corner:** Heating.

△ **Bottom Right Corner:** Ready for Use.

1. Load Glass Aroma Tube. Put some coarsely ground botanicals in a small container then gently push and slightly twist the glass stem into the container to fill the dish.

⚠ **Do not press too hard or pack too tightly.**

① **Loading the Glass Aroma Tube this way takes advantage of it's design ensuring easy maintenance and optimal performance.**

2. Insert the Glass Aroma Tube.

⚠ **If the Glass Aroma Tube is difficult to insert, try preheating the unit first.**

① **You can carry pre-loaded Glass Aroma Tubes in the handy PVC Travel Tubes for quick and easy use on the go!**

3. Press and hold the Menu (M) and Minus (-) buttons to turn on the unit in Dark Mode. The top right corner symbol (○) flashes once for each countdown second. The text "Dark Mode" is displayed for 1 second, followed by the top left corner symbol (□) flashing once per second indicating the heater is idle.

4. Set the temperature and let the unit heat up. Press one of the plus or minus buttons on the right side and the Air MAX will start to heat up to the previously used Dark Mode temperature. Press the Menu (M) button to access the temperature settings, then press the plus and minus buttons to adjust the temperature in 1°



Insert Glass Aroma Tube



Press and hold Menu (M) and Minus (-) Buttons



Set the temperature

First time use, examine box contents to ensure all included parts are in good condition, not damaged from shipping. Check glass parts for cracks or breakage. If new items are received damaged, do not use, and email [service@arizer.com](mailto:service@arizer.com) for assistance. Air MAX has a plastic battery protector that needs to be removed before first use. Unscrew the battery cap, remove and discard the clear plastic disc. Packing materials, bags, and small parts may pose a choking hazard. Keep out of reach from children, minors and pets. Glass Aroma Tubes may fit tightly in the unit at first. If you are finding it difficult to insert a Glass Aroma Tube, turn on the Air MAX, set the temperature to 200°C, and let the unit heat for 5-10 minutes.



**Warning – Hot Parts – Handle hot parts and glass parts with care**

- Do not place hot parts on non-heat safe surfaces.
- Carefully attach protective heat-rated silicone caps to safely cover the hot end of glass parts.
- Allow the heating unit and hot parts to cool before placing them in a purse, pocket, or any container where damage from hot parts can occur.
- Not for use with e-liquids, tobacco, or tobacco products. Misuse can result in damage and voids all warranties. Unauthorized service performed voids all warranties. For assistance email [service@arizer.com](mailto:service@arizer.com).



**Parts are made from strong scientific quality borosilicate glass, but all borosilicate glass is breakable so handle with care and caution**

- Avoid tapping on hard surfaces to prevent cracking and breaking. If glass is dropped or sustains an impact, examine for cracking, chipping and weakness before use.
- Do not expose hot glass parts to cold water or extreme temperature change as this may result in cracking or breaking.
- Safely dispose of damaged glass according to local regulations. Examine parts periodically for cracks, chipping and weakness from handling and drops.



**Product contains electrical and delicate parts – do not drop**

- If dropped or otherwise damaged do not operate.
- To protect and prevent electric shock and/or fire never immerse or operate the product in or around any water and/or liquids.
- Do not stick or pour anything in the unit or place near flammable material.
- Do not store, operate or expose the unit and contents to extreme temperatures.

increments, or hold the button down to adjust the temperature in 10° increments. The bottom left corner symbol (+) flashes once per second while heating and the bottom right corner symbol (Δ) flashes once every 5 seconds when the set temperature is reached.

① **If active, the Temperature Alert will beep twice after the set temperature is reached.**

5. Inhale vapors. Inhale vapors through the Glass Aroma Tube in a slow steady draw. Varying factors will determine the temperature setting to use, such as the type of botanicals, moisture content, whole flower or ground form, etc.

① **Try using different inhaling techniques with different temperatures to suit your personal needs and preferences.**

6. Use the Air MAX until it shuts down automatically, or press and hold the Menu (M) button to power off the unit.

### **Switching between Dark Mode and Normal Mode**

When the unit is powered on, you can quickly and easily switch back and forth between Normal Mode and Dark Mode. Simply press and hold (M) button and minus (-) button for 2 seconds to switch modes. When switching from Normal Mode to Dark Mode, the text "Dark Mode" is displayed on screen followed by the Dark Mode symbols indicating heating status. When switching from Dark Mode to Normal Mode, the text "Normal Mode" is displayed on screen followed by the temperature display / heating status.

## Using the Frosted Aroma Tube

1. Load Glass Aroma Tube. Put some coarsely ground botanicals in a small container then gently push and slightly twist the glass stem into the container to fill the dish.

**⚠ Do not press too hard or pack too tightly.**

**ℹ Loading the Glass Aroma Tube this way takes advantage of it's design ensuring easy maintenance and optimal performance.**

2. Insert the Glass Aroma Tube.

**⚠ If the Glass Aroma Tube is difficult to insert, try preheating the unit first.**

**ℹ You can carry pre-loaded Glass Aroma Tubes in the handy PVC Travel Tubes for quick and easy use on the go!**

3. Turn on the Air MAX in Normal Mode or Dark Mode.

4. Set the temperature and let the unit heat up.

**ℹ If active, the Temperature Alert will beep twice after the set temperature is reached.**

5. Invert the Air MAX and attach to your third-party glass water bubbler. The Air MAX screen will automatically invert so you can easily read it.

6. Inhale vapors. Inhale vapors through your third-party glass water bubbler. Varying factors will determine the temperature setting to use, such as the type of botanicals, moisture content, whole flower or ground form, etc.

**⚠ Do not let water splash up into the Air MAX heater or on the unit itself.**

**⚠ Do not leave the Air MAX inverted, it's weight can strain the glass. Stand the device upright between draws.**



Using the Frosted Aroma Tube

## BATTERY PERFORMANCE

Arizer Batteries meet rigorous quality standards. With normal use they will last for hundreds of charge cycles before losing any capacity. Dropping the battery or the unit can result in battery damage that may limit or reduce the battery capacity quickly, so it is important to handle the batteries and your unit carefully.

### Battery Charge

Depending on the temperature setting and general usage patterns the Air MAX battery will typically last for 2 hours and 15 minutes of use per charge. The battery will take approximately 3 hours to fully charge, or longer if you use it while charging.

### Use While Charging

If your battery is running low with the Air MAX, you don't have to wait for the battery to fully charge before you can use it. Just partially charge the battery (15–20 minutes) and then you can set the temperature and use the Air MAX while the battery continues charging.

① **The Air MAX will not operate if the battery is completely drained.**

### Battery Conservation

The Air MAX and Air MAX Chargers have built-in protections to prevent the battery from being overcharged or drained too low. To conserve battery life, use the Air MAX in a temperature-controlled environment and use lower temperature settings. When outdoors, stay sheltered from the elements and avoid using in extremely cold temperatures. Charge the battery as necessary. Do not store the battery fully charged or fully drained for longer than one month (store with partial charge).

### Battery Replacement

The Air MAX Battery is a high-capacity, long life battery, and will last for a long time, even with prolonged and regular useage. Spare/ replacement Air MAX batteries are available for purchase at: [www.arizer.com](http://www.arizer.com)

## CLEANING AND MAINTENANCE

The Air MAX itself is essentially maintenance free so you can spend your time using it instead of cleaning it! Simply recharge or replace the battery when it is low, swap out pre-loaded Glass Aroma Tubes on the go without fiddling with emptying or cleaning bowls, and keep your herbs and/or botanicals contained in the removable Glass Aroma Tubes that can be cleaned effortlessly! After numerous uses the glass parts should be cleaned to ensure optimal performance. To clean the glass parts, soak them in isopropyl (rubbing) alcohol for a couple hours then rinse with hot water. In most cases doing this will clean the Glass Aroma Tubes as good as new, but if not simply repeat as necessary. After cleaning, always ensure the Glass Aroma Tubes are fully dry before use.

### Warranty Information

The Air MAX carries a lifetime warranty on the heating element, and a limited 2-Year warranty covering defects in materials or workmanship, excluding battery. Glass is not covered under warranty. Retain proof of purchase for warranty service. Warranty is non-transferable, valid from the original date of purchase and does not extend or renew with service. Returning the product and costs incurred are the responsibility of the user. Arizer will repair or replace warranted items at our discretion. The warranty does not cover units damaged by dropping, tampering, unauthorized service performed or attempted, modifying the unit, misuse or abuse.

### Troubleshooting

If you experience an issue with your Air MAX send an email to [service@arizer.com](mailto:service@arizer.com) and an expert Arizer customer service representative will reply as soon as possible to troubleshoot and determine the best way to resolve any issues. To help expedite your service request please include a description of the problem, your full name, your shipping address, the serial number on the bottom of your device, and a copy of your sales receipt.

### Available Accessories

All Spare parts and accessories are available on our website: [www.arizer.com](http://www.arizer.com)





**ENG** © 2021 Arizer, Waterloo, ON Canada. All rights reserved. Patents Pending. Designed in Canada. Made in China. Arizer, the Arizer logos, and Air MAX are trademarks or registered trademarks of Arizer in Canada, USA, Europe, Asia and other jurisdictions.

**FR** © 2021 Arizer, Waterloo, ON Canada. Tous les droits sont réservés. Brevets en instance. Conçu au Canada. Fabriqué en Chine. Arizer, les logos Arizer et Air MAX sont des marques ou des marques déposées d'Arizer au Canada, aux États-Unis, en Europe, en Asie et dans d'autres juridictions.

**GER** © 2021 Arizer, Waterloo, ON Kanada. Alle Rechte vorbehalten. Patentantrag ist eingereicht. Entworfen in Kanada. In China hergestellt. Arizer, die Arizer-Logos und Air MAX sind Marken oder eingetragene Marken von Arizer in Kanada, den USA, Europa, Asien und anderen Rechtsordnungen.

**ITA** © 2021 Arizer, Waterloo, Canada. Tutti i diritti riservati. Brevetti in attesa. Progettato in Canada. Fatto in Cina. Arizer, i loghi di Arizer e Air MAX sono marchi o marchi registrati di Arizer in Canada, Stati Uniti, Europa, Asia e altre giurisdizioni.

**ESP** © 2021 Arizer, Waterloo, EN Canadá. Reservados todos los derechos. Patentes pendientes. Diseñado en Canadá. Hecho en China. Arizer, los logotipos de Arizer y Air MAX son marcas comerciales o marcas comerciales registradas de Arizer en Canadá, EE. UU., Europa, Asia y otras jurisdicciones.



HELENSKINZ NZ

**HELENSKINZ**

FOR ALL YOUR HERBAL VAPING AND INFUSION NEEDS.

CONTACT US AT - [Sales@helenskinz.co.nz](mailto:Sales@helenskinz.co.nz)