 
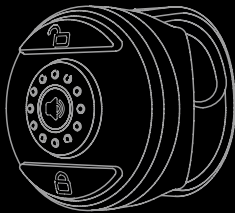 


HORN


PIDZOOM

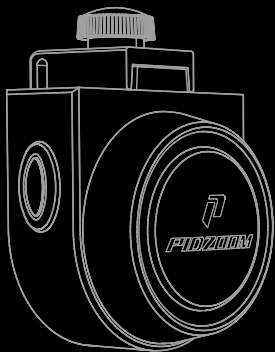

Finger-Controlled

FH30

MAIN FEATURES



Powerful Horn



Motion Alarm



Type-C Charging



High-capacity Battery



Easy to Mount



Long-Lasting Materials



Water-Resistant (IPX5)



Personalized Settings

Note: Ensure charging the main unit to activate the remote control prior to its initial use.

COMPONENTS



Main Unit
x1



Remote Control
x1



Bracket
x1



Screw
x1



Ties
x4



Adhesive
x1



USB-C Cable
x1

SPECIFICATIONS


Model	FH30
Color	Black
Material	PC+ABS
Main unit size	46x43x41(MM)
Net weight	66g
Sound pressure level	115db
Main unit battery	400mAh(3.7V) Lithium Battery
Bracket	Cable Tie +Hand Screw
Control range	up to 4 meters
Remote control size	φ31*15
Remote control battery	Button cell R2016*2
Applicable Devices	EUCs, scooters, skateboards, bikes, wearables

MAIN UNIT MOUNTING


Two installation options:

Option 1: Main unit attached with reusable fastener.

 Option 2: Fasten the bracket with ties and secure the main unit with the screw.

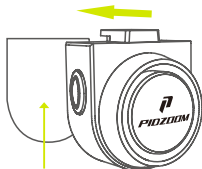

reusable fastener

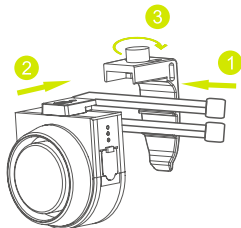 

REMOTE CONTROL AND GENERAL OPERATION



 Disarm & Setting mode (hold for 4s)

 Horn & 4 Ringtone options

 Arm & Volume Adjustment

Horn:

In the disarmed state, short press the alarm button to trigger the previously set ringtone. Short press for short ringtone, long press for long ringtone.

Motion Alarm :

 
Arm: Press the arm button on the remote to activate the motion alarm function. The main unit will respond with a "do-Re-Mi" melody and confirm the armed status with a beep after three seconds. If the device detects motion on the vehicle, it will emit a warning sound. Any subsequent motion will trigger a 30 seconds duration alarm.

Disarm: Press the disarm button on the remote to deactivate the motion alarm function. The main unit will acknowledge with a "Mi-Re-Do" melody.

Customization Setup:

1. To enter setting mode, press and hold the disarm button on the remote for four seconds. The central button's LED will illuminate to confirm successful entry.
2. Toggle between ringtone types by pressing the central button.
3. Adjust the ringtone volume by pressing the arm button.
4. Save your settings by pressing the disarm button. A beep will confirm a successful setup.

CHARGING PROCESS



Type-C

 
1. As the battery level decreases on the main unit, the indicators gradually turn off until fully depleted.
2. To initiate charging, connect the USB-C cable. As the battery level increases, the number of indicators will illuminate accordingly. Once 2-3 hours have elapsed, the third indicator LED will remain steady, confirming that the battery is fully charged.

Low Battery Indications :

1. Only one power indicator remains lit.
2. A "Biu-" sound accompanies the standard beep when pressing the remote's buttons.
3. A decrease in control range or responsiveness is associated with low battery.

If you notice any of these signs, charge the main unit.

MAIN UNIT AND REMOTE PAIRING



Main Unit Button

1. While in normal or disarm status, press and hold the main unit's button until you hear a "beep," then release it.
2. Press any button on the remote. The main unit will beep twice to indicate a successful pairing.
3. To erase the list of paired remotes, while in normal or disarm status, press and hold the main unit's button for about 7 seconds until you hear a long "beep" sound, confirming the unpairing process.

Note: A single main unit can pair with up to three remotes.

FQA

Why is the motion alarm not responsive?

After arming the motion alarm, wait for the beep (about 3 seconds) before touching or moving your vehicle. This confirms it's fully armed.

Why is the main unit no longer responsive to the remote control?

Ensure adequate power for both the main unit and the remote. Charge the main unit or replace the remote's battery.

What's preventing my device from charging or causing it to charge slowly?

Use the provided charging cable and ensure proper insertion into the USB port. Charging starts when the power indicator is active.

When is it time to charge the battery, and how to know the power is low?

Indications of a low battery include hearing "Biu-Biu" tones following the normal beep, a diminished control range or responsiveness, and the presence of only one active power indicator light out of three. Charge the main unit when any of these signs occur.

Can I buy additional remote controls?

Yes, each main unit can be paired with up to three remote controls and used simultaneously.

What to do in the event of a lost remote control?

Release the paired link between the lost remote and the main unit and pair a new remote. To do this, perform a long-press on the main unit button for 7 seconds to erase the list of paired remotes. After acquiring a new remote, initiate the pairing process by performing a three second long-press on the main unit's button, then press any button on the new remote. A "beep-beep" sound will confirm the successful pairing of the new remote.

Is it necessary to re-pair the devices after replacing the remote's battery?

No, it's not necessary.

Can I use the main unit while roller skating?

Yes, you can wear the main unit by attaching its bracket to your pants' belt or backpack straps.

WARNING & NOTICES

1. To prevent hearing damage, refrain from placing the main unit close to your ears.
2. After charging, make sure to securely close the charging port.
3. The ultimate interpretation of this manual lies with our company. Please contact us in case of any doubt.

WARRANTY

This product is covered by a one-year warranty from the date of purchase against manufacturing defects. Please retain the proof of purchase document and contact us if you have any doubt.



www.pidzoom.com