

Guide of Changing Oven Settings

Clock

1. Press "Settings" repeatedly until the display shows "--:-- Timed".
2. Press numbers to enter the time.
3. Press "Start" to save.




Selecting Fahrenheit or Celsius

1. Press "Settings" repeatedly until "Unit" appears in the display.
2. Press "1" to select F(Fahrenheit) or (Celsius).
3. Press "Start" to save.






Sound

1. Press "Settings" repeatedly until "Snd" appears in the display.
2. Press "1" to select On or Off.
3. Press "Start" to save.

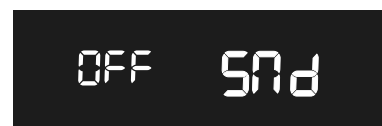

Adjusting the Oven Temperature

1. Press "Settings" repeatedly until "t_AJ" appears in the display.
2. Press "1" to select the mode you want to adjust temperature.
3. Press "3" or "6" to select the temperature.
4. Press "Start" to save.

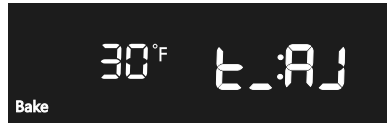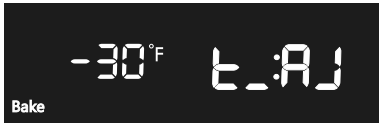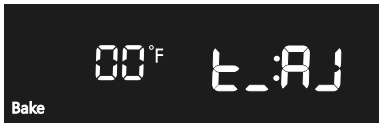

Demo mode

1. Press "Settings" repeatedly until "dEno" appears in the display.
2. Press "1" to select On or Off.
3. Press "Start" to save.



Setting the Hour Mode

1. Press "Settings" repeatedly until "12h" or "24h" appears in the display.
2. Press "1" to select "12h" or "24h".
3. Press "Start" to save.



Setting the SABBATH mode

1. Press "Settings" repeatedly until "SAbb" appears in the display.
2. Press "1" to select On or Off.
3. Press "Start" to save.

