



# Modern Lantern®

## RECHARGEABLE LAMP USER GUIDE

### **your lamp box contains:**

- lamp body
- lamp shade (optional diffuser disc)
- harp
- 12V LED bulb (optional bulb cover if it's an outdoor model)
- 12V Li-Ion battery (located inside base, unplugged)
- charger
- finial

# USER INSTRUCTIONS

---

## Read all instructions before using your Modern Lantern

Thank you for purchasing our product! Follow these simple instructions and you should be all set to enjoy years of cord free use from your decorative table lamp.

## WARNINGS

- **DANGER. To reduce the risk of electric shock, do not immerse this product in water. Do not place or store this product where it can fall or be pulled into a water source like a sink, tub, or pool.**
- **While charging, if the battery falls into water, unplug it immediately. DO NOT reach in the water.**
- **Do not place lamp on unstable surfaces**
- **Do not leave the indoor lamp products in the outdoor elements**
- **Do not expose battery to extreme temperatures**
- **Do not tamper or puncture battery**
- **Do not use if the battery has been dropped or damaged**
- **Unplug your charger when not in use**
- **Charge our Li-Ion battery using 120V US standard outlets**
- **Use ONLY Modern Lantern's 12V LED bulb, battery, and charger**
- **Contact Modern Lantern with any technical assistance or replacement parts at: [support@modernlantern.com](mailto:support@modernlantern.com)**

## Instructions for use:

- 1) Plug the charger into a standard INDOOR grounded wall outlet.
- 2) Plug the charger cord end into the 12V Li-Ion battery in the port hole. Wall charger should have a solid red light to indicate the battery is charging and solid green if fully charged.
- 3) Leave the battery on the high-speed charging system for a approx. 3.5+ hours for a complete charge. A green light on the charger will indicate when the battery is fully charged.
- 4) Unplug the charger from the wall outlet.
- 5) Unplug the battery from the charger cord end.
- 6) We recommend you tip the lamp with base door latch facing up or place the lamp in your lap, adding NO pressure on the shade, while accessing the battery door under the base.
- 7) Carefully tip the lamp on its side using a soft surface as to not damage the lamp body or table surface.
- 8) Unlock the battery compartment door on the bottom of the lamp base to access the battery.
- 9) Connect the male cord end from inside the lamp base into the battery port (should be a firm/snug connection).
- 10) Finish inserting the battery into recessed area inside the base **making sure cord is out of the way** and lock the base door.
- 11) And now for the cool part! Position the lamp wherever you like and switch it on using socket switch for up to 20+ hours of use, on a full charge.
- 12) Once the bulb has dimmed or gone off, switch off the lamp via the socket and repeat the steps above.

## User Maintenance:

- Never pick up or carry lamp by the harp or finial.
  - Do not operate in temperatures below 32° or above 100° F.
  - Product should be kept away from heat sources.
  - **For our outdoor line, recommend moving indoors or under cover during extreme weather.** Do not leave the lamp where water may 'pool up' on outdoor tables. If left outdoor, always use the provided diffuser over the shade (under the finial) and make sure the bulb globe is securely in place, covering the socket to keep moisture out. Make sure the base latch door is securely 'locked'.
  - To clean the lamp, wipe with a damp cloth, do not use cleaners.
  - Only replace bulb with Modern Lantern 12V LED bulb. Standard light bulbs will NOT work and will void our warranty.
  - Use only Modern Lantern authorized replacement parts.
- For replacement parts e-mail us at: [support@modernlantern.com](mailto:support@modernlantern.com) or call: **682-224-5351**
- Please recycle your battery by calling: **1-800-8-BATTERY or 1-877-2-RECYCLE** to find the nearest recycling center.

## TROUBLESHOOTING:

- **If lamp is not operating.** Check to make sure the battery is fully charged and charger indicator is green. Check to ensure lamp's plug is SECURELY inserted into the battery port. Check and ensure LED bulb is securely fastened in the socket. Check and make sure the socket switch is turned on.
- **On rare occasions the battery might need resetting, even if it is fully charged. Simply plug the battery into the charger for a moment, to reset it, then repeat the instructions.**
- **If lamp is operating but very dim or bulb flashes off, then on.** This is indicating that the battery is very near its performance limit and will require a full charge.
- **If I want more usable performance from my lamp or optional brighter bulb.** Purchase ONLY from Modern Lantern's website, [www.modernlantern.com](http://www.modernlantern.com), email us, or call: **682-224-5351**.
- **If I want to take my lamp outside to enjoy it.** Great! but make sure you bring it back indoors with you. **If the lamp is branded "outdoor" it can be operated outside under normal conditions.**

## Warranty:

Modern Lantern warrants this product is free from defects in workmanship for one year from the date of purchase. The rechargeable battery is warranted for one year from the date of purchase. The LED bulb is warranted for one year from the date of purchase. A receipt indicating date of purchase is required for all warranty claims. This warranty does NOT cover damages resulting from accident, misuse, leaving our indoor rated lamps in the outdoor elements, or any tampering with components to alter the performance of the product.

For returns, warranty, or repair contact Modern Lantern at:

[support@modernlantern.com](mailto:support@modernlantern.com)

or visit us at: [www.modernlantern.com](http://www.modernlantern.com) or call: **682-224-5351**

---

[www.modernlantern.com](http://www.modernlantern.com)

U.S. Patent No. 9,097,399. All rights reserved.