 


SeeSii[®]

INSTRUCTION MANUAL

Electric Ratchet Wrench

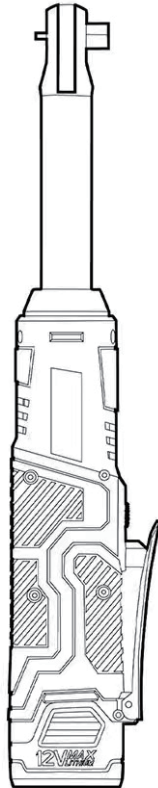

IMPORTANT:

- ① Read Before Using
- ② After-sale Mailbox: support@seesiius.com

SAFETY WARNINGS

WORK AREA

- **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.

- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.**

Power tools create sparks which may ignite the dust or fumes.

- **Keep bystanders, children, and visitors away** while operating a power tool. Distractions can cause you to lose control.

ELECTRICAL SAFETY

- **Don't expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use too while tired or under the influence of drugs, alcohol, or medication.

- **A moment of inattention** while operating power tools may result in serious personal injury.

- **Dress properly. Do not wear loose clothing or jewelry.** Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothing, jewelry, or long hair can be caught in moving parts.

•**Avoid accidental starting.** Be sure switch is off before plugging in. Carrying tools with your finger on the switch or plugging in tools that have the switch on invites accidents.

•**Remove adjusting keys or wrenches before turning the tool on.** A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.

•**Do not overreach.** Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.

•**Use safety equipment.** Always wear eye protection. Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.

TOOL USE AND CARE

•**Use clamps or other practical way to secure and support the work piece to a stable platform.** Holding the work by hand or against your body is unstable and may lead to loss of control.

•**Do not force tool.** Use the correct tool for your application. The correct tool will do the job better at the rate for which it is designed.

 
•**Do not use tool if switch does not turn it on or off.** Any tool that cannot be controlled with the switch is dangerous and must be repaired.

•**Store idle tools out of reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.

•**Check for misalignment or binding of moving parts, break- age of parts, and any other condition that may affect the tool's operation.** If damaged, have the tool serviced before using. Many accidents are caused by poorly maintained tools.

•**Use only accessories that are recommended by the manufacturer for your model.** Accessories that may be suitable for one tool, may become hazardous when used on another tool.

COMPONENTS AND SPECIFICATIONS

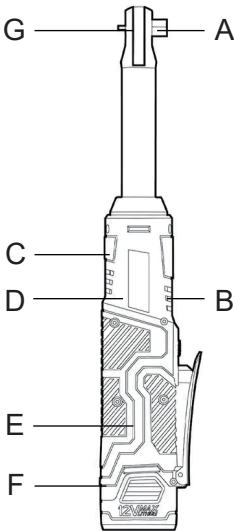


- A. 3/8" Square Drive
- B. Battery Indicator
- C. LED
- D. Lock Switch
- E. Paddle Switch
- F. Battery
- G. Forward/Reverse Toggle

Model	RT800L
Square Drive	3/8Inch
Max Torque	40 Foot Pounds
Rated Speed/No Load Speed	220 RPM
Rated Battery Voltage Weight (Bare Tool)	12V 1.72 bs
Weight (Tool + Battery)	2.12 bs


SPECIFIC INSTRUCTIONS



 WARNING! Hold power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring. Fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

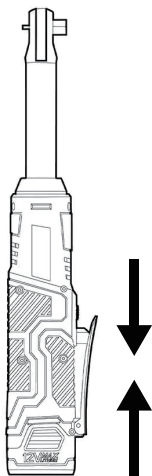

 Inserting / Removing the Battery
To insert the battery, slide the pack into the body of the tool. Make sure it latches securely into place.

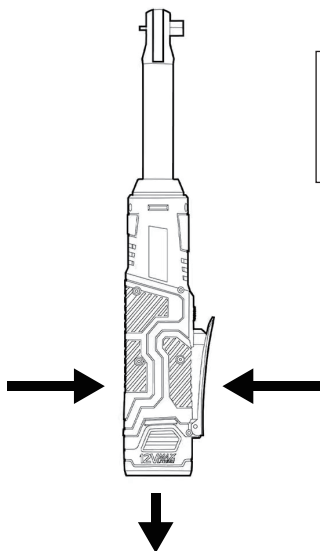

To remove the battery, push in the release buttons and pull the battery pack away from the tool.



Attaching and Removing Accessories These tools are intended only for use with accessories designed for impact tools. Other sockets could shatter or break, causing injury. To attach a socket or other accessory, align the accessory with the drive anvil and push it firmly onto the tool. To remove the accessory, pull the accessory off the drive anvil.



Using the Forward/Reverse Toggle For forward (clockwise) rotation, Forward rotate the forward/reverse toggle counterclockwise. Check the direction of rotation before use.

For reverse (counterclockwise) rotation, rotate the forward/reverse toggle clockwise. Check the Reverse direction of rotation before use.

BATTERY INDICATOR

Rem aining Capacity	Indicator Lights	
$\cong 50\%$	● ○ ○	Red Light ON
$\cong 50\%-80\%$	● ● ○	Red & Yellow Lights ON
$\cong 80\%-100\%$	● ● ●	Red & Yellow & Green Lights ON

Charge Battery

To Charge the battery, align the battery pack with the bay and slide the battery pack into the charger as far as possible. The red light will come on, either flashing (battery pack is too hot or cold) or continuous (pack is charging). A fully discharged battery pack with an internal temperature in the normal range will charge in 30 to 90 minutes, depending on the battery pack and charger.

Charger Indicator

Red Indicator	Green Indicator	Battery Pack	Status
ON	OFF	Charging	Charging
OFF	ON	Charged	Charged
OFF	OFF	Short Circuited	Short Circuited



IMPORTANT SAFETY INSTRUCTIONS FOR BATTERY CARTRIDGE

- Before using battery cartridge, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using battery.
- Do not disassemble battery cartridge.
- If operating time has become excessively shorter, stop operating immediately. It may result in a risk of overheating, possible burns and even an explosion.

- If electrolyte gets into your eyes, rinse them out with clear water and seek medical attention right away. It may result in loss of your eyesight.

- Do not short the battery cartridge:

- (1)Do not touch the terminals with any conductive material.

- (2)Avoid storing battery cartridge in a container with other metal objects such as nails, coins, etc.

- (3) Do not expose battery cartridge to water or rain.

A battery short can cause a large current flow, overheating, possible burns and even a breakdown.

Warranty Policy

Warranty Policy

Every Seesii product is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of THREE YEAR from the date of original purchase. Should any trouble develop during this three year period, please contact us via support@seesiius.com. If inspection shows the trouble is caused by defective workmanship or material, Seesii will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- Repairs have been made or attempted by others.
- Repairs are required because of normal wear and tear.
- The tool has been abused, misused or improperly maintained.
- Alterations have been made to the tool.