


**BOUNTY HUNTER®**  
METAL DETECTORS

# THE COMMANDO

M E T A L D E T E C T O R

## OWNER'S MANUAL

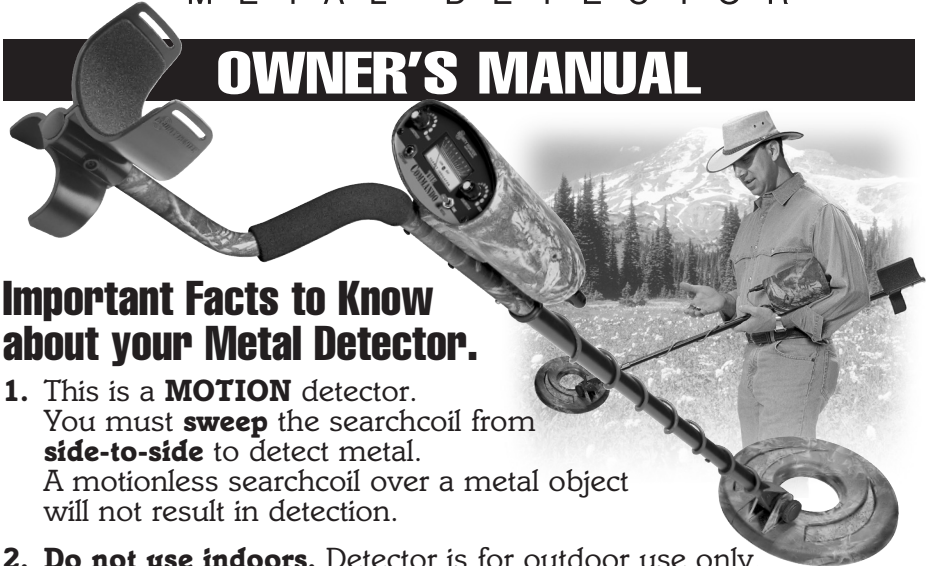

### Important Facts to Know about your Metal Detector.

- 1. This is a **MOTION** detector.**  
You must **sweep** the searchcoil from **side-to-side** to detect metal.  
A motionless searchcoil over a metal object will not result in detection.
- 2. Do not use indoors.** Detector is for outdoor use only.  
Household appliances emit electromagnetic fields, which can interfere with your detector. If conducting an indoor demonstration, turn the sensitivity down and keep the searchcoil away from appliances such as microwaves, computers and televisions. If your detector beeps erratically, turn off appliances and lights.  
  
Do not test by placing coins on the floor. Most floors contain metal. Keep the searchcoil away from floors, walls, and tables, which can contain metal.
- 3. Use 9-volt **ALKALINE** batteries only.**  
Do not use Heavy Duty batteries.  
Do not use ordinary Zinc-Carbon batteries.  
**Do not mix old and new batteries**
- 4. Adjust sensitivity to a low level** in the event of false signals  
Always begin use at reduced sensitivity.  
Increase to full sensitivity after you are familiar with the detector's operation.


# INTRODUCTION

The Commando is a user-friendly instrument, requiring only a minimum of operator skill, yet delivering effective performance over a wide range of conditions and applications.

Streamlined in appearance, with only two operating knobs and a mode selection switch, the Commando has eliminated the two most difficult aspects of Metal Detector Operation, Tuning and Ground Balancing. Both of these functions are automatic with the Commando.

The Commando will detect in extreme ground conditions, ranging from salt (for beach hunting) to black sand (for gold prospecting), with no operator adjustments to the circuitry and with no loss of sensitivity.


From salt water beach conditions to black sand deposits common at gold prospecting locations, the Commando sees through the earth's naturally occurring minerals to find buried metals.

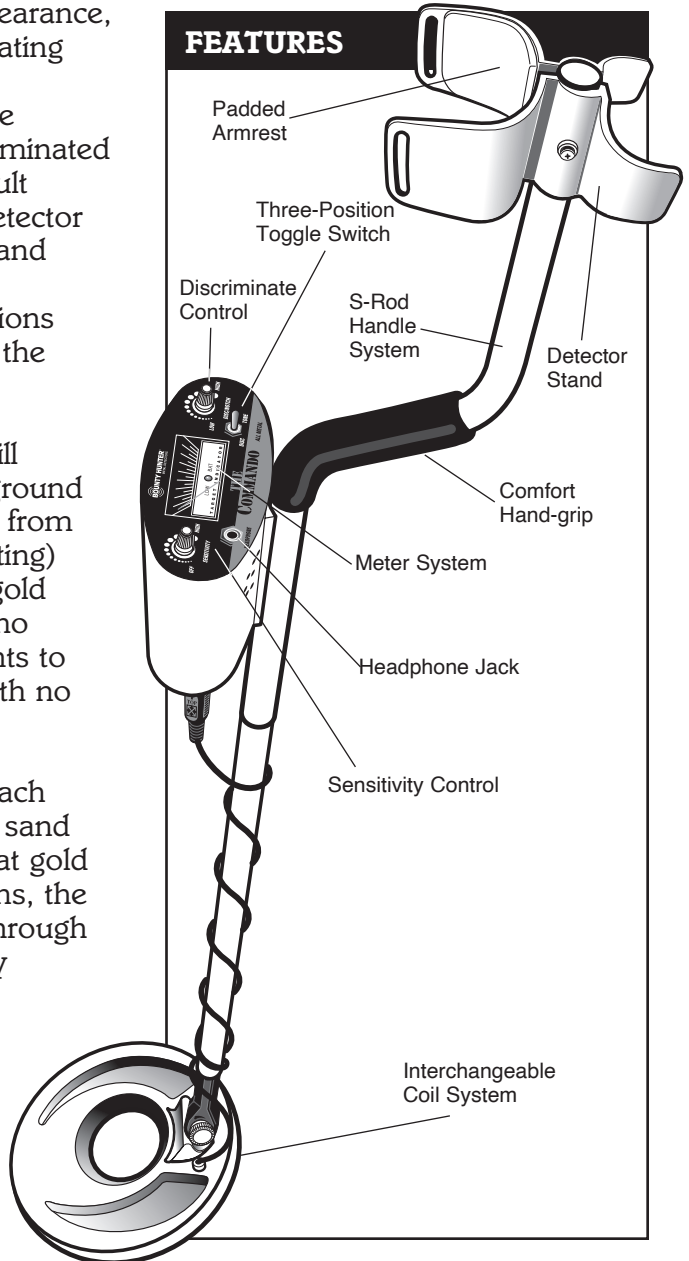

# EASY ASSEMBLY

## Assembly is easy and requires no tools.


- 1 Position detector upright.
- 2 Rotate the LOCKING COLLAR fully in a counter clockwise direction.
- 3 Insert your finger inside the tube and make sure the INTERNAL CAM LOCK is flush with the inside of the tube.
- 4 Insert the LOWER STEM into the S-ROD.

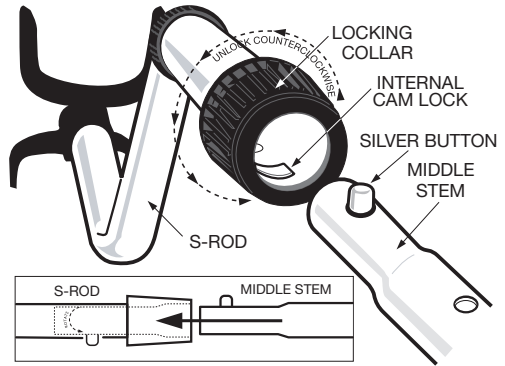

- 5 Rotate the LOWER STEM until the SILVER BUTTON locates in the hole.
- 6 Twist the LOCKING COLLAR fully in the clockwise direction until it locks.
- 7 If your detector has 3 tubes and 2 LOCKING COLLARS, repeat this process on the MIDDLE STEM.
- 8 Position the LOWER STEM (the straight tube) with the SILVER BUTTON toward the back. Using the BOLT and KNURLED KNOB, attach the SEARCHCOIL to the plastic extension protruding from the LOWER STEM.
- 9 Press the button on the upper end of the LOWER STEM, and slide the LOWER STEM into the S-ROD.

Adjust the STEM to a length that lets you maintain a comfortable upright posture, with your arm relaxed at your side, and the SEARCHCOIL parallel to the ground in front of you.

- 10 Wind the CABLE securely around the STEM.
- 11 Insert the PLUG into the matching CONNECTOR on the right underside of the DETECTOR BODY. Be sure that the key-way and pins line up correctly.

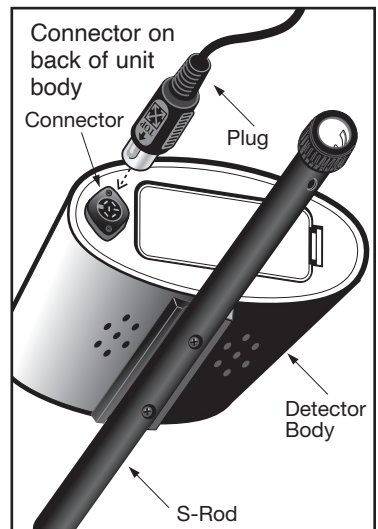

**Caution:** Do not force the plug in. Excess force may cause damage.  
To disconnect the cable, pull on the plug.  
*Do not pull on the cable.*

# BATTERIES

**IMPORTANT:** Always use **ALKALINE** batteries for optimal performance.

Always remove the batteries for prolonged storage.

**CHECK THE BATTERIES** if your detector exhibits any of the following symptoms:

- 1 The unit does not turn on.
- 2 Low speaker volume.
- 3 Unit beeps continuously at low sensitivity setting.


The Low Battery indicator light will come on and stay on if the batteries are discharged. It should flash momentarily when the Power Switch is turned off.

**IMPORTANT:** Your Commando Metal Detector requires two 9-Volt **ALKALINE** batteries.

Follow these steps to install the batteries.

- 1 Carefully remove the battery compartment door by pressing the release clip on the right side of the door.
- 2 Snap one battery onto each of the terminals and place the batteries inside the compartment. Feed wires to bottom of compartment first. Then push batteries into compartment with terminals facing inward. (see graphic)
- 3 Replace the compartment door by carefully inserting opposite side of clip first. Then press down on clip side until battery door snaps into place.

**CAUTION:** Some off-brand batteries maybe very large and difficult to insert.

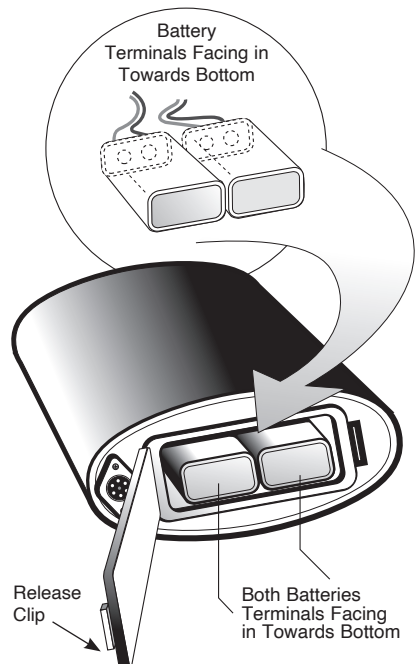

# Commando DEMONSTRATION

Here is a quick way to demonstrate the basic features of your Commando.

## 1. Supplies Needed


- A Quarter (25¢)
- A Nickel (5¢)
- A Penny (1¢)
- A Small piece of aluminum foil
- A Nail

## 2. Position your Commando

- Place the detector on a table, with the SEARCHCOIL hanging over the edge.
- Be sure that the SEARCHCOIL is far away from walls or metal objects. Keep the SEARCHCOIL away from any metal in the table.

## 3. Beginning Switch Settings

- Right Knob (DISCRIMINATE) – LOW
- Toggle Switch – Middle Position
- Turn detector on with “SENSITIVITY” knob set to 3:00 position
- Reduce “SENSITIVITY” in case of interference

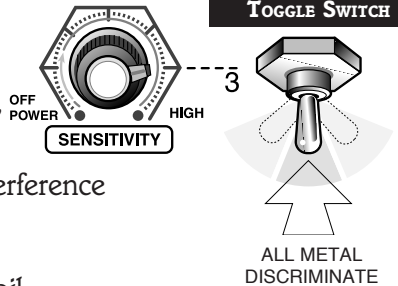


## 4. All Metal Detection

- A. Wave all objects over the searchcoil
- *NOTICE THE SINGLE TONE*


## 5. Tone Mode Detection

- A. Move toggle switch to the right position – TONE
- B. Turn the “DISCRIMINATE” knob to 2:00 (about 3/4 turn)
- C. Sweep all of the different objects back and forth under the SEARCHCOIL
- *NOTICE THE DIFFERENT TONES*
  - *NOTICE THE METALS REJECTED*

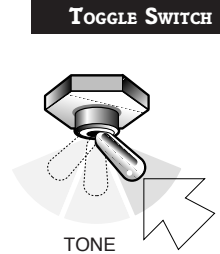

## 6. Disc Mode Detection

- A. Move the toggle switch to the left position – DISC
- B. Turn the “DISCRIMINATE” knob to LOW
- C. Sweep all of the different objects back and forth under the SEARCHCOIL.
- *NOTICE THE METALS REJECTED*
- D. Turn the “DISCRIMINATE” knob slowly to the right while sweeping all of the different objects at different settings.
- *NOTICE THE DIFFERENT TONES*
  - *NOTICE THE METALS REJECTED*

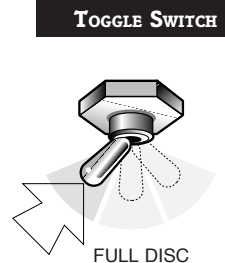

# OPERATION

The Commando is a “MOTION” detector. This means that the SEARCHCOIL must be moving to detect the presence of metal. When practicing with a stationary metal detector, keep the target moving over the searchcoil. Objects held still under the searchcoil will not be detected.

## THREE MODES OF OPERATION

The Commando allows for three modes of operation:

### ALL METAL, TONE AND FULL DISCRIMINATE

After turning the unit on and adjusting your SENSITIVITY to the desired setting, you're now ready to decide on your mode of operation.





**ALL METAL:** (*Toggle Switch in the Middle*) In this mode, all different types of metal will be detected such as: iron, steel, aluminum, brass, silver, copper and gold. Applications: Relic Hunting, Gold Prospecting, Cache Hunting and general applications such as property marker locating. This mode provides maximum depth detection capability.

**FULL DISCRIMINATE:** (*Toggle Switch to the Left*) When using Discriminator Mode, most trash items will be automatically rejected. Adjust the “DISCRIMINATE” control higher to increase the range of discrimination.

**TONE DISCRIMINATE:** (*Toggle Switch to the Right*) When using the Tone Discriminator, a unique dual tone “beep” and automatic iron rejection makes finding treasure fun and easy. It is also possible to achieve a broken tone for certain pull-tabs by adjusting your Discriminate control to the approximate center position (12:00). With the two-tone discrimination, along with a broken tone for pull-tabs, you will be able to identify types of buried metals according to the audio tones emitted. Applications: Coin Shooting, Jewelry Hunting and detecting in highly trashed areas.

# OPERATION
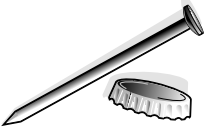
## STONE MODE AUDIO RESPONSES

NO RESPONSE	LOW TONE	BROKEN TONE	HIGH TONE
			
Iron & Steel	Gold & Nickel	Old & New Pull Tabs	Copper, Silver & Brass



## STONE DISCRIMINATION

(continued)

(Toggle switch to the Right) Classifies detected metal objects by emitting a low or high tone.

Adjust the DISCRIMINATE control higher to increase the range of the low tone. It is possible to set the DISCRIMINATE level so that nickels have a low tone, larger coins have a high tone, and pull-tabs have a low tone or in-between “broken” tone. The “broken” tone makes pull-tabs and trash easily recognizable.

SENSITIVITY will be reduced slightly when using the Commando in the TONE DISCRIMINATION MODE. If you want optimal depth capability, operate in the ALL METAL MODE by turning the DISCRIMINATE CONTROL completely counterclockwise; then turn the SENSITIVITY control clockwise to its highest clockwise position without chatter. If your Commando chatters or beeps erratically, reduce the SENSITIVITY by turning the left knob counterclockwise.

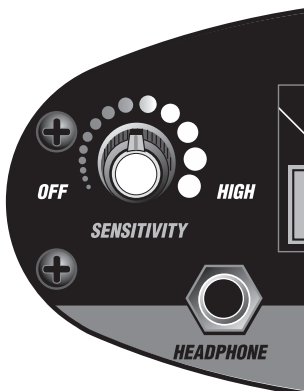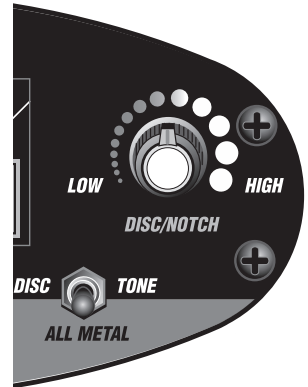

# OPERATION

## AUTO GROUND CONTROL:

The Commando automatic Ground Track feature allows operation in virtually all soil conditions, regardless of mineral content.

Use it effectively on the beach or for gold prospecting. In the ALL METAL MODE (Toggle switch in the middle), the Commando will detect gold nuggets through black sand and will find deeply buried relics in all types of soil.

## OPERATING TIPS:

Turn the detector on using the left knob. (See Illustration Below) **NOTE: The detector will remain silent when turned on. It will emit sound when metal passes beneath the SEARCHCOIL.**

As the left knob is clicked on, it will be at the lowest sensitivity setting. Turning the control knob toward "HIGH" increases SENSITIVITY to small or deeply buried objects. If the unit "chatters", reduce the SENSITIVITY slightly, until the chatter stops.



For maximum performance, operate with the SENSITIVITY as high as possible. The SENSITIVITY can generally be set higher when operating in FULL DISCRIMINATE (DISC) or TONE DISCRIMINATE (TONE) modes.




# IN THE FIELD

## STANCE


Stand with your arm extended in front of your body. Don't bend or stoop; stand in a comfortable position. Hold the unit so that the searchcoil is about 1/2-inch above the ground. Adjust the searchcoil so that it is parallel to the ground.

## SWEEP

Standing in the search position, swing the searchcoil gently from side to side, slightly overlapping each sweep as you move forward. Keep your searchcoil approximately 1/2-inch above the ground as you search. Raising it during the sweep, or at the ends of your sweep, can cause false readings. Move slowly; hurrying will cause you to miss targets.

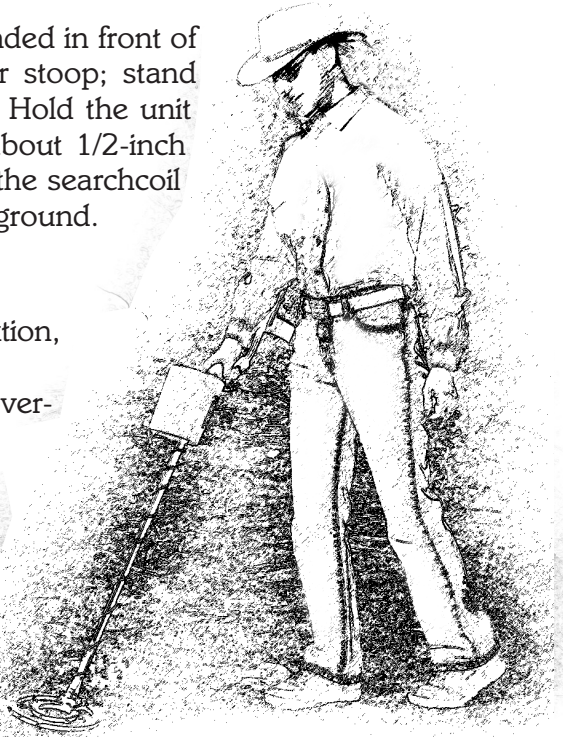

Most desirable objects will respond with a repeatable tone. When discriminating, iron and foil objects generally do not respond. False signals can be caused by trashy ground, electrical interference, or by large irregular trash objects. These signals are easily recognized by their often broken or non-repeatable nature.

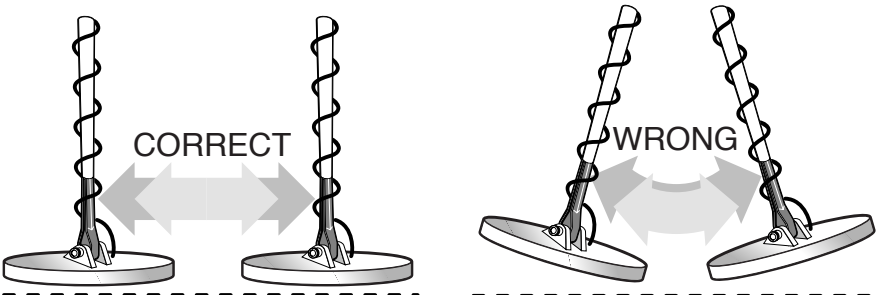

# IN THE FIELD (cont.)


## PINPOINTING

*Accurate pinpointing takes practice and is best accomplished by “X-ing” the suspected target area.*

1. Once a buried target is identified by a good tone response, continue sweeping the searchcoil over the target in a narrowing side to side pattern.
2. Take visual note of the place on the ground where the “beep” occurs as you move the searchcoil slowly from side to side.
3. Stop the searchcoil directly over this spot on the ground.
4. Now move the searchcoil straight forward and straight back towards you a couple of times.
5. Again make visual note of the spot on the ground at which the “beep” occurs.
6. If needed, “X” the target at different angles to “zero in” on the exact spot on the ground at which the “beep” occurs.

**REMEMBER:** The detector will beep just as the center of the searchcoil passes directly over the buried object.

If you have difficulty pinpointing very strong signals, try lifting the searchcoil higher off the ground until a weaker, but more concise, signal is heard. For very weak signals, try moving the searchcoil in short quick sweeps, closer to the ground.

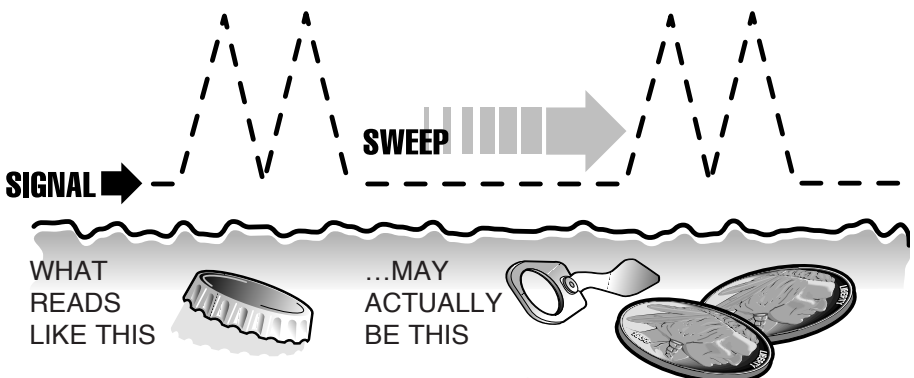


# TROUBLESHOOTING

The following troubleshooting steps may assist you in case you're having problems with your Commando.

## YOUR DETECTOR IS EMITTING ERRATIC SIGNALS WHEN YOU'RE IN THE FIELD.

Your **SENSITIVITY** may be set too high. Try reducing the **SENSITIVITY** slightly until the false signaling disappears. Remember to swing your searchcoil slowly. Some inconsistent signals will occur on highly rusted metals. If the signal does not repeat after successive passes of the searchcoil over the same area, then the target is usually not worthwhile.

Natural and man-made electromagnetic fields can cause interference.

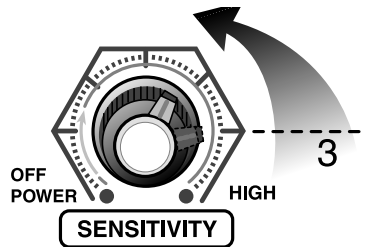

## YOUR DETECTOR IS NOT STABLE AND HAS A PULSING, DISTORTED TONE INSTEAD OF A CLEAR TONE.

This can occur if you're operating near another detector or near power lines that can interfere with the detector's operating frequency.

## YOUR DETECTOR IS EMITTING A CONSTANT LOUD TONE OR CONSTANT REPEATING TONES

This usually occurs when the batteries are low. Try replacing your batteries with two new alkaline batteries. (See page 4)

**NOTE: Always use Alkaline Batteries for proper performance.**




## CARE AND MAINTENANCE

Your Commando Metal Detector is an example of superior design and craftsmanship. The following suggestions will help you care for your metal detector so that you can enjoy it for years.



Handle the metal detector gently and carefully. Dropping it can damage electronic components.

Use and store the metal detector only in normal temperature environments. Extreme temperatures can shorten the life of electronic devices and distort or melt plastic parts.

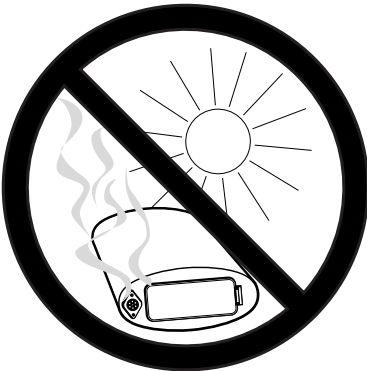

Wipe the metal detector with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the metal detector.



The searchcoil is waterproof and may be submerged into either fresh or salt water. Be careful to prevent water from entering the control housing. After using the searchcoil in salt water, rinse it with fresh water to prevent corrosion of the metal parts.

# METAL DETECTING APPLICATIONS

## COIN SHOOTING

The most popular application for metal detectors

### CONTROL SETTINGS REQUIRED:

1. Toggle switch to the left (disc. mode).
2. Discriminate knob at 3:00 (3/4 turn).

Only silver, copper and brass will be detected. Gold items will be eliminated. Different denominations of coins will induce different sounds.

## RELIC HUNTING

A relic is a historical object, sometimes of great value. The most effective method for locating relics is to first conduct historical research. Visit your local library to learn of historical events having occurred in your area. You can then target your search to a specific area and gain valuable insight into your local history.

### CONTROL SETTINGS REQUIRED:

1. Toggle switch in center position.
2. Discriminate knob is in OFF position.

## CACHE HUNTING

A cache, pronounced “cash”, is a buried or hidden valuable stored inside a case, can, strong box, or a bag. A cache could be the loot from a bank robbery or just someone’s life savings. A cache is often hidden in the floor or walls of an old house, or is buried nearby. Also search old camp sites.

### CONTROL SETTINGS REQUIRED:

1. Toggle switch in center position.
2. Discriminate knob is in OFF position.

## JEWELRY HUNTING

Jewelry can be found wherever people congregate. Beaches, parks, school yards and fair grounds are all littered with lost jewelry.

### CONTROL SETTINGS REQUIRED:

1. Toggle switch in RIGHT position (tone mode).
2. Discriminate knob at half way, 12:00 position.

You should dig only the lower and high tones. Broken tones

# **METAL DETECTING APPLICATIONS** *(cont.)*

indicate trash items. Gold rings will induce a low sound. Beware that some pull-tabs can also induce a low tone.

Silver will induce a high tone. Chains and necklaces are difficult to find. If you are looking for gold rings, don't get discouraged; you will dig up many broken pull-tabs before you find your first gold ring!

## **HOUSEHOLD APPLICATIONS**

Find property markers, lost keys, machine parts, and other lost items.

### **CONTROL SETTINGS REQUIRED:**

1. Toggle switch in center position.
2. Discriminate control knob is in OFF position.

## **GOLD PROSPECTING**

Find gold in abandoned gold mines and river beds where gold is continuously washed down stream from its place of origin.

### **CONTROL SETTINGS REQUIRED:**

1. Toggle switch in center position.
2. Discriminate control knob is in OFF position.

## **USING HEADPHONES**

Using headphones (not included) improves battery life, and prevents the sounds from annoying bystanders.

It also allows you to hear subtle changes in the sound more clearly, particularly if searching in a noisy location. For safety reasons, do not use headphones near traffic or where other dangers are present.

This device is to be used with interconnecting cables/headphone cables shorter than three meters.

# TREASURE HUNTER'S CODE OF ETHICS:

- Always check Federal, State, County and local laws before searching.
- Respect private property and do not enter private property without the owner's permission.
- Take care to refill all holes and leave no damage.
- Remove and dispose of any and all trash and litter found.
- Appreciate and protect our inheritance of natural resources, wildlife and private property.
- Act as an ambassador for the hobby, use thoughtfulness, consideration and courtesy at all times.
- Never destroy historical or archaeological treasures.
- All detectorists may be judged by the example you set; always conduct yourself with courtesy and consideration of others.

## FIRST TEXAS PRODUCTS, LLC 5-YEAR LIMITED WARRANTY

Bounty Hunter Metal Detectors are warranted against defects in workmanship or materials under normal use for five years from date of purchase to the original user. Liability in all events is limited to the purchase price paid. Liability under this Warranty is limited to replacing or repairing, at our option, any Bounty Hunter Detector returned, shipping cost prepaid, to First Texas Products, LLC. Damage due to neglect, accidental damage or misuse of this product is not covered by this warranty.

**Proof of purchase is required to make a claim under this warranty.**

### NOTE TO CUSTOMERS OUTSIDE THE U.S.A.

This warranty may vary in other countries, check with your distributor for details.  
Factory warranty follows the channel of distribution.  
Warranty does not cover shipping costs.

According to FCC part 15.21 Changes or Modifications made to this device not expressly approved by the party responsible for compliance could void the users authority to operate this equipment.

Copyright ©2020 by First Texas Products, L.L.C.

All rights reserved, including the right to reproduce this book, or parts thereof, in any form, except for the inclusion of brief quotations in a review.

Published by First Texas Products, L.L.C.

Bounty Hunter® and Pioneer® are registered trademarks of First Texas Products, L.L.C.

[www.detecting.com](http://www.detecting.com)



First Texas Products, LLC  
1120 Alza Drive, El Paso, TX 79907  
PH: (915) 633-8354 • Fax: (915) 633-8175



# ACCESSORIES

## Bounty Hunter® Carry Bag

Rugged double-stitched construction – *CBAG-W*

## Pouch & Digger Combo

Pouch with 2 large pockets & 9" heavy duty digging tool. – *TP-KIT-W*

## Stereo Headphones

Use with Bounty Hunter metal detectors. Lightweight and adjustable with true stereo sound, adjustable volume, 1/8 jack with 1/4 adaptor, 4' cable. – *HEAD-W*

## Pin Pointer

Pinpoints the exact location of buried metal objects. Audio signal indicator and vibrator. Runs on 1 – 9-Volt Battery. – *PIN POINTER-W*

## Sand Scoop

Large scoop with filtering holes. Made of strong plastic. – *SAND SCOOPBH*

## Coil Covers

Protect your coil from abrasion and damage.

10" Coil Cover – *10COVER*

8" Coil Cover – *8COVER-N*

4" Coil Cover – *4COVER*

## Replacement/Accessory Search Coils

10" Magnum Coil – *10COIL*

8" Replacement Standard Coil – *8COIL-N*

4" Gold Nugget Coil – *4COIL*

## 9" Heavy-Duty Digging Tool

Metal blade with comfortable plastic handle and depth gauge – *TROWEL-2*

## Digging Tool

Light and practical wide blade digging tool. – *TROWEL-W*

## Bounty Hunter T-Shirt

100% cotton with Bounty Hunter® Logo. Sizes: S, M, L, XL & XXL – *BHTSHIRT*

## Bounty Hunter Baseball Cap

One size fits all, with Bounty Hunter® logo. – *BHCAP*

## Gold Prospecting Kits

### Items Included:

	<b>Gold Kit</b> PART NUMBER: GOLDKIT1	<b>Deluxe Kit</b> PART NUMBER: GOLDKIT2	<b>Hardrock Kit</b> PART NUMBER: GOLDKIT3
10 ½" Gold Pan	<b>x</b>	<b>x</b>	<b>x</b>
14" Gold Pan	<b>x</b>	<b>x</b>	<b>x</b>
Classifier		<b>x</b>	<b>x</b>
2 – Shatterproof Vials	<b>x</b>	<b>x</b>	<b>x</b>
Snuffer Bottle	<b>x</b>	<b>x</b>	<b>x</b>
Black Sand Magnet		<b>x</b>	<b>x</b>
Treasure Scoop		<b>x</b>	<b>x</b>
Tweezers			<b>x</b>
Magnifier			<b>x</b>
Crevice Tool			<b>x</b>
Rock Pick			<b>x</b>
Instruction Booklet	<b>x</b>	<b>x</b>	<b>x</b>
Backpack		<b>x</b>	<b>x</b>

FOR COMPLETE DETAILS VISIT [WWW.DETECTING.COM](http://WWW.DETECTING.COM) • 1-800-413-4131