

## SPECTATORS SHOULD SIT AT LEAST 200 FEET AWAY FROM YOUR SHOW FOR THE BEST VIEWING AND SAFEST EXPERIENCE.

Adult supervision is required.
(Not a children's toy)

Keep a bucket of water or hose nearby in case of fire.

READ THE FIREFLY INSTRUCTION MANUAL THOROUGHLY.

After the show, hose down any used product to minimize fire risk and leave shot fireworks stored outside.

FIREFLY SHOULD BE OFF WHILE FUSES ARE BEING CONNECTED TO THE FIREFLY CLIP.

Do not use fireworks or this device under the influence of alcohol.

If a firework doesn't go off, do not stand over it or pick it up, gently push it aside to try to safely reignite later. If you have to reattach a fuse, don't stand over the fireworks product.

Squat down and reattach the fuse with outstretched arms.

NEVER TRY TO REATTACH A CONNECTOR TO A FUSE WHILE OTHER ITEMS ARE STILL HOOKED UP OR FIREFLY IS ON.

For more fireworks safety tips visit www.americanpyro.com