


Cleaning a Top Burner Thermocouple in a Propane Stove

1. Remove all the knobs from the front of the unit
2. Undo the 2 acorn nuts holding on the control panel and pull the control panel free from the unit.



3. Once the control panel is removed, locate the connection between the thermocouple and the valve.
4. Either remove and re-attach the thermocouple connection or gently rotate clockwise and counter clockwise. Either way will break up any oxidation that has formed and may be interrupting the connection

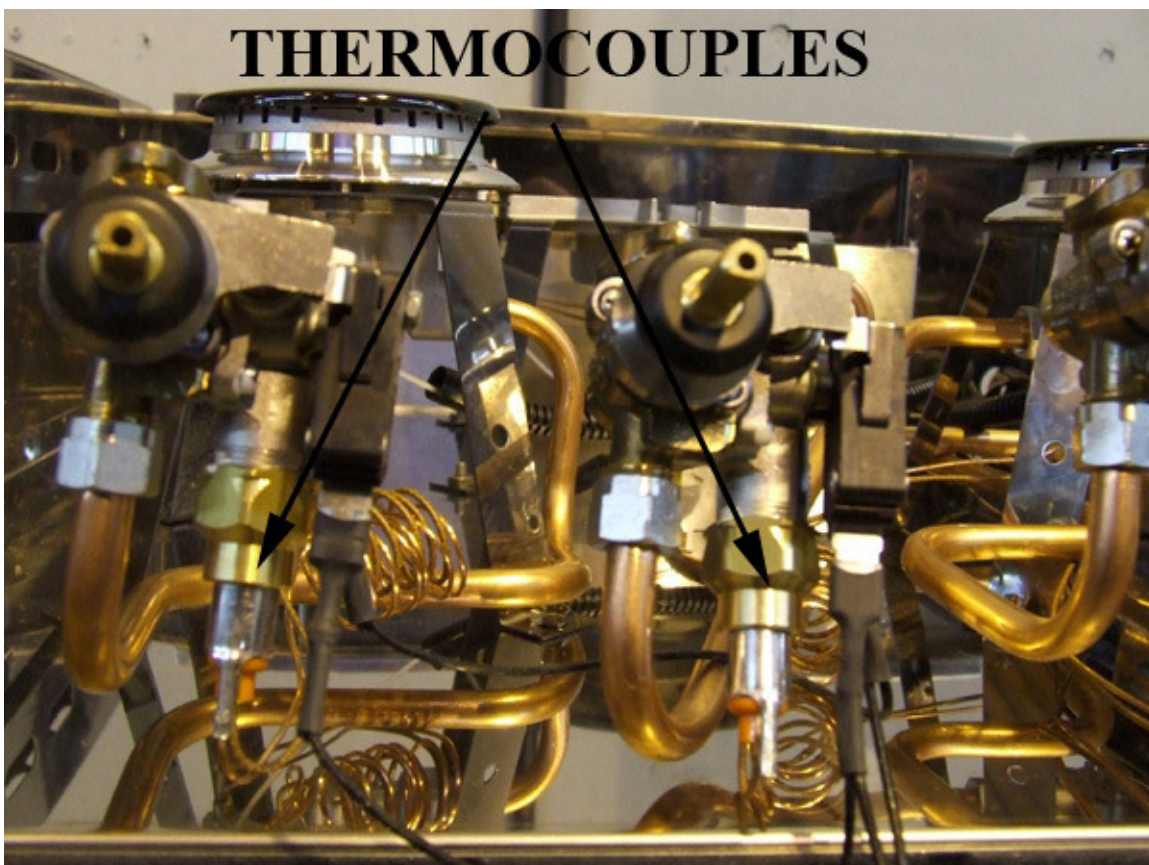

5. If the thermocouples will still not work, then unplug the end connected to the valve and then undo the brass nut connection to which the thermocouple connects. Once undone, an insert will slide out. This is the magnetic connection assembly. Clean the ends of this as well as the inside of the valve and then re-assemble.