



### **Replacing a Thermocouple in a 2 Burner Drop In**

- 1) Remove Grill and Large burner flame spreader
- 2) Undo 4 screws holding top on and remove top of stove
- 3) (small burner only) Unscrew ceramic cover plate by twisting counter-clockwise
- 3b) Undo small burner mounting plate using small Phillips screwdriver
- 4) Remove burner bracket by undoing nuts holding the legs to the unit and the screws/shoulder bolts holding the bracket to the burner cup
- 5) Undo thermocouple using a 9mm wrench
- 6) Unplug thermocouple from corresponding valve
- 7) Install thermocouple by following steps in reverse order.

\*NOTE\* Do not kink the thermocouple as this may cause it to work improperly. Make all bends gradual.