

# 12 Temp Memory IR Laser Pyrometer

Pull trigger to turn ON.  
 Hold trigger to SCAN -  
 temp changes.



Pull trigger to turn ON. Hold  
 trigger 1 sec., release trigger  
 to HOLD - temp holds.



Display shuts off  
 after 12 seconds.  
 Pull trigger again  
 to turn back ON.

Laser can be  
 turned off if de-  
 sired. See below.

Back light for nite  
 use is always on.

To use Memory  
 feature see below.

Pulling trigger &  
 releasing too  
 quickly will give  
 inaccurate readings.  
 Hold trigger 1 sec.


### To Use MEMORY:

Pull trigger to turn ON. Push (F) button. "DATA" appears on display with number - 1-9, 0, A or b - a total of 12 Memory slots (0 is 10, A is 11, b is 12).

To TAKE TEMPS push buttons ▼ or ▲ until **DATA b** shows. Pyrometer stores temp in next slot. Pull trigger, hold 1 sec., and release. Temp will be stored in slot 1. Move to next location and pull & release trigger again. Display will change to DATA 2, 3, 4, etc. When you are done you can RECALL TEMPS by using ▼ or ▲. Temps are saved even if pyrometer shuts off. Taking new temps erases old ones.



**WARNING:** Do not point laser in eyes. Serious damage could result. SEE LASER WARNING ON PYROMETER.

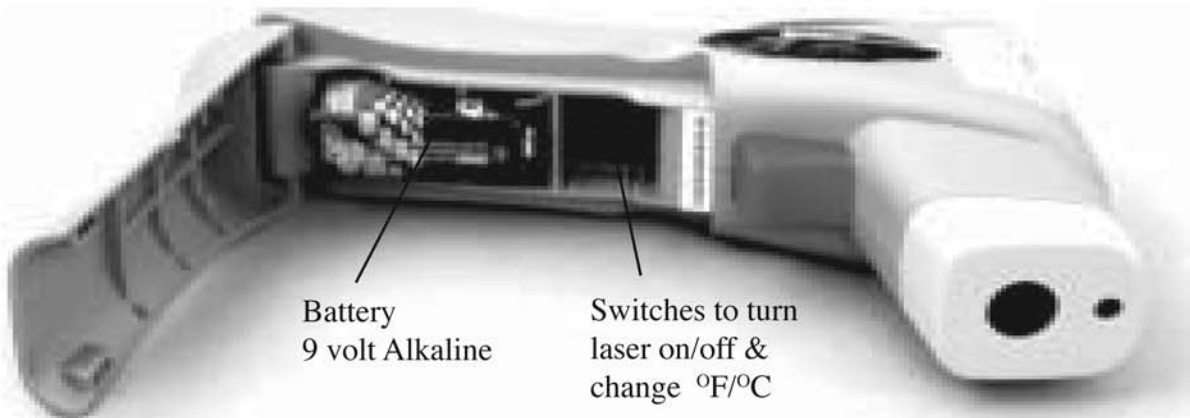

Battery  
 9 volt Alkaline

Switches to turn  
 laser on/off &  
 change °F/°C