


Landing Gear Safety Stand

1. Follow the aircraft manufacturers instructions for jacking the plane up.
2. Remove the wheel and brakes as required.
3. Slip the upper tube of the stand over the axel and use the quick release pin to adjust the stand to fit.
4. Screw the axle nut back on the axle. This insures that the stand can't slip off, even if the plane gets bumped around. It also protects the axle treads.

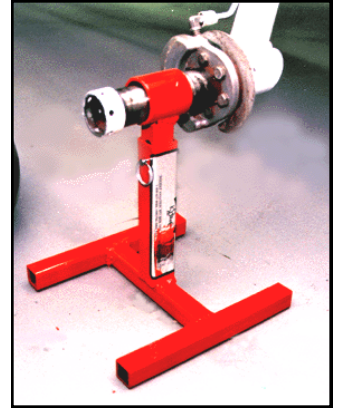


We would like to include you in our next YouTube video. Please take a picture or video of yourself using our product and we may add it to our next video.

BAI-CI-004 AK 06/26/17

Landing Gear Safety Stand

1. Follow the aircraft manufacturers instructions for jacking the plane up.
2. Remove the wheel and brakes as required.
3. Slip the upper tube of the stand over the axel and use the quick release pin to adjust the stand to fit.
4. Screw the axle nut back on the axle. This insures that the stand can't slip off, even if the plane gets bumped around. It also protects the axle treads.

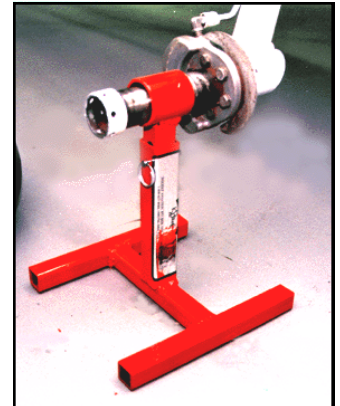

We would like to include you in our next YouTube video. Please take a picture or video of yourself using our product and we may add it to our next video.

BAI-CI-004 AK 06/26/17