

PRODUCT INSTRUCTIONS Model Number: 30M-SR

Revised January 29, 2019



Bogert Aviation Cirrus SR20 / SR22 Jack Pad Instruction Manual

Cirrus SR20 / SR22 Jack Pads

This jack pad is designed to thread into the wing jack points for use with wing jacks. Each pad can be used with an aviation wing jack that is made to accept a jack point.

TECHNICAL SPECS

- Fits Cirrus SR20 and SR22 Series Aircraft
- Threads into jack point on the wing. 3/8-16 Stud
- Tapered, bullet nose jack point
- Rubber padded
- Follow aircraft service manual instructions for jacking
- Sold in Pairs
- Made in USA

Model Number	Qty	Description
30M-SR	2	Cirrus SR20 / SR22 Jack Pad



The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors, which cannot be built into this product, but must be supplied by the operator.

Cautions:

- Support the axle anytime the wheel is removed with a suitable axle stand or blocking. (Bogert Aviation 17M-LGSS, Landing Gear Safety Stand)
- Do not allow anyone to climb on or get into the aircraft while supported by a jack.
- "WARNING" Study, understand and follow all instructions before operating this device.
- Lifting device only.
- Immediately after lifting, support aircraft with appropriate means.
- Do not exceed rated capacity. Use only on hard, level surfaces capable of sustaining rated capacity loads.
- Lift only on those areas of the vehicle as specified by the vehicle manufacturer.
- Ensure that the lift point is properly centered on the jack saddle.
- Always wear safely glasses when using this equipment.

For more information, see our You-Tube Videos at https://www.youtube.com/user/BogertAviation
Or search for Bogert Aviation.

climbing on Course Since 1983

4



BOGERT AVIATION INC. 3606 N Swallow Ave Ste 100 Pasco, WA 99301 USA (509) 736-1513 Phone (800) 627-8088 Toll Free (509) 272-0280 Fax www.bogertaviation.com info@bogert-av.com





