

MANUAL

SWOLE O'CLOCK

swoleoclock.com



swoleoclock.com


TABLE OF CONTENT

01.	SW Features	4
02.	SW Features Cont's	5
03.	Feature Selection	6
04.	How to set analog time	7
05.	How to set digital time/calendar	8
06.	How to set daily alarm	9
07.	How to activate daily alarm, snooze & hourly chime	10
08.	Stopwatch operation - event & time-out timing	11
09.	Stopwatch - cumulative split timing (lap time)	12
10.	Warranty	13
11.	Water resistance	14
12.	White bands care	15

SW FEATURES

Movement	Swiss Quartz
Glass	Sapphire glass with anti-reflective coating
Case	Laser welding and PVD coating
Buttons, Crown & Band Screw	Stainless Steel
Band	PU with Brass bar
Dial	Silk Print & Applied Steel
Hands	Luminous
Water Resistance	100WR (10ATM) - Suitable for showering & surface swimming
Warranty	1 Year Warranty

SW FEATURES - CONT'D

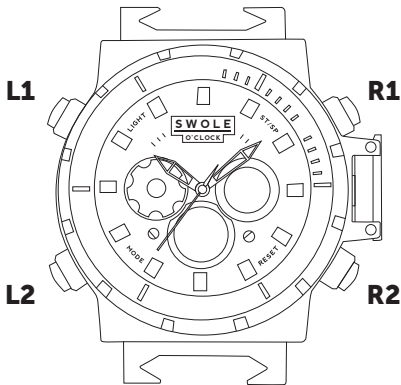

6 digits backlit display

1/100th second lap
operation chronograph

12 or 24 hours operation
can be set

Time your meals with
hours, minutes, seconds,
month, and day of the
week information

5 minutes snooze alarm

Hourly chime can be
selected

FEATURE SELECTION

1. Default - shows the time: hours (12 or 24 hours system), minutes, month, date, and the day of the week
2. Press **L1** - the display light turns on
3. Press **R1** - shows month, date, and the day of the week
4. Press **L2 once** - enter Stopwatch mode.
5. Press **L2 twice** - enter Alarm Set Mode (hours display will flash)
6. Press **L2 three times** - enter Time Set Mode (seconds display will flash)
7. Press **R2** - shows currently set Alarm Time.

HOW TO SET ANALOG TIME

1. Open the latch (pull up) on the right side of the watch face between **R1** and **R2**, and pull out the crown gently
2. Rotate the crown left/right to adjust the time
3. Once set, push the crown back in and close the latch.

HOW TO SET DIGITAL TIME/CALENDAR

1. While on the default display, press **L2 three times**. Display will change to Time Set Mode. You will see seconds digits flashing, press **R1** to reset the seconds to zero (00).
2. Press **R2 once**: Minutes digits will flash. Press **R1** to set up minutes.
3. Press **R2**: Hour digits will flash, press **R1** to set the hour. Advance to the desired hour. Keep pressing **R1** to cycle through the 1-12 AM/PM (the 12 hours mode - A and P will show next to the hour) to get to the 24 hours mode (H will show on display). Press **R2** to keep setting date or Press **L2** to return to the default display.
4. While on the default display, press **L2 three times**, then press **R2 three times**, date will flash, press **R1** to change the date; Press **R2 once**, month will flash, press **R1** to change the month, press **R2** to set the month (not flashing now). Press **R1**: Day of the week flag will flash, press **R2** to set the day of the week.
5. Press **L2** to return to default display, and finish setting the time.

HOW TO SET DAILY ALARM

1. While on the default display Press **L2 twice**. Display will change to the Alarm Set Mode (note: only hour and minute will appear: 00:00; hour digits will flash).
2. Press **R1** to set the hour.
3. Press **R2**: Minutes will flash, press **R1** to set the minutes.
4. Press **L2** to return to default display, and finish setting alarm time.
5. To test the alarm sound, press and hold **R1**.

HOW TO ACTIVATE DAILY ALARM, SNOOZE & HOURLY CHIME

1. While on the default display, press and hold **R2** then press **R1** to turn the daily alarm ON or OFF (alarm sign in upper right part of the display will appear when alarm is activated).
2. When the daily alarm rings, press **R2** to stop the alarm. This will activate the snooze feature, and the alarm will go off again after 5 minutes. Press **R1** to stop alarm without activating snooze function.
3. To activate hourly chime, Press and hold **R2**. Then, press **L2** button to turn the hourly chime ON or OFF (when all the Day of Week flags are showing the hourly chime is ON).

STOPWATCH OPERATION

- EVENT AND TIME-OUT TIMING

1. While on the default display, press **L2 once** to enter Stopwatch Mode.
2. Press **R1** to start stopwatch.
3. Press **R1** again to stop stopwatch.
4. Press **R2** to reset stopwatch to „00“.
5. Press **L2 once** to return to the default display.

STOPWATCH - CUMULATIVE SPLIT TIMING (LAP TIME)

1. While on the default display, press **L2 once** to enter Stopwatch Mode.
2. Press **R1** to start stopwatch.
3. Press **R2** to display cumulative split time (the stopwatch will continue to count internally).
4. Press **R2** to release the split time and display cumulative split time and display over all elapsed time in progress. This may be repeated as many times as necessary.
5. Press **R1** to stop counting, and press **R2** to set up stopwatch to „00“.
6. Press **L2 once** to return to the default display.

WARRANTY







Built to last, taking proper care of your new Original Series timepiece ensures longevity. Regularly clean and have it serviced by a professional. And don't forget, every Original Series watch comes with a 1 year warranty from date of purchase. We'll repair or replace manufacturing defects on the watch itself (i.e. movement and case) – on us.

Proof of purchase (Order Confirmation #) is required for all warranty claims. SWOLE O'CLOCK will not accept a warranty claim if a watch has evidence of excessive wear or misuse. Normal wear and tear is not covered by this warranty. Please refer to the back of your watch to determine the degree of water resistance your watch is designed to handle. To file a warranty claim, email us at support@swoleoclock.com along with your order confirmation number.

100WR (10 ATM) - Does not resist deep sea diving

WATER RESISTANCE

Water Resistant 100WR (10ATM) - Your Original Series timepiece is suitable for showering, swimming and shallow snorkeling. Splash/rain resistant.

METERS						
50M	✓	✗	✗	✗	✗	✗
100M	✓	✓	✓	✓	✓	✗
200M	✓	✓	✓	✓	✓	✓

Please do not press buttons on the watch when having the watch wet (ex. while washing your hands or diving) as this might cause the water to permeate the seals. Make sure to keep your watch away from hot waters, steams and vapors.

WHITE BANDS CARE

Engineered to be strong and durable, yet strikingly lightweight - our white bands make a statement. With their classic look they also tend to get stained quicker than other bands -and are more difficult to clean. However, you can maintain them and remove a variety of stains with the usual methods of cleaning.

Our favorite tool is a Magic Eraser Sponge, available in most supermarkets, home improvement and online stores. Just add a little water to the sponge, squeeze out excess and rub over the stained area on the band. Depending on the stain type, this may not completely remove the mark - but there should be a visible improvement.

SWOLE

O'CLOCK