

b. Drying Flash Paper

It's important to **dry your flash paper** prior to your first and each additional use. The flash paper will come slightly wet (even it might not feel wet under your fingertips). You can dry your flash paper with a hair dryer for 2-3 minutes or to the sun for around 40 minutes.

c. Loading Flash Paper:

When loading flash paper into the wand, ensure it's placed securely without excessive tightness inside the wand to prevent any unexpected ejection when ignited. The provided flash paper should be rolled to fit snugly within the compartment. Overly tight rolling of the provided flash paper can pose safety risks.

Using alternative materials or papers not supplied by the original Incendio Wand Shop is strictly prohibited. Our flash paper is specially treated with a specific liquid, and only the original IWS paper is authorized for use. Any use of alternative materials may result in hazards and void product warranty or return eligibility.

use the included wooden stick to gently push the rolled ball of flash paper all the way into the magic wand.

d. Wand Activation:

Hold the wand firmly in your dominant hand.

Make sure the wand is in the ON position.

Activate the wand by speaking the incantation provided with your wand model and pressing the activation button.

e. Casting a Fireball:

- Point the wand away from people, animals, and flammable objects.
- Gently wave the wand in the desired direction.
- Concentrate on your intention to conjure a fireball, visualizing it in your mind.
- Follow the incantation or gesture specific to your wand model to release the fireball.

Always be mindful of your surroundings and never aim the wand at anyone or anything you don't intend to affect.

f. Wand Deactivation:

After performing your magical display, deactivate the wand by using the switch button on the bottom of the wand. Ensure the wand is in the OFF position when not used.

While we are committed to providing a safe and enjoyable experience for our customers, it is essential to adhere to our user guide regarding the use of the Incendio wand and accessories.

Enjoy!

POLICY DISCLAIMER:

Any attempts to use the wand, flash paper, or accessories in a manner not explicitly described in this Guide Sheet will lead to the voiding of warranty coverage and eligibility for returns. We retain the right to inquire about your product usage to ascertain adherence to the guidelines outlined herein. Any disparities discovered may result in the forfeiture of warranty coverage and return eligibility.

Furthermore, we may request proof of usage, such as videos or pictures, to substantiate any product-related claims made by customers. This is a routine procedure enacted to validate warranty protection and ensure compliance with our usage guidelines.

