



Model Number	Voltage	Amp Draw	Insertion Length	Replacement Lamp	Replacement Ballast
EL1-14/HO/RPT	120 VAC	0.60	12.50"	RPT405	TXG370
EL1-16/HO/RPT	120 VAC	0.70	14.50"	RPT430	TXG370
EL1-20/HO/RPT	120 VAC	0.75	18.50"	RPT413	TXG370
EL1-24/HO/RPT	120 VAC	0.8	22.50"	RPT415	TXG370

Installation Instructions

1. Locate desired mounting location for lamp and drill or punch 1" clearance hole at desired lamp insertion point.
2. Use **mount base/socket** as template to mark three (3) mounting hole locations (center punch for best results).
3. Drill 1/8" pilot holes for #8 self-tapping sheet metal **mounting screws** (#8-32 x 3/4" long screws provided) and attach mount base/socket to ductwork.
4. Insert **RPT lamp** into socket, aligning tab on lamp with slot on base, making sure to firmly and completely seat lamp in socket.
5. Connect **lamp socket cable** to **power supply cable**. Make certain this connection is correctly and firmly seated
6. Plug **transformer** into appropriate, grounded receptacle.



U.S. EPA Establishment Number: 89568-IN-001

www.americanultraviolet.com | (800) 288-9288