

Installation Instructions for Stainless Steel Tops on Cove Linear Tables SS54T and SS72T

1. Remove packaging from stainless steel top.
2. Remove protective film from adhesive pads on underside of stainless steel top. The SS54T will have four (4) pads and the SS72T will have six (6) pads. See Image 1.
3. Carefully position the top over the fire table and ensure that it is properly aligned with the inside edges of the burner opening. **This should be performed by two people.** Lower the stainless steel top onto the fire table surface. See Image 2 and Image 3.
4. Apply significant pressure (body weight) with hand at each of the locations where an adhesive tab is present (60 seconds at each location). This will ensure proper adhesion to the surface. See Image 3.

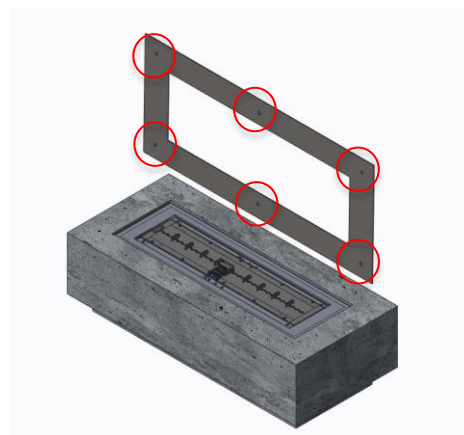


Image 1

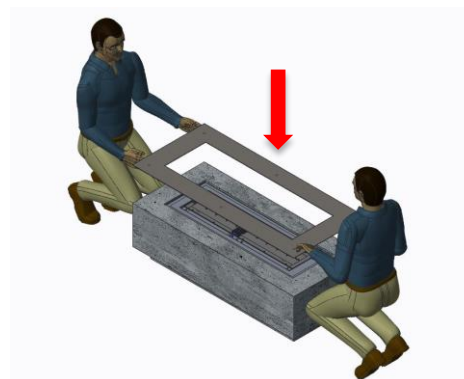


Image 2

Arrows = Alignment
Diamonds = Apply Pressure

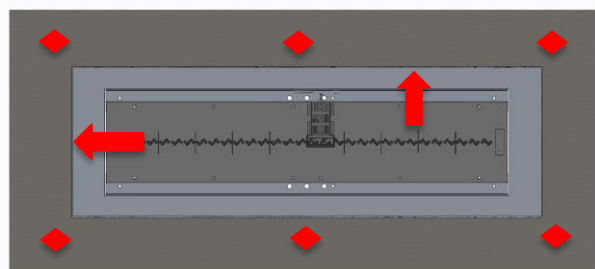


Image 3

NOTE: Once stainless steel top is installed on the concrete surface it will be very difficult to remove and the adhesive pads will leave significant residue only removable with solvents. The stainless steel top will also trap moisture against the top surface of the concrete that may affect the color and finish of the surface. If it is desired to remove the stainless steel top at any time, it will be necessary to fully strip the sealer off the table top surface and reseal the surface.