AGA GATEMASTER Keypad Programming For AGA GateMaster 900 HD Gate Opener

NOTE: Have the keypad in hand at the gate control box when programming. Do not mount keypad on gooseneck mounting post yet.

Step 1: Program the keypad to the gate operator
Enter 0000* to enter programming mode.
(Expect one long beep)
(Note: 0000 is the default code for programming)
(Note: The blue backlight will light when in programming mode)
Press 55#; keypad will beep once to confirm
This sends a signal to the receiver on the Gatemaster control board.
For a single gate press 01#
For a double gate press 02#
Press and release the red Learn button on the operator control board.
The control board will beep, and the digital display will show a number.

Step 2: Test using the default code For a single gate press 1111# to activate the gate. For a double gate press 2222# to activate the gates.

Step 3: Add a keypad code
Enter 0000* to enter programming mode (expect one long beep)
For a single gate press 01# (expect one beep)
For a double gate press 02# (expect two beeps)
Enter the new 4-digit pin followed by the # key; for example 2020# (expect one long beep and one short beep to confirm)
Keypad will automatically exit programming mode

How to change the programming code: Enter the current installer code, for example 0000 (expect one long beep) Press 69# (expect one short beep) Key in new 4-digit installer code followed by the # key for example 4640# (expect one long beep and one short beep) Keypad will automatically exit programming mode

Note: The keypad will fit better on the goose neck mounting post if you use a 4" x 5" piece of Trex material as an adapter between the mounting plate and the keypad.

AGA GATEMASTER KEYPAD Contact Information: Amazing Gates of America, LLC 8617 Paseo Alameda NE Albuquerque NM 87113 Website: www.amazinggates.com

Customer Service 800-234-3952 Hours: M-F 8:00 a.m. – 5:00 p.m. MST

Technical Support 505-404-2219 Hours: M-F 7:00 a.m. – 4:00 p.m. MST

READ ALL INSTRUCTIONS CAREFULLY AND COMPLETELY before attempting to install and use this automatic gate operator.

This gate operator produces a high level of force. Stay clear of the unit while it is operating and exercise caution at all times. All automatic gate operators are intended for use on vehicular gates only. This equipment is similar to other gate or door equipment and meets or exceeds Underwriters Laboratory Standard 325 (UL 325). However, gate equipment has hazards associated with its use and therefore by installing this product the installer and user accept full responsibility for following and noting the installation and safety instructions. Failure to follow installation and safety instructions can result in hazards developing due to improper assembly. You agree to properly install this product and that if you fail to do so Amazing Gates of America, LLC ("AGA") shall in no event be liable for direct, indirect, incidental, special or consequential damages or loss of profits whether based in contract tort or any other legal theory during the course of the warranty or at any time thereafter. The installer and/or user agree to assume responsibility for all liability and use of this product releasing Amazing Gates of America, LLC ("AGA") from any and all liability. If you are not in agreement with this disclaimer or do not feel capable of properly following all installation and safety instructions you may return this product for full replacement value.

WARNING: This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov