

## USE AND CARE INSTRUCTIONS

### GRILL SCRAPER MODEL: GS4350

**PLEASE NOTE:** To get the maximum life and most efficient operation of your equipment, please comply with all the instructions stated below. Clean the equipment thoroughly before the first use and after each use thereafter. Avoid using cleaners that are high in alkalinity as they may dull, discolor, or pit the castings.

**SAFETY NOTE:** The blade on this piece of equipment is *VERY SHARP*. Use extreme caution when using and handling this piece of equipment.

#### **OPERATION:**

1. Hold the grip of the handle with one hand, and place the other hand on the knob.
2. Place the blade down on the grill and push down and forward.
3. Continue with this motion until entire surface is clean.

#### **CLEANING:**

1. Wash or spray off the entire scraper after heavy usage.
2. Use warm water and a mild detergent if desired, to clean all of the components.
3. Allow equipment to air dry.

*Available service parts are noted on the drawing below.*

