

### BSA BB - M8000

Determine the type of your BB shell	BB shell frame width	BB model	Fully assembled width	Spacer usage		Use the following crankset
				( Left Side )	( Right Side )	
<p>BSA THREAD</p>	68mm (MTN)		96mm	1 x 2.5mm	2 x 2.5mm	FC-M9050 FC-M8050
	73mm (MTN)		96mm	×	1 x 2.5mm	FC-M9050 FC-M8050
	83mm (DH)		111mm	1 x 2.5mm	2 x 2.5mm	FC - M8070

### PF92 BB - M8010

Determine the type of your BB shell	BB shell frame width	BB model	Fully assembled width	Spacer usage		Use the following crankset
				( Left Side )	( Right Side )	
<p>41 mm</p>	89.5mm (MTN)		96mm	×	1 x 2.5mm	FC-M9050 FC-M8050
	92mm (MTN)		96mm	×	×	FC-M9050 FC-M8050
	104.5mm (DH)		111mm	×	1 x 2.5mm	FC - M8070
	107mm (DH)		111mm	×	×	FC - M8070

### PF30 BB - M8020

Determine the type of your BB shell	BB shell frame width	BB model	Fully assembled width	Spacer usage		Use the following crankset
				( Left Side )	( Right Side )	
<p>46 mm</p>	73mm (MTN)		96mm	×	1 x 2.5mm	FC-M9050 FC-M8050
	83mm (DH)		111mm	1 x 2.5mm	2 x 2.5mm	FC - M8070