

BUYDEEM

K640

KETTLE
INSTRUCTION MANUAL



 
BUYDEEM

Shenzhen Buydeem Technology Co., Ltd

Room 3801, Building A, Tanglangcheng West, No.3333 Liuxian
Boulevard, Nanshan District, Shenzhen, China.

K640-91-A3

Please refer to the real product in case of any change

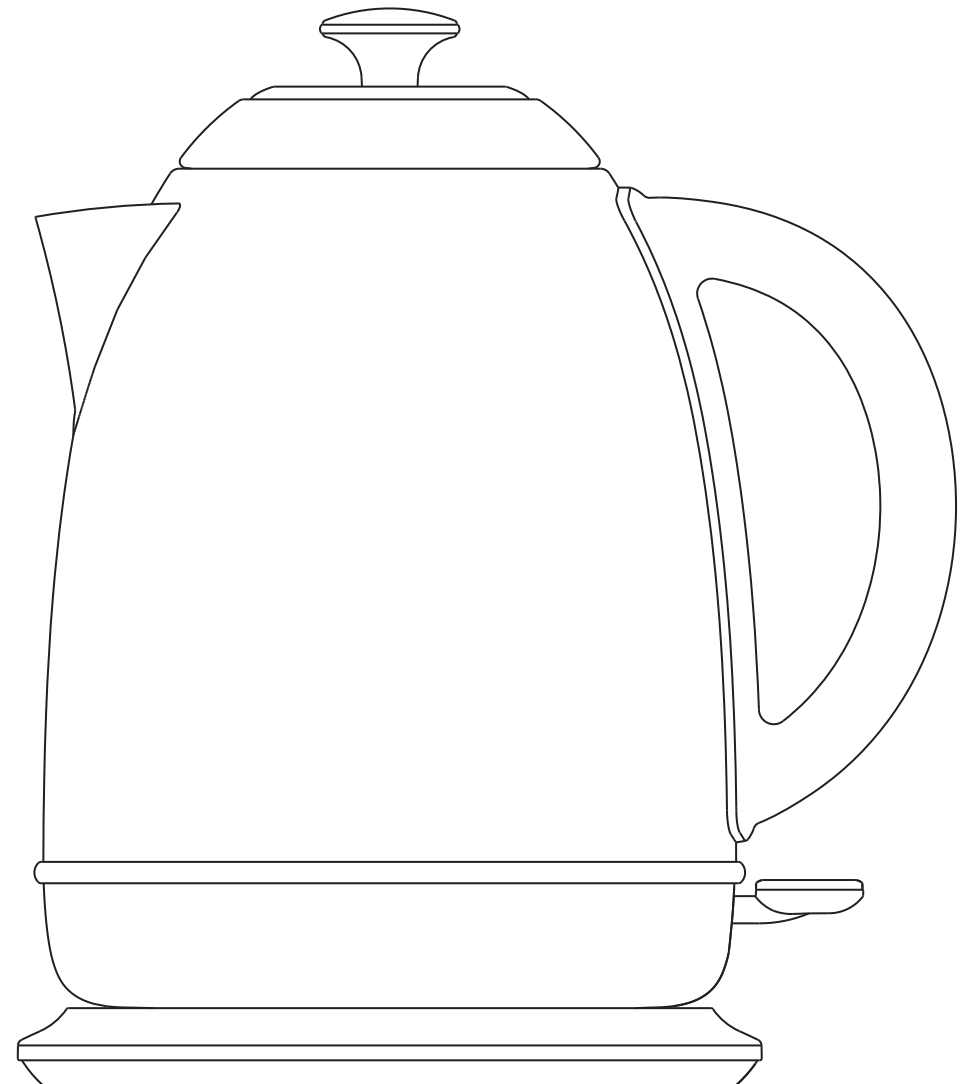

**Thank you for purchasing the BUYDEEM product.
Please read this manual and related illustrations carefully
before using this product to grant you access to complete
support from BUYDEEM.**

Contents:

Notice	02~05
Technical Specifications	05
Understanding Product	06
Product Structure	06
Using Product	07~09
First use	07
Use guidelines	08~09
Cleaning and maintenance	10~11
Simple troubleshooting	12
Warranty card	13

NOTICE

⚠ IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

 
- Read all Instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- Sort Cord Instruction:
 - a) A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - b) Extension cords are available and may be used if care is exercised in their use.
 - c) If an extension cord is used:
 - 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

Household Use Only
Save These Instructions.

NOTICE

⚠ Danger

- Do not leave this product running unattended to prevent fire and other hazards caused by product emergencies.
- Do not put the electric kettle, base, power cord and plug in water or any other liquid to prevent dangers such as electric shock or short circuit.

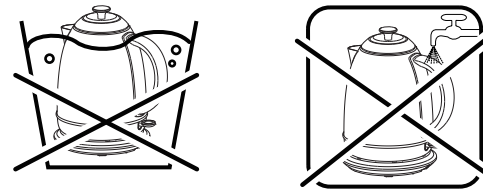

⚠ Warning

- Children, the elderly, people with a physical or mental impairment, and people without previous experience with the product should use the product under supervision and guidance, and their safety should be guaranteed. Children are forbidden to touch this product without supervision to ensure that they do not play with the product as a toy.
- This product must be used alone with a grounded socket with a rated current of 12 A or more and a rated voltage of 120 V, 60 Hz. The plug must be fully inserted into the socket to prevent hazards including short-circuit or fire caused by overheating or burning of components due to poor contact. Do not use a universal socket.
- The electric kettle and the power cord away from high temperature, open flames, damp, smooth surfaces or sharp edges to prevent device damage, malfunction or fire.
- It is forbidden to use the electric kettle when your hands are wet or you are barefoot.

NOTICE

Notice

- This product is designed for household use only, and the warranty by the manufacturer only covers product defects and household faults. The manufacturer is not responsible for any consequences or faults caused by commercial use, unsuitable use, or failure to follow the instructions, because such failures and damages are beyond the warranty.
- Please check whether the voltage displayed on the product specification label is consistent with the main voltage before use.
- This product must be used with its matching base, and other bases are not allowed.
- Put the electric kettle on a flat, firm and heat-resistant workbench.
- Make sure that the top cover is in place correctly to prevent scald before use.
- The electric kettle will generate heat and steam during work. Please do not open the cover, touch or move the electric kettle, or get close to the steam outlet and other high temperature parts during its work to avoid scald.
- Do not heat a closed container in the electric kettle to avoid explosion.
- Do not run the electric kettle above the maximum water level or below the minimum water level. If the electric kettle is overfilled with water, the boiling water may splash out, and if there is too little water inside the electric kettle, it may cause dry burning.
- The electric kettle should be moisture-proof and anti-freezing. Do not put it in the refrigerator.
- To avoid electric shock or fire, please ensure that the power supply is disconnected under the following conditions: the kettle is empty, the kettle is not in use, the kettle is cleaned or moved, the components of electric kettle are damaged, and the electric kettle has a fault.
- It is recommended to pour out the water in the kettle if it will not be used for a long time.
- If you need to disconnect the plug, please hold the plug and pull it out. Do not pull or twist the power cord forcibly to avoid damage to the power cord and risk of leakage.
- Do not hang the power cord outside the edge of the table or work bench to avoid falling of electric kettle or tripping accident.

NOTICE


- Please descale the kettle by using the method detailed on P8.
If the components are found damaged or out of normal work, please disconnect the power plug immediately and stop using it. Do not disassemble the electric kettle by yourself, and
- please contact the service center of purchase channel which authorized by BUYDEEM for replacement or repair.
- In addition to cleaning and descaling in accordance with the instructions, any other abnormal operation must be performed by the service center of purchase channel authorized by BUYDEEM.
- Normal work failure or complete work failure resulting from failure to descale is not covered by the warranty.
- Quality control procedures are followed strictly with regard to all products (including actual use tests of random samples), so any trace of product use can be explained according to these procedures.

Technical Specifications

Product Name	Kettle		Product Model	K640	
Rated Voltage	120V, 60Hz	Rated Power	1440W	Max Capacity	1.7L
Materials	Food-Grade Materials including SUS304 stainless steel and polypropylene plastic				

UNDERSTANDING PRODUCT

 Product Structure

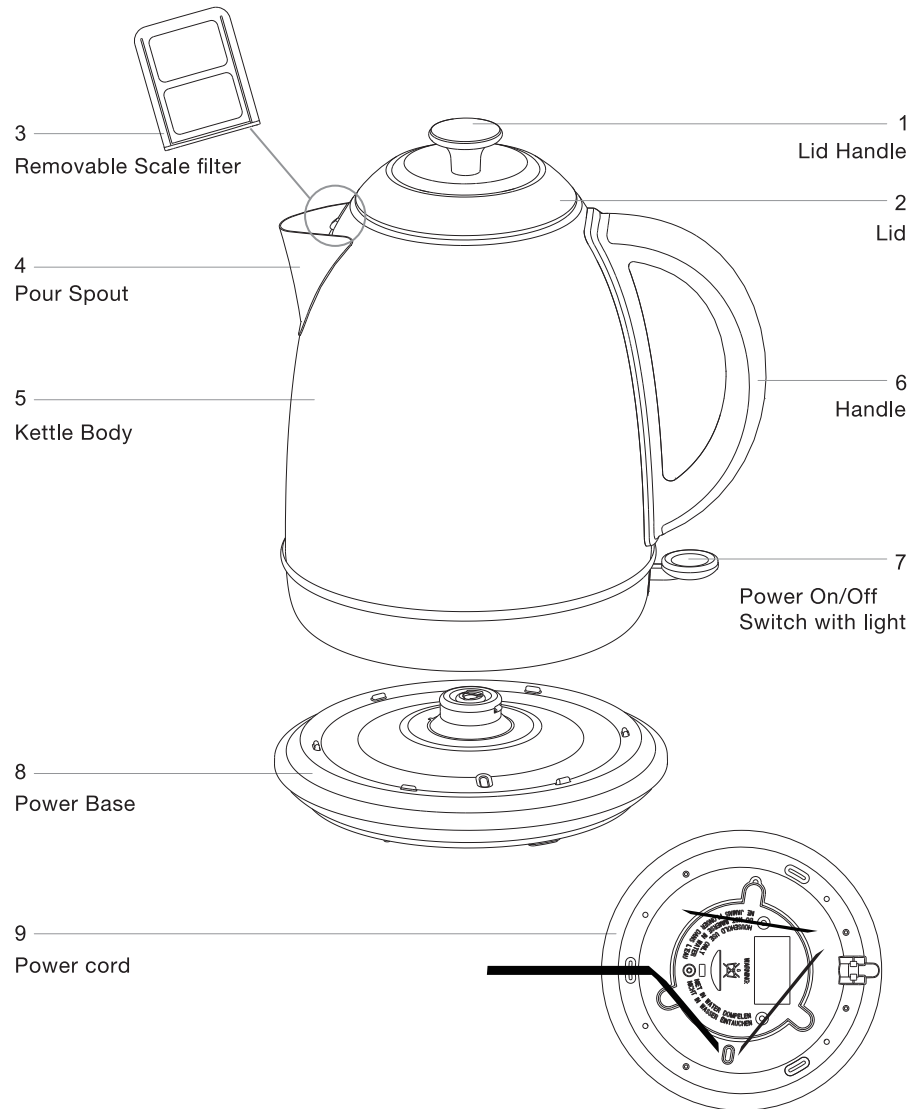


USING PRODUCT

First use


1. Remove all packaging, labels and accessories inside and outside the kettle before the first use.
2. Water boiled for the first two or three times should be poured out for the purpose of cleaning. Then wipe the exterior of the kettle with a dry cloth.

 Note: the electronic connectors on the bottom of the kettle and the power base should not be exposed to water.

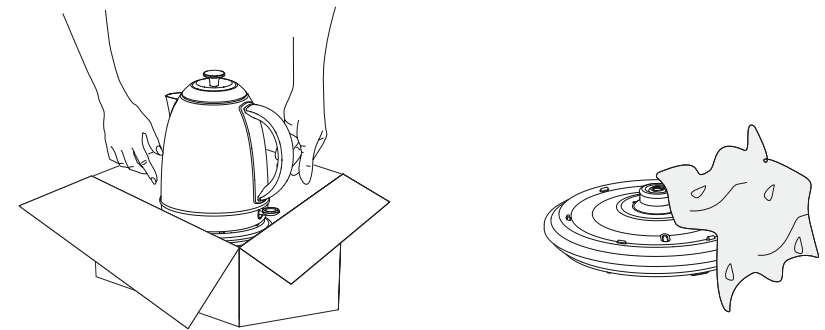

Quick installation

 1. Adjust the length of the power cord through the winding device of the power base.
2. Place the kettle on the power base.

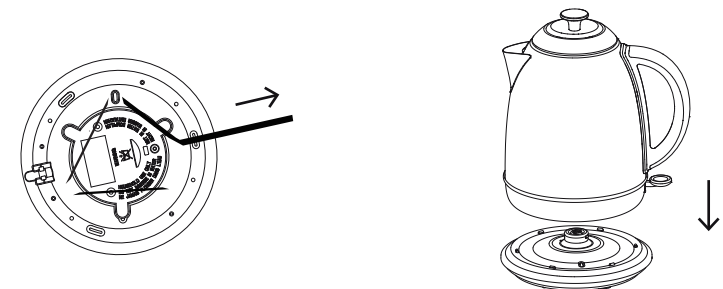


USING PRODUCT

Use guidelines



1. Open the lid of kettle

 - Pull the lid handle upwards to open the lid of kettle.
-

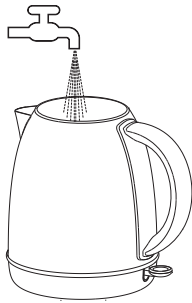

2. Add an appropriate amount of water

 
- Do not add any water when the kettle is on the base.
 - The level of water added should not be 1.7 L more than the maximum water level.
 - If it is overfilled, water may splash out after boiling.
-



3. Cover the lid of kettle


- Tightly cover the lid of kettle when pressing it downwards.
-

USING PRODUCT

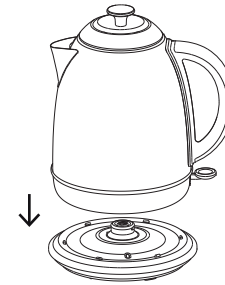


4. Place the kettle on the power base

 - Make sure to place the power base on a flat, clean, heat-resistant surface.
 - An exclusive power base is needed for the kettle.
 - Please dry off the bottom of the kettle.
 - Do not use the kettle when there is no water inside it.
-

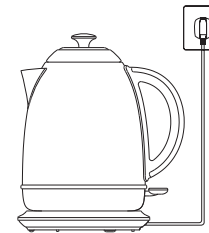

 5. Plug in

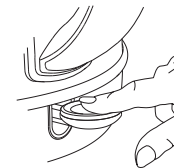

6. Press the ON/OFF switch for heating

- Press the switch for heating after preparations.
 - The switch indicator is ON, and the kettle will be automatically disconnected after water boiling.
-

CLEANING & MAINTAINING

Cleaning and maintenance

Cleaning of kettle

1. Disconnect the power plug.
2. Clean the inside of kettle with a wet sponge after it cools down.

Note: Do not soak the kettle, power base, power cord or plug in water (the electronic connectors on the bottom and the base of the kettle should not be exposed to water).

Descaling

1. The kettle needs to be descaled regularly, once a month at least. If the water quality is poor, the frequency should be increased.
2. If there are spots on the heating plate, it is the limescale, which is a normal phenomenon, and you can clean it by scrubbing with a scouring pad gently. If the situation is more serious, the following methods can be used for descaling.

CLEANING & MAINTAINING

Tips for descaling the kettle

Use white vinegar

- Add 100 ml of white vinegar to the kettle.
- Keep it standing for 1 hour without any heating.
- After emptying the electric kettle, wash it with clean water 5 or 6 times. The repeated cleaning is allowed when necessary.

Use citric acid

- Add 10g of citric acid to electric kettle.
- Then add 500ml of clean water, and boil it.
- Keep it standing for 5-10 min after automatic power off. (If there is a large amount of scale, the standing duration can be extended.)
- Finally, pour out the water in the electric kettle, and wipe its bottom with a scouring pad.

SIMPLE TROUBLESHOOTING

Simple Troubleshooting

Fault phenomenon	Reason analysis	Troubleshooting
After installation, the electric kettle does not work after the switch is pressed	Power supply is disconnected	Power supply is disconnected
	The kettle body and the base are not connected in place.	After putting the kettle body on the wire seat, rotate and adjust the position to confirm that it is connected in place.
	Wire seat failure	and please contact the service center of purchase channel which authorized by BUYDEEM for replacement or repair.
Peculiar smell of water	New unused kettle	It is recommended to use the kettle to boil water several times, and pour the water out. If the situation continues to occur, add water to the highest water level, with two teaspoons of soda also included, boil and pour out the water, and clean the kettle.

WARRANTY

Warranty card

BUYDEEM

Dear Customer,

Thank you so much for your purchase! The product comes with a **ONE-YEAR** warranty.

Should you ever needs one, please have the following information handy when contacting us:

Product Model No.: _____ **Product Name:** _____

Factory Serial No.: _____ **Order Date:** _____

Order ID: _____ **Customer Name:** _____

Customer Phone: _____ **Customer email:** _____

Please feel free to email us if have any questions or concerns.

More information, visit website: us.buydeem.com