## Unchaining

When the ProxmarkPro first boots it will try to enumerate as a CDC modem over USB allowing the user to issue commands through the client software. The ProxmarkPro is primarily designed for use in the field without a PC.

To unchain your ProxmarkPro, place the Power Switch in Battery mode and follow the instructions on-screen.

	See 25											
			<u>ineni</u>									
				_					_			
								_				
					5							
	÷.	t.n	t.o	t.o u	to un	to unc	Press to unch	Press - to uncha	Press -> to unchai	Press -> to unchain	to unchain	Press -> to unchain

Once unchained, use the friendly on-screen menu to perform various tag operations.

The menu is hierarchical and can be navigated using the up ( $\uparrow$ ), down ( $\downarrow$ ), left ( $\leftarrow$ ) and right ( $\rightarrow$ ) buttons.

**Note**: When you enter Unchained mode USB communication will not be permitted and the device will not longer show up as connected to your computer. To get USB communication back all you need to do is exit Unchained mode by pressing the left ( $\leftarrow$ ) until you get back to the boot menu.

## Unchained Mode

Use the  $\uparrow$  and  $\downarrow$  buttons to navigate to the desired menu function, then use  $\rightarrow$  to select that function. Use the  $\leftarrow$  button to quickly return to the parent menu ("go back").

	•••••	U	rnc.	in.	31r	ec	•••••
Υ.	1 6		1	28		7.4	L- L

The currently selected menu function is prefixed with a ' > ' symbol.

## Menu Structure

Mai	n Menu				
Menu Option	Description				
- Unchained - > LF 125/134kHz	Commands for tags in the Low Frequency (125/134kHz) spectrum. These would be HID 1326, EM4100, and T5577 tags.				
> HF 13.56MHz Load Tag	Commands for tags in the High Frequency (13.56MHz) spectrum. These would be Mifare Ultralight, 1K, and 4K tags.				
> Load Ta9 Backli9ht	Allows you to select from tags you have previously saved. Saved tags can be cloned or emulated. You must load tags first before doing either.				
> Backli9ht Device	The Backlight option allows you to turn on/ off the backlight.				
> Device Exit!	Device give you further information about your device and does some functionality tests.				



Exit will leave unchained mode. This option allows communication with the USB port to be restored.

LF - 125/1	134kHz Menu				
Menu Option	Description				
LF - 125/134kHz > Identify	The Identify command is used to determine an unknown LF tag.				
> HID EM4100	HID specific commands, such as Read, Save, Replay, Clone and Brute.				
> EM4100 Antenna	EM4100 specific commands, such as Read, Save, Replay, and Clone.				
) Antenna Back	Displays Antenna voltage at 125KHz and 134KHz in mV.				
> Back	Returns to previous menu. You will find this at the bottom of every menu structure.				

HF - 1	13.56MHz			
Menu Option	Description			
HF - 13.56MHz > Identify	The Identify command is used to determine an unknown LF tag.			

> Mifare UL Antenna	Mifare Ultralight specific commands, such as Read, Save, Replay, and Clone.
> Antenna Back	Displays Antenna voltage at 13.56MHz in mV.

D	evice				
Menu Option	Description				
- Device - > Battery	Displays battery charge percentage.				
> Version Storage	Displays firmware version information				
> Storage Button Test	Displays SD Card available and total space				
> Button Test Back	Test the buttons for functionality.				