2 0 1 0 - 2 0 1 3

# HONDA

SERVICE MANUAL

VT750C2/S SHADOW SPIRIT™ VT750C2B SHADOW PHANTOM™

		•
		ar-
		_
		~
		, and the second se
		•
		~
		~
		·w
		~

#### How To Use This Manual

This manual describes the service procedures for the VT750C2/C2F/C2B/C2S-A.

Note: Information within this manual identified for the C2F model should also be used for the C2 model.



Sections 1 and 3 apply to the whole vehicle. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections.

Section 4 through 22 describe parts of the motorcycle, grouped according to location.

Follow the Maintenance Schedule recommendations to ensure that the vehicle is in peak operating condition.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedure.

If you don't know the source of the trouble, go to Troubleshooting section 23.

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual. Of course, it is not practical or possible to warn you about all the hazards associated with servicing this vehicle.

You must use your own good judgement.

You will find important safety information in a variety of forms including:

Safety Labels - on the vehicle

Safety Messages – preceded by a safety alert symbol A and one of three signal words, DANGER, WARNING, or CAUTION. These signal words mean:

ADANGER You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

ACAUTION You CAN be HURT if you don't follow instructions.

Instructions – how to service this vehicle correctly and safely.

As you read this manual, you will find information that is preceded by a MODE symbol. The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

#### HOW TO USE THIS MANUAL

## SYMBOLS

The symbols used throughout this manual show specific service procedures. If supplementary information is required pertaining to these symbols, it would be explained specifically in the text without the use of the symbols.

	Replace the part(s) with new one(s) before assembly.
7	Use the recommend engine oil, unless otherwise specified.
	Use molybdenum oil solution (mixture of the engine oil and molybdenum grease in a ratio of 1:1).
GREGE!	Use multi-purpose grease (lithium based multi-purpose grease NLGI #2 or equivalent).
	Use molybdenum disulfide grease (containing more than 3% molybdenum disulfide, NOGI #2 or equivalent).  Example:  Molykote® BR-2 plus manufactured by Dow Corning U.S.A.  Multi-purpose M-2 manufactured by Mitsubishi Oil, Japan
MPH	Use molybdenum disulfide paste (containing more than 40% molybdenum disulfide, NOGI #2 or equivalent).  Example:  Molykote® G-n Paste manufactured by Dow Corning U.S.A.  Honda Moly 60 (U.S.A. only)  Rocol ASP manufactured by Rocol Limited, U.K.  Rocol Paste manufactured by Sumico Lubricant, Japan
4 :	Use silicone grease.
LOCK	Apply a locking agent. Use a medium strength locking agent unless otherwise specified.
SFAR!	Apply sealant.
FLUID	Use DOT 4 brake fluid. Use the recommended brake fluid unless otherwise specified.
EDHW.	Use fork or suspension fluid.

## CONTENTS

	GENERAL INFORMATION	1
	FRAME/BODY PANELS/EXHAUST SYSTEM	2
	MAINTENANCE	3
	LUBRICATION SYSTEM	4
z	FUEL SYSTEM (PGM-FI)	5
DRIVE TARIN	COOLING SYSTEM	6
VE 1	ENGINE REMOVAL/INSTALLATION	7
DRI	CYLINDER HEAD/VALVE	8
	CYLINDER/PISTON	9
ENGINE AND	CLUTCH/GEARSHIFT LINKAGE	10
NGII	ALTERNATOR/STARTER CLUTCH	11
ш	CRANKSHAFT/TRANSMISSION	12
	FINAL DRIVE	13
(0	FRONT WHEEL/SUSPENSION/STEERING	14
CHASSIS	REAR WHEEL/BRAKE/SUSPENSION	15
ЭНА	HYDRAULIC BRAKE	16
	ANTI-LOCK BRAKE SYSTEM (ABS; VT750C2S)	17
	BATTERY/CHARGING SYSTEM	18
ICAI	IGNITION SYSTEM	19
CTRICAL	ELECTRIC STARTER	20
ELE(	LIGHTS/METERS/SWITCHES	21
	WIRING DIAGRAMS	22
	TROUBLESHOOTING	23
	INDEX	

## мемо

#### 4

## 1. GENERAL INFORMATION

SERVICE RULES ······1-3	REAR WHEEL/BRAKE/SUSPENSION SPECIFICATIONS (VT750C2S)1-14
MODEL IDENTIFICATION1-4	
GENERAL SPECIFICATIONS1-7	HYDRAULIC BRAKE SPECIFICATIONS (VT750C2F)1-14
LUBRICATION SYSTEM SPECIFICATIONS1-9	HYDRAULIC BRAKE SPECIFICATIONS (VT750C2B)·······1-14
FUEL SYSTEM (PGM-FI) SPECIFICATIONS·······1-9	HYDRAULIC BRAKE SPECIFICATIONS (VT750C2S)1-14
COOLING SYSTEM SPECIFICATIONS1-9	BATTERY/CHARGING SYSTEM SPECIFICATIONS1-15
CYLINDER HEAD/VALVE SPECIFICATIONS······1-10	IGNITION SYSTEM SPECIFICATIONS 1-15
CYLINDER/PISTON SPECIFICATIONS ·····1-10	ELECTRIC STARTER SPECIFICATIONS1-15
CLUTCH/GEARSHIFT LINKAGE SPECIFICATIONS1-11	LIGHTS/METERS/SWITCHES SPECIFICATIONS (VT750C2F) ·················· 1-15
ALTERNATOR/STARTER CLUTCH SPECIFICATIONS1-11	LIGHTS/METERS/SWITCHES SPECIFICATIONS (VT750C2B)1-16
CRANKSHAFT/TRANSMISSION SPECIFICATIONS1-12	LIGHTS/METERS/SWITCHES SPECIFICATIONS (VT750C2S)1-16
FINAL DRIVE SPECIFICATIONS1-12	STANDARD TORQUE VALUES1-17
FRONT WHEEL/SUSPENSION/STEERING SPECIFICATIONS (VT750C2F/C2S) ·······1-13	ENGINE & FRAME TORQUE VALUES 1-17
FRONT WHEEL/SUSPENSION/STEERING SPECIFICATIONS (VT750C2B)·······1-13	LUBRICATION & SEAL POINTS1-24
,	CABLE & HARNESS ROUTING1-27
REAR WHEEL/BRAKE/SUSPENSION SPECIFICATIONS (VT750C2F/C2B) ·······1-13	EMISSION CONTROL SYSTEMS1-54

#### **SERVICE RULES**

- 1. Use genuine Honda or Honda-recommended parts and lubricants or their equivalents. Parts that don't meet Honda's design specifications may cause damage to the motorcycle.
- 2. Use the special tools designed for this product to avoid damage and incorrect assembly.
- 3. Use only metric tools when servicing the motorcycle. Metric bolts, nuts and screws are not interchangeable with English fasteners.
- 4. Install new gaskets, O-rings, cotter pins, and lock plates when reassembling.
- 5. When tightening bolts or nuts, begin with the larger diameter or inner bolt first. Then tighten to the specified torque diagonally in incremental steps unless a particular sequence is specified.
- 6. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
- 7. After reassembly, check all parts for proper installation and operation.
- 8. Route all electrical wires as shown in the Cable and Harness Routing (page 1-26).

#### **ABBREVIATIONS**


Throughout this manual, the following abbreviations are used to identify the respective parts or systems.

Abbrev. term	Full term
CKP sensor	Crankshaft Position sensor
DLC	Data Link Connector
DTC	Diagnostic Trouble Code
ECM	Engine Control Module
ECT sensor	Engine Coolant Temperature sensor
EEPROM	Electrically Erasable Programmable Read Only Memory
EQP switch	Engine Oil Pressure switch
HDS	Honda Diagnostic System
HISS	Honda Ignition Security System
IACV	Idle Air Control Valve
IAT sensor	Intake Air Temperature sensor
MAP sensor	Manifold Absolute Pressure sensor
MIL	Malfunction Indicator Lamp
PAIR	Pulse Secondary Air Injection
PGM-FI	Programmed Fuel Injection
SCS connector	Service Check Short connector
TP sensor	Throttle Position sensor
VS sensor	Vehicle Speed sensor


## MODEL IDENTIFICATION

VT750C2/C2F/C2S shown: NEW



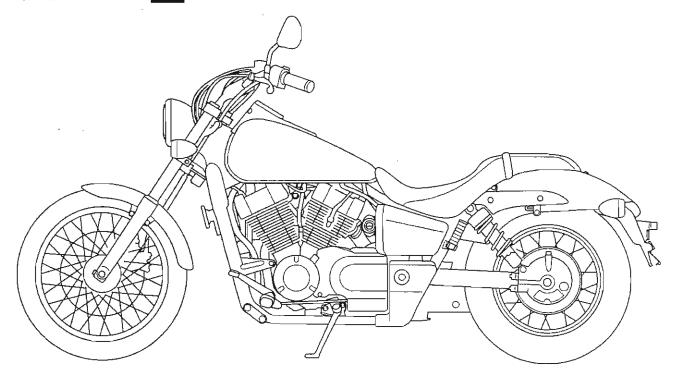


VT750C2B (U.S.A.) shown:

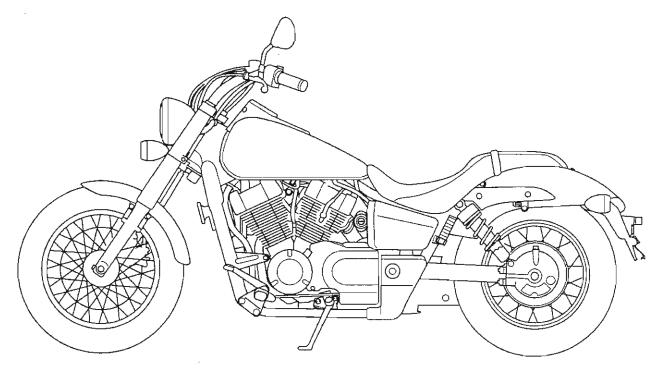


#### **SERIAL NUMBERS**


The Vehicle Identification Number (VIN) is stamped on the right side of the steering head.

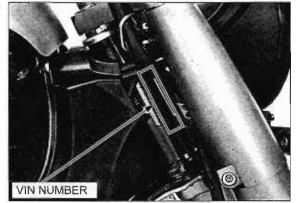


The engine serial number is stamped on the right side of the crankcase.

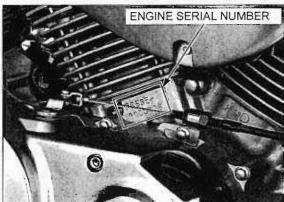

The throttle body identification number is stamped on the throttle position sensor side of the carburetor body.

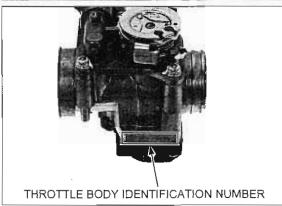

The safety certification label is attached on the right side of the frame down tube.

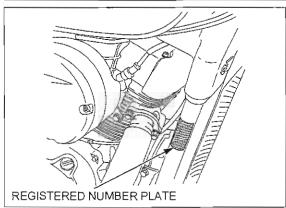


#### LABEL

The color label is attached to the frame, behind of the left side cover. When ordering color-coded parts, always specify the designated color code.



The Emission Control Information Label is attached on the left side of the frame down tube.

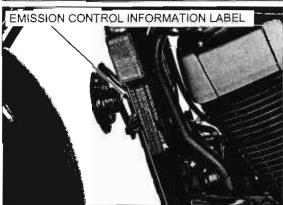

## GENERAL SPECIFICATIONS

	ITEM		SPECIFICATIONS
DIMENSION	Overall length	VT750C2F/C2S:	2,430 mm (95.7 in)
		VT750C2B:	2,395 mm (94.3 in)
	Overall width	VT750C2F/C2S:	835 mm (32.9 in)
		VT750C2B:	825 mm (32.5 in)
	Overall height	VT750C2F/VT750C2S:	1,125 mm (44.3 in)
		VT750C2B:	1,090 mm (42.9 in)
	Wheelbase	VT750C2F/C2S:	1,655 mm (65.2 in)
		VT750C2B:	1,640 mm (64.6 in)
	Seat height		655 mm (25.8 in)
	Footpeg height		277 mm (10.9 in)
	Ground clearance		130 mm (5.1 in)
	Curb weight	VT750C2F:	246 kg (542 lbs)
	o and or angular	VT750C2S:	251 kg (553 lbs)
		VT750C2B (Canada):	249 kg (549 lbs)
		VT750C2B (U.S.A.):	250 kg (551 lbs)
	Maximum	VT750C2F/C2S:	184 kg (406 lbs)
	weight capacity	VT750C2B (U.S.A.):	182 kg (401 lbs)
		VT750C2B (Canada):	186 kg (410 lbs)
FRAME	Frame type	V 170002B (Gariada).	Double cradle
LIVUME	Front suspension		Telescopic fork
	Front axle travel	VT750C2F/C2S:	115 mm (4.5 in)
	Florit axie traver	VT750C2B:	117 mm (4.6 in)
	Boor suppossion	V1730G2B.	Swingarm
	Rear suspension Rear axle travel		90 mm (3.5 in)
	Front tire size	VT750C2F/C2S:	90/90-21M/C 54S
	From the size	VT750C2F/C2S. VT750C2B:	120/90-17M/C 64S
	Door tire eige	V1750C2B.	
	Rear tire size	Front	160/80-15M/C 74S
	Tire brand	Front	EXEDRA G701 (BRIDGESTONE)
	(VT750C2F/	D	D404F (DUNLOP)
	C2S)	Rear	EXEDRA G702 (BRIDGESTONE)
			D404 (DUNLOP)
	Tire brand	Front	G701 (BRIDGESTONE)
	(VT750C2B)		D404FG (DUNLOP)
			M6002 (CHENG SHIN)
		Rear	G702 (BRIDGESTONE)
			D404 (DUNLOP)
			M6011R (CHENG SHIN)
	Front brake		Hydraulic single disc
	Rear brake	VT750C2S:	Hydraulic single disc
		VT750C2F/C2B:	Internal expanding shoe
	Caster angle	VT750C2F/C2S:	34° 30'
		VT750C2B:	34° 00'
	Trail length	VT750C2F/C2S:	158 mm (6.2 in)
		VT750C2B:	161 mm (6.3 in)
	Fuel tank capacity		14.0 liters (3.70 US gal, 3.08 lmp gal)

	ITEM	SPECIFICATIONS
ENGINE	Cylinder arrangement	2 cylinders 52° V transverse
	Bore and stroke	79 x 76 mm (3.1 x 3.0 in)
	Displacement	745 cm³ (45.4 cu-in)
	Compression ratio	9.6 : 1
	Valve train	Silent cam chain driven, OHC
	Intake valve opens	Front: 0° BTDC (at 1 mm lift)
		Rear: 5° ATDC (at 1 mm lift)
	closes	25° ABDC (at 1 mm lift)
	Exhaust valve opens	35° BBDC (at 1 mm lift)
	closes	Front: 0° ATDC (at 1 mm lift)
		Rear: 5° BTDC (at 1 mm lift)
	Lubrication system	Forced pressure and wet sump
	Oil pump type	Trochoid
	Cooling system	Liquid cooled
	Air filtration	Viscous paper element
	Engine dry weight	70.8 kg (156.1 lbs)
	Firing order	Front - 308° - Rear - 412° - Front
	Cylinder number	Front: #2/Rear: #1
FUEL	Type	PGM-FI
DELIVERY	Throttle bore	34 mm (1.3 in)
SYSTEM		- · · · · · · · · · · · · · · · · · · ·
DRIVE TRAIN	Clutch system	Multi-plate, wet
	Clutch operation system	Cable operating
	Transmission	Constant mesh, 5-speeds
	Primary reduction	1.763 (67/38)
	Secondary reduction	0.821 (32/39)
	Third reduction (Output drive reduction)	1.059 (18/17)
	Final reduction	3.091 (34/11)
	Gear ratio 1st	2.400 (36/15)
	2nd	1.550 (31/20)
	3rd	1.174 (27/23)
	4th	0.960 (24/25)
	5th	0.852 (23/27)
	Gearshift pattern	Left foot operated return system,
		1 - N - 2 - 3 - 4 - 5
ELECTRICAL	Ignition system	Computer-controlled digital transistorized
		with electric advance
	Starting system	Electric starter motor
	Charging system	Triple phase output alternator
	Regulator/rectifier	SCR shorted/triple phase full-wave rectifica-
		tion
	Lighting system	Battery

## **LUBRICATION SYSTEM SPECIFICATIONS**

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Engine oil capacity	At draining	2.5 liters (2.6 US qt, 2.2 lmp qt)	_
	At oil filter change	2.6 liters (2.7 US qt, 2.3 lmp qt)	
	At disassembly	3.2 liters (3.4 US qt, 2.8 lmp qt)	_
Recommended engine oil		Pro Honda GN4 4-stroke oil (U.S.A. and Canada) or an equivalent API service classification: SG or higher (except oils labeled as energy conserving on the circular API service label) Viscosity: SAE 10W-30 JASO T 903 standard: MA	-
Oil pressure at EOP switch		530 kPa (5.4 kgf/cm², 77 psi) at 5,000 rpm/(80°C/176°F)	_
Oil pump rotor	Tip clearance	0.15 (0.006)	0.20 (0.008)
	Body clearance	0.15 - 0.21 (0.006 - 0.008)	0.35 (0.014)
	Side clearance	0.02 - 0.08 (0.001 - 0.003)	0.10 (0.004)

## **FUEL SYSTEM (PGM-FI) SPECIFICATIONS**

ITEM		SPECIFICATIONS	
Throttle body	VT750C2F/C2S	GQB3A	
identification number	VT750C2B	GQ9KA	
Engine idle speed		1,200 ± 100 rpm	
Throttle grip freeplay		2 – 6 mm (1/16 – 1/4 in)	
Fuel injector resistance	Front	11 – 13 kΩ	
(20°C/68°F)	Rear	11 – 13 kΩ	
PAIR control solenoid valve resistance (20°C/68°F)		23 – 27 Ω	
Fuel pressure at idle		333 – 353 kPa (3.4 – 3.6 kgf/cm², 48 – 51 psi)	
Fuel pump flow (at 12 V)		50 cm3 (1.7 US oz, 1.8 lmp oz) minimum/10 seconds	

## **COOLING SYSTEM SPECIFICATIONS**

ITEM		SPECIFICATIONS
Coolant capacity	Radiator and engine	1.58 liters (1.67 US qt, 1.39 Imp qt)
	Reserve tank	0.38 liter (0.40 US qt, 0.33 lmp qt)
Radiator cap relief press	sure	108 ~ 137 kPa (1.1 - 1.4 kgf/cm², 16 - 20 psi)
Thermostat	Begin to open	80 – 84°C (177 – 182°F)
	Fully open	95°C (203°F)
	Valve lift	8 mm (0.3 in) minimum at 95°C (203°F)
Recommended antifreeze		Pro Honda HP coolant or an equivalent high quality ethylene
		glycol antifreeze containing silicate-free corrosion inhibitors
Standard coolant concentration		1 : 1 (mixture with distilled water)

## CYLINDER HEAD/VALVE SPECIFICATIONS

Unit: mm (in)

Cylinder compression at 400 rpm		STANDARD	SERVICE LIMIT	
		1,373 ± 98 kPa (14.0 ± 1.0 kgf/cm², 199 ± 14 psi)	_	
Valve clearance		IN	$0.15 \pm 0.02  (0.006 \pm 0.001)$	_
		EX	$0.20 \pm 0.02 (0.008 \pm 0.001)$	_
Cam chain tensi	oner wedge B length			6 (0.2)
Camshaft	Cam lobe height	IN	37.188 - 37.348 (1.4641 - 1.4704)	37.16 (1.463)
		EX	37.605 - 37.765 (1.4805 - 1.4868)	37.58 (1.480)
	Runout	IN/EX	_	0.05 (0.002)
	Journal O.D.	IN/EX	21.959 - 21.980 (0.8645 - 0.8654)	21.90 (0.862)
	Oil clearance	IN/EX	0.020 - 0.141 (0.0008 - 0.0056)	0.16 (0.006)
Rocker arm,	Rocker arm shaft O.D.	IN/EX	11.966 – 11.984 (0.4711 – 0.4718)	11.83 (0.466)
rocker arm	Rocker arm I.D.	IN/EX	12.000 - 12.018 (0.4724 - 0.4731)	12.05 (0.474)
shaft	Rocker arm-to-shaft clearance		0.016 - 0.052 (0.0006 - 0.0020)	0.07 (0.003)
Valve,	Valve stem O.D.	1N	5.475 - 5.490 (0.2156 - 0.2161)	5.45 (0.215)
valve guide		EX	5.455 - 5.470 (0.2148 - 0.2154)	5.41 (0.213)
	Valve guide I.D.	IN	5.500 - 5.510 (0.2165 - 0.2169)	5.56 (0.219)
		EX	5.500 - 5.512 (0.2165 - 0.2170)	5.56 (0.219)
	Stem-to-guide clearance	IN	0.010 - 0.035 (0.0004 - 0.0014)	0.10 (0.004)
		EX	0.030 - 0.057 (0.0012 - 0.0022)	0.11 (0.004)
	Valve guide projection	IN	18.7 – 18.9 (0.736 – 0.744)	_
	above cylinder head	EX	17.2 – 17.4 (0.68 – 0.69)	
	Valve seat width	IN/EX	0.90 - 1.10 (0.035 - 0.043)	1.5 (0.06)
Valve spring	Free length	1N	42.14 (1.659)	40.58 (1.598)
		EX	46.11 (1.815)	44.72 (1.761)
Cylinder head w	rarpage		_	0.10 (0.004)

## **CYLINDER/PISTON SPECIFICATIONS**

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT	
Cylinder	I.D.		79.000 – 79.015 (3.1102 – 3.1108)	79.10 (3.114)
	Out-of-round		_	0.06 (0.002)
	Taper		_	0.06 (0.002)
	Warpage			0.10 (0.004)
Piston, piston pin,	Piston O.D. at 17 mm bottom	(0.7 in) from the	78.97 – 78.99 (3.109 – 3.110)	78.90 (3.106)
piston rings	Piston pin bore 1.D.		18.002 – 18.008 (0.7087 – 0.7090)	18.05 (0.711)
	Piston pin O.D.		17.994 - 18.000 (0.7084 - 0.7087)	17.98 (0.708)
	Piston-to-piston pin cl	earance	0.002 - 0.014 (0.0001 - 0.0006)	0.04 (0.002)
	Piston ring end gap Top Second		0.15 - 0.25 (0.006 - 0.010)	0.4 (0.02)
			0.25 - 0.40 (0.010 - 0.016)	0.6 (0.02)
		Oil (side rail)	0.20 - 0.80 (0.008 - 0.031)	1.0 (0.04)
	Piston ring-to-ring	Тор	0.025 - 0.055 (0.0010 - 0.0022)	0.08 (0.003)
	groove clearance	Second	0.015 - 0.045 (0.0006 - 0.0018)	0.07 (0.003)
Cylinder-to-piston clearance		0.010 - 0.045 (0.0004 - 0.0018)	0.10 (0.004)	
Connecting rod small end I.D.		18.016 - 18.034 (0.7093 - 0.7100)	18.07 (0.711)	
Connecting rod-to-piston pin clearance		0.016 - 0.040 (0.0006 - 0.0016)	0.06 (0.002)	

## **CLUTCH/GEARSHIFT LINKAGE SPECIFICATIONS**

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Clutch lever fr	eeplay		10 – 20 (3/8 – 13/16)	_
Clutch	Spring free length		45.3 (1.78)	43.9 (1.73)
	Disc thickness	Disc A	2.62 - 2.78 (0.103 - 0.109)	2.3 (0.09)
		End disc	2.92 – 3.08 (0.115 – 0.121)	2.6 (0.10)
	Plate warpage		~	0.30 (0.012)
Clutch outer g	uide	I.D.	21.991 - 22.016 (0.8658 - 0.8668)	22.03 (0.867)
	O.D.		31.959 - 31.975 (1.2582 - 1.2589)	31.92 (1.257)
	), at clutch outer guide		21.967 ~ 21.980 (0.8648 – 0.8654)	21.95 (0.864)
Clutch outer g	uide-to-mainshaft clearar	ce	0.011 - 0.049 (0.0004 - 0.0019)	0.08 (0.003)
Clutch outer I.D.			32.000 - 32.025 (1.2598 - 1.2608)	32.09 (1.263)
Clutch outer-to-outer guide clearance			0.025 - 0.066 (0.0010 - 0.0026)	0.18 (0.007)
Oil pump drive sprocket I.D.		32.025 - 32.145 (1.2608 - 1.2655)	32.16 (1.266)	
Oil pump drive	e sprocket-to-clutch outer	guide clearance	0.050 - 0.186 (0.0020 - 0.0073)	0.23 (0.009)

## **ALTERNATOR/STARTER CLUTCH SPECIFICATIONS**

Unit: mm (in)

			• · · · · · · · · · · · · · · · · · · ·
ITEM		STANDARD	SERVICE LIMIT
Starter driven gear	1.D.	37.000 - 37.025 (1.4567 - 1.4577)	37.10 (1.461)
	O.D.	57.749 - 57.768 (2.2736 - 2.2743)	57.73 (2.273)
Starter clutch outer I.D.		74.414 - 74.440 (2.9297 - 2.9307)	74.46 (2.931)

## CRANKSHAFT/TRANSMISSION SPECIFICATIONS

Unit: mm (in)

	ITEM	ITEM		SERVICE LIMIT
Crankshaft	Connecting rod big e	nd side clearance	0.05 - 0.20 (0.002 - 0.008)	0.30 (0.012)
	Crankpin bearing oil		0.028 - 0.052 (0.0011 - 0.0020)	0.07 (0.003)
	Main journal oil clear		0.020 - 0.038 (0.0008 - 0.0015)	0.07 (0.003)
	Crankshaft runout		_	0.03 (0.001)
	Main journal O.D.	_	52.982 - 53.000 (2.0859 - 2.0866)	52.976 (2.0857)
Main journal I.D.	•		58.010 - 58.022 (2.2839 - 2.2843)	58.070 (2.2862)
Shift fork, fork	1.D.		13.000 - 13.018 (0.5118 - 0.5125)	13.03 (0.513)
shaft	Claw thickness		5.93 - 6.00 (0.233 - 0.236)	5.6 (0.22)
	Fork shaft O.D.		12.966 - 12.984 (0.5105 - 0.5112)	12.90 (0.508)
Shift drum O.D.	at left end		11.966 - 11.984 (0.4711 - 0.4718)	11.94 (0.470)
Shift drum journa	al I.D.		12.000 - 12.018 (0.4724 - 0.4731)	12.05 (0.474)
Shift drum-to-shi	ft drum journal clearance	<del>}</del>	0.016 - 0.052 (0.0006 - 0.0020)	0.09 (0.035)
Transmission	Gear I.D.	M3, M5	28.000 - 28.021 (1.1024 - 1.1032)	28.04 (1.104)
		C1, C4	31.000 - 31.025 (1.2205 - 1.2215)	31.05 (1.222)
		C2	24.000 - 24.021 (0.9449 - 0.9457)	24.04 (0.946)
	Gear busing O.D.	M3, M5	27.959 – 27.980 (1.1007 – 1.1016)	27.94 (1.100)
		C1, C4	30.950 - 30.975 (1.2185 - 1.2195)	30.93 (1.218)
		C2	23.959 - 23.980 (0.9433 - 0.9441)	23.94 (0.943)
	Gear-to-bushing	M3, M5, C2	0.020 - 0.062 (0.0008 - 0.0024)	0.10 (0.004)
	clearance	C1, C4	0.025 - 0.075 (0.0010 - 0.0030)	0.11 (0.004)
	Gear bushing I.D.	M3	25.000 - 25.021 (0.9843 - 0.9851)	25.04 (0.986)
		C2	20.000 - 20.021 (0.7874 - 0.7882)	20.04 (0.789)
	Mainshaft O.D.	at M3 bushing	24.959 - 24.980 (0.9826 - 0.9835)	24.94 (0.982)
	Countershaft O.D.	at C2 bushing	19.980 - 19.993 (0.7866 - 0.7871)	19.96 (0.786)
	Bushing-to-shaft	M3	0.020 - 0.062 (0.0008 - 0.0024)	0.10 (0.004)
	clearance	C2	0.007 - 0.041 (0.0003 - 0.0016)	0.07 (0.003)
Output drive	Output gear I.D.		24.000 - 24.021 (0.9449 - 0.9457)	24.04 (0.946)
train	Output gear bush-	O.D.	23.959 - 23.980 (0.9433 ~ 0.9441)	23.70 (0.933)
	ing	I.D.	20.020 - 20.041 (0.7882 - 0.7890)	20.06 (0.790)
	Output drive gear sha		19.979 – 20.000 (0.7866 – 0.7874)	19.97 (0.786)
	Gear-to-bushing clea		0.020 - 0.062 (0.0008 - 0.0024)	0.082 (0.0032)
	Gear bushing-to-shaf		0.020 - 0.042 (0.0008 - 0.0017)	0.08 (0.003)
	Output gear damper		62.3 (2.45)	59 (2.3)
	Output drive gear bad		0.08 - 0.23 (0.003 - 0.009)	0.40 (0.016)
	Backlash difference ments		_	0.10 (0.004)

## **FINAL DRIVE SPECIFICATIONS**

			Ornic mini (iii
ITEM		STANDARD	SERVICE LIMIT
Recommended final drive of	oil	Hypoid gear oil, SAE #80	_
Final drive oil capacity	At draining	160 cm <sup>3</sup> (5.4 US oz, 5.6 lmp oz)	_
	At disassembly	170 cm <sup>3</sup> (5.7 US oz, 6.0 lmp oz)	
Final drive gear backlash		0.05 - 0.15 (0.002 - 0.006)	0.30 (0.012)
Backlash difference between	en measurements	_	0.10 (0.004)
Ring gear-to-stop pin clearance		0.30 - 0.60 (0.012 - 0.024)	
Final drive gear assembly p	ore-load	0.2 - 0.4 N·m (2.0 - 4.1 kgf·m, 0.1 - 0.3 lbf·ft)	_

## FRONT WHEEL/SUSPENSION/STEERING SPECIFICATIONS (VT750C2F/C2S)

Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT
Minimum tire trea	ad depth	_	1.5 (0.06)
Cold tire pres-	Up to 90 kg (200 lbs) load	200 kPa (2.00 kgf/cm², 29 psi)	_
sure	Up to maximum weight capacity	200 kPa (2.00 kgf/cm², 29 psi)	-
Axle runout		_	0.2 (0.01)
Wheel rim	Radial	_	2.0 (0.08)
runout	Axial	_	2.0 (0.08)
Wheel balance w	eight	-	60 g max.
Fork	Spring free length	371.8 (14.64)	364.4 (14.35)
	Tube runout	_	0.2 (0.01)
	Recommended fork fluid	Pro Honda Suspension Fluid SS-8 (10W)	
	Fluid level	100 (3.9)	_
	Fluid capacity	478 ± 2.5 cm <sup>3</sup> (16.2 ± 0.08 US oz,	_
		16.8 ± 0.09 lmp oz)	
Steering head be	aring pre-load	8.5 – 12.7 N (0.9 – 1.3 kgf)	_

## FRONT WHEEL/SUSPENSION/STEERING SPECIFICATIONS (VT750C2B)

Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT
Minimum tire trea	ad depth	_	1.5 (0.06)
Cold tire pres-	Up to 90 kg (200 lbs) load	200 kPa (2.00 kgf/cm², 29 psi)	_
sure	Up to maximum weight capacity	200 kPa (2.00 kgf/cm², 29 psi)	_
Axle runout	·	-	0.2 (0.01)
Wheel rim	Radial	_	2.0 (0.08)
runout	Axial	-	2.0 (0.08)
Wheel balance w	eight eight	-	60 g max.
Fork	Spring free length	367.8 (14.48)	360.4 (14.19)
	Tube runout	_	0.2 (0.01)
	Recommended fork fluid	Pro Honda Suspension Fluid SS-8 (10W)	_
	Fluid level	100 (3.9)	_
	Fluid capacity	$474 \pm 2.5 \text{ cm}^3 (16.0 \pm 0.08 \text{ US oz},$	
		16.7 ± 0.09 lmp oz)	_
Steering head be	earing pre-load	8.5 – 12.7 N (0.9 – 1.3 kgf)	_

## REAR WHEEL/BRAKE/SUSPENSION SPECIFICATIONS (VT750C2F/C2B)

Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT
Minimum tire trea	ad depth	_	2.0 (0.08)
Cold tire pres-	Up to 90 kg (200 lbs) load	200 kPa (2.00 kgf/cm², 29 psi)	_
sure	Up to maximum weight capacity	250 kPa (2.50 kgf/cm², 36 psi)	_
Axle runout		_	0.2 (0.01)
Wheel rim	Radial	-	2.0 (0.08)
runout	Axial	-	2.0 (0.08)
Wheel balance weight		_	70 g max.
Brake drum I.D.		180.0 – 180.3 (7.09 – 7.10)	181 (7.1)
Brake pedal height		75 mm (3.0 in) above the top of the foot-	
		peg	
Brake pedal freeplay		20 – 30 (13/16 – 1-3/16)	_
Shock absorber	spring pre-load adjuster setting	2nd position	_

## REAR WHEEL/BRAKE/SUSPENSION SPECIFICATIONS (VT750C2S)

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Minimum tire trea	d depth	-	2.0 (0.08)
Cold tire pres-	Up to 90 kg (200 lbs) load	200 kPa (2.00 kgf/cm², 29 psi)	
sure	Up to maximum weight capacity	250 kPa (2.50 kgf/cm², 36 psi)	-
Axle runout	· <u> </u>	_	0.2 (0.01)
Wheel rim	Radial	_	2.0 (0.08)
runout	Axial	_	2.0 (0.08)
Wheel balance weight		_	70 g max.
Shock absorber s	pring pre-load adjuster setting	2nd position	_

## **HYDRAULIC BRAKE SPECIFICATIONS (VT750C2F)**

Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT	
Recommended brake fluid		DOT 4	_	
Front	Brake disc thickness	5.8 - 6.2 (0.23 - 0.24)	5.0 (0.20)	
	Brake disc warpage		0.30 (0.012)	
	Master cylinder I.D.	11.000 – 11.043 (0.4331 – 0.4348)	11.05 (0.435)	
	Master piston O.D.	10.957 - 10.984 (0.4314 - 0.4324)	10.945 (0.4309)	
	Caliper cylinder I.D.	27.000 - 27.050 (1.0630 - 1.0650)	27.060 (1.0654)	
	Caliper piston O.D.	26.935 - 26.968 (1.0604 - 1.0617)	26.930 (1.0602)	

## **HYDRAULIC BRAKE SPECIFICATIONS (VT750C2B)**

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Recommended brake fluid		DOT 4	_
Front	Brake disc thickness	5.8 - 6.2 (0.23 - 0.24)	5.0 (0.20)
	Brake disc warpage	_	0.30 (0.012)
	Master cylinder I.D.	11.000 - 11.043 (0.4331 - 0.4348)	11.05 (0.435)
	Master piston O.D.	10.957 - 10.984 (0.4314 - 0.4324)	10.945 (0.4309)
	Caliper cylinder I.D.	25.400 - 25.450 (1.0000 - 1.0020)	25.460 (1.0024)
	Caliper piston O.D.	25.335 – 25.368 (0.9974 – 0.9987)	25.320 (0.9968)

## **HYDRAULIC BRAKE SPECIFICATIONS (VT750C2S)**

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Recommended brake fluid		DOT 4	_	
Front	Brake disc thickness		4.8 - 5.2 (0.19 - 0.20)	4.0 (0.16)
	Brake disc warpage		_	0.30 (0.012)
	Master cylinder I.D.		11.000 - 11.043 (0.4331 - 0.4348)	11.05 (0.435)
	Master piston O.D.		10.957 - 10.984 (0.4314 - 0.4324)	10.945 (0.4309)
	Caliper cylinder I.D.	Upper	27.000 - 27.045 (1.0630 - 1.0650)	27.060 (1.0654)
		Middle	22.650 - 22.700 (0.8917 - 0.8934)	22.712 (0.8942)
		Lower	25.400 - 25.450 (1.0000 - 1.0020)	25.460 (1.0024)
	Caliper piston O.D.	Upper	26.935 - 26.968 (1.0604 - 1.0617)	26.930 (1.0602)
		Middle	22.585 - 22.618 (0.8892 - 0.8905)	22.573 (0.8887)
		Lower	25.318 - 25.368 (0.9968 - 0.9988)	25.310 (0.9965)
Rear	Push rod length		83 (3.3)	0.000
	Brake disc thickness		5.8 - 6.2 (0.23 - 0.24)	5.0 (0.20)
	Brake disc warpage			0.30 (0.012)
	Master cylinder I.D.		14.000 - 14.043 (0.5512 - 0.5529)	14.055 (0.5533)
	Master piston O.D.		13.957 - 13.984 (0.5495 - 0.5506)	13.945 (0.5490)
	Caliper cylinder I.D.		38.180 - 38.230 (1.5031 - 1.5051)	38.24 (1.506)
	Caliper cylinder O.D.		38.098 - 38.148 (1.4999 - 1.5019)	38.19 (1.499)

## **BATTERY/CHARGING SYSTEM SPECIFICATIONS**

	ITEM		SPECIFICATIONS
Battery	Capacity		12 V ~ 11.2 Ah
	Current leakage		1 mA max.
	Voltage		13.0 – 13.2 V
	(20°C/68°F)	Needs charg- ing	Below 12.4 V
	Charging current	Normal	1.1 A/5 – 10 h
		Quick	5.5 A/1.0 h
Alternator	Capacity		0.39 kW/5,000 rpm
	Charging coil resistar	nce (20°C/68°F)	0.1 – 1.0 Ω

#### **IGNITION SYSTEM SPECIFICATIONS**

ITEM		SPECIFICATIONS
Spark plug	Standard	DPR7EA-9 (NGK), X22EPR-U9 (DENSO)
For extended high speed riding		DPR8EA-9 (NGK), X24EPR-U9 (DENSO)
Spark plug gap		0.8 – 0.9 mm (0.03 – 0.04 in)
Ignition coil prin	mary peak voltage	100 V minimum
Ignition timing ("F"mark)		8° BTDC at idle
CKP sensor pe	ak voltage (at 20°C/68°F)	0.7 V minimum

#### **ELECTRIC STARTER SPECIFICATIONS**

Unit: mm (in)

ITEM	STANDARD	SERVICE LIMIT
Starter motor brush length	12.5 (0.49)	6.5 (0.26)

## LIGHTS/METERS/SWITCHES SPECIFICATIONS (VT750C2F)

	ITEM	SPECIFICATIONS		
Bulbs	Headlight	12 V – 60/55 W		
	Brake/tail light	12 V – 21/5 W		
	License light	12 V – 5 W		
	Front turn signal/position light	12 V – 21/5 W x 2		
	Rear turn signal light	12 V – 21 W x 2		
	Instrument light	LED x 4		
	Turn signal indicator	LED		
	High beam indicator	12 V – 3.4 W		
	Fuel reserve indicator	12 V – 3.4 W		
	Neutral indicator	LED		
	Oil pressure indicator	LED		
	Coolant temperature indicator	LED		
	MIL	LED		
Fuse	Main fuse	30 A		
	FI fuse	15 A		
	Sub fuse	10 A x 5, 20 A x 1		
ECT sensor	50°C (122°F)	$6.8 - 7.4 \text{ k}\Omega$		
resistance	80°C (176°F)	2.1 – 2.6 kΩ		
	120°C (248°F)	$0.6-0.7 \text{ k}\Omega$		

## LIGHTS/METERS/SWITCHES SPECIFICATIONS (VT750C2B)

	ITEM	SPECIFICATIONS	
Bulbs	Headlight	12 V – 60/55 W	
	Brake/tail light	12 V – 21/5 W	
	License light	12 V – 5 W	
	Front turn signal/position light	12 V - 21/5 W x 2	
	Rear turn signal light	12 V – 21 W x 2	
	Instrument light	LED x 6	
	Turn signal indicator	12 V – 3.4 W	
	High beam indicator	12 V – 3.4 W	
	Fuel reserve indicator	12 V – 3.4 W	
	Neutral indicator	LED	
	Oil pressure indicator	LED	
	Coolant temperature indicator	LED	
	MIL	LED	
Fuse	Main fuse	30 A	
	FI fuse	15 A	
	Sub fuse	10 A x 5, 20 A x 1	
ECT sensor	50°C (122°F)	6.8 – 7.4 kΩ	
resistance	80°C (176°F)	2.1 – 2.6 kΩ	
	120°C (248°F)	0.6 – 0.7 kΩ	

## LIGHTS/METERS/SWITCHES SPECIFICATIONS (VT750C2S)

-	ITEM	SPECIFICATIONS		
Bulbs	Headlight	12 V – 60/55 W		
	Brake/tail light	12 V – 21/5 W		
	License light	12 V – 5 W		
	Front turn signal/position light	12 V – 21/5 W x 2		
	Rear turn signal light	12 V – 21 W x 2		
	Instrument light	LED x 6		
	Turn signal indicator	LED		
	High beam indicator	12 V – 3.4 W		
	Fuel reserve indicator	12 V – 3.4 W		
	Neutral indicator	LED		
	Oil pressure indicator	LED		
	Coolant temperature indicator	LED		
	MIL	LED		
	ABS indicator	LED		
Fuse	Main fuse	30 A		
	FI fuse	20 A		
	Sub fuse	10 A x 6, 20 A x 1, 30 A x 2		
ECT sensor	50°C (122°F)	6.8 – 7.4 kΩ		
resistance	80°C (176°F)	2.1 – 2.6 kΩ		
	120°C (248°F)	0.6 ~ 0.7 kΩ		

## STANDARD TORQUE VALUES

FASTENER TYPE	TORQUE N·m (kgf·m, lbf·ft)	FASTENER TYPE	TORQUE N·m (kgf·m, lbf·ft)
5 mm bolt and nut	5.2 (0.5, 3.8)	5 mm screw	4.2 (0.4, 3.1)
6 mm bolt and nut	10 (1.0, 7)	6 mm screw	9 (0.9, 6.6)
8 mm bolt and nut	22 (2.2, 16)	6 mm flange bolt (8 mm head, small flange)	9 (0.9, 6.6)
10 mm bolt and nut	34 (3.5, 25)	6 mm flange bolt (8 mm head, large flange)	12 (1.2, 9)
12 mm bolt and nut	55 (5.6, 41)	6 mm flange bolt (10 mm head) and nut	12 (1.2, 9)
		8 mm flange bolt and nut	27 (2.8, 20)
		10 mm flange bolt and nut	39 (4.0, 29)

## **ENGINE & FRAME TORQUE VALUES**

- Torque specifications listed below are for important fasteners.
  Others should be tightened to standard torque values listed above.

#### **ENGINE**

#### FRAME/BODY PANELS/EXHAUST SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Left crankcase rear cover socket bolt	1	6	10 (1.0, 7)	
Exhaust pipe joint stud bolt	4	8	_	See page 2-12
Over head cover socket bolt	8	6	10 (1.0, 7)	

#### MAINTENANCE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Spark plug	4	12	18 (1.8, 13)	
Timing hole cap	1	14	10 (1.0, 7)	Apply grease to the threads
Crankshaft hole cap	1	30	15 (1.5, 11)	Apply grease to the threads
Valve adjusting screw lock nut	6	7	23 (2.3, 17)	Apply engine oil to the threads and seating surface
Engine oil filter cartridge	1	20	26 (2.7, 19)	Apply engine oil to the threads
Oil filter boss (crankcase side)	1	20	18 (1.8, 13)	Apply locking agent to the threads
Engine oil drain bolt	1	14	29 (3.0, 21)	
Alternator cover socket bolt	3	6	10 (1.0, 7)	

#### **LUBRICATION SYSTEM**

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
EOP switch	1	PT 1/8	12 (1.2, 9)	Apply sealant to the threads
EOP switch terminal screw	1	4	1.9 (0.2, 1.4)	
Oil pump assembly bolt	3	6	13 (1.3, 10)	

#### **FUEL SYSTEM (PGM-FI)**

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
PAIR check valve cover bolt	4	5	7 (0.7, 5.2)	
Insulator band screw (Throttle body side) Insulator band screw (Intake manifold	1	_	_	See page 5-53
side)	1	_	- -	See page 5-58
Sensor unit torx screw	3	5	3.4 (0.3, 2.5)	
Fuel injector mounting bolt	2	5	5.1 (0.5, 3.8)	
IACV set plate torx screw	2	5	2.1 (0.2, 1.5)	
Throttle cable guide screw	2	5	3.4 (0.3, 2.5)	
ECT sensor	1	12	24.5 (2.5, 18)	

#### COOLING SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Water pump cover bolt	5	6	13 (1.3, 10)	

#### CYLINDER HEAD/VALVE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Cylinder head cover bolt	4	6	10 (1.0, 7)	
Cylinder head bolt	4	8	23 (2.3, 17)	Apply engine oil to the threads and seating surface
Cylinder head nut	8	10	47 (4.8, 35)	Apply engine oil to the threads and seating surface
Cam sprocket bolt	4	7	23 (2.3, 17)	Apply locking agent to the threads
Cam chain tensioner bolt	4	6	10 (1.0, 7)	See page 8-24
Camshaft holder bolt	6	8	23 (2.3, 17)	
Camshaft holder nut	4	8	23 (2.3, 17)	

#### CYLINDER/PISTON

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Cylinder stud bolt	2	8		See page 9-8
Cylinder stud bolt	6	10	_	See page 9-8
Cylinder stud bolt	2	12	-	See page 9-8

#### CLUTCH/GEARSHIFT LINKAGE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Clutch lifter plate bolt	4	6	12 (1.2, 9)	
Clutch center lock nut	1	18	128 (13.1, 94)	Lock nut; replace with a new one and stake Apply engine oil to the threads and seating surface
Oil pump driven sprocket bolt	1	6	15 (1.5, 11)	Apply locking agent to the threads
Clutch cover socket bolt	5	6	10 (1.0, 7)	
Primary drive gear bolt	1	12	88 (9.0, 65)	Apply engine oil to the threads and seating surface
Gearshift spindle return spring pin Gearshift spindle oil seal stopper plate	1	8	23 (2.3, 17)	
bolt	1	6	13 (1.3, 10)	

#### ALTERNATOR/STARTER CLUTCH

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Flywheel bolt	1	12	128 (13.1, 94)	Left hand threads Apply engine oil to the threads and seating surface
Stator socket bolt	3	6	12 (1.2, 9)	Apply locking agent to the threads
Starter one-way clutch outer socket bolt	6	8	30 (3.1, 22)	Apply locking agent to the threads
Stator wire holder socket bolt	1	6	12 (1.2, 9)	Apply locking agent to the threads

#### CRANKSHAFT/TRANSMISSION

ITEM	Q'TY	THREAD	TORQUE	REMARKS
O to a to a lit	4.5	DIA. (mm)	N·m (kgf·m, lbf·ft)	
Crankcase bolt	15	8	23 (2.3, 17)	
Gearshift cam plate bolt	1	6	12 (1.2, 9)	Apply locking agent to the threads
Crankpin bearing cap nut	4	8	33 (3.4, 24)	Apply engine oil to the threads and seating surface
Output gear case mounting bolt Output drive gear assembly mounting	3	8	31 (3.2, 23)	Apply sealant to the threads
bolt	2	8	31 (3.2, 23)	Apply engine oil to the threads and seating surface
Output driven gear assembly mounting socket bolt	4	8	31 (3.2, 23)	Apply engine oil to the threads and seating surface
Output drive gear bearing lock nut				
(inner)	1	30	73 (7.4, 54)	Lock nut; replace with a new one and stake Apply engine oil to the threads and seating surface
(outer)	1	64	98 (10.0, 72)	Lock nut; replace with a new one and stake Apply engine oil to the threads and seating surface
Output driven gear bearing lock nut				3
(inner)	1	30	73 (7.4, 54)	Lock nut; replace with a new one and stake Apply engine oil to the threads and seating surface
(outer)	1	64	98 (10.0, 72)	Lock nut; replace with a new one and stake Apply engine oil to the threads and seating surface
Output drive gear shaft bolt	1	10	49 (5.0, 36)	

#### **ELECTRIC STARTER**

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Starter motor cable terminal nut	1	6	10 (1.0, 7)	
Starter motor assembly bolt	2	5	4.9 (0.5, 3.6)	
Negative brush screw	1	5	3.7 (0.4, 2.7)	

#### LIGHTS/METERS/SWITCHES

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Neutral switch	1	10	12 (1.2, 9)	
VS sensor mounting bolt	1	6	9.8 (1.0, 7.2)	

#### **FRAME**

#### FRAME/BODY PANELS/EXHAUST SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Seat mounting socket bolt	2	8	26 (2.7, 19)	
Grab rail mounting bolt	6	10	64 (6.5, 47)	
Exhaust pipe joint nut	4	8	25 (2.5, 18)	
Muffler stay mounting bolt	4	8	44 (4.5, 32)	
Muffler mounting nut	2	10	44 (4.5, 32)	
Muffler bracket bolt	2	8	27 (2.8, 20)	

#### MAINTENANCE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Air cleaner cover socket bolt	5	5	1.5 (0.2, 1.1)	
Final drive oil filler cap	1	30	12 (1.2, 9)	
Final drive oil drain bolt	1	8	12 (1.2, 9)	

#### FUEL SYSTEM (PGM-FI)

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Fuel tank mounting bolt	1	8	27 (2.8, 20)	
Air cleaner chamber mounting screw Air cleaner chamber connecting tube	1	5	1.1 (0.1, 0.8)	
band screw	1	4	0.7 (0.1, 0.5)	
O <sub>2</sub> sensor	2	18	44 (4.5, 32)	

#### COOLING SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Fan motor mounting bolt	3	5	5.1 (0.5, 3.8)	
Cooling fan mounting nut	1	5	2.7 (0.3, 2.0)	Apply locking agent to the threads
Radiator filler mounting bolt	2	6	10 (1.0, 7)	
Thermostat housing cover bolt	2	6	10 (1.0, 7)	
Water hose band screw	14	_	_	See page 6-10
Fan motor assembly mounting bolt	3	6	8.4 (0.9, 6.2)	

#### **ENGINE REMOVAL/INSTALLATION**

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Engine mounting nut	4	10	54 (5.5, 40)	
Engine hanger plate bolt	8	8	26 (2.7, 19)	
Main footpeg bracket mounting bolt	3	10	39 (4.0, 29)	
Main footpeg bracket mounting nut	1	10	39 (4.0, 29)	
Gearshift arm pinch bolt	1	6	12 (1.2, 9)	

#### CLUTCH/GEARSHIFT LINKAGE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Gearshift pedal pivot bolt	1	10	39 (4.0, 29)	

#### FINAL DRIVE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Pinion retainer	1	64	108 (11.0, 80)	
Pinion retainer lock tab bolt	1	6	10 (1.0, 7)	
Pinion joint nut	1	16	108 (11.0, 80)	Apply locking agent to the threads
Dust guard plate bolt	1	6	10 (1.0, 7)	
Final gear case cover bolt	2	10	47 (4.8, 35)	Apply locking agent to the threads
Final gear case cover bolt	6	8	25 (2.5, 18)	
Final gear case assembly mounting nut	4	10	64 (6.5, 47)	
Final gear case stud bolt	4	10	-	See page 13-22
Rear shock absorber lower mounting				
bolt (left side)	1	8	22 (2.2, 16)	

#### FRONT WHEEL/SUSPENSION/STEERING

ITEM	Q'TY	THREAD	TORQUE	REMARKS
		DIA. (mm)	N·m (kgf·m, lbf·ft)	, (2.11) 11 (1)
Clutch lever pivot bolt	1	6	1 (0.1, 0.7)	
Clutch lever pivot nut	1	6	6 (0.6, 4.4)	
Handlebar upper holder bolt	4	8	23 (2.3, 17)	
Handlebar lower holder nut	2	8	23 (2.3, 17)	
Front brake disc bolt	6	8	42 (4.3, 31)	ALOC bolt; replace with a new
Spoke	52	BC4	4.2 (0.4, 3.1)	one
Front axle bolt	1	14	, ,	
	,	8	59 (6.0, 44)	
Front axle pinch bolt	2		22 (2.2, 16)	
Fork center socket bolt	2	10	29.5 (3.0, 22)	Apply locking agent to the threads
Fork cap	2	38	22.1 (2.3, 16)	
Front fork cover bolt (VT750C2B)	2	6	12 (1.2, 9)	
·	2	8	26 (2.7, 19)	
Tire valve nut	1	8V1	4 (0.4, 3.0)	
Fork top bridge pinch bolt (VT750CS)	2	8	22 (2.2, 16)	
Fork top bridge pinch bolt (VT750C2B/C2S)	2	8	27 (2.8, 20)	
Fork bottom bridge pinch bolt	2	10	49 (5.0, 36)	
Steering top thread	1	26		See page 14-42
Steering top thread lock nut	1	26	_	See page 14-43
Steering stem nut	1	24	103 (10.5, 76)	

#### REAR WHEEL/BRAKE/SUSPENSION

ITEM	QTY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Spoke	52	BC4	4.2 (0.4, 3.1)	
Tire valve nut	1	8V1	4 (0.4, 3.0)	
Rear brake disc bolt (VT750C2S)	6	8	42 (4.3, 31)	ALOC bolt; replace with a new one
Rear axle nut	1	18	88 (9.0, 65)	U-nut
Rear axle pinch bolt	1	8	27 (2.8, 20)	
Rear brake stopper arm nut (VT750C2F/C2B)	1	8	22 (2.2, 16)	
Rear brake arm pinch bolt (VT750C2F/C2B)	1	8	26 (2.7, 19)	
Rear shock absorber upper mounting bolt Rear shock absorber lower mounting	2	8	26 (2.7, 19)	
bolt (right side)	1	10	34 (3.5, 25)	}
Stopper plate bolt	5	6	20 (2.0, 15)	ALOC bolt; replace with a new one
Swingarm left pivot bolt	1	30	103 (10.5, 76)	
Swingarm right pivot bolt	1	30		See page 15-32
Swingarm right pivot bolt lock nut	11	30	103 (10.5, 76)	

#### HYDRAULIC BRAKE (VT750C2F/C2B)

ITEM	Q'TY	THREAD	TORQUE	REMARKS
I I E (A)	QII	DIA. (mm)	N·m (kgf·m, lbf·ft)	REWARKS
Brake caliper bleed valve	1	8	5.5 (0.6, 4.1)	
Front master cylinder reservoir cap				
screw	2	4	1.5 (0.2, 1.1)	
Brake pad pin	1	10	18 (1.8, 13)	
Brake pad pin plug	1	10	2.5 (0.3, 1.8)	
Brake hose oil bolt	2	10	34 (3.5, 25)	
Brake lever pivot bolt	1	6	1 (0.1, 0.7)	
Brake lever pivot nut	1	6	6 (0.6, 4.4)	
Front brake light switch screw	1	4	1.2 (0.1, 0.9)	
Front master cylinder holder bolt	2	6	12 (1.2, 9)	
Front brake caliper bracket pin	1	8	12 (1.2, 9)	Apply locking agent to the threads
Front brake caliper pin	1	8	27 (2.8, 20)	Apply locking agent to the threads
Front brake caliper mounting bolt	2	8	30 (3.1, 22)	ALOC bolt; replace with a new one

#### HYDRAULIC BRAKE (VT750C2S)

ITEM	Q'TY	THREAD	TORQUE	REMARKS
	QII	DIA. (mm)	N·m (kgf·m, lbf·ft)	REMARKS
Front brake caliper bleed valve	2	8	5.5 (0.6, 4.1)	
Front master cylinder reservoir cap				
screw	2	4	1.5 (0.2, 1.1)	
Front brake pad pin	1	10	18 (1.8, 13)	
Brake hose oil bolt	2	10	34 (3.5, 25)	
Brake lever pivot bolt	1	6	1 (0.1, 0.7)	
Brake lever pivot nut	1	6	6 (0.6, 4.4)	
Front brake light switch screw	1	4	1.2 (0.1, 0.9)	
Front master cylinder holder bolt	2	6	12 (1.2, 9)	
Front brake caliper bracket pin	1	8	12 (1.2, 9)	Apply locking agent to the threads
Front brake caliper pin	1	8	27 (2.8, 20)	Apply locking agent to the threads
Front brake caliper mounting bolt	2	8	30 (3.1, 22)	ALOC bolt; replace with a new one
Rear caliper stopper pin bolt	1	18	69 (7.0, 51)	ALOC bolt; replace with a new one
Rear caliper pin bolt	2	10	45 (4.6, 33)	
Rear brake caliper bleed valve	2	8	5.5 (0.6, 4.1)	
Rear brake pad pin	1	10	18 (1.8, 13)	
Rear brake pad pin plug	1	10	2.5 (0.3, 1.8)	
Rear master cylinder reservoir cap screw	2	4	1.5 (0.2, 1.1)	
Rear master cylinder push rod lock nut	1	8	18 (1.8, 13)	

#### ABS (VT750C2S)

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Brake pipe joint nut	?	10	14 (1.4, 10)	Apply brake fluid to the threads

#### **BATTERY/CHARGING SYSTEM**

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Battery case cover screw	1	6	1 (0.1, 0.7)	

#### LIGHTS/METERS/SWITCHES

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Headlight unit mounting bolt	2	5	4.1 (0.4, 3.0)	
Brake/tail light mounting nut	3	6	6.3 (0.6, 4.6)	
Speedometer mounting socket bolt	2	6	10 (1.0, 7)	
Ignition switch mounting bolt	2	6	12 (1.2, 9)	
Ignition switch cover screw	1	4	1 (0.1, 0.7)	
Sidestand switch bolt	1	6	10 (1.0, 7)	ALOC bolt; replace with a new one
Fuel reserve sensor	1	18	23 (2.3, 17)	
Horn mounting bolt	1	8	21 (2.1, 15)	

#### **OTHERS**

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Sidestand pivot bolt	1	10	9 (0.9, 6.6)	Apply grease to the sliding sur- face
Sidestand pivot lock nut	1	10	30 (3.1, 22)	
Sidestand bracket bolt	2	10	49 (5.0, 36)	
Tool box screw	2	4	2 (0.2, 1.5)	

## **LUBRICATION & SEAL POINTS**

#### **ENGINE**

MATERIAL	LOCATION	REMARKS
Molybdenum disulfide	Camshaft lobes and journal surface	
oil (a mixture of 1/2 en-	Valve stem (valve guide sliding surface)	
gine oil and 1/2 molyb-	Rocker arm slipper surface	
denum disulfide grease)	Rocker arm shaft outer surface	
	Crankpin bearing thrust surface	
	Crankshaft main journals	
	Clutch outer guide outer surface	
	Transmission gear shift fork groove	
	Transmission bushing sliding surface	
	Connecting rod small end inner surface	
Engine oil	Piston outer surface	-
	Piston ring outer surface	
	Piston pin outer surface	
•	Primary drive gear bolt threads and seating surface	
	Flywheel bolt threads and seating surface	
	Starter one-way clutch sprag	
	Starter idle and reduction gear shaft outer surface	
	Clutch center lock nut threads and seating surface	
	Clutch lifter arm sliding surface of the right crankcase cover	
	Clutch lifter arm sliding surface and slit	
	Clutch discs and plates	
	Cylinder wall	
	Cylinder stud bolt threads	
	Valve adjusting screw lock nut threads and seating surface	
	Shift fork shaft whole surface	
	Crankpin bearing cap nut threads and seating surface	
	Output drive gear assembly mounting bolt threads and seating surface	
	Output driven gear assembly mounting socket bolt threads and seating surface	
	Output drive gear bearing lock nut (inner/outer) threads and seating surface	
	Output driven gear bearing lock nut (inner/outer) threads and seat-	
	ing surface	
	Cylinder head bolt/nut threads and seating surface	
	Transmission gear tooth	
	Engine oil filter cartridge threads	
	Crankshaft main journal bearing surface	
	Oil pipe seal	
	Injector seal ring	
	Each bearings rotating area	
	Each O-rings	
Multi-purpose grease	Crankshaft hole cap threads	
widili-purpose grease	Timing hole cap threads	
	Each oil seal lips	
Liquid sociont	EOP switch threads	Do not apply to the seal-
Liquid sealant (Three Bond 1207B or		ant to the head
equivalent)	Right and left crankcase mating surface	3 – 4 mm (0.1 – 0.2 in)
oquivalent/	Right crankcase cover mating surface	3 4 11111 (3.7 3.2 111)
	Left crankcase cover mating surface	
	Output gear case mounting bolt threads	

MATERIAL	LOCATION	REMARKS
Locking agent	Cam sprocket bolt threads	
	Starter one-way clutch outer socket bolt threads	
	Oil pump driven sprocket bolt threads	
	Final gear case stud bolt threads (gear case side)	
	Stator wire holder socket bolt threads	Coating width:
		6.5 ± 1 mm
		(0.26 ± 0.04 in)
	Gearshift cam plate bolt threads	Coating width:
		6.5 ± 1 mm
		(0.26 ± 0.04 in)
	Transmission bearing setting plate bolt threads	Coating width:
		6.5 ± 1 mm
		$(0.26 \pm 0.04 \text{ in})$
	Cam chain tensioner setting plate bolt threads	Coating width:
		6.5 ± 1 mm
	Stator socket bolt threads	(0.26 ± 0.04 in)
	Stator socker bolt tireads	Coating width:
		(0.26 ± 0.04 in)
	Oil filter boss crankcase side threads	Coating width:
	Oil litter boss cramodase side timeads	6.5 ± 1 mm
		$(0.26 \pm 0.04 \text{ in})$
	Left crankcase cover bolt threads (marked "△")	(5.25 2 5.5 1 11)
Pro Hondabond A, Pro	Cylinder head cover-to-gasket groove	
Honda Handgrip Ce-		
ment (U.S.A. only) or		
equivalent		


## FRAME


MATERIAL	LOCATION	REMARKS
Liquid sealant (Three Bond 1207B or equivalent)	Final gear case cover mating surface	
Multi-purpose grease	Sidestand pivot	Apply 1 g
Maid purpose grouse	Main step sliding area	7,669,19
	Pillion step sliding area	
	Throttle pipe flange groove and sliding surface	Spreading 0.2 – 0.3 g
	Clutch lever pivot bolt sliding surface	Spreading 0.2 – 0.3 g
	Gearshift spindle oil seal lips	
	Gearshift pedal dust seal lips	
	Front axle sliding surface	
	Shock absorber mount inner surface	
	Rear brake middle rod joint pivot and dust seal lips	Saranding 0.2 0.3 g
	Rear brake cam sliding surface	Spreading 0.2 – 0.3 g
	Brake shoe-to-anchor pin sliding surface	Spreading 0.5 – 1.0 g
	Brake pedal pivot sliding surface	
	Brake pedal dust seal lips	ľ.
	Rear brake joint pins	
	Front wheel dust seal lips	
	Final gear case O-ring	I C
II. a barad multi-ma	Final gear case oil seal lips	0.1.0
Urea based multi-pur-	Steering head bearings	Apply 3 – 5 g for each
pose grease with ex- treme pressure agent	Stanting hand handing dust and line	bearing
(example: EXCELITE	Steering head bearing dust seal lips	A
EP2 manufactured by	Swingarm pivot bearing needle rollers	Apply 1.0 - 1.5 g fo each bearing
KYODO YUSHI, Japan)	Swingerm pivet dust seel line	each bearing
or equivalent	Swingarm pivot dust seal lips	
Molybdenum disulfide	Output drive gear and damper cam splines	Apply 1 g
grease	Final drive shaft oil seal lip	Apply 0.5 g
	Final drive shaft splines (universal joint side)	Apply 1 g
	Final drive pinion joint splines	Apply 2 g
Molybdenum disulfide	Final driven flange (rear wheel hub mating surface)	Apply 0.5 - 1.0 g
paste	Final driven flange O-ring	
	Final gear case O-ring guide and driven flange joint surface	Apply 4 – 5 g
	Thrust washer and rear wheel hub end (final driven flange side)	Apply 2 – 3 g
Cable lubricant	Throttle cable outer inside	
	Clutch cable outer inside	
Pro Hondabond A, Pro	Handlebar grip inside	
Honda Handgrip Cement	Handlebar and throttle pipe outer surface (grip rubber contacting ar-	
(U.S.A. only) or equiva-	ea)	
lent		
Engine oil	Steering top threads	
	Rear brake cam felt seal	
Silicone grease	Brake lever pivot bolt sliding surface	Apply 0.1 g
	Brake lever-to-master piston contacting area	Apply 0.1 g
	Brake caliper and bracket pin boot inside	Apply 0.4 g
	Brake caliper dust seal	
DOT 4 brake fluid	Brake master piston and cups	
	Brake caliper piston and piston seals	
Pro Honda Suspension	Fork dust seal and oil seal lips	
Fluid SS-8 (10W)	Fork cap O-ring	
Locking agent	Pinion joint nut threads	
	Final gear case cover 10 mm bolt threads	
	Fork center socket bolt threads	
	Front brake caliper bracket pin threads	
	Front brake caliper pin threads	
	Final gear case stud bolt threads	
	Cooling fan mounting nut threads	


#### **CABLE & HARNESS ROUTING**


#### VT750C2F

VT750C2F type shown. VT750C2B and VT750C2S type illustrations that differ are shown later.

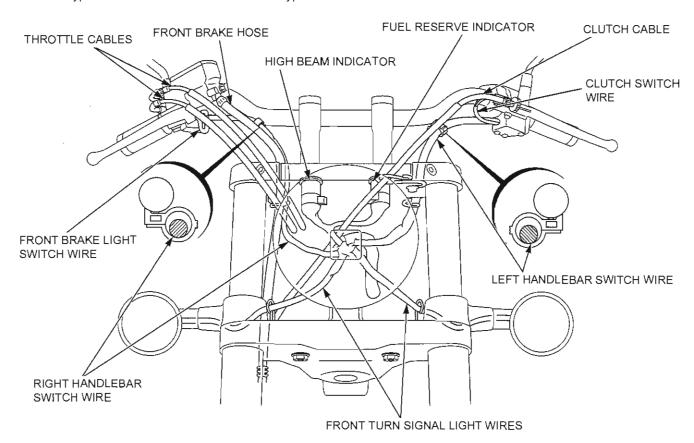


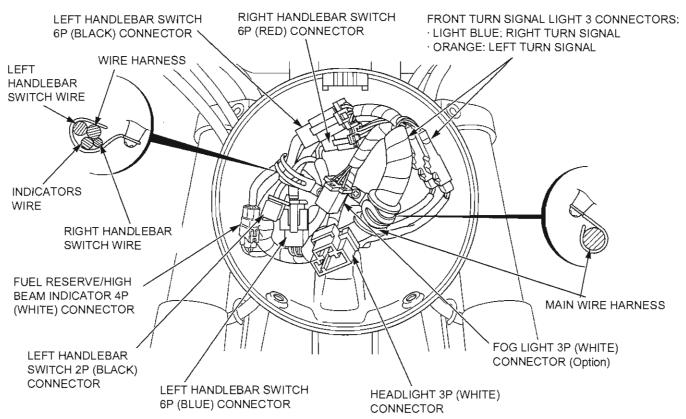

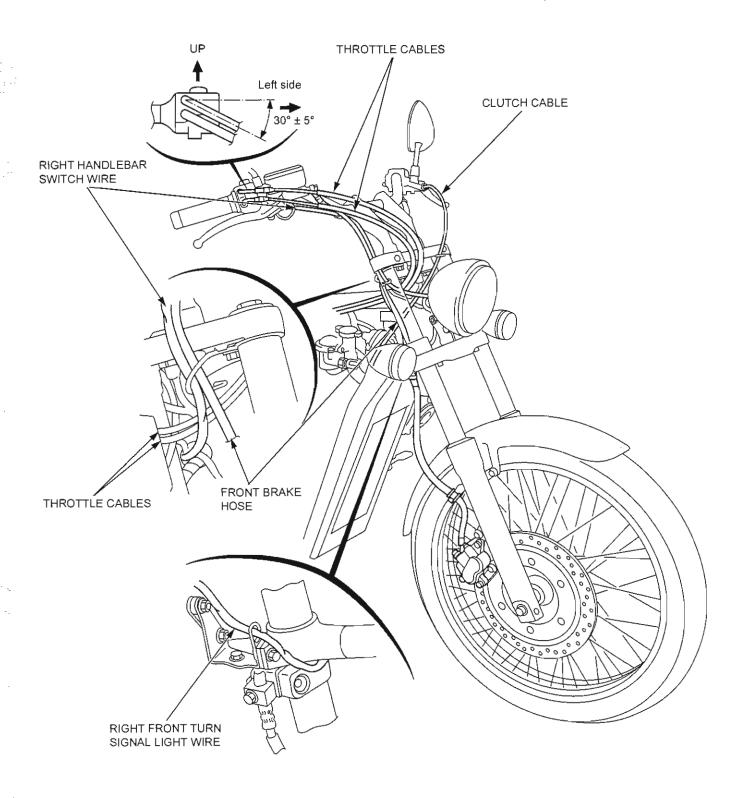

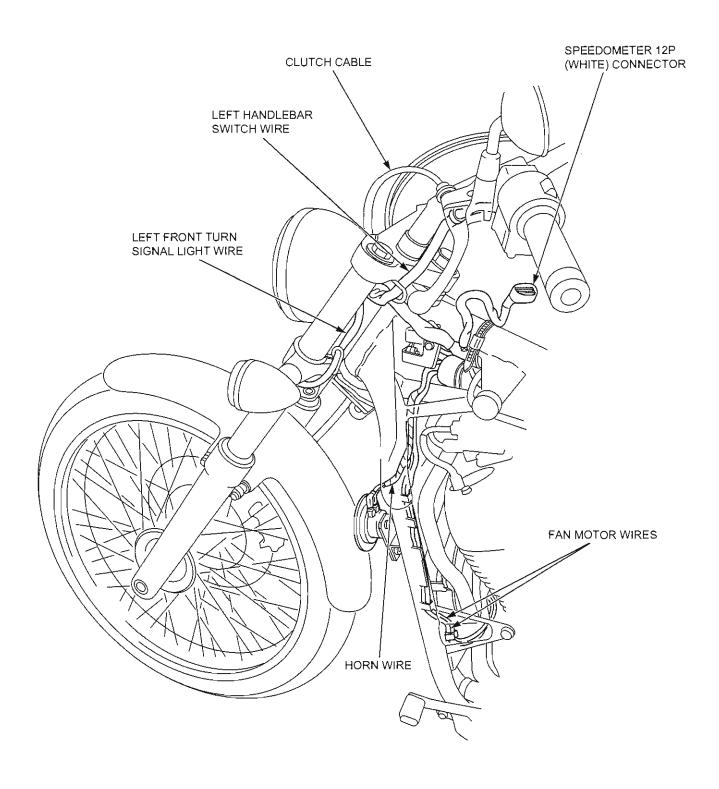


- (1) MAIN WIRE HARNESS
- (2) FUEL TANK BREATHER HOSE
- (3) SIPHON HOSE
- (4) BANK ANGLE SENSOR WIRE
- (5) THROTTLE CABLE

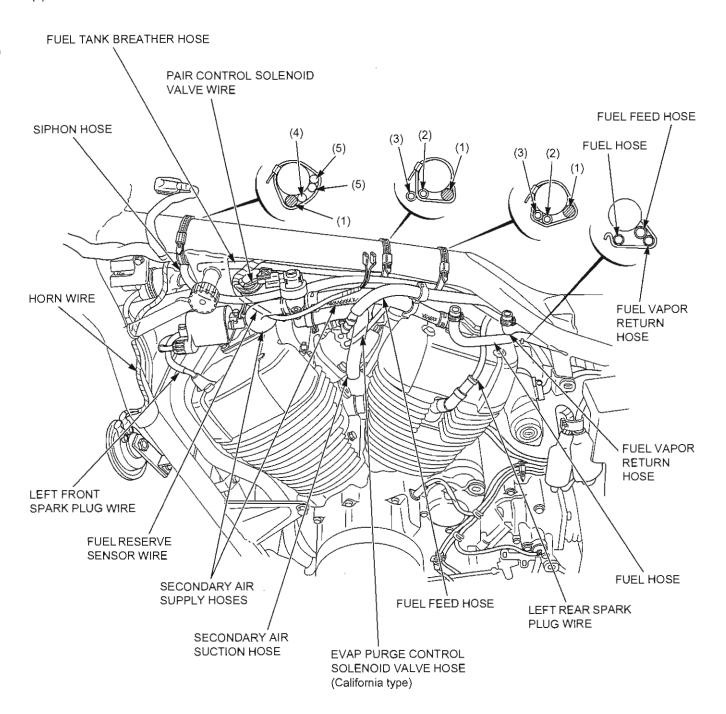



- (1) SIDESTAND SWITCH WIRE
- (2) IMMOBILIZER RECEIVER/IGNITION SWITCH WIRE
- (3) IGNITION SWITCH WIRE
- (4) ALTERNATOR WIRE
- (5) NEUTRAL/EOP SWITCH WIRE
- (6) VS SENSOR WIRE
- (7) IMMOBILIZER RECEIVER WIRE
- (8) REGULATOR/RECTIFIER WIRE
- (9) RELAY BOX WIRE
- (10) WIRE HARNESS of (1), (5), (6)


#### INSIDE BOOT CONNECTORS:


- · VS SENSOR 3P (WHITE)
- · SIDESTAND SWITCH 2P (GREEN)
- · NEUTRAL/EOP SWITCH 2P (BLACK)

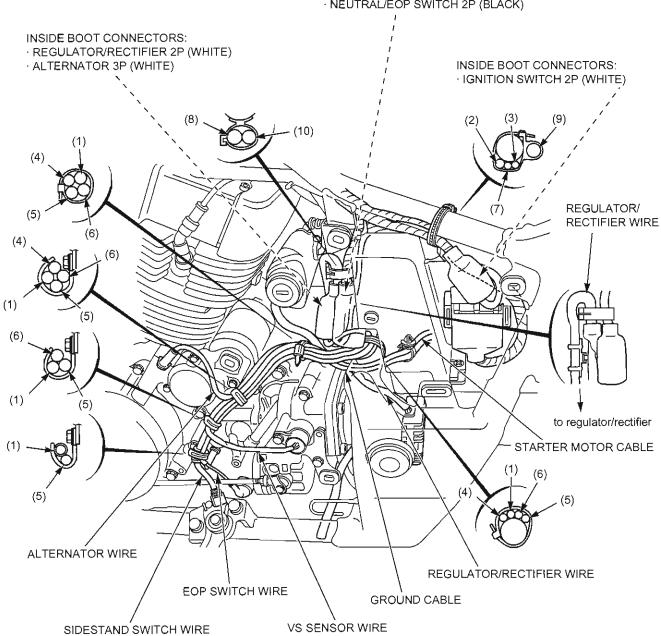


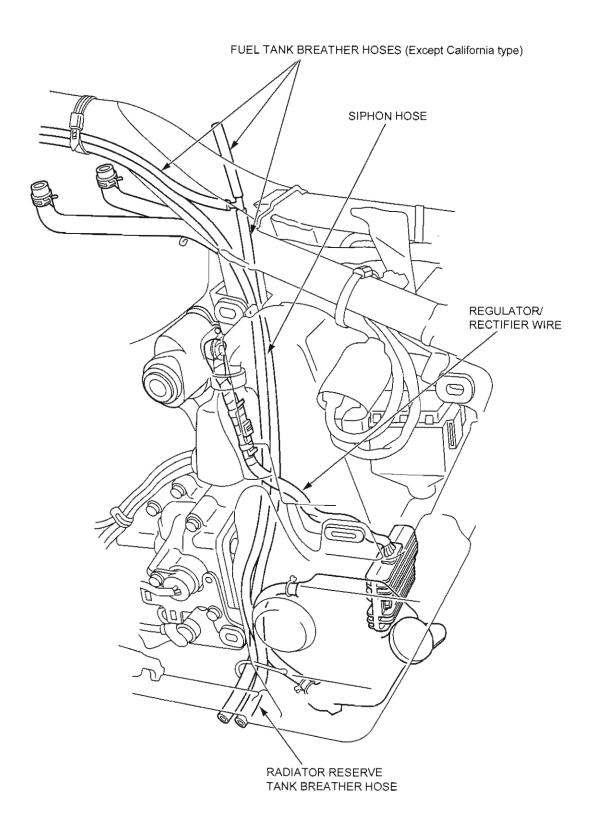

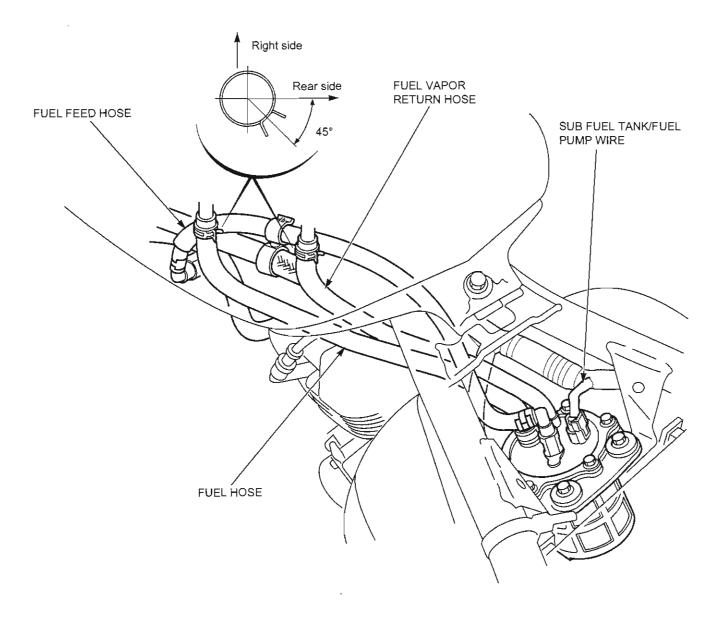


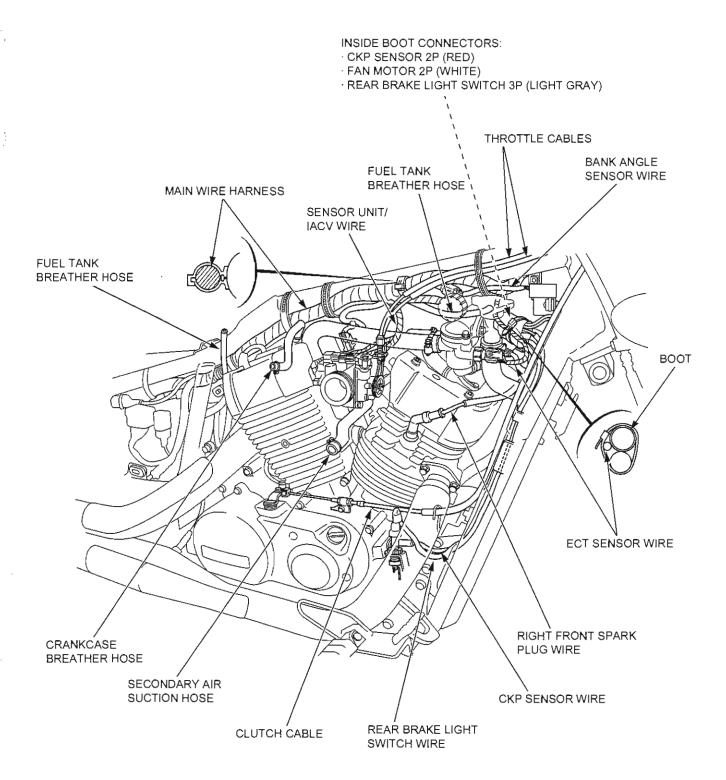


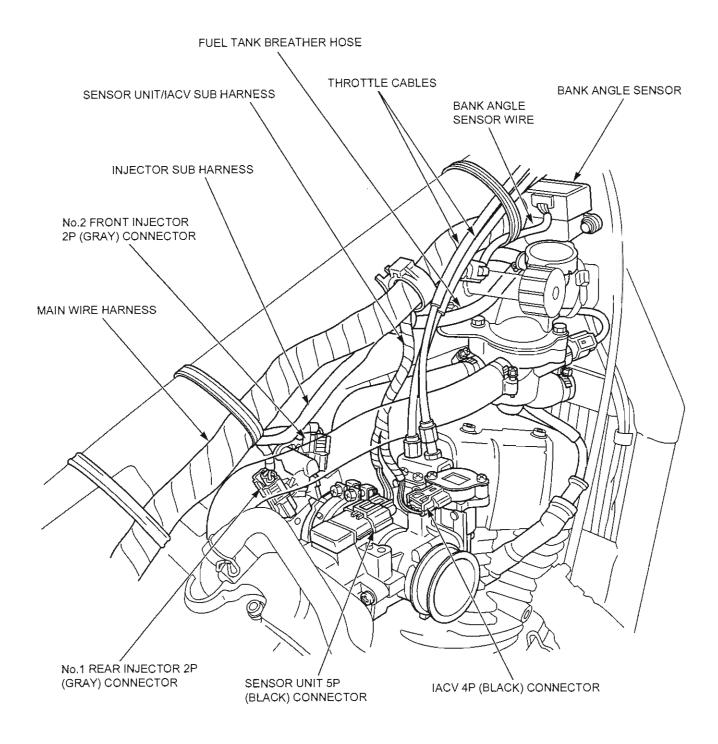


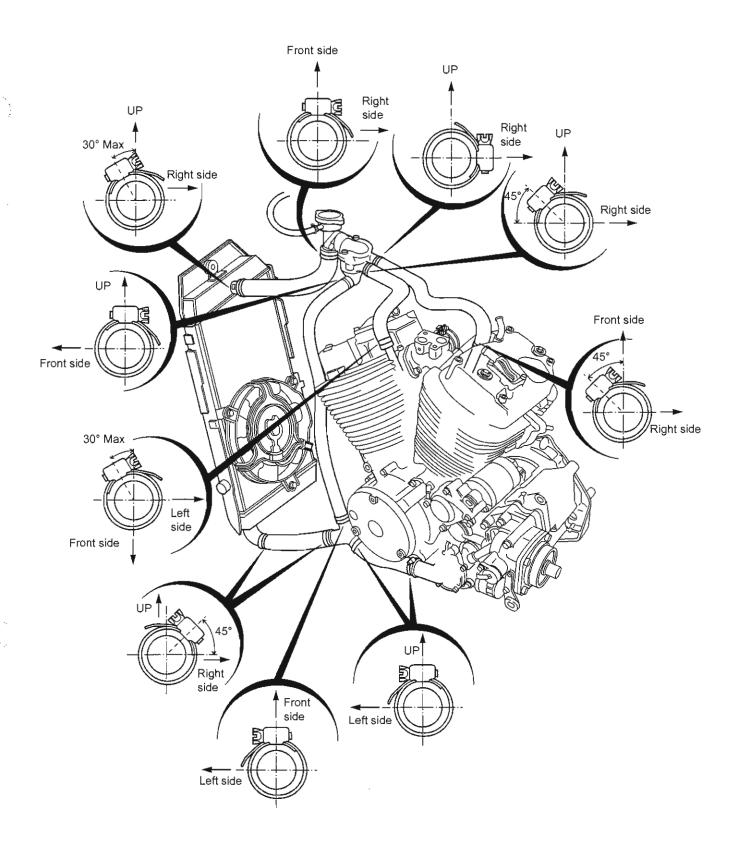


- (1) MAIN WIRE HARNESS
- (2) LEFT REAR SPARK PLUG WIRE
- (3) RIGHT REAR SPARK PLUG WIRE

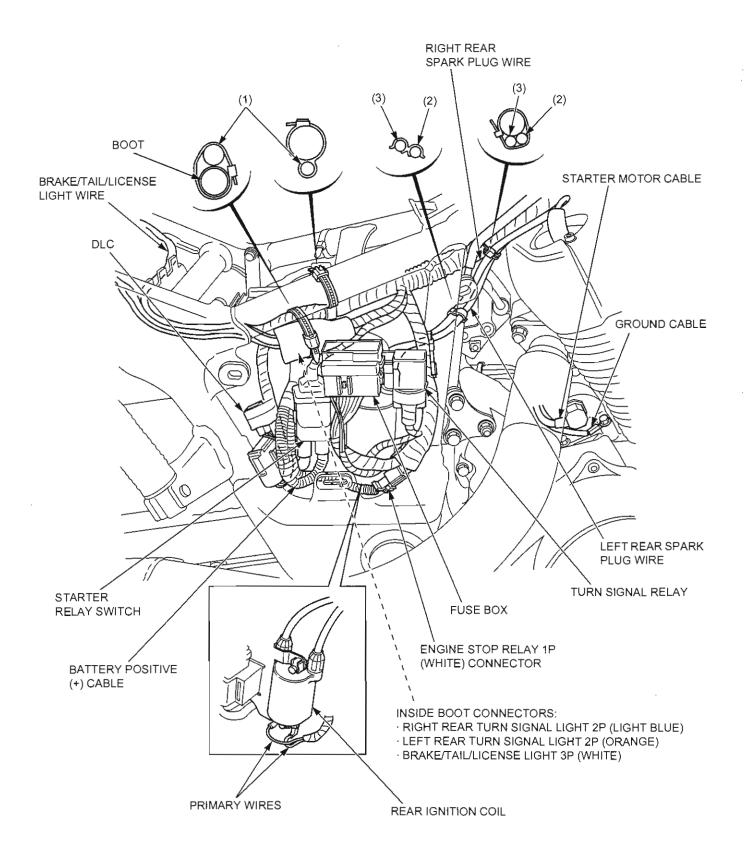


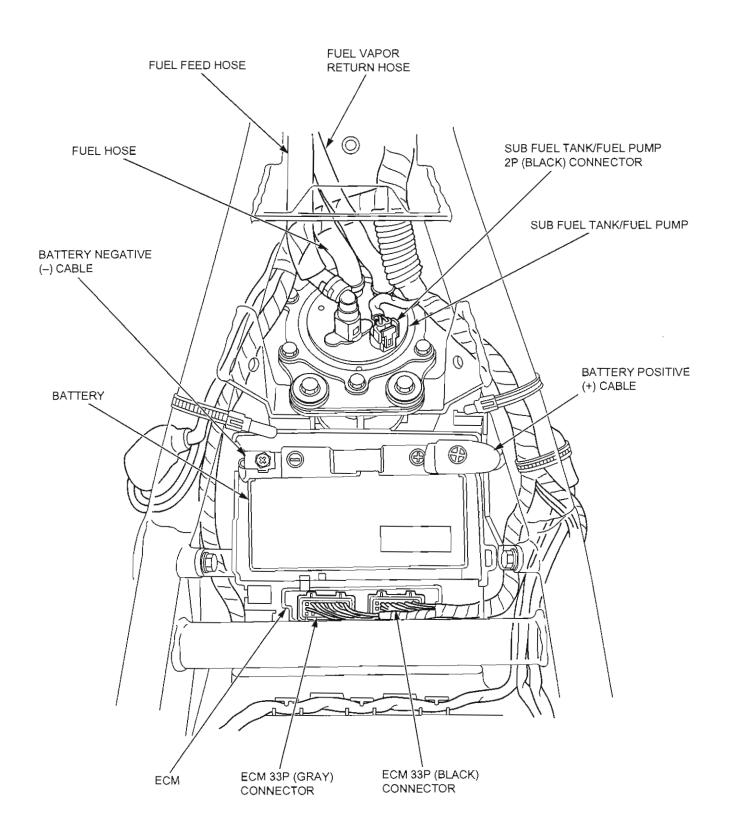


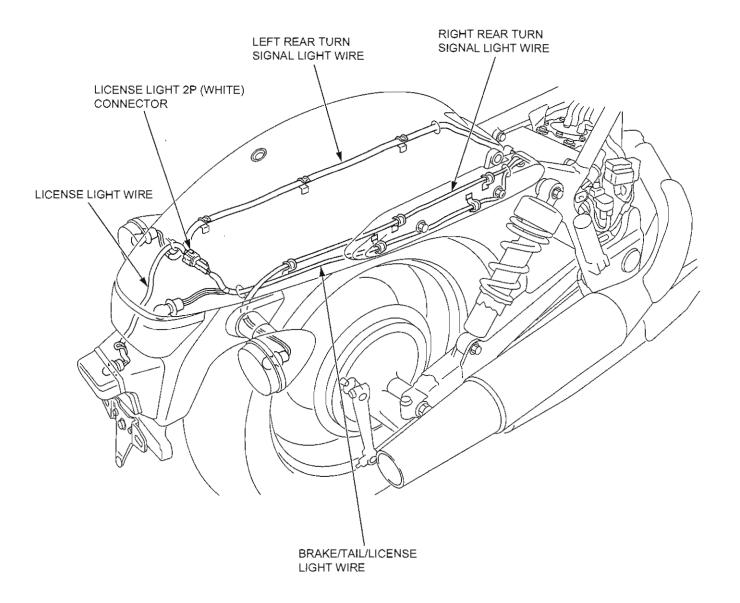



## VT750C2B

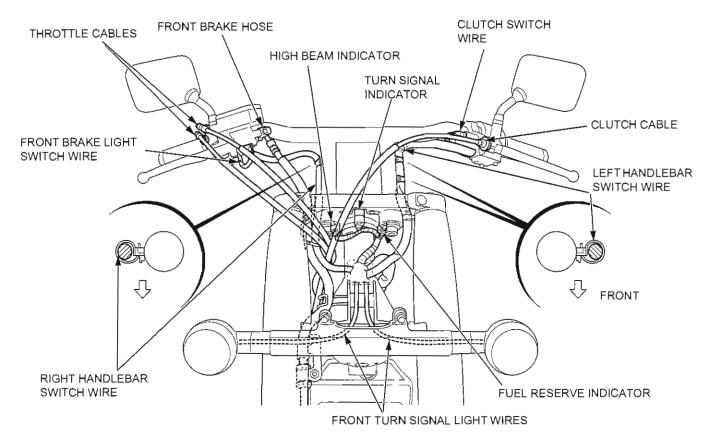

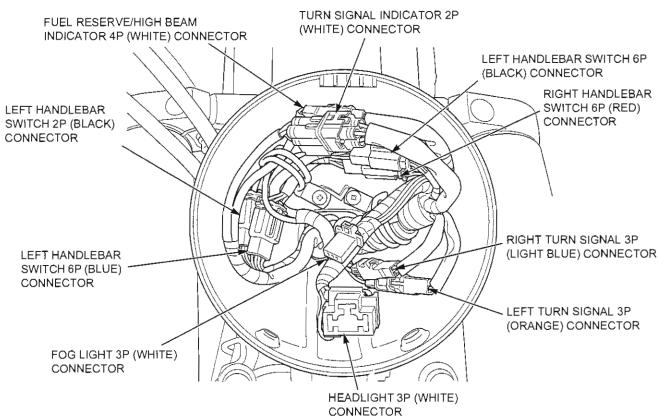


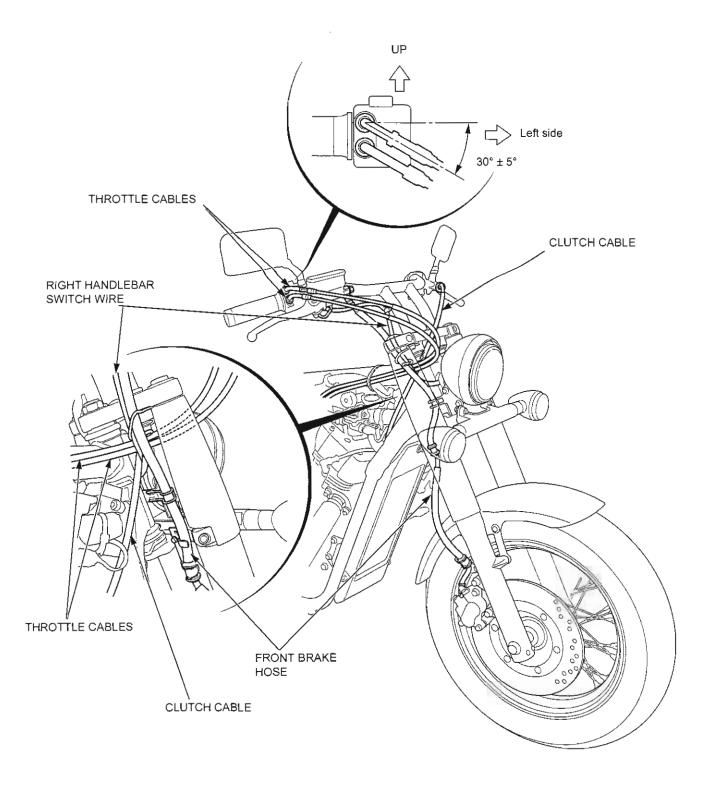


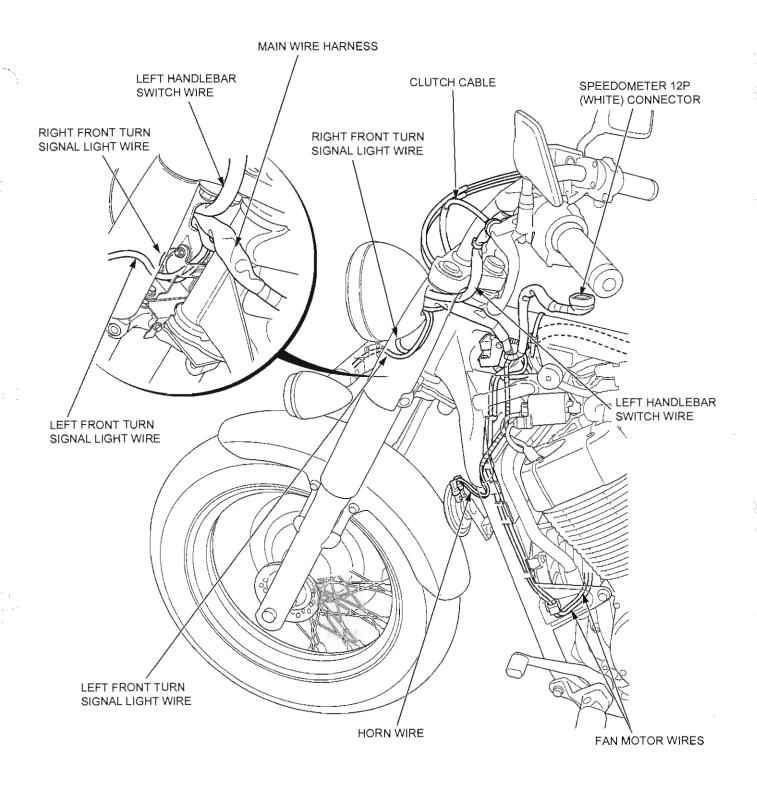

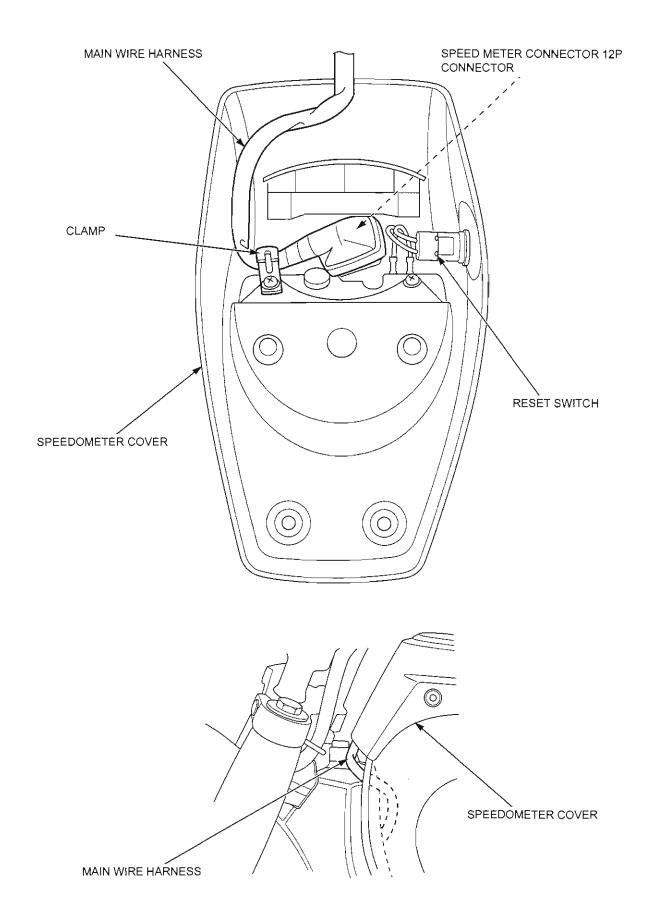



# VT750C2S

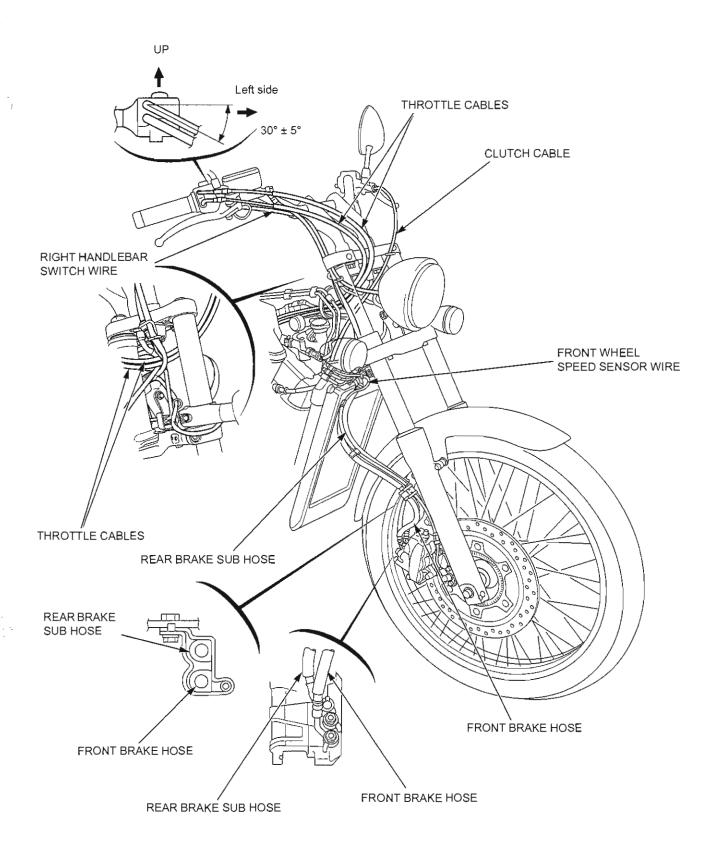


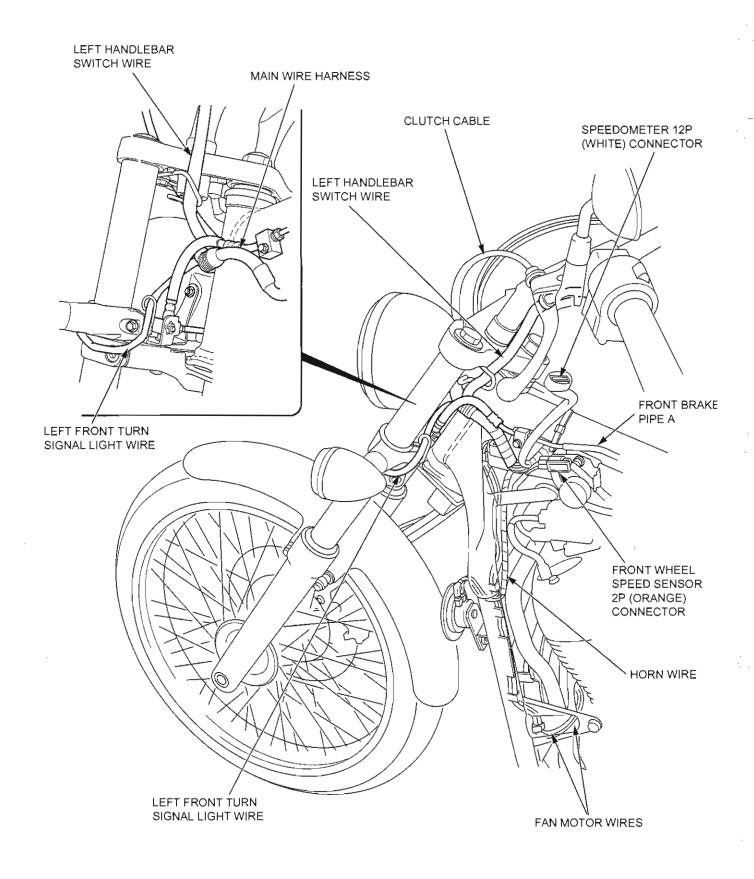



- (1) MAIN WIRE HARNESS
- (2) FUEL TANK BREATHER HOSE
- (3) SIPHON HOSE
- (4) BANK ANGLE SENSOR WIRE
- (5) THROTTLE CABLE

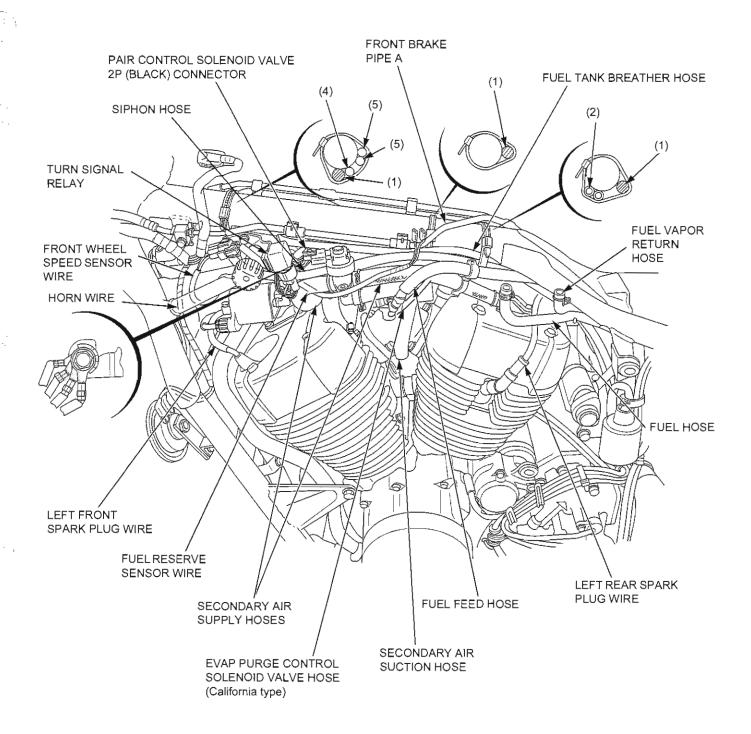


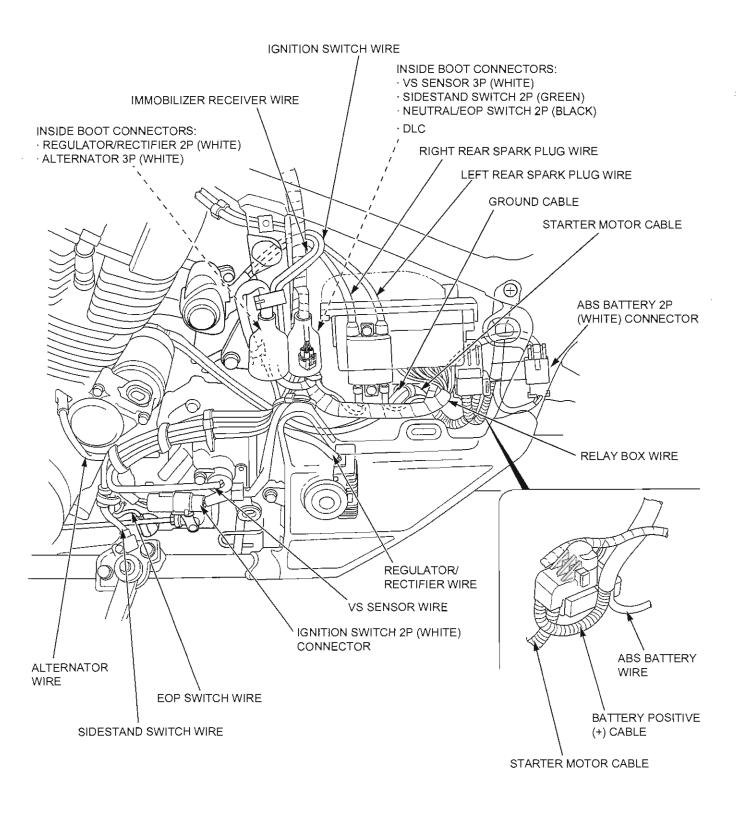


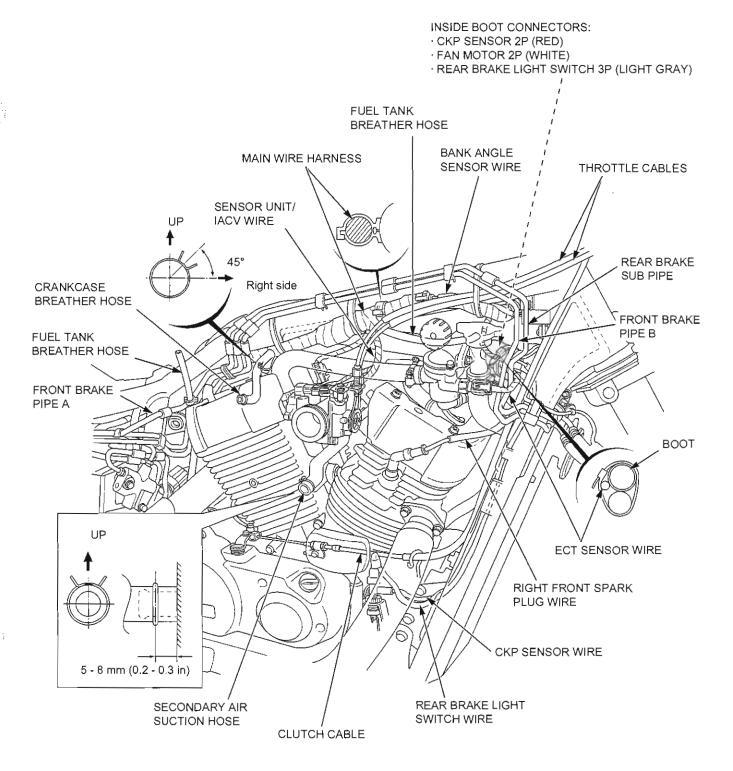


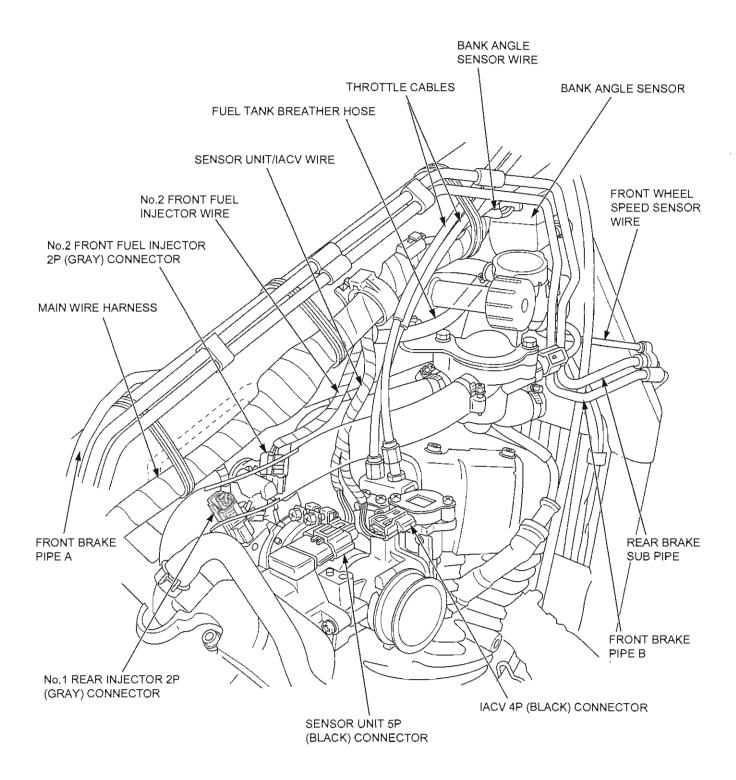

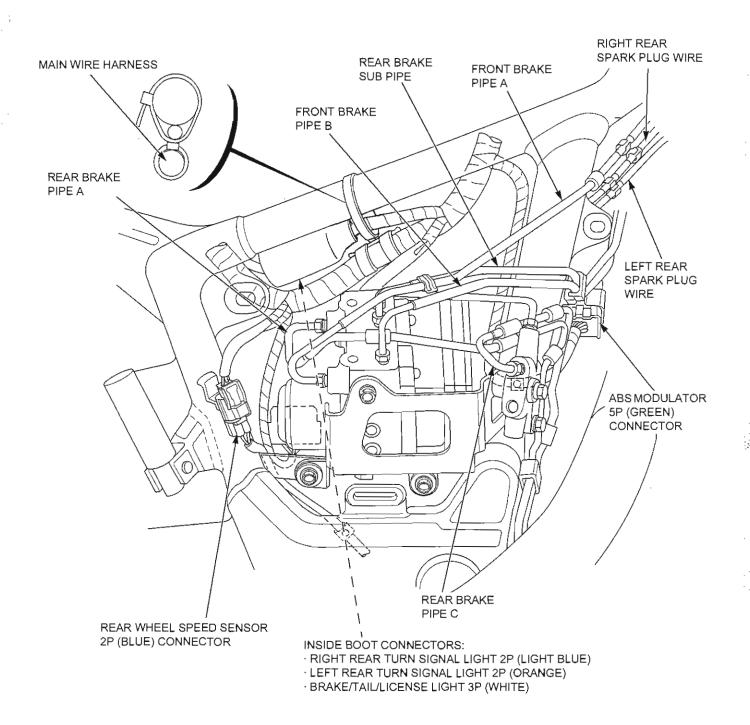


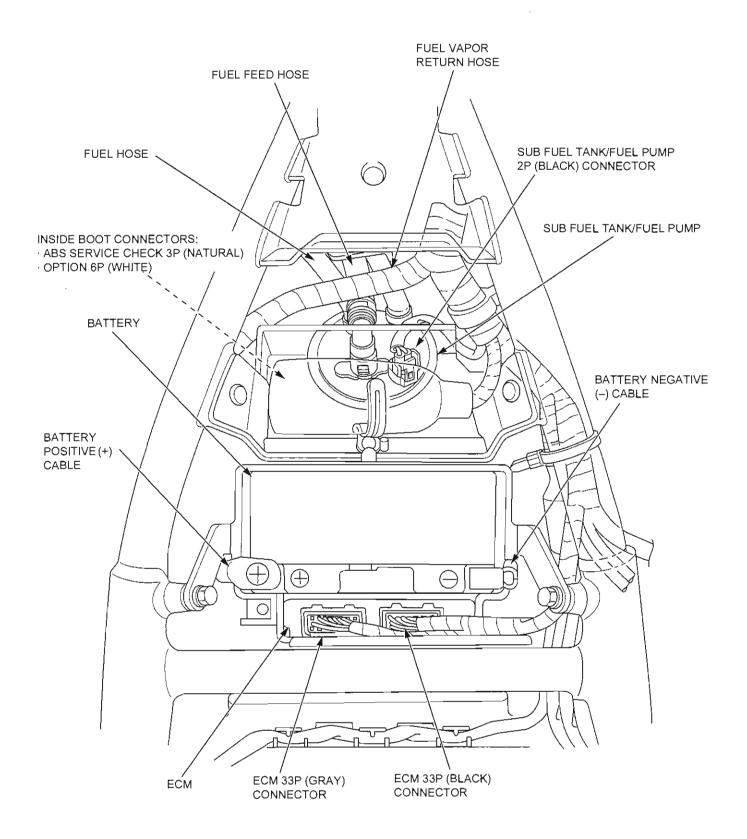

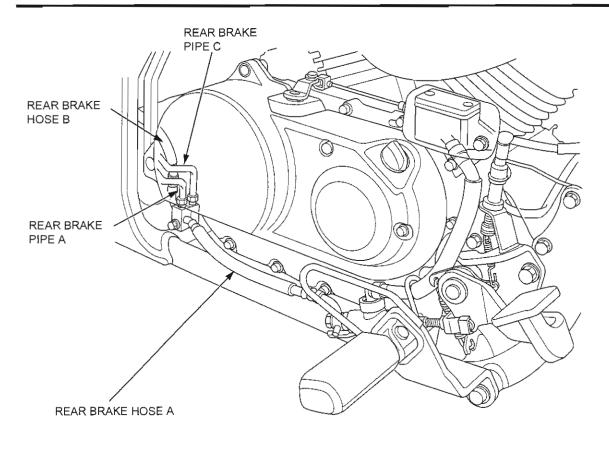

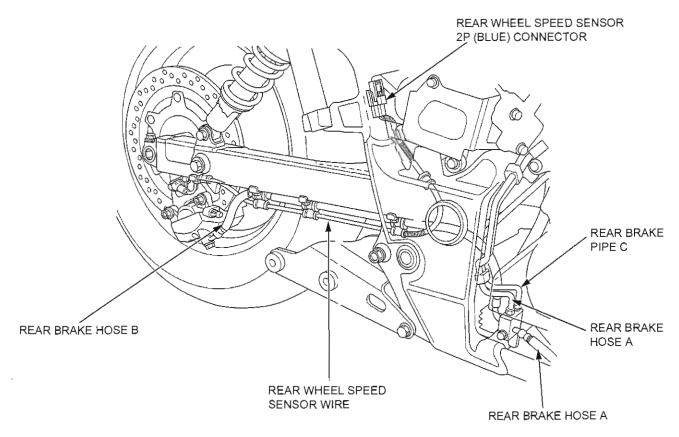

# **EVAP CONTROL SYSTEM (U.S.A. type only)**

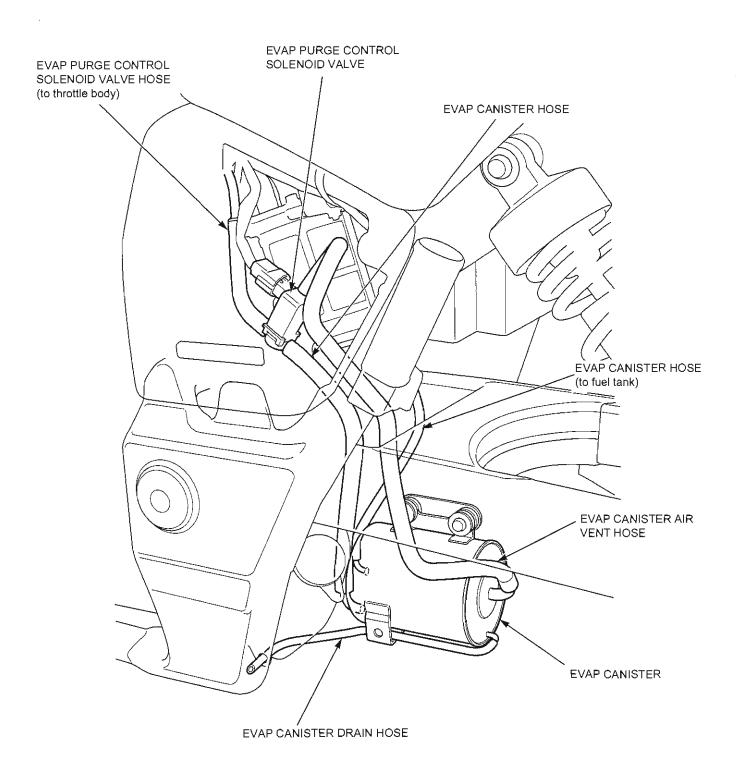

# **EMISSION CONTROL SYSTEMS**

## **EXHAUST EMISSION REQUIREMENT**

The U.S.Environmental Protection Agency (EPA), California Air resources Board (CARB) and Transport Canada require manufactures to certify that their motorcycles comply with applicable exhaust emissions standards during their useful life, when operated and maintained according to the instructions provided.

#### NOISE EMISSION REQUIREMENT

The EPA also requires that motorcycles built after January 1, 1983 comply with applicable noise emission standards for one year or 6,000 km (3,730 miles) after the time of sale to the ultimate purchaser, when operated and maintained according to the instructions provided.

## WARRANTY COMPLIANCE

Compliance with the terms of the Distributor's Limited Warranty for Honda Motorcycle Emission Control System is necessary in order to keep the emission system warranty in effect.


#### SOURCE OF EMISSION

The combustion process produces carbon monoxide (CO), oxides of nitrogen (NOx) and hydrocarbons (HC). Control of carbon monoxide, oxides of nitrogen and hydrocarbons is very important because, under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but is toxic. Fuel evaporation also produces HC emissions.

Honda Motor Co., Ltd. utilizes various systems, to reduce carbon monoxide, oxides of nitrogen and hydrocarbons.

#### CRANKCASE EMISSION CONTROL SYSTEM

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and throttle body.

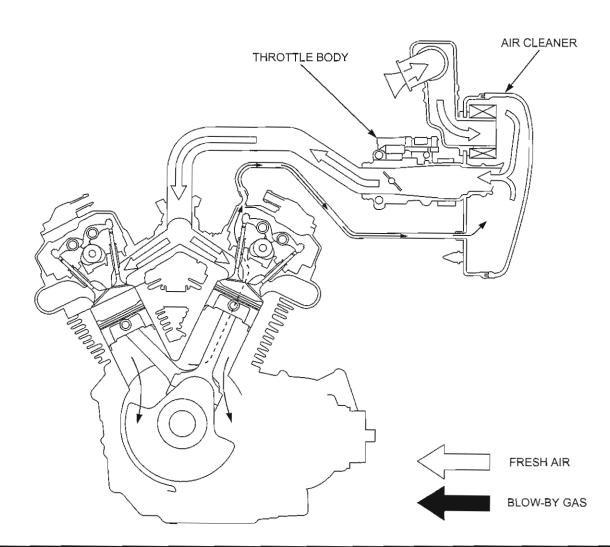

#### GENERAL INFORMATION

## **EXHAUST EMISSION CONTROL SYSTEM**

The exhaust emission control system is composed of a pulse secondary air supply system and an oxidation catalytic converter PGM-FI system.

No adjustment should be made except idle speed adjustment with the throttle stop screw. The exhaust emission control system is separate from the crankcase emission control system.


#### SECONDARY AIR SUPPLY SYSTEM

The pulse secondary air supply system introduces filtered air into the exhaust gases in the exhaust port. Fresh air is drawn into the exhaust port by the function of the PAIR (Pulse Secondary Air Injection) control solenoid valve.

This charge of fresh air promotes burning of the unburned exhaust gases and changes a considerable amount of hydrocarbons and carbon monoxide into relatively harmless carbon dioxide and water vapor.

The reed valve prevents reverse air flow through the system. The PAIR control solenoid valve is operated by the solenoid valve. The solenoid valve is controlled by the ECM, and the fresh air passage is opened/closed according to the running condition (ECT/IAT/TP/MAP sensor and engine revolution).

No adjustments to the secondary air supply system should be made, although periodic inspection of the components is recommended.

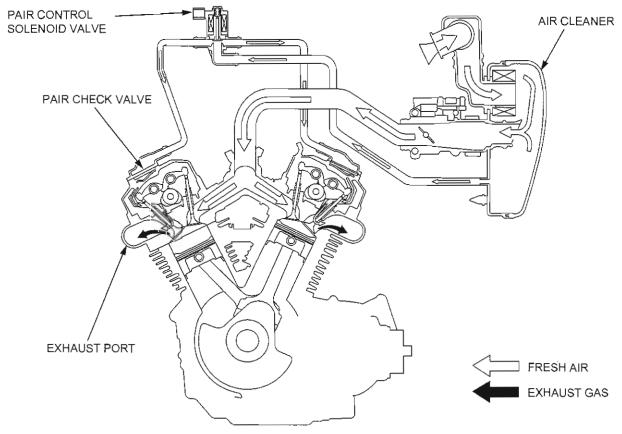


## **OXIDATION CATALYTIC CONVERTER**

This motorcycle is equipped with an oxidation catalytic converter.

The oxidation catalytic converter is in the exhaust system. Through chemical reactions, it converts HC and CO in the engine's exhaust to carbon dioxide (CO<sub>2</sub>) and water vapor.

## **EVAPORATIVE EMISSION CONTROL SYSTEM (U.S.A. TYPE)**

This model complies with California Air Resources Board (CARB) evaporative emission requirement. Fuel vapor from the fuel tank is routed into the evaporative emission (EVAP) canister where it is absorbed and stored while the engine is stopped. When the engine is running and the evaporative emission (EVAP) purge control solenoid valve is open, fuel vapor in the EVAP canister is drawn into the engine through the intake manifold.

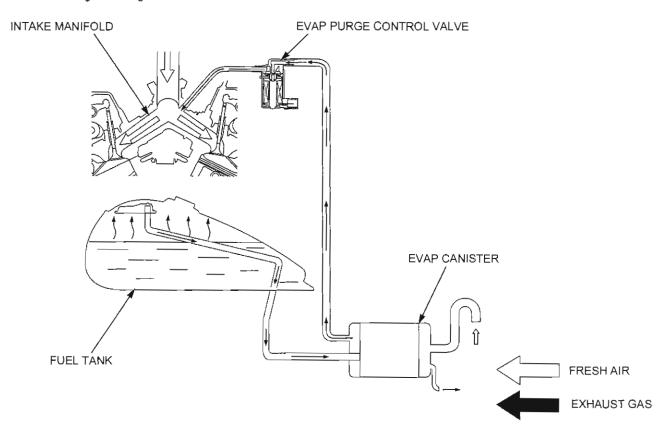

#### NOISE EMISSION CONTROL SYSTEM

TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED: U.S. Federal law prohibits, or Canadian provincial law may prohibit the following acts or the causing thereof: (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any vehicle for the purpose of noise control prior to its sale or delivery to the ultimate customer or while it is in use; (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW:

- Removal of, or puncturing of the muffler, baffles, header pipes or any other component which conducts exhaust gases.
- 2. Removal of, or puncturing of any part of the intake system.
- 3. Lack of proper maintenance.
- Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

#### FUEL PERMEATION EMISSION CONTROL SYSTEM

This motorcycle complies with the Fuel Permeation Emission control regulation of the U.S. Environmental Protection Agency (EPA), California Air Resources Board (CARB), and Environment Canada (EC). The fuel tank, fuel hoses, and fuel vapor charge hoses used on this motorcycle incorporate fuel permeation control technologies. Tampering with the fuel tank, fuel hoses, or fuel vapor charge hoses to reduce or defeat the effectiveness of the fuel permeation technologies is prohibited by federal regulations.

# МЕМО

## 2

SERVICE INFORMATION2-2	OVER HEAD COVER2-
TROUBLESHOOTING2-2	FRONT FENDER (VT750C2F/C2S)······2-
SEAT2-3	FRONT FENDER (VT750C2B)2-
SIDE COVER2-3	REAR FENDER2-
STEERING SIDE COVER2-4	EXHAUST SYSTEM2-
LEET CDANKCASE DEAD COVED	

2. FRAME/BODY PANELS/EXHAUST SYSTEM

## FRAME/BODY PANELS/EXHAUST SYSTEM

# SERVICE INFORMATION

## **GENERAL**

- · This section covers removal and installation of the body panels and exhaust system.
- · Serious bums may result if the exhaust system is not allowed to cool before components are removed or serviced.
- · Always replace the exhaust system gaskets with new ones after removing the exhaust system from the engine.
- When installing the exhaust system, loosely install all of the exhaust pipe fasteners. Always tighten the exhaust clamps first, then tighten the mounting fasteners.
- · Always inspect the exhaust system for leaks after installation.

## **TORQUE VALUES**

00 N (0 7 t f 40 ll- f (0)	
26 N·m (2.7 kgf·m, 19 lbf·ft)	
64 N·m (6.5 kgf·m, 47 lbf·ft)	
10 N·m (1.0 kgf·m, 7 lbf·ft)	
25 N·m (2.5 kgf·m, 18 ibf·ft)	
44 N·m (4.5 kgf·m, 32 lbf·ft)	
44 N·m (4.5 kgf·m, 32 lbf·ft)	
27 N·m (2.8 kgf·m, 20 lbf·ft)	
See page 2-12	
10 N·m (1.0 kgf·m, 7 lbf·ft)	

# **TROUBLESHOOTING**

#### Excessive exhaust noise

- · Broken exhaust system
- · Exhaust gas leak

#### Poor performance

- · Deformed exhaust system
- · Exhaust gas leaks
- · Clogged muffler

# **SEAT**

## **REMOVAL/INSTALLATION**


Remove the 8 mm socket bolts, 6 mm bolt, washer and seat by moving it rearward.

Install the seat by inserting its prong under the raised lip of the frame properly.

Install the washer, 6 mm bolt and tighten the 6 mm bolt securely.

Install and tighten the 8 mm socket bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

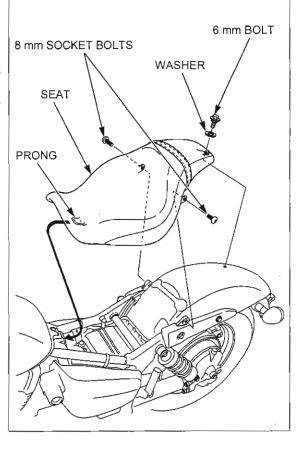


# SIDE COVER

# **REMOVAL/INSTALLATION**

Be careful not to damage the side cover bosses.

Remove the side cover by releasing its bosses from the frame grommets.

Install the side cover by inserting its bosses into the frame grommets.

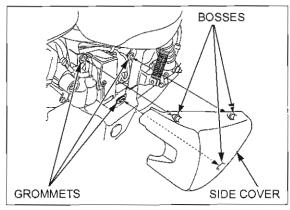

# STEERING SIDE COVER

## REMOVAL/INSTALLATION

Remove the speedometer assembly (page 21-15).

Remove the bolts.


Remove the retaining clip by sliding it rearward.

damage the boss and slot.

Be careful not to Remove the steering side covers by releasing the left cover boss from the right cover slot.

Installation is in the reverse order of removal.

After installation, check that the wire harness and cables do not interfere with handlebar rotation.

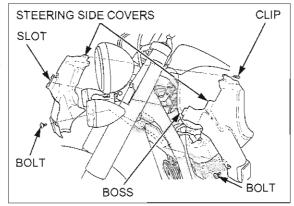

# LEFT CRANKCASE REAR COVER

## REMOVAL/INSTALLATION

Remove the B-clip and washer.


Remove the socket bolt and left crankcase rear cover by releasing its bosses from the grommets.

Check the B-clip for fatigue or damage, replace it if necessary.

Installation is in the reverse order of removal.

#### TORQUE:

Left crankcase rear cover socket bolt: 10 N·m (1.0 kgf·m, 7 lbf·ft)

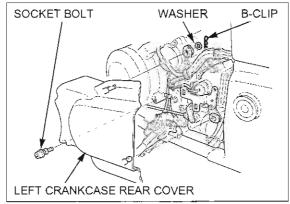

# **OVER HEAD COVER**

# **REMOVAL/INSTALLATION**


#### **FRONT**

Remove the following:

- Spark plug cap (page 3-7)
- Fuel tank (page 5-48)

Right side only: Remove the air cleaner housing (page 5-49).


Remove the socket bolts and front right over head cover.

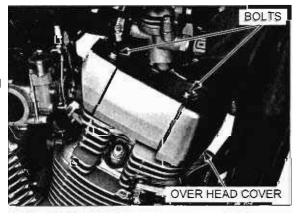

Remove the socket bolts and front left over head cover. Installation is in the reverse order of removal.

#### TORQUE:

Front right/left over head cover socket bolt: 10 N·m (1.0 kgf·m, 7 lbf·ft)

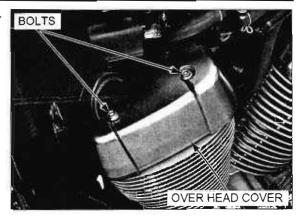


#### **REAR**

Remove the following:

- Spark plug cap (page 3-7)
- Fuel tank (page 5-48)


Remove the bolts and rear right over head cover.

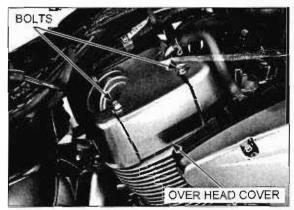

Remove the socket bolts and rear left over head cover. Installation is in the reverse order of removal.

#### TORQUE:

Rear right/left over head cover socket bolt: 10 N·m (1.0 kgf·m, 7 lbf·ft)

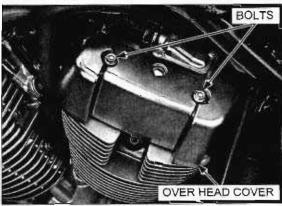


# FRONT FENDER (VT750C2F/C2S)

# **REMOVAL/INSTALLATION**

Remove the following:

- Bolts
- Nuts
- Collars
- Front fender brace
- Front fender
- Grommets

Installation is in the reverse order of removal.

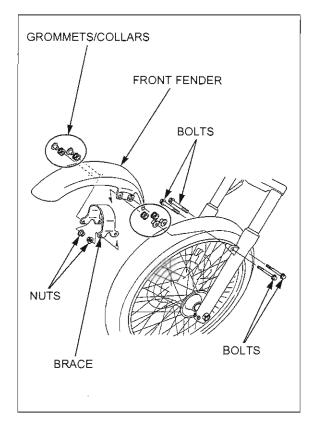

# FRONT FENDER (VT750C2B)


# **REMOVAL/INSTALLATION**

Remove the following:

- Bolts
- Collars
- Front fender
- Bolts
- Brake hose clamp
- Front fender brace

Installation is in the reverse order of removal.

 At installation, install the front fender brace with its "Fr" mark facing the front side.

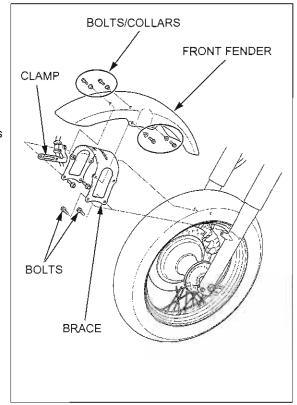

# **REAR FENDER**

## REAR FENDER ASSEMBLY


#### REMOVAL

Remove the following:

- Seat (page 2-3)
- Right side cover (page 2-3)

Release the wire band.

Disconnect the brake/tail/license light 3P and rear turn signal light 2P connectors.

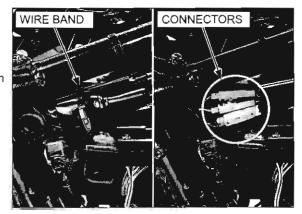

## Remove the following:

- Bolts
- Washers
- Grab rails
- Rear fender assembly

#### NOTE:

When removing the rear fender assembly, be careful not to damage the wires.


#### INSTALLATION

Route the wires properly (page 1-26).

Installation is in the reverse order of removal.

#### TORQUE:

Grab rail mounting bolt: 64 N·m (6.5 kgf·m, 47 lbf·ft)

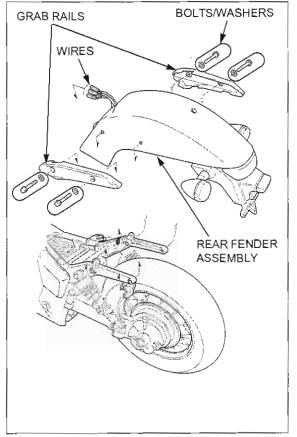

## REAR FRAME/REAR FENDER A

#### REMOVAL/INSTALLATION

Remove the rear fender assembly (page 2-7).

Release the rear frame bosses from the rear fender holes, then remove the rear frame/rear fender A.


#### NOTE:

When removing the rear frame/rear fender A, be careful not to damage the wires.

Remove the rubber from the rear fender A. Remove the grommet from the rear fender.

Route the wires properly (page 1-26).

Route the wires Installation is in the reverse order of removal.

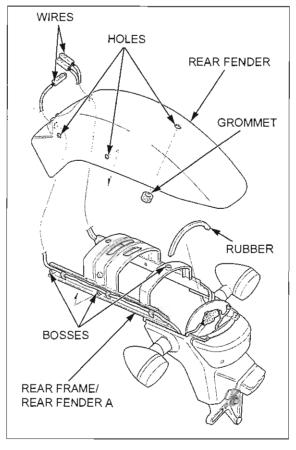

## **DISASSEMBLY/ASSEMBLY**


Remove the following:

- Rear frame/rear fender A (page 2-8)
- Rear turn signal lights (page 21-10)
- Brake/tail light (page 21-11) License light (page 21-12)

Remove the bolts, nuts, collars, grommet and the rear fender A.

Remove the nut and reflector from the rear fender A.


Assembly is in the reverse order of disassembly.

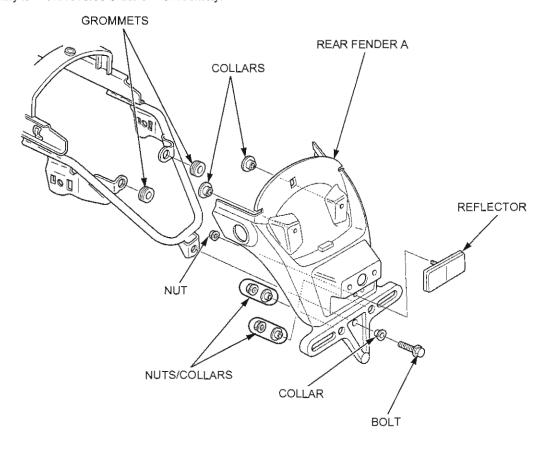


# **EXHAUST SYSTEM**

# **REMOVAL**


Remove the exhaust pipe joint nuts.

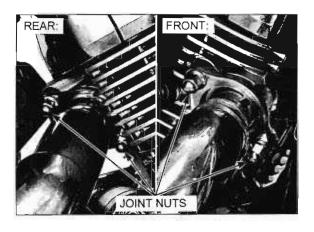


Remove the nuts, boits, washers, collars and muffler assembly.

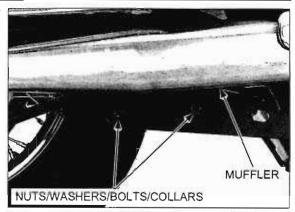

Remove the front and rear gaskets.

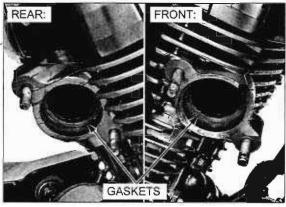

Remove the exhaust pipe joint collars and flanges.

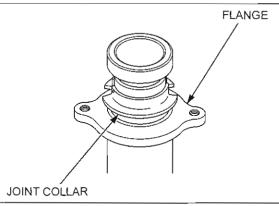


# DISASSEMBLY

Rear muffler only: Drive the rear exhaust pipe protector using a plastic hammer and break the lock tab (reverse side of the protector) and remove it.

#### NOTE:


- · The rear exhaust pipe protector can be removed without removing the exhaust system from the
- · Do not reuse the removed protector.

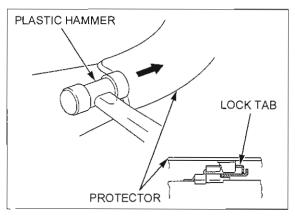


Loosen the muffler joint band bolt.

Remove the mounting bolts, muffler stay and separate the mufflers.

Remove the gasket.

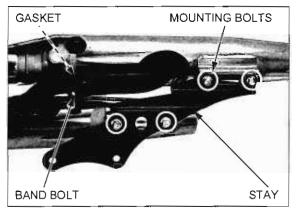

### **ASSEMBLY**

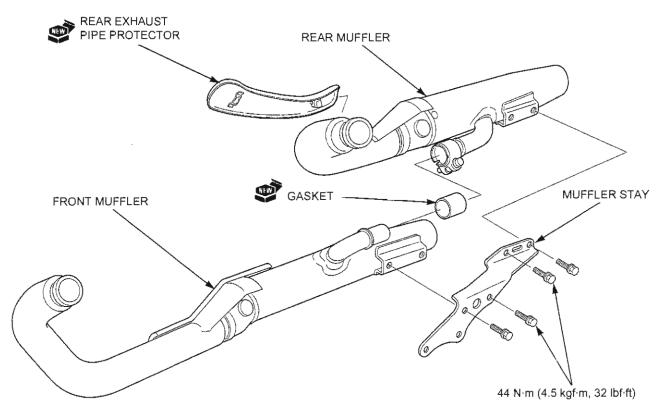


Install a new gasket onto the front muffler joint pipe.

Assemble the front muffler and rear muffler.

Install the muffler stay, mounting bolts and tighten the mounting bolts to the specified torque.


TORQUE: 44 N·m (4.5 kgf·m, 32 lbf·ft)

Tighten the muffler joint band bolt securely.

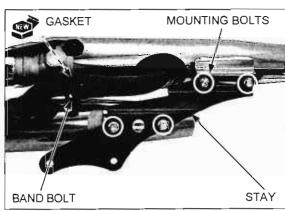


### FRAME/BODY PANELS/EXHAUST SYSTEM


Rear muffler only: Install a new rear exhaust pipe protector.

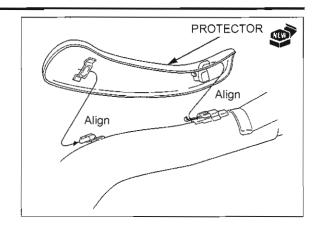


### **INSTALLATION**

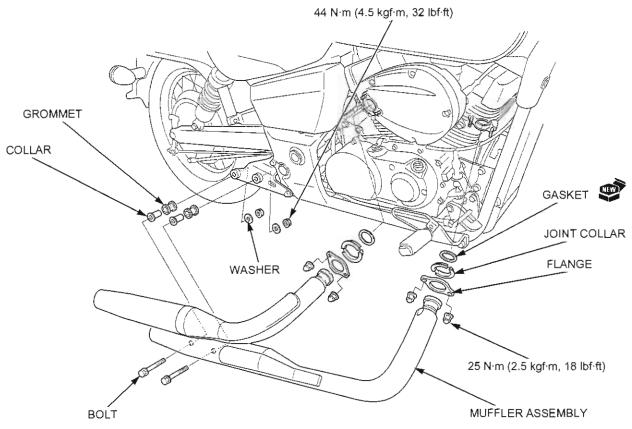


If the exhaust pipe joint stud bolts are loose, tighten them. Be sure to verify the distance from the top of the stud to the cylinder head as shown.

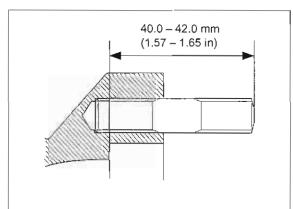

Install the flanges and exhaust pipe joint collars.

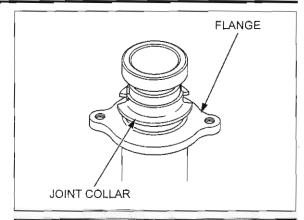

Instali new gaskets.

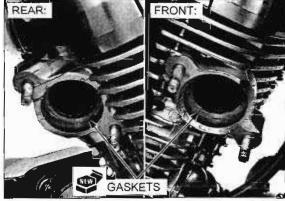

Install the muffler assembly.


### NOTE:

Inserting the rear exhaust pipe to the rear exhaust port first, then insert the front exhaust pipe to the front exhaust port.

Temporarily install the all fasteners.

Tighten the exhaust pipe joint nuts to the specified torque.

TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)

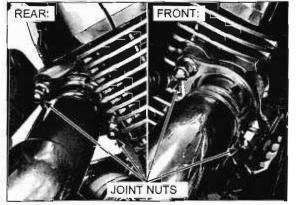


Tighten the muffler mounting nuts to the specified torque.

TORQUE: 44 N·m (4.5 kgf·m, 32 lbf·ft)

### NOTE:

Always inspect the exhaust system for leaks after installation.

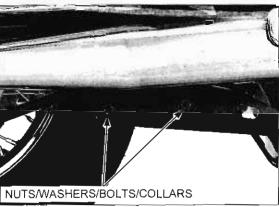

# MEMO

SERVICE INFORMATION3-2	BRAKE FLUID (VT750C2F/C2B)3-16
MAINTENANCE SCHEDULE3-4	BRAKE FLUID (VT750C2S)3-17
FUEL LINE3-5	BRAKE SHOES/PADS WEAR (VT750C2F/C2B)·······3-19
THROTTLE OPERATION3-5	BRAKE PADS WEAR (VT750C2S) 3-19
AIR CLEANER······3-6	
CRANKCASE BREATHER3-6	BRAKE SYSTEM (VT750C2F/C2B) 3-20
SPARK PLUG3-7	BRAKE SYSTEM (VT750C2S)3-21
VALVE CLEARANCE3-8	BRAKE LIGHT SWITCH3-22
ENGINE OIL3-11	HEADLIGHT AIM ·······3-23
ENGINE OIL FILTER······3-12	CLUTCH SYSTEM3-23
RADIATOR COOLANT3-13	SIDESTAND3-24
COOLING SYSTEM3-13	SUSPENSION ····································
SECONDARY AIR SUPPLY SYSTEM3-14	NUTS, BOLTS, FASTENERS 3-25
	WHEELS/TIRES 3-25
EVAPORATIVE EMISSION CONTROL SYSTEM3-15	STEERING HEAD BEARINGS 3-27
FINAL DRIVE OIL······3-15	

# **SERVICE INFORMATION**

### **GENERAL**

- · Place the motorcycle on level ground before starting any work.
- · Gasoline is extremely flammable and is explosive under certain conditions.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where the gasoline is stored can cause
  a fire or explosion.
- The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death. Run the engine in an open area or with an exhaust evacuation system in an enclosed area.


### **SPECIFICATIONS**

ITEM			SPECIFICATIONS				
Throttle grip freeplay	Throttle grip freeplay		2 – 6 mm (1/16 – 1/4 in)				
Spark plug	Standard		DPR7EA-9 (NGK), X22EPR-U9 (DENSO)				
For extended high speed riding			DPR8EA-9 (NGK), X24EPR-U9 (DENSO)				
Spark plug gap			0.8 – 0.9 mm (0.03 – 0.04 in)				
Valve clearance IN			0.15 ± 0.02 mm (0.006 ± 0.001 in)				
	EX		$0.20 \pm 0.02 \text{ mm} (0.008 \pm 0.001 \text{ in})$				
Recommended engin	e oil		Pro Honda GN4 4-stroke oil (U.S.A. and Canada) or an equalent API service classification: SG or higher (except oils labeled energy conserving on the circular API service label) Viscosity: SAE 10W-30 JASO T 903 standard: MA				
Engine oil capacity	At draining		2.5 liters (2.6 US qt, 2.2 lmp qt)				
g,	At oil filter change		2.6 liters (2.7 US qt, 2.3 lmp qt)				
	At disassembly		3.2 liters (3.4 US qt, 2.8 lmp qt)				
Engine idle speed	, , , , , , , , , , , , , , , , , , , ,		1,200 ± 100 min <sup>-1</sup> (rpm)				
	Recommended antifreeze		Pro Honda HP coolant or equivalent high quality ethylene gly- col antifreeze containing silicate-free corrosion inhibitors				
Recommended final of	drive oil		Hypoid gear oil, SAE #80				
Final drive oil	At draining		160 cm <sup>3</sup> (5.4 US oz, 5.6 lmp oz)				
capacity At disassembly			170 cm <sup>3</sup> (5.7 US oz, 6.0 lmp oz)				
Recommended brake fluid			DOT 4				
Brake pedal height (V			75 mm (3.0 in) above the top of the footpeg				
Brake pedal freeplay	Brake pedal freeplay (VT750C2F/C2B)		20 – 30 mm (13/16 – 1-3/16 in)				
Clutch lever freeplay			10 – 20 mm (3/8 – 13/16 in)				
Cold tire pressure	Up to 90 kg (200 lbs)	Front	200 kPa (2.00 kgf/cm², 29 psi)				
	load	Rear	200 kPa (2.00 kgf/cm², 29 psi)				
	Up to maximum weight	Front	200 kPa (2.00 kgf/cm², 29 psi)				
	capacity	Rear	250 kPa (2.50 kgf/cm², 36 psi)				
Tire size (VT750C2F/	C2S)	Front	90/90-21M/C 54S				
		Rear	160/80-15M/C 74S				
Tire size (VT750C2B)	)	Front	120/90-17M/C 64S				
		Rear	160/80-15M/C 74S				
Tire brand	BRIDGESTONE	Front	EXEDRA G701				
(VT750C2F/C2S)		Rear	EXEDRA G702				
,	DUNLOP	Front	D404F				
		Rear	D404				
Tire brand	BRIDGESTONE	Front	G701				
(VT750C2B)		Rear	G702				
, ,	DUNLOP	Front	D404FG				
		Rear	D404				
Minimum tire tread depth F			1.5 mm (0.06 in)				
			2.0 mm (0.08 in)				
		Rear	2.0 (1)(0.00 (1))				

### **TORQUE VALUES**

Spark plug 18 N·m (1.8 kgf·m, 13 lbf·ft) Valve adjusting screw lock nut 23 N·m (2.3 kgf·m, 17 lbf·ft) Apply engine oil to the threads and seating surface Timing hole cap 10 N·m (1.0 kgf·m, 7 lbf·ft) Apply grease to the threads Apply engine oil to the threads Engine oil filter cartridge 26 N·m (2.7 kgf·m, 19 lbf·ft) Engine oil drain bolt 29 N·m (3.0 kgf·m, 21 lbf·ft Final drive oil filler cap 12 N·m (1.2 kgf·m, 9 lbf·ft) Final drive oil drain bolt 12 N·m (1.2 kgf·m, 9 lbf·ft) 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft) Front master cylinder reservoir cap screw Rear master cylinder reservoir cap screw 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft) (VT750C2S) Rear master cylinder push rod lock nut 18 N·m (1.8 kgf·m, 13 lbf·ft) (VT750C2S) Air cleaner cover socket bolt 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft) Crankshaft hole cap 15 N·m (1.5 kgf·m, 11 lbf·ft) Apply grease to the threads Alternator cover socket bolt 10 N·m (1.0 kgf·m, 7 lbf·ft) 4.2 N·m (0.4 kgf·m, 3.1 lbf·ft) Spoke

### **TOOLS**

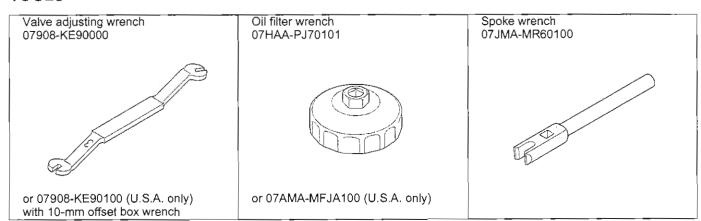

# MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and clean, adjust, lubricate or replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked \* and \*\*) may require more technical information and tools. Consult an authorized Honda dealer.

			FREQUENCY	ODOMETER READING (NOTE 1)				REFER				
				x 1,000 mi	0.6	4	8	12	16	20	24	TO
ITEMS		NOTE	x 100 km	10	64	128	192	256	320	384	PAGE	
	*	FUEL LINE					-		-		1	3-5
	*	THROTTLE OPERATION					-		- 1		ı	3-5
ဟ		AIR CLEANER	NOTE 2					R			R	3-6
Σ		CRANKCASE BREATHER	NOTE 3			С	C	С	C	С	C	3-6
ITEMS		SPARK PLUG				1	R		R	[	R	3-7
	*	VALVE CLEARANCE			1	1						3-8
N RELATED	,	ENGINE OIL			INITIAL = 600 mi (1,000 km) or 1 month: R REGULAR = EVERY 8,000 mi (12,800 km) or 12 months: R				3-11			
$\overline{Q}$		ENGINE OIL FILTER			R		R		R		Ř	3-12
SS		RADIATOR COOLANT	NOTE 4								R	3-13
EMISSION	*	COOLING SYSTEM		·					- 1		I	3-13
ļ III	*	SECONDARY AIR SUPPLY SYSTEM					Ι		I		- 1	3-14
	*	EVAPORATIVE EMISSION CONTROL SYSTEM	NOTE 5					ì			I	3-15
S		FINAL DRIVE OIL							·.I .	٠	R,	3-15
Ž		BRAKE FLUID	NOTE 4					R	- 1	J	R	3-16
NON-EMISSION RELATED ITEMS		BRAKE SHOES/PADS WEAR (VT750C2F/C2B)				I	I	1	_	J	ı	3-19
世		BRAKE PAD WEAR (VT750C2S)				1	I	Ι	-			3-19
M		BRAKE SYSTEM			-		[		1			3-20
뿠	*	BRAKE LIGHT SWITCH					1		ſ		- [	3-22
ž	*	HEADLIGHT AIM					l		l		Ι ;	3-23
100		CLUTCH SYSTEM			- 1	1	1	-	1	-	1	3-23
SS		SIDESTAND					1		- 1		-	3-24
∣≅	*	SUSPENSION					ŀ		I			3-24
13	*	NUTS, BOLTS, FASTENERS					]		1		1	3-25
Ó	**	WHEELS/TIRES			Ι	1		Ι		1	1	3-25
	**	STEERING HEAD BEARINGS			Ī		Ι		Ι		ı	3-27

Should be serviced by an authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

Honda recommends that an authorized Honda dealer should road test the motorcycle after each periodic maintenance is carried out.

### NOTES:

- 1. At higher odometer reading, repeat at the frequency interval established here.
- 2. Service more frequently when riding in unusually wet or dusty areas.
- 3. Service more frequently when riding in rain or at full throttle.
- 4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
- 5. California type only.

<sup>\*\*</sup> In the interest of safety, we recommend these items be serviced only by an authorized Honda dealer.


# **FUEL LINE**

Remove the seat (page 2-3).

Check the fuel line for deterioration, damage or leakage.

Also check the fuel hose and fuel vapor return hose (fuel tank to fuel pump).

Replace the fuel and fuel vapor return hoses if necessary.

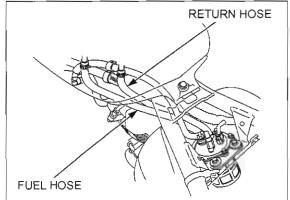

# THROTTLE OPERATION

Check for any deterioration or damage to the throttle cables. Check the throttle grip for smooth operation. Check that the throttle opens and automatically closes in all steering positions.

If the throttle grip does not return properly, lubricate the throttle cables and overhaul and lubricate the throttle grip housing.

If the throttle grip still does not return properly, replace the throttle cables.

With the engine idling, turn the handlebar all the way to the right and left to ensure that the idle speed does not change. If idle speed increases, check the throttle grip freeplay and the throttle cable connection.


Measure the throttle grip freeplay at the throttle grip flange.


### FREEPLAY: 2 - 6 mm (1/16 - 1/4 in)

Throttle grip freeplay can be adjusted at either end of the throttle cable.

Minor adjustment is made with the upper adjuster.

Loosen the lock nut, turn the adjuster as required. Tighten the lock nut while holding the adjuster.

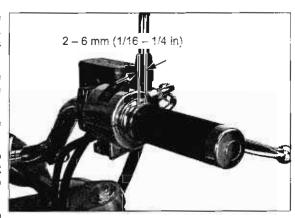

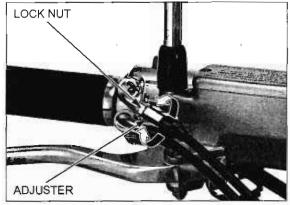


Major adjustment is made with the lower adjuster.

Remove the air cleaner housing (page 5-49).

Loosen the lock nut, turn the adjuster as required. Tighten the lock nut while holding the adjuster.

Recheck the throttle operation and install the air cleaner housing (page 5-49).

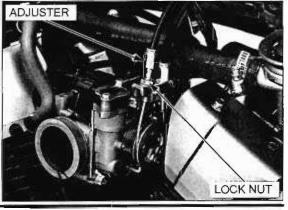


# **AIR CLEANER**

#### NOTE

- The viscous paper element type air cleaner can not be cleaned because the element contains a dust adhesive
- If the motorcycle is used in usually wet or dusty areas, more frequent inspections are required.

Remove the socket bolts and air cleaner cover.

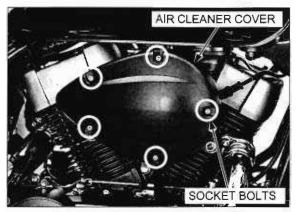

Remove the air cleaner element from the air cleaner housing.


Make sure that the O-ring is installed in position and is in good condition, and replace it with a new one if necessary.

Replace the air cleaner element in accordance with the maintenance schedule (page 3-4) or any time it is excessively dirty or damaged.

Install the removed parts in the reverse order of removal.

### TORQUE:

Air cleaner cover socket bolt: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

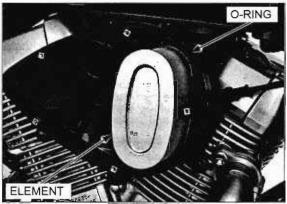


## CRANKCASE BREATHER

#### NOTE:

Service more frequently when ridden in rain, at full throttle, or after the motorcycle is washed or overturned. Service if the deposit level can be seen in the drain plug.

Remove the drain plug from the air cleaner housing and drain the deposits into a suitable container, then reinstall the drain plug securely.

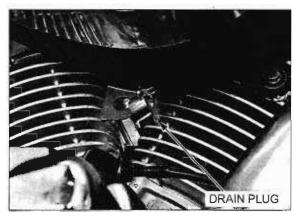

# **SPARK PLUG**


### **REMOVAL**

Disconnect the spark plug caps and clean around the spark plug bases.

#### NOTE:

Clean around the spark plug bases with compressed air before removing the spark plugs, and be sure that no debris is allowed to enter into the combustion chamber.

Remove the spark plugs.

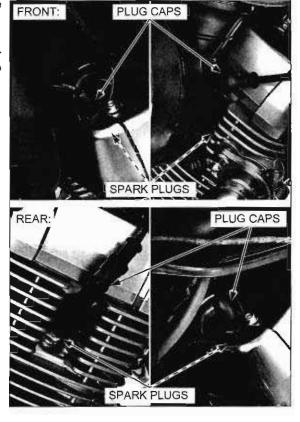

### INSPECTION

Check the insulator for cracks or damage, and the electrodes for wear, fouling or discoloration. Replace each spark plug if necessary.

### RECOMMENDED SPARK PLUG:

Standard:


DPR7EA-9 (NGK), X22EPR-U9 (DENSO) For extended high speed riding: DPR8EA-9 (NGK), X24EPR-U9 (DENSO)


Clean the spark plug electrodes with a wire brush or special plug cleaner.

Check the spark plug gap between the center and side electrodes with a feeler gauge.

SPARK PLUG GAP: 0.8 - 0.9 mm (0.03 - 0.04 in)

If necessary, adjust the spark plug gap by bending the side electrode carefully.

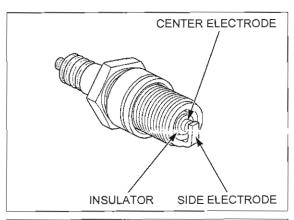

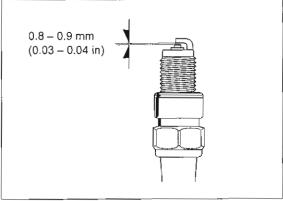


### INSTALLATION

Install and hand tighten the spark plug to the cylinder head, then tighten the spark plug to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

Connect the spark plug caps.

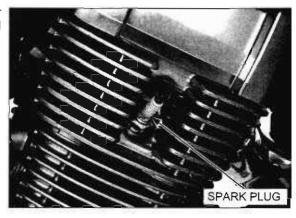

# VALVE CLEARANCE INSPECTION


#### NOTE:

Check the engine idle speed (page 5-68) after the valve clearance inspection.


Inspect and adjust the valve clearance while the engine is cold (below 35°C/ 95°F).

Inspect and adjust Remove the cylinder head cover (page 8-6).

Remove the socket bolts and alternator cover.

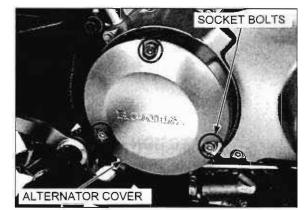

Remove the timing and crankshaft hole caps.

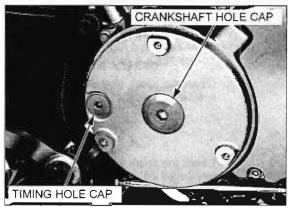


### FRONT

Rotate the crankshaft counterclockwise and align the "FT" mark on the flywheel with the index notch on the left crankcase cover.

Make sure the piston is at TDC (Top Dead Center) on the compression stroke.

This position can be obtained by confirming that there is slack in the rocker arms. If there is no slack, rotate the crankshaft counterclockwise one full turn and align the "FT" mark with the index notch again.

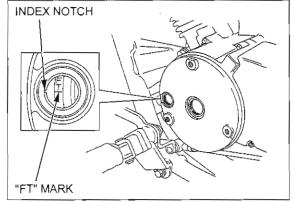


When checking the valve clearance, slide the feeler gauge from the center toward the outside.

Check the valve clearances by inserting a feeler gauge between the valve adjusting screw and valve stem.

### **VALVE CLEARANCES:**

IN: 0.15 ± 0.02 mm (0.006 ± 0.001 in) EX: 0.20 ± 0.02 mm (0.008 ± 0.001 in)

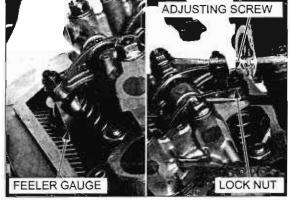

Adjust by loosening the valve adjusting screw lock nut and turning the adjusting screw until there is a slight drag on the feeler gauge.

### TOOL:

Valve adjusting wrench

07908-KE90000 with 10-mm offset box wrench

### U.S.A. TOOLS:

Valve adjusting wrench, 4 mm 07908-KE90100

Apply engine oil to the valve adjusting screw lock nut threads and seating surface. Hold the valve adjusting screw and tighten the valve adjusting screw lock nut to the specified torque.


### TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)


After tightening the valve adjusting screw lock nut, recheck the valve clearance.

### REAR

Rotate the crankshaft counterclockwise and align the "RT" mark on the flywheel with the index notch on the left crankcase cover.

Make sure the piston is at TDC (Top Dead Center) on the compression stroke.

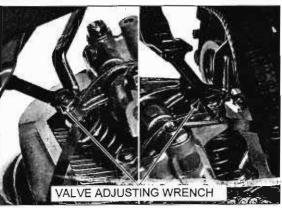

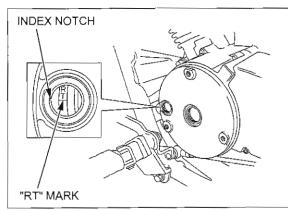


### MAINTENANCE

When checking the valve clearance, slide the feeler gauge from the center toward the outside.

Check the valve clearances by inserting a feeler gauge between the valve adjusting screw and valve stem.

### **VALVE CLEARANCES:**

IN:  $0.15 \pm 0.02$  mm  $(0.006 \pm 0.001$  in) EX:  $0.20 \pm 0.02$  mm  $(0.008 \pm 0.001$  in)

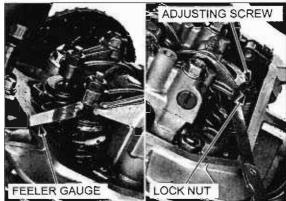

Adjust by loosening the valve adjusting screw lock nut and turning the adjusting screw until there is a slight drag on the feeler gauge.

### TOOL:

Valve adjusting wrench

07908-KE90000 with 10-mm offset box wrench

#### U.S.A. TOOLS:

Valve adjusting wrench, 4 mm 07908-KE90100

Apply engine oil to the valve adjusting screw lock nut threads and seating surface.

Hold the valve adjusting screw and tighten the valve adjusting screw lock nut to the specified torque.

### TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

After tightening the valve adjusting screw lock nut, recheck the valve clearance.

Coat new O-rings with engine oil and install them into the timing and crankshaft hole cap grooves.

Apply grease to the timing and crankshaft hole cap threads.

Install the timing hole cap and tighten it to the specified torque.

### TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)


Install the crankshaft hole cap and tighten it to the specified torque.


TORQUE: 15 N·m (1.5 kgf·m, 11 lbf·ft)


Install the alternator cover and tighten the socket bolts to the specified torque.

#### TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the cylinder head cover (page 8-30).

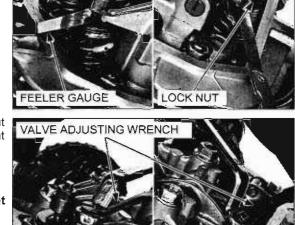

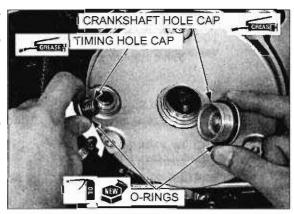

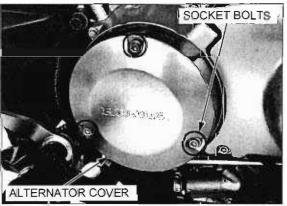


# **ENGINE OIL**

### **OIL LEVEL CHECK**


Start the engine, and let it idle for 3-5 minutes. Stop the engine and wait 2-3 minutes. Hold the motorcycle in an upright position.

Remove the oil filler cap/dipstick and wipe the oil from the dipstick with a clean cloth.

Insert the dipstick without screwing it in, remove it and check the oil level.

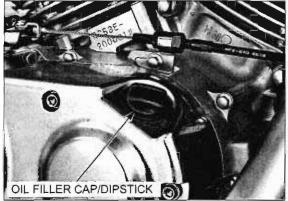

If the oil level is below or near the lower level mark on the dipstick, add the recommended oil to the upper level mark.

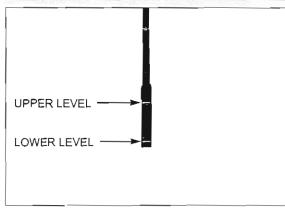

### RECOMMENDED ENGINE OIL:

Pro Honda GN4 4-stroke oil (U.S.A. and Canada) or an equivalent

API service classification: SG or higher (except oils labeled as energy conserving on the circular API service label)

Viscosity: SAE 10W-30 JASO T 903 standard: MA

#### NOTE


Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.


Check that the O-ring is in good condition, replace it if necessary.

Coat the O-ring with engine oil and install it. Reinstall the oil filler cap/dipstick.

\_\_\_\_\_

For engine oil change (page 3-12).

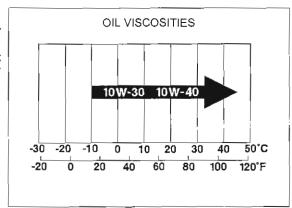

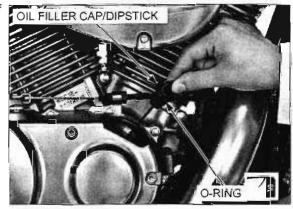


# **ENGINE OIL FILTER**

#### NOTE:

Change the oil with engine warm and the motorcycle on its sidestand to assure complete and rapid draining.

Start the engine, warm it up and stop it.

Remove the oil filler cap/dipstick (page 3-11).
Remove the oil drain bolt, sealing washer and drain the

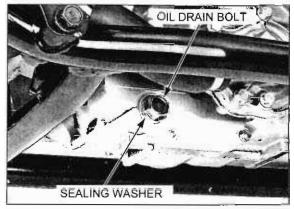


Remove the oil filter cartridge using the special tool and let the remaining oil drain out.

### TOOL:

Oil filter wrench

07HAA-PJ70101 or 07AMA-MFJA100 (U.S.A. only)

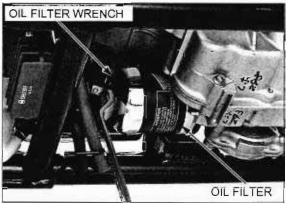

Coat a O-ring with engine oil.

Apply engine oil to the threads of a new oil filter cartridge.


Install the oil filter cartridge and tighten it to the specified torque.

### TOOL:

Oil filter wrench

07HAA-PJ70101 or 07AMA-MFJA100 (U.S.A. only)

TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

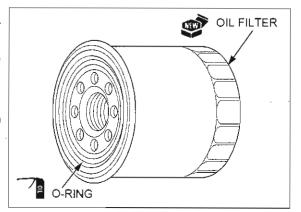

Install the oil drain bolt with a new sealing washer and tighten it to the specified torque.

### TORQUE: 29 N·m (3.0 kgf·m, 21 lbf·ft)

Fill the crankcase with the recommended engine oil (page 3-11).


### OIL CAPACITY:

2.5 liters (2.6 US qt, 2.2 lmp qt) at draining

2.6 liters (2.7 US qt, 2.3 lmp qt) at oil filter change

3.2 liters (3.4 US qt, 2.8 lmp qt) at disassembly

Check the engine oil level (page 3-11). Install the oil filler cap/dipstick (page 3-11). Make sure there are no oil leaks.

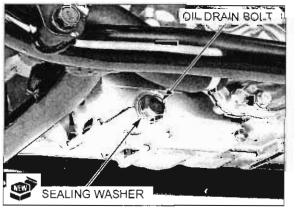

# RADIATOR COOLANT

Check the coolant level of the reserve tank.

The level should be between the "UPPER" and "LOWER" level lines with the motorcycle in an upright position.


If the level is low, remove the reserve tank cap, and fill the tank to the "UPPER" level line with a 1:1 mixture of distilled water and antifreeze (coolant preparation: page 6-6).

### RECOMMENDED ANTIFREEZE:

Pro Honda HP coolant or an equivalent high quality ethylene glycol antifreeze containing silicatefree corrosion inhibitors


Check to see if there are any coolant leaks when the coolant level decreases very rapidly.

If the reserve tank becomes completely empty, there is a possibility of air getting into the cooling system. Be sure to remove any air from the cooling system (page 6-7).

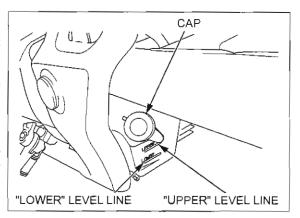

# **COOLING SYSTEM**


Check the radiator air passage for clogs or damage.

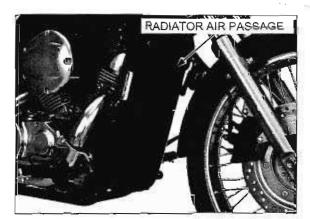

Straighten bent fins with a small, flat blade screwdriver and remove insects, mud or other obstructions with compressed air or low pressure water.

Replace the radiator if the air flow is restricted over more than 20% of the radiating surface.

For radiator replacement (page 6-11).

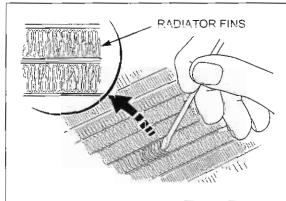


Remove the steering side covers (page 2-4).

Check for any coolant leakage from the water pump, water hoses and hose joints.


Check the radiator hoses for cracks or deterioration and replace if necessary.

Check that all water hose bands are tight (page 6-10).

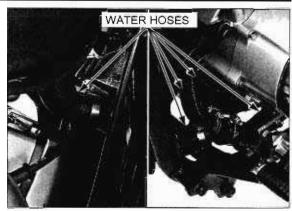

### SECONDARY AIR SUPPLY SYSTEM

- This model is equipped with a built-in secondary air supply system. The pulse secondary air supply system is located on the cylinder head covers.
- The secondary air supply system introduces filtered air into exhaust gases in the exhaust port.
  - The secondary air is drawn into the exhaust port whenever there is negative pressure pulse in the exhaust system. This charged secondary air promotes burning of the unburned exhaust gases and changes a considerable amount of hydrocarbons and carbon monoxide into relatively harmless carbon dioxide and water.

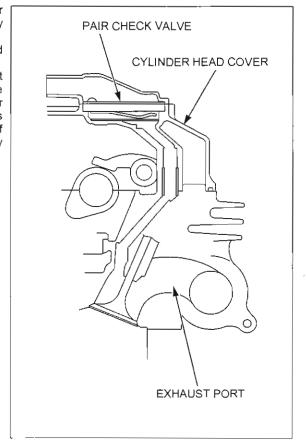


Remove the fuel tank (page 5-48).

If the hoses show any signs of heat damage, inspect the PAIR check valves in the cylinder head covers for damage (page 5-72).

If the hoses show any signs of heat control solenoid valve and cylinder head cover for damage, inspect the PAIR check the hoses are not cracked.

Check the air suction hose between the air cleaner and PAIR control solenoid valve for deterioration, damage or loose connections.


Make sure that the hoses are not kinked, pinched or cracked.

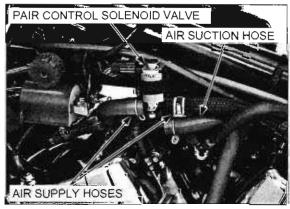

# EVAPORATIVE EMISSION CONTROL SYSTEM

Check the hoses between the fuel tank, EVAP canister, EVAP purge control valve for deterioration, damage or loose connections.

Check the EVAP canister for cracks or other damage.

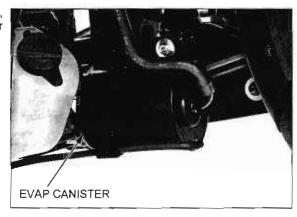


# **FINAL DRIVE OIL**

### **OIL LEVEL CHECK**

Place the motorcycle on its sidestand on a level surface.

Remove the oil filter cap from the final gear case.

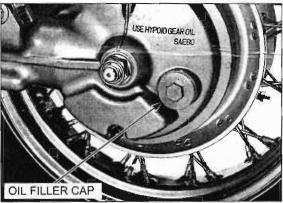

Check that the oil level is up to the lower edge of the oil filler hole.


Check for leaks if the oil level is low. Fill the recommended final drive oil through the oil filler hole until it reaches the lower edge of the hole.

# RECOMMENDED FINAL DRIVE OIL: Hypoid gear oil, SAE #80

Coat a new O-ring with oil and install it onto the oil filler cap.

Install and tighten the oil filler cap to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

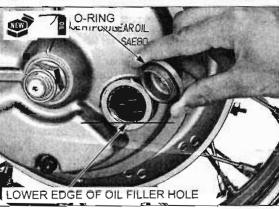

### **OIL CHANGE**

Support the motorcycle securely and raise the rear wheel off the ground.

Remove the oil filler cap, drain bolt and sealing washer from the final gear case, slowly turn the rear wheel and drain the oil.


After the oil is completely drained, install the drain bolt with a new sealing washer and tighten it to the specified torque.

### TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Fill the final gear case with the recommended final drive oil to the correct level (page 3-15).

### **OIL CAPACITY:**

160 cm<sup>3</sup> (5.4 US oz, 5.6 lmp oz) at draining 170 cm<sup>3</sup> (5.7 US oz, 6.0 lmp oz) at disassembly

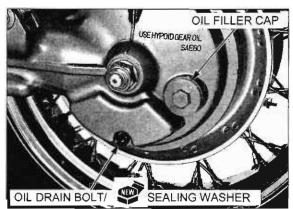

# **BRAKE FLUID (VT750C2F/C2B)**

### NOTICE

Spilled fluid can damage painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.


### NOTE:

- Do not mix different types of fluid, as they are not compatible with each other.
- Do not allow foreign material to enter the system when filling the reservoir.


When the fluid level is low, check the brake pads for wear (page 3-19).

A low fluid level may be due to wear of the brake pads. If the brake pads are worn and the caliper pistons are pushed out, this accounts for a low reservoir level. If the brake pads are not worn and the fluid level is low, check the entire system for leaks (page 3-20).

Turn the handlebar to the left side so the reservoir is level and check the front brake reservoir fluid level through the sight glass.

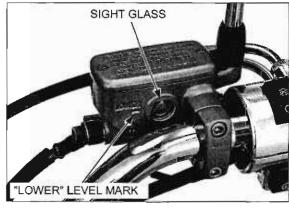


If the fluid level is near the "LOWER" level mark, remove the screws, reservoir cap, set plate and diaphragm.

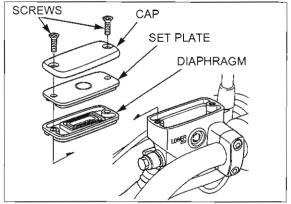

Fill the reservoir with DOT 4 brake fluid from a sealed container to the casting ledge.

Install the diaphragm, set plate and reservoir cap, then tighten the cap screws to the specified torque.

TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

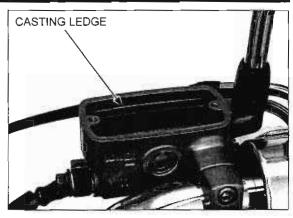

# **BRAKE FLUID (VT750C2S)**

# NOTICE

Spilled fluid can damage painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.

### NOTE:


- Do not mix different types of fluid, as they are not compatible with each other.
- Do not allow foreign material to enter the system when filling the reservoir.

When the fluid level is low, check the brake pads for wear (page 3-19).


A low fluid level may be due to wear of the brake pads. If the brake pads are worn and the caliper pistons are pushed out, this accounts for a low reservoir level. If the brake pads are not worn and the fluid level is low, check the entire system for leaks (page 3-20).

### FRONT

Turn the handlebar to the left side so the reservoir is level and check the front brake reservoir fluid level through the sight glass.

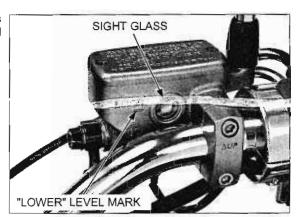


If the fluid level is near the "LOWER" level mark, remove the screws, reservoir cap, set plate and diaphragm.

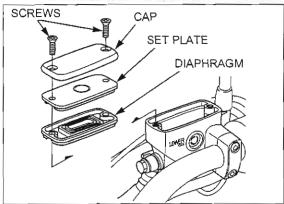

Fill the reservoir with DOT 4 brake fluid from a sealed container to the casting ledge.

Install the diaphragm, set plate and reservoir cap, then tighten the cap screws to the specified torque.


TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

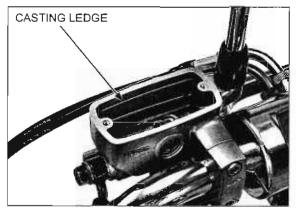

### **REAR**

Support the motorcycle upright on a level surface.

Check the rear brake reservoir fluid level.

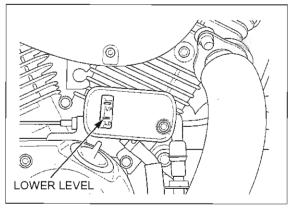

If the fluid level is near the "LOWER" level mark, remove the socket bolt and reservoir cover.


Remove the screws, reservoir cap, set plate and diaphragm.

Fill the reservoir with DOT 4 brake fluid from a sealed container to the casting ledge.

Install the diaphragm, set plate and reservoir cap, then tighten the cap screws to the specified torque.

### TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

Install the reservoir cover and tighten the socket bolt securely.

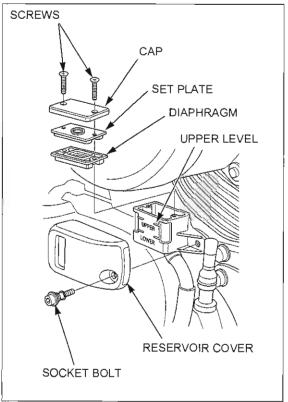

# BRAKE SHOES/PADS WEAR (VT750C2F/C2B)


### FRONT BRAKE PADS

Check the brake pad for wear.

Always replace the brake pads as a set to assure even disc

Replace the brake pads if either pad is worn to the wear limit grooves.

For brake pad replacement (page 16-16).

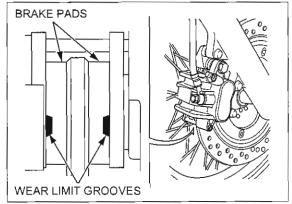

### **REAR BRAKE SHOES**


Check the indicator plate position when the brake pedal applied.

If the arrow on the indicator plate aligns with the "\( \triangle \)" mark, inspect the brake drum (page 15-20).

If the brake drum I.D. is within the service limit, replace the brake shoes (page 15-20).

### NOTE:

If no adjustment remains before the wear indicator limit is reached, this indicates excessive wear and the brake shoes need to be replaced.

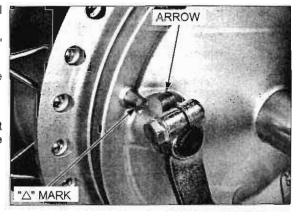


# BRAKE PADS WEAR (VT750C2S)

### FRONT BRAKE PADS

Check the brake pad for wear.

Always replace the brake pads as a set to assure even disc pressure. Replace the brake pads if either pad is worn to the wear limit grooves.

For brake pad replacement (page 16-16).

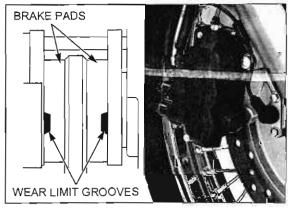


### **REAR BRAKE PADS**

Check the brake pad for wear.

Always replace the brake pads as a set to assure even disc pressure.

Replace the brake pads if either pad is worn to the wear limit grooves.

For brake pad replacement (page 16-16).

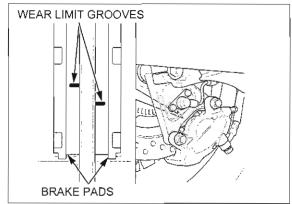

# BRAKE SYSTEM (VT750C2F/C2B)

Firmly apply the brake lever, and check that no air has entered the system.


If the lever feels soft or spongy when operated, bleed the air from the system.

For air bleeding procedures (page 16-8).

Inspect the brake hose and fittings for deterioration, cracks, damage or signs of leakage.

Tighten any loose fittings.

Replace the hose and fittings as required.

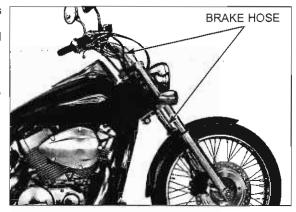


### **BRAKE PEDAL HEIGHT**

Check the brake pedal height.

### BRAKE PEDAL HEIGHT:

75 mm (3.0 in) above the top of the footpeg

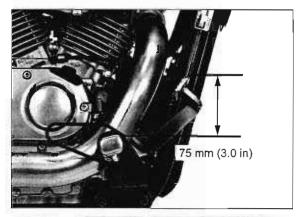


To adjust:

Loosen the lock nut and turn the stopper bolt as required.

Tighten the lock nut securely.

After adjusting the brake pedal height, check the following:

- Brake pedal freeplay (page 3-21)
- Rear brake light switch operation (page 3-22)

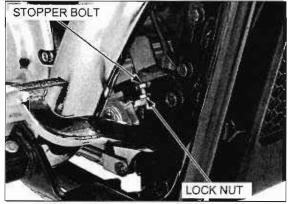


### **BRAKE PEDAL FREEPLAY**

NOTE:

Perform brake pedal freeplay adjustment after adjusting brake pedal height.

Check the brake pedal freeplay.

FREEPLAY: 20 - 30 mm (13/16 - 1-3/16 in)

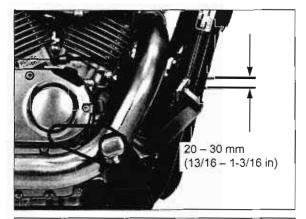


Make sure the cutout on the adjusting nut is seated on the joint pin.

Make sure the cut- If necessary, adjust the brake pedal freeplay by turning but on the adjusting the adjusting nut.

NOTE:

After adjusting the brake pedal freeplay, check the rear brake light switch operation (page 3-22).

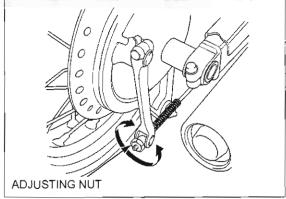

# **BRAKE SYSTEM (VT750C2S)**


Firmly apply the brake lever or pedal, and check that no air has entered the system.

For air bleeding procedures (page 16-8).

Inspect the brake hose and fittings for deterioration, cracks, damage or signs of leakage.

Tighten any loose fittings.

Replace the hose and fittings as required.

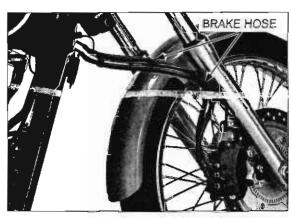


### **BRAKE PEDAL HEIGHT ADJUSTMENT**

Loosen the lock nut and turn the master cylinder push rod length as shown.

After adjustment, hold the adjusting bolt and tighten the lock nut.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

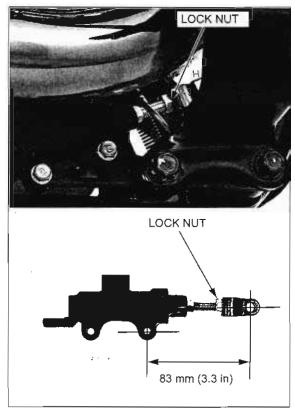

# **BRAKE LIGHT SWITCH**

### NOTE:


- The brake light switch on the front brake master cylinder cannot be adjusted. If the front brake light switch actuation and brake engagement are not synchronized, either replace the switch unit or the malfunctioning parts of the system.
- Make the rear brake light switch adjustments after the brake pedal height adjustment and the brake pedal freeplay adjustment have been made.

Check that the brake light comes on just prior to the brake actually being engaged.

If the light fails to come on, adjust the rear brake light switch so that the light comes on at the proper time.

Do not turn the switch body while turning the adjusting nut. Hold the rear brake light switch body and turn the adjusting nut as required.

Recheck the rear brake light switch operation.

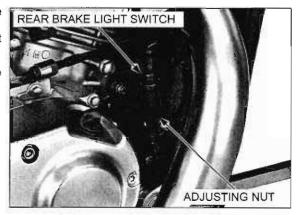


# **HEADLIGHT AIM**

NOTE:


Adjust the headlight beam as specified by local laws and regulations.

Hold the motorcycle in an upright position.

Adjust horizontally by turning the horizontal adjusting screw.

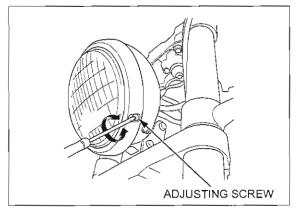

Adjust vertically by turning the vertical adjusting screw.

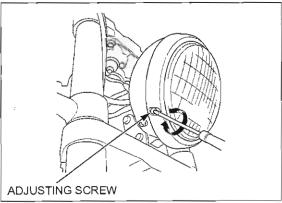


# **CLUTCH SYSTEM**

Inspect the clutch cable for kinks or damage, and lubricate the cable if necessary.

Measure the clutch lever freeplay at the end of the lever.

FREEPLAY: 10 - 20 mm (3/8 - 13/16 in)

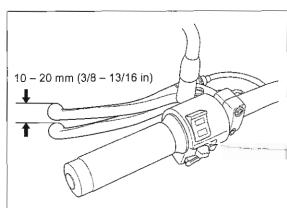


### **MAINTENANCE**

The adjuster may be damaged if it is positioned too far out, leaving minimal thread engagement. Minor adjustment is made with the upper adjuster at the clutch lever.

Loosen the lock nut and turn the adjuster as required. Tighten the lock nut while holding the adjuster.

If the adjuster is threaded out near its limit and the correct freeplay cannot be obtained, turn the adjuster all the way in and back out one turn.

Tighten the lock nut and make major adjustment (page 3-24).

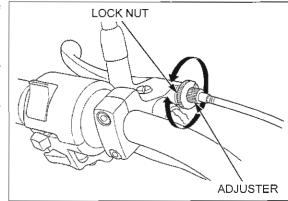

Major adjustment is made with the lower adjusting nut at the engine.

Loosen the lock nut and turn the adjusting nut as required.

After adjustment is complete, tighten the lock nut while holding the adjusting nut.

Check the clutch operation.

If the freeplay cannot be obtained, or the clutch slips during the test ride, disassemble and inspect the clutch (page 10-7).



### **SIDESTAND**

Hold the motorcycle in an upright position.


Check the sidestand spring for damage or loss of tension.

Check the sidestand assembly for freedom of movement and lubricate the sidestand pivot if necessary.

Check the sidestand ignition cut-off system:

- Sit astride the motorcycle and raise the sidestand.
- Start the engine with the transmission in neutral, then shift the transmission into gear, while squeezing the clutch lever.
- Fully lower the sidestand.
- The engine should stop as the sidestand is lowered.

-If-there is a problem with the system, check the sidestand switch (page 21-26).

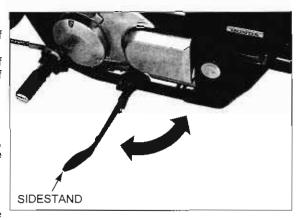

# SUSPENSION

### FRONT SUSPENSION INSPECTION


Check the action of the forks by applying the front brakes and compressing the front suspension several times.

Check the entire assembly for leaks, damage or loose fasteners.

Replace damaged components which cannot be repaired.

Tighten all nuts and bolts.

For fork service (page 14-24).

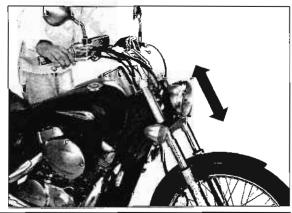

### REAR SUSPENSION INSPECTION

Check the action of the shock absorbers by compressing them several times.

Check the entire shock absorber assembly for leaks, damage or loose fasteners.

Replace damaged components which cannot be repaired.

Tighten all nuts and bolts.


For shock absorber service (page 15-27).



Support the motorcycle securely and raise the rear wheel off the ground.

Check for worn swingarm bearings by grabbing the rear wheel and attempting to move the wheel side to side.

Replace the bearings if any looseness is noted (page 15-28)

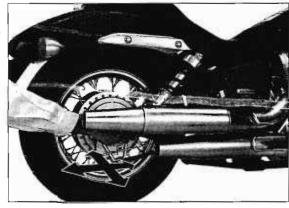

# **NUTS, BOLTS, FASTENERS**

Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-16).


Check that all cotter pins, safety clips, hose clamps and cable stays are in place and properly secured.

# WHEELS/TIRES

Support the motorcycle securely and raise the front wheel off the ground.

Hold the front fork leg and move the front wheel sideways forcefully to see if the wheel bearings are worn.


For front wheel service (page 14-17).

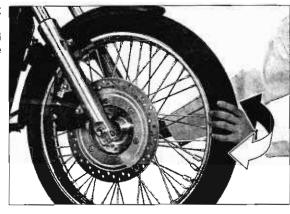

Support the motorcycle securely and raise the rear wheel off the ground.

Hold the swingarm and move the rear wheel sideways with the force to see if the wheel bearings are worn.

For rear wheel service (page 15-7).

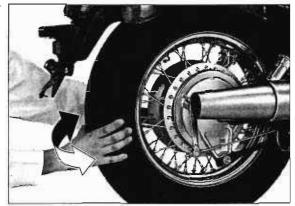

Inspect the spokes for looseness by tapping them with a screwdriver.

Tap on the spokes and be sure that the same clear metallic sound can be heard on all spokes.


If a spoke does not sound clearly, or if it sounds different from the other spokes, tighten it to the specified torque.

TOOL:

Spoke wrench

07JMA-MR60100

TORQUE: 4.2 N·m (0.4 kgf·m, 3.1 lbf·ft)

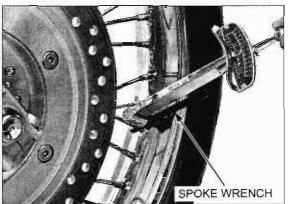


Check the tire pressure with a tire pressure gauge when the tires are cold.

### RECOMMENDED TIRE PRESSURE:

Up to 90 kg (200lbs) load:

Front: 200 kPa (2.00 kgf/cm², 29 psi) Rear: 200 kPa (2.00 kgf/cm², 29 psi) Up to maximum weight capacity: Front: 200 kPa (2.00 kgf/cm², 29 psi) Rear: 250 kPa (2.50 kgf/cm², 36 psi)

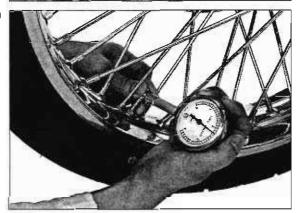


Check the tires for cuts, embedded nails, or other damage.

Check the front and rear wheels for trueness.

Measure the tread depth at the center of the tires. Replace the tires when the tread depth reaches the following limits.

### MINIMUM TIRE TREAD DEPTH:


Front: 1.5 mm (0.06 in) Rear: 2.0 mm (0.08 in)

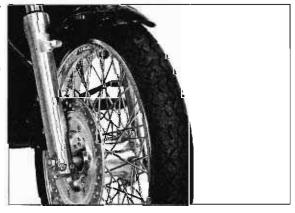

# STEERING HEAD BEARINGS


Support the motorcycle securely and raise the front wheel off the ground.

Check that the handlebar moves freely from side to side. Make sure the control cables do not interfere with the handlebar rotation.

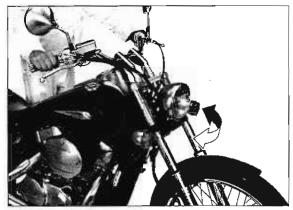

Check for steering stem bearings by grabbing the fork legs and attempting to move the front fork side to side.

If the handlebar moves unevenly, binds, or has vertical movement, inspect the steering head bearings (page 14-36).

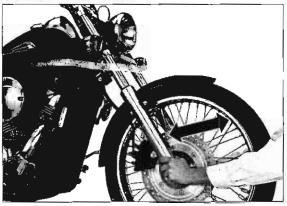


# MEMO

### Л

# 4. LUBRICATION SYSTEM

LUBRICATION SYSTEM DIAGRAM4-2	OIL PRESSURE INSPECTION4-5
SERVICE INFORMATION4-3	OIL PUMP4-6
TROUBLESHOOTING4-4	

# **LUBRICATION SYSTEM DIAGRAM**

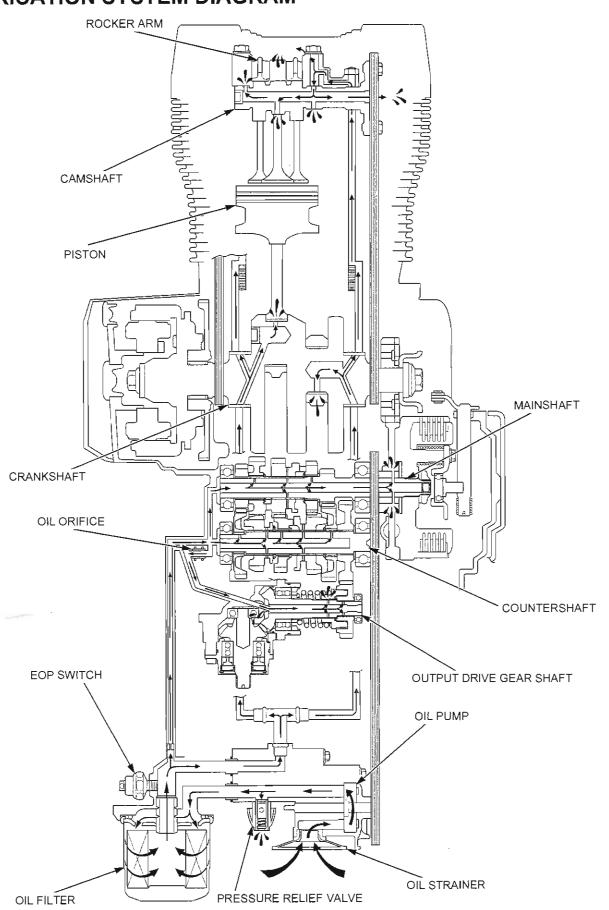

# SERVICE INFORMATION

### **GENERAL**

# **ACAUTION**

Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

- · The crankcase must be separated to service the oil pump.
- · When removing and installing the oil pump, use care not to allow dust or dirt to enter the engine.
- · If any portion of the oil pump is worn beyond the specified service limits, replace the oil pump as an assembly.
- · After the oil pump has been installed, check that oil pressure is correct.
- · For engine oil level check (page 3-11).
- · For engine oil and filter change (page 3-12).
- For oil pressure indicator inspection (page 21-20).

### **SPECIFICATIONS**

Unit: mm (in)

l.	TEM	STANDARD	SERVICE LIMIT		
Engine oil capacity	At draining	2.5 liters (2.6 US qt, 2.2 lmp qt)			
	At oil filter change	2.6 liters (2.7 US qt, 2.3 lmp qt)	-		
_	At disassembly	3.2 liters (3.4 US qt, 2.8 lmp qt)	_		
Recommended engine oil		Pro Honda GN4 4-stroke oil (U.S.A. and Canada) or an equivalent API service classification: SG or higher (except oils labeled as energy conserving on the circular API service label) Viscosity: SAE 10W-30 JASO T 903 standard: MA			
Oil pressure at EOP switch		530 kPa (5.4 kgf/cm², 77 psi) at 5,000 rpm/(80°C/176°F)	_		
Oil pump rotor	Tip clearance	0.15 (0.006)	0.20 (0.008)		
	Body clearance	0.15 - 0.21 (0.006 - 0.008)	0.35 (0.014)		
	Side clearance	0.02 - 0.08 (0.001 - 0.003)	0.10 (0.004)		


### **TORQUE VALUES**

EOP switch EOP switch terminal screw Oil pump assembly bolt 12 N·m (1.2 kgf·m, 9 lbf·ft) 1.9 N·m (0.2 kgf·m, 1.4 lbf·ft)

13 N·m (1.3 kgf·m, 10 lbf·ft)

Apply sealant to the threads

### **TOOLS**

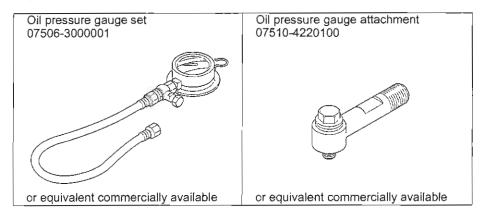

# TROUBLESHOOTING

### Oil level too low

- · Oil consumption
- External oil leak
- Worn piston rings
- Improperly installed piston rings
- Worn cylinders
- Worn stem seals
- · Worn valve guide

### Low oil pressure

- · Oil level low
- Clogged oil strainer
- Faulty oil pump
- Internal oil leak
- Incorrect oil being used

### No oil pressure

- · Oil level too low
- Oil pressure relief valve stuck open
- · Broken oil pump drive chain
- · Broken oil pump drive and/or driven sprocket
- Damaged oil pump
- Internal oil leak

### High oil pressure

- · Oil pressure relief valve stuck closed
- Clogged oil gallery or metering orificeIncorrect oil being used

### Oil contamination

- · Oil or filter not changed often enough
- Worn piston rings

### Oil emulsification


- · Blown cylinder head gasket
- Leaky coolant passage
- · Entry of water

## **OIL PRESSURE INSPECTION**

Remove the left crankcase rear cover (page 2-4).

If the engine is cold, the pressure reading will be abnormally high. Warm up the engine to normal operating temperature before starting this test. Stop the engine.

Remove the rubber cap and disconnect the EOP switch wire by removing the terminal screw.

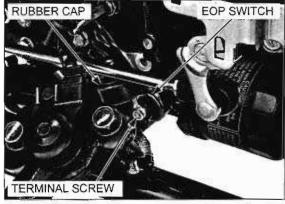

Remove the EOP switch and connect an oil pressure gauge attachment and gauge to the EOP switch hole.

## TOOLS:

Oil pressure gauge set


07506-3000001 or equivalent com-

mercially available (Snap-On MT37A Gauge set)

Oil pressure gauge attachment

07510-4220100 or equivalent commercially available (Snap-On AT77AH

Oil Pressure Adaptor)

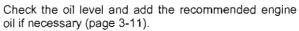

Start the engine and check the oil pressure at 5,000 rpm.

## OIL PRESSURE:

530 kPa (5.4 kgf/cm<sup>2</sup>, 77 psi) at 5,000 rpm (80°C/ 176°F)

Stop the engine.

Do not apply sealant to the thread head 3 - 4 mm (0.1 - 0.2 in).

Apply liquid sealant (Three Bond 1207B or equivalent) to the EOP switch threads as shown and tighten it to the specified torque.

## TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)


Connect the EOP switch wire and tighten the terminal screw to the specified torque.

## TORQUE: 1.9 N·m (0.2 kgf·m, 1.4 lbf·ft)

Install the rubber cap.

Start the engine.

Check that the oil pressure indicator turns off after 1 or 2 seconds. If the oil pressure indicator stays on, stop the engine immediately and determine the cause (page 21-20).

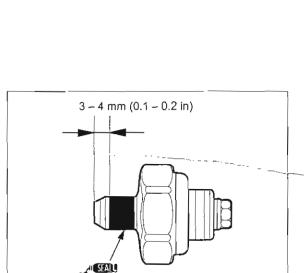




## **OIL PUMP**


## **REMOVAL**

Separate the crankcase (page 12-9).

Remove the bolts and oil pump assembly from the left crankcase.

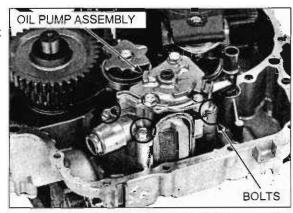


Remove the dowel pin, collars and O-rings.

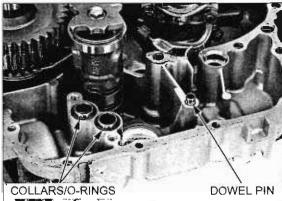


## **DISASSEMBLY**

OIL PUMP BODY


Remove the oil pipe, oil pipe seal and O-ring.

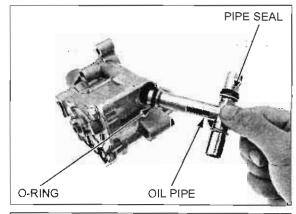


Remove the pressure relief valve and O-ring.

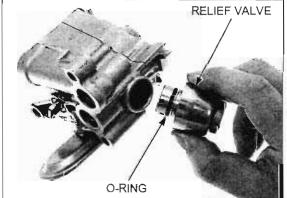


Remove the oil strainer and gasket.

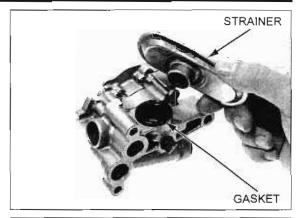

Remove the assembly bolts and pump body from the pump cover.

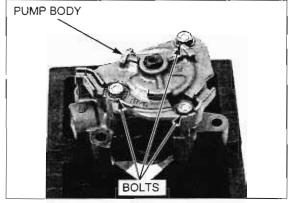

Remove the dowel pins. Remove the washer, drive shaft, drive pin, inner and outer rotors.

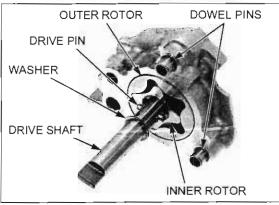


## PRESSURE RELIEF VALVE

Check the operation of the pressure relief valve by pushing on the piston.

The snap ring is under spring pressure. Use care when removing it and wear eye and face protection. Be careful not to lose the disassembled parts.

The snap ring is Remove the snap ring, washer, spring and piston from under spring the pressure relief valve body.

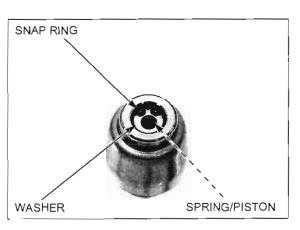


Check the piston for wear, sticking or damage. Check the valve spring for wear or fatigue. Check the relief valve body for clogging or damage.

Clean all parts and assemble the relief valve in the reverse order of disassembly.

#### NOTE

- Install the snap ring with the chamfered edge facing the thrust load side.
- Do not reuse worn snap ring which could easily spin in the groove.
- · Check that the snap ring is seated in the groove.

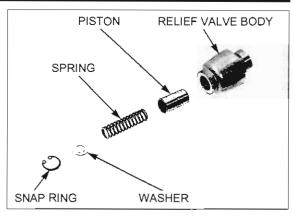

## **INSPECTION**

## NOTE:


Measure each clearance at several points and use the largest reading to compare the service limit.

## **BODY CLEARANCE**

Temporarily assemble the inner rotor, outer rotor, drive pin and pump shaft into the pump body.

Measure the body clearance.


SERVICE LIMIT: 0.35 mm (0.014 in)

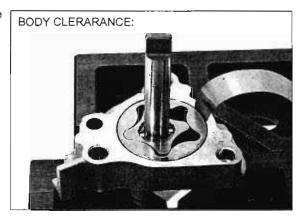

## **TIP CLEARANCE**

Measure the tip clearance.


SERVICE LIMIT: 0.20 mm (0.008 in)

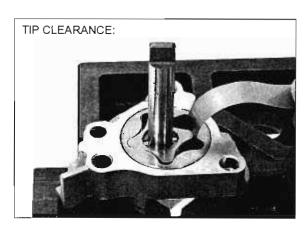

## SIDE CLEARANCE


Measure the side clearance.

SERVICE LIMIT: 0.10 mm (0.004 in)

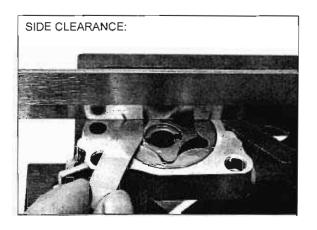

## **OIL PUMP ASSEMBLY**


Dip all parts in clean engine oil.

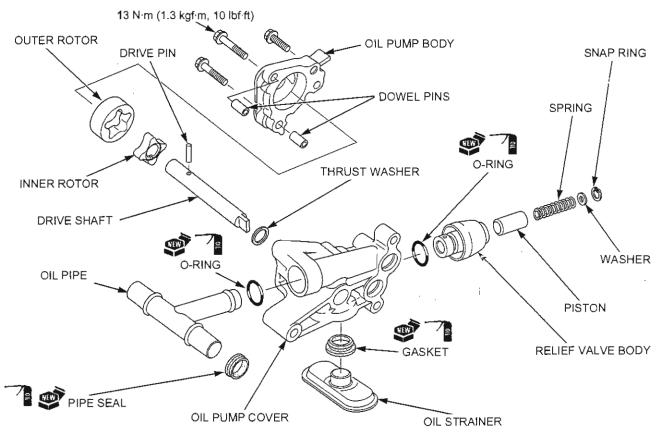

Install the outer and inner rotors to the pump body.

#### NOTE


Install the inner rotor with the groove side facing the pump cover.

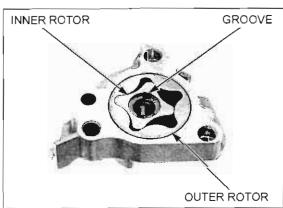

## **LUBRICATION SYSTEM**


Install the drive shaft and drive pin by aligning the drive pin with the grooves in the inner rotor.

Place the washer into the inner rotor groove. Install the dowel pins to the pump body.

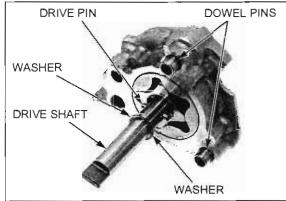

Install the pump cover on the pump body. Install and tighten the assembly bolts to the specified torque.


TORQUE: 13 N·m (1.3 kgf·m, 10 lbf·ft)

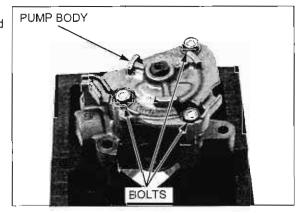

Clean the oil strainer.


Coat a new gasket with engine oil and install it to the pump body.

Install the oil strainer to the pump cover by aligning its side end with the groove on the pump cover.

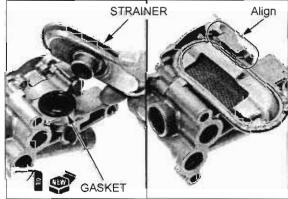

Coat a new O-ring with engine oil and install it to the pressure relief valve.


Install the pressure relief valve into the pump cover.

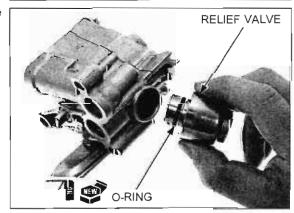

Coat a new oil pipe seal and new O-ring with engine oil, then install them to the oil pipe.

## NOTE:


Install an O-ring with its tapered side facing out. Install the oil pipe to the pump cover securely.

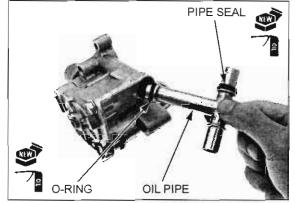


## **INSTALLATION**

Install the dowel pin and collars.

Coat new O-rings with engine oil and install them.

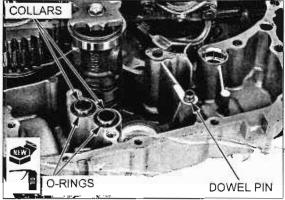


Install the oil pump assembly into the crankcase securely.

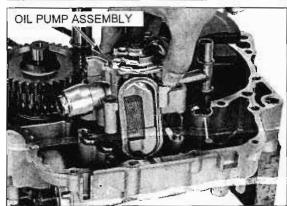

Install and tighten the bolts securely.

Assemble the crankcase (page 12-49).

Check the oil pressure (page 4-5).

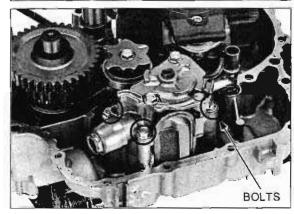

# MEMO


## =

# 

FUEL TANK5-48
AIR CLEANER HOUSING ······ 5-49
THROTTLE BODY 5-51
INTAKE MANIFOLD5-56
INJECTOR 5-58
ECT SENSOR 5-62
BANK ANGLE SENSOR5-63
ENGINE STOP RELAY ······· 5-65
ECM5-66
ENGINE IDLE SPEED5-68
IACV5-68
SECONDARY AIR SUPPLY SYSTEM 5-70
EVAP CONTROL SYSTEM (California type only)5-73

5. FUEL SYSTEM (PGM-FI)

## **COMPONENT LOCATION**

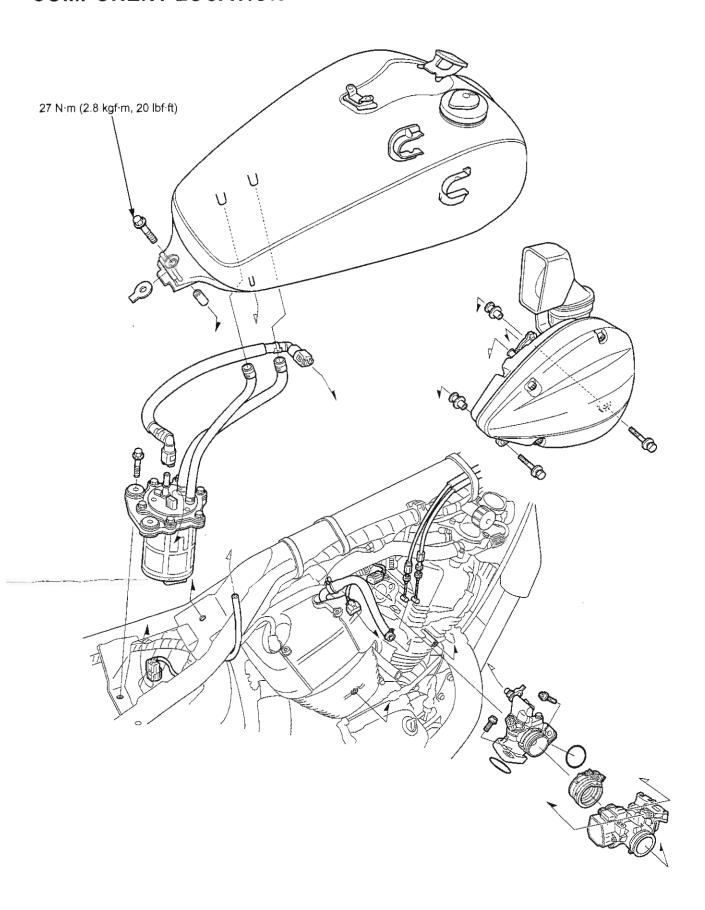

## SERVICE INFORMATION

## GENERAL

- · Before disconnecting the fuel feed hose, relieve pressure from the system by disconnecting the quick connect fitting in the sub fuel tank/fuel pump (page 5-35).
- Bending or twisting the control cable will impair smooth operation and could cause the cable to stick or bend, resulting in loss of vehicle control.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.
- Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle
- Seal the cylinder head intake port with tape or a clean cloth to keep dirt and debris from entering the intake port after the throttle body has been removed.
- Prevent dirt and debris from entering the throttle bore and air passages after the throttle body has been removed. Clean them using compressed air if necessary.
- The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.
- Do not loosen or tighten the white painted bolts, nuts and screws of the throttle body loosening or tightening them can cause throttle valve and idle control failure.
- · A faulty PGM-FI system is often related to poorly connected or corroded connectors. Check those connections before proceeding.
- · When disassembling the PGM-FI parts, note the location of the O-rings. Replace them with new ones upon reassembly.
- Use a digital tester for PGM-FI system inspection.
- For fuel reserve sensor service (page 21-18).

## SPECIFICATIONS

ITEM		SPECIFICATIONS
Throttle body identifica-	VT750C2F/C2S	GQB3A
tion number	VT750C2B	GQ9KA
Engine idle speed		1,200 ± 100 rpm
Throttle grip freeplay		2 – 6 mm (1/16 – 1/4 in)
Fuel injector resistance	Front	11 – 13 kΩ
(20°C/68°F)	Rear	11 – 13 kΩ
PAIR control solenoid valve resistance (20°C/68°F)		23 – 27 Ω
Fuel pressure at idle		333 - 353 kPa (3.4 - 3.6 kgf/cm², 48 - 51 psi)
Fuel pump flow (at 12 V)		50 cm3 (1.7 US oz, 1.8 lmp oz) minimum/10 seconds

## **TORQUE VALUES**

PAIR check valve cover bolt Air cleaner chamber mounting screw Air cleaner chamber connecting tube band screw

ECT sensor

IACV set plate torx screw Throttle cable guide screw Fuel injector mounting bolt Sensor unit torx screw Insulator band screw (Throttle body side) Insulator band screw (Intake manifold side)

Fuel tank mounting bolt Air cleaner cover socket bolt 7 N·m (0.7 kgf·m, 5.2 lbf·ft) 1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)


0.7 N·m (0.1 kgf·m, 0.5 lbf·ft) 24.5 N·m (2.5 kgf·m, 18 lbf·ft) 2.1 N·m (0.2 kgf·m, 1.5 lbf·ft) 3.4 N·m (0.3 kgf·m, 2.5 lbf·ft) 5.1 N·m (0.5 kgf·m, 3.8 lbf·ft) 3.4 N·m (0.3 kgf·m, 2.5 lbf·ft)

See page 5-53

See page 5-58 27 N·m (2.8 kgf·m, 20 lbf·ft) 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

## **FUEL SYSTEM (PGM-FI)**

## **TOOLS**

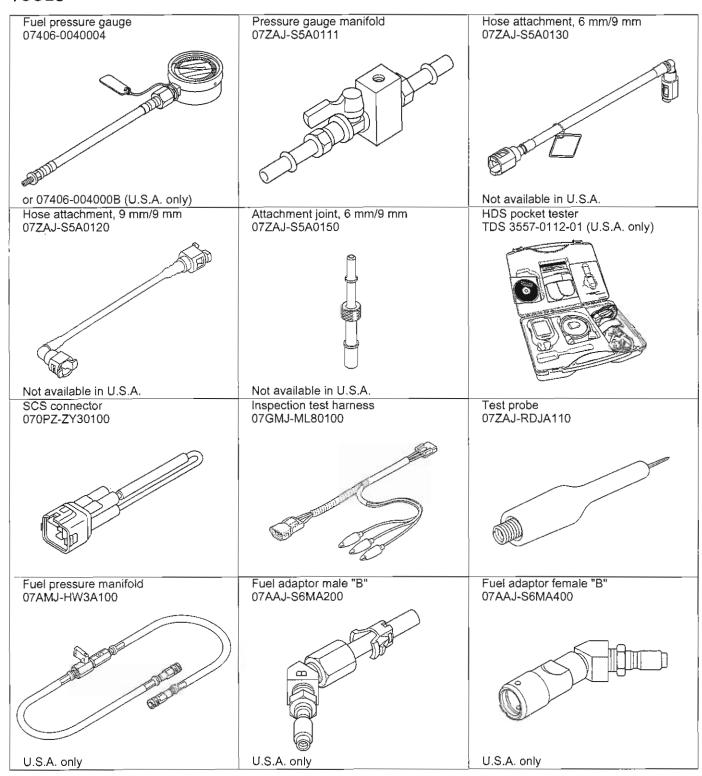


## **PGM-FI SYMPTOM TROUBLESHOOTING**


When the motorcycle has one of these symptoms, check the DTC or MIL blinking, refer to the DTC index (page 5-20) and begin the appropriate troubleshooting procedure. If there are no DTC/MIL blinking stored in the ECM memory, do the diagnostic procedure for the symptom, in sequence listed below, until you find cause.

Symptom	Diagnosis procedure	Also check for
Engine cranks but won't start (No DTC and MIL blinking)	Crank the starter for more than 10 seconds and check the DTC (page 5-17) and execute the troubleshooting according to the DTC.     Inspect the fuel supply system (page 5-35).	No fuel to injector Clogged fuel filter Pinched or clogged fuel feed hose Pinched or clogged fuel tank breather hose Faulty fuel pump Faulty fuel pump circuits Intake air leak Contaminated/deteriorated fuel Faulty fuel injector IACV stuck Faulty ignition system
Engine cranks but won't start (No fuel pump operation sound when the turning the ig- nition ON)	ECM power/ground circuits mal- function (page 5-66)     Inspect the fuel supply system (page 5-35).	Open circuit in power input and/or ground wire of the ECM     Faulty bank angle sensor or related circuit     Faulty engine stop relay or related circuit     Faulty engine stop switch or related circuit     Slown FI fuse (15 A)
Engine stalls, hard to start, rough idling	<ol> <li>Check the idle speed.</li> <li>Check the IACV.</li> <li>Inspect the fuel supply system (page 5-35).</li> <li>Inspect the battery charging system (page 18-9).</li> </ol>	Restricted fuel feed hose Contaminated/detenorated fuel Intake air leak Faulty IACV Faulty MAP sensor Restricted fuel tank breather hose Faulty ignition system Faulty battery charging system
Afterburn when engine brak- ing is used	Check the PAIR system (page 5-70).	Faulty PAIR system     Faulty PAIR control solenoid valve     Faulty PAIR check valve     Clogged hose of the PAIR system     Faulty ignition system
Backfiring or misfiring during acceleration	Check the ignition system.	Faulty ignition system
Poor performance (driveability) and poor fuel economy	Inspect the fuel supply system (page 5-35).     Inspect the air cleaner element (page 3-6).	<ul> <li>Pinched or clogged fuel feed hose</li> <li>Faulty pressure regulator</li> <li>Faulty injector</li> <li>Faulty ignition system</li> <li>Clogged air cleaner element</li> </ul>
Idle speed is below specifica- tions or fast idle too low (No DTC and MIL blinking)	Check the idle speed.     Check the IACV.	<ul> <li>IACV stuck closed</li> <li>Faulty fuel supply system</li> <li>Faulty ignition system</li> <li>Faulty MAP sensor</li> </ul>
Idle speed is above specifications or fast idle too high (No DTC and MIL blinking)	Check the idle speed.     Check the throttle operation and freeplay.     Check the IACV.	<ul> <li>IACV stuck opened</li> <li>Faulty ignition system</li> <li>Intake air leak</li> <li>Engine top end problem</li> <li>Air cleaner condition</li> </ul>
MIL stays ON but no DTC set, or MIL never comes ON at all	Troubleshoot the MIL circuit.	Faulty MIL circuit
MIL stays ON at all (No DTC set)	Inspect the DLC circuit.	Short circuit in DLC related wire


## PGM-FI SYSTEM LOCATION

VT750C2/C2B

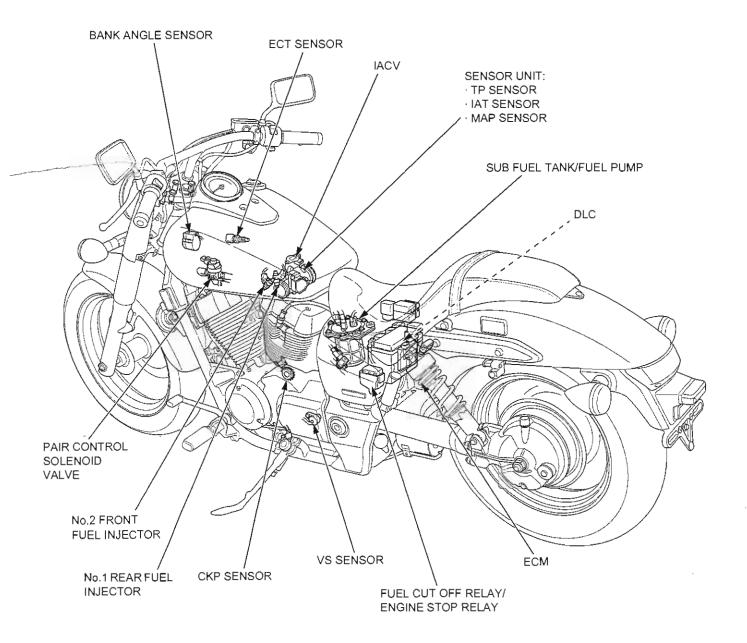

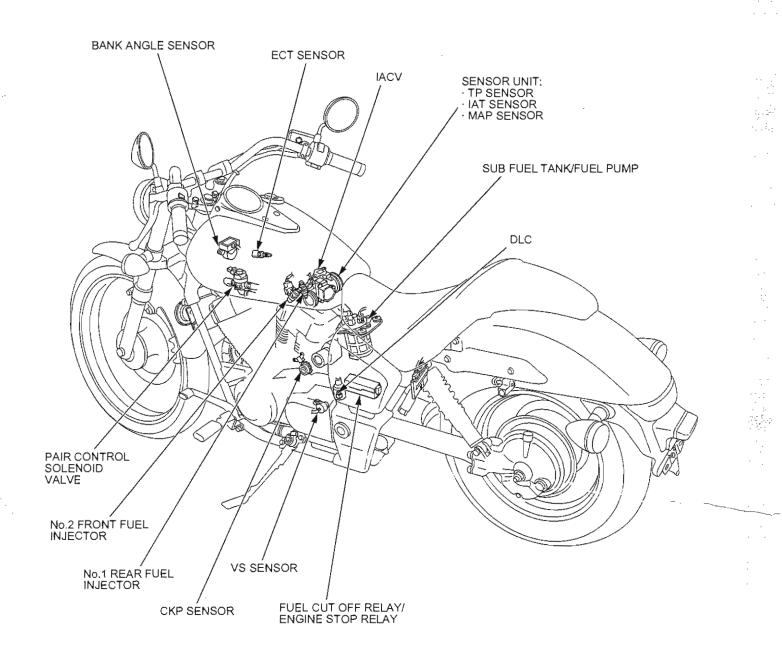


## **PGM-FI SYSTEM DIAGRAM**

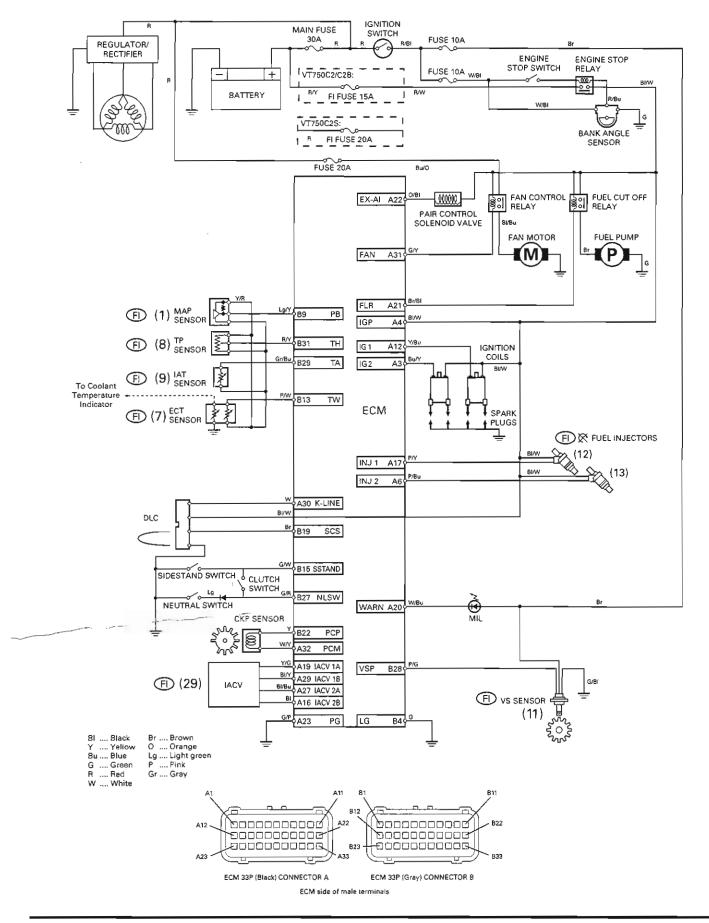


## **CONNECTOR LOCATION**

NOTE 1: Remove the steering side cover (page 2-3).

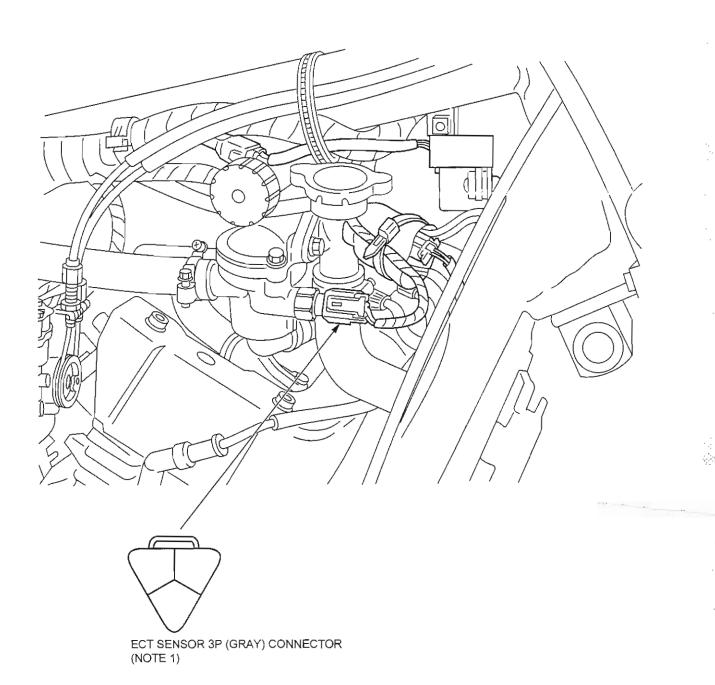

NOTE 1: Remove the air cleaner housing (page 5-49). NOTE 2: Remove the fuel tank (page 5-48).

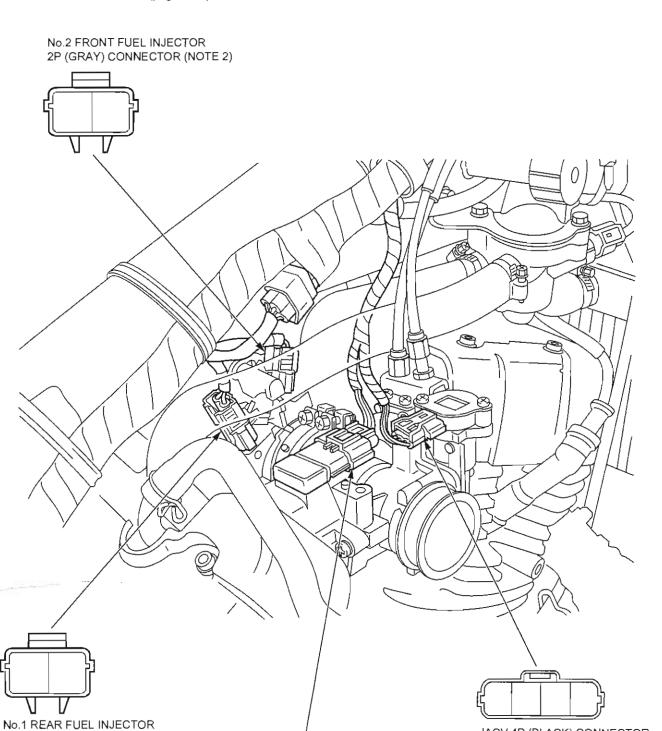

SENSOR UNIT 5P (BLACK) CONNECTOR

(NOTE 1)

IACV 4P (BLACK) CONNECTOR


(NOTE 2)

5-10

2P (GRAY) CONNECTOR (NOTE 2)


NOTE 1: Remove the left side cover (page 2-3).

VT750C2/C2B:

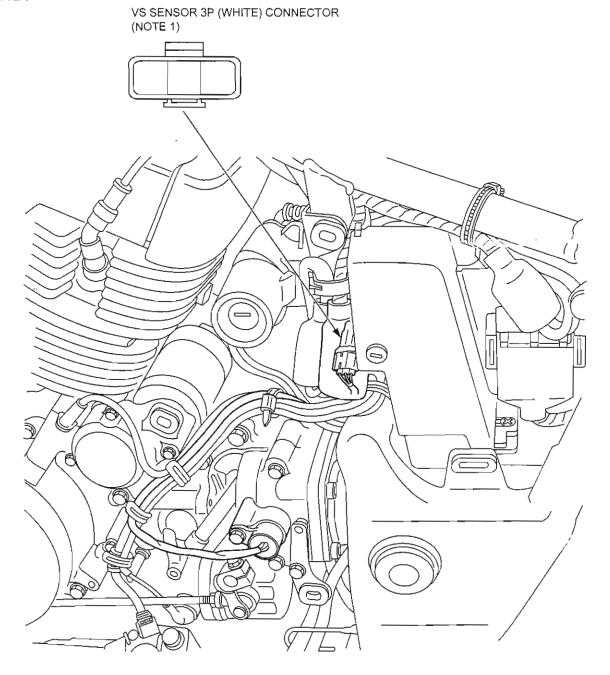


NOTE 1: Remove the left side cover (page 2-3).

VT750C2S:

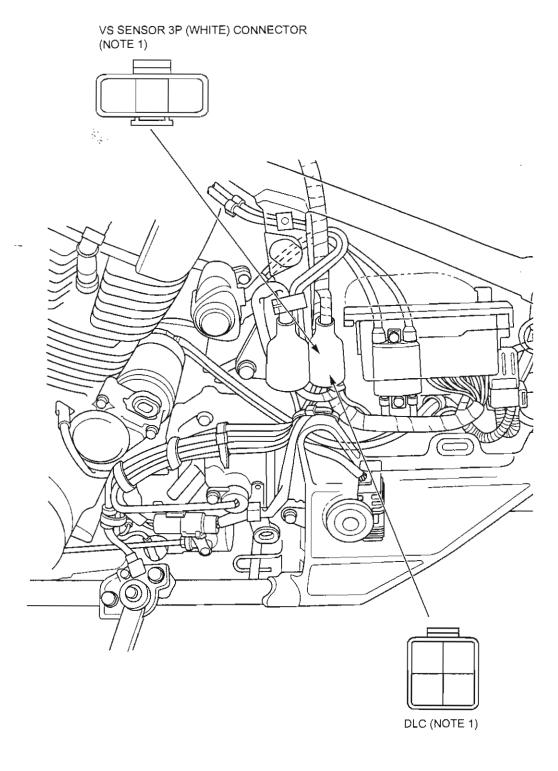


NOTE 1: Remove the right side cover (page 2-3).

VT750C2/C2B:

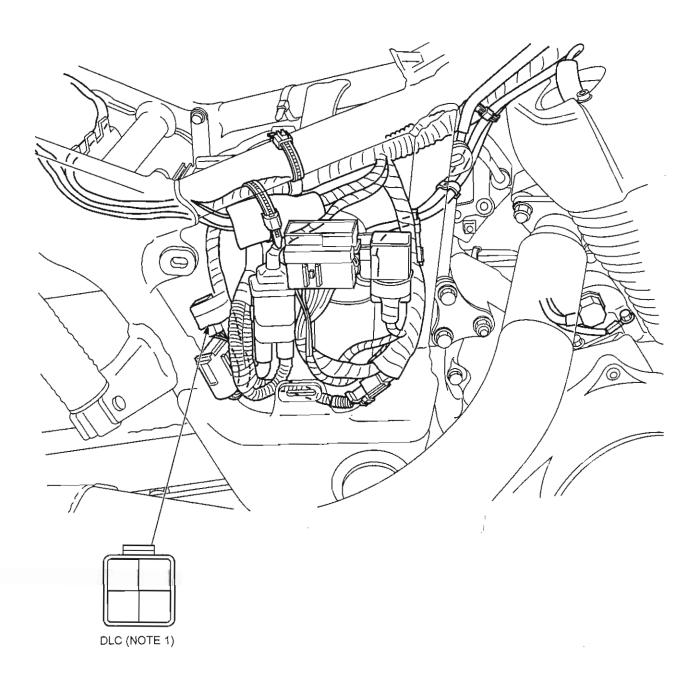

NOTE 1: Remove the ECM (page 5-67).

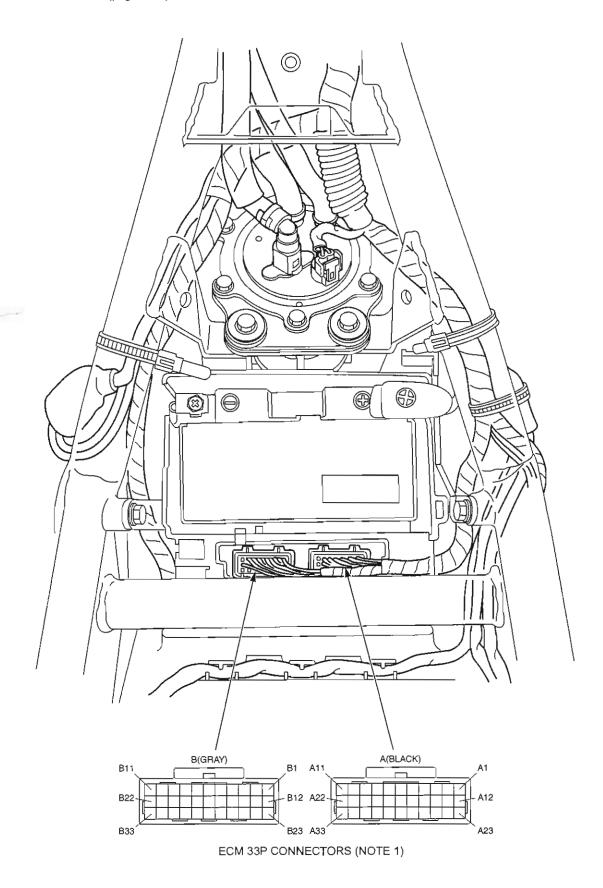

## PGM-FI TROUBLESHOOTING INFORMATION

## **GENERAL TROUBLESHOOTING**

#### Intermittent Failure

The term "intermittent failure" means a system may have had a failure, but it checks OK now. If the MIL does not come on, check for poor contact or loose pins at all connectors related to the circuit that of the troubleshooting. If the MIL was on, but then went out, the original problem may be intermittent.

## Opens and Shorts

"Opens" and "Shorts" are common electrical terms. An open is a break in a wire or at a connection. A short is an accidental connection of a wire to ground or to another wire. In simple electronics, this usually means something will not work at all. With ECMs this can something mean something work, but not the way it's supposed to.

## If the MIL has come on

Refer to DTC READOUT (page 5-17).

## If the MIL did not stay on

If the MIL did not stay on, but there is a driveability problem, do the SYMPTOM TROUBLESHOOTING (page 5-5).

## SYSTEM DESCRIPTION

## **SELF-DIAGNOSIS SYSTEM**

The PGM-FI system is equipped with the self-diagnostic system. When any abnormality occurs in the system, the ECM turns on the MIL and stores a DTC in its erasable memory.

#### **FAIL-SAFE FUNCTION**

The PGM-FI system is provided with a fail-safe function to secure a minimum running capability even when there is trouble in the system. When any abnormality is detected by the self-diagnosis function, running capability is maintained by pre-programed value in the simulated program map. When any abnormality is detected in the injector(s), the fail-safe function stops the engine to protect it from damage.


## DTC (Diagnostic Trouble Code)

 The DTC is composed of a main code and a sub code and it is displayed as a hyphenated number when retrieved from the ECM with the HDS pocket tester.

The digits in front of the hyphen are the main code, they indicate the component of function failure.

The digits behind the hyphen are the sub code, they detail the specific symptom of the component or function failure. For example, in the case of the TP sensor:


- DTC 08 1 = (TP sensor voltage) (lower than the specified value)
- DTC 08 2 = (TP sensor voltage) (higher than the specified value)
- The MAP, ECT, TP and IAT sensor diagnosis will be made according to the voltage output of the affected sensor.
   If a failure occurs, the ECM determines the Function Failure, compares the sensor voltage output to the standard value, and then outputs the corresponding DTC to the HDS pocket tester.
   For example:
  - If the input voltage line (A) on the MAP sensor is opened, the ECM detects the output voltage is about 5 V, then the DTC 1-2 (MAP sensor circuit high voltage) will be displayed.
  - If the input voltage line (B) on the TP sensor is opened, the ECM detects the output voltage is 0 V, then the DTC 8-1 (TP sensor circuit low voltage) will be displayed.

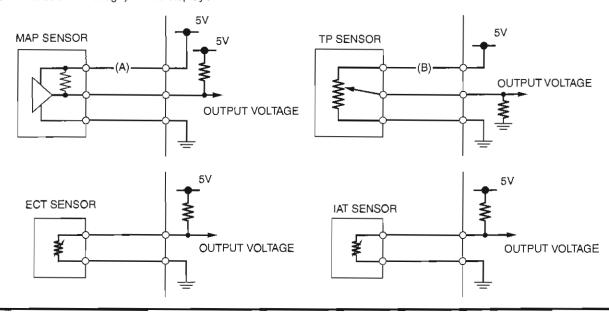

## **FUEL SYSTEM (PGM-FI)**

## MIL Blink Pattern

- If the HDS pocket tester is not available, DTC can be read from the ECM memory by the MIL blink pattern.
- The number of MIL blinks is the equivalent the main code of the DTC (the sub code cannot be displayed by the MIL).
- The MIL will blink the current DTC, in case the ECM detects the problem at present, when the ignition switch ON or idling with the sidestand down. The MIL will stay ON when the engine speed is over 2,000 min<sup>-1</sup> (rpm) or with the sidestand up.
- The MIL has two types of blinks, a long blink and short blink. The long blinking lasts for 1.3 seconds, the short blinking lasts for 0.5 seconds. One long blink is the equivalent of ten short blinks. For example, when two long blinks are followed by five short blinks, the MIL is 25 (two long blinks = 20 blinks, plus five short blinks).
- When the ECM stores more than one DTC, the MiL will indicate them by blinking in the order from the lowest number to highest number.

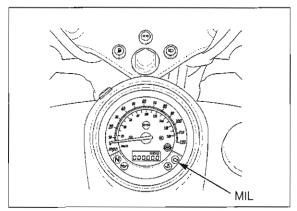

## MIL Check

When the ignition switch is turned to "ON" and engine stop switch "O", the MIL will stay on for a few seconds, then go off. If the MIL does not come on, troubleshoot the MIL circuit (page 5-34).

## **CURRENT DTC/FREEZE DTC**

The DTC is indicated in two ways according to the failure status.

- In case the ECM detects the problem at present, the MIL will come on and the MIL will start to blink as its DTC when the sidestand is lowered. It is possible to readout the MIL blink pattern as the current DTC.
- In case the ECM does not detect any problem at present but has a problem stored in its memory, the MIL will not light and blink.
   If it is necessary to retrieve the past problem, readout the freeze DTC by following the DTC readout procedure.

## HDS POCKET TESTER INFORMATION

The HDS can readout the DTC, freeze data, current data and other ECM condition.

## How to connect the HDS pocket tester (VT750C2/C2B)

Turn the ignition switch to "OFF".

Remove the right side cover (page 2-3).

Remove the dummy connector from the DLC.

Connect the HDS pocket tester to the DLC.

Turn the ignition switch to "ON" and engine stop switch "O", check the DTC and freeze data.

## NOTE:

 Freeze data indicates the engine conditions when the first malfunction was detected.

# DUMMY CONNECTOR DLC

## How to connect the HDS pocket tester (VT750C2S)

Turn the ignition switch to "OFF".

Remove the left side cover (page 2-3).

Remove the dummy connector from the DLC.

Connect the HDS pocket tester to the DLC.


Turn the ignition switch to "ON" and engine stop switch "O", check the DTC and freeze data.

#### NOTE

 Freeze data indicates the engine conditions when the first malfunction was detected.

## ECM reset

The HDS can reset the ECM data including the DTC, freeze data and some learning memory.

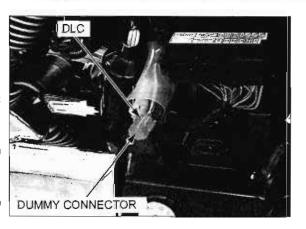

## **DTC READOUT**


Start the engine and check the MIL.

- If the engine will not start, turn the starter motor for more than 10 seconds and check that the MIL blinks.
- When the ignition switch is turned to "ON", the MIL will stay on for a few seconds, then go off.

If the MIL stays on or blinks, connect the HDS pocket tester to the DLC (page 5-16).

Read the DTC, freeze data and follow the troubleshooting index (page 5-20).

To read the DTC with the MIL blinking, refer to the following procedure.

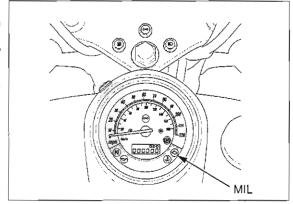

## Reading DTC with the MIL (VT750C2/C2B)

Turn the ignition switch to "OFF".

Remove the right side cover (page 2-3).

Remove the dummy connector and short the DLC terminals using the special tool.

TOOL:

SCS connector

070PZ-ZY30100

CONNECTION: Brown - Green

Make sure the engine stop switch is turned to "O".

Turn the ignition switch to "ON", read, note the MIL blinks and refer to the troubleshooting index (page 5-20).

NOTE:

If the ECM has any DTC in its memory, the MIL will start blinking.

## Reading DTC with the MIL (VT750C2/C2B)

Turn the ignition switch to "OFF".

Remove the left side cover (page 2-3).

Remove the dummy connector and short the DLC terminals using the special tool.

TOOL:

SCS connector

070PZ-ZY30100

## CONNECTION: Brown - Green


Make sure the engine stop switch is turned to "O".

Turn the ignition switch to "ON", read, note the MIL blinks and refer to the troubleshooting index (page 5-20).

NOTE:

If the ECM has any DTC in its memory, the MIL will start blinking.



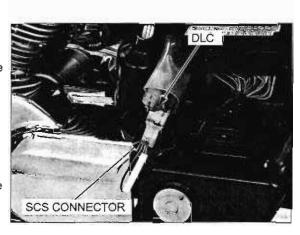

## **FUEL SYSTEM (PGM-FI)**

## **CLEARING DTC**

Connect the HDS pocket tester to the DLC (page 5-16).

Clear the DTC with the HDS while the engine is stopped.

To clear the DTC without HDS, refer to the following procedure.

## How to clear the DTC with SCS connector (VT750C2/C2B)

- 1. Remove the right side cover (page 2-3).
- 2. Turn the ignition switch to "OFF".
- Make sure the engine stop switch is turned to "O".

Remove the dummy connector and short the DLC terminals using the special tool.

TOOL:

SCS connector

070PZ-ZY30100

CONNECTION: Brown - Green

- 4. Turn the ignition switch to "ON".
- 5. Remove the special tool from the DLC.

 The MIL will light for approximately 5 seconds. While the MIL lights, short the DLC terminals again with the special tool. The self-diagnostic memory is erased if the malfunction indicator goes off and starts blinking.

#### NOTE:

- The DLC must be jumped while the MIL lights. If not, the MIL will not start blinking.
- · Note that the self-diagnostic memory cannot be erased if the ignition switch is turned to "OFF" before the MIL starts blinking.

## How to clear the DTC with SCS connector (VT750C2S)

- 1. Remove the left side cover (page 2-3).
- 2. Turn the ignition switch to "OFF".
- Make sure the engine stop switch is turned to "O".

Remove the dummy connector and short the DLC terminals using the special tool.

TOOL:

SCS connector

070PZ-ZY30100

CONNECTION: Brown - Green

- 4. Turn the ignition switch to "ON".
- 5. Remove the special tool from the DLC.

 The MIL will light for approximately 5 seconds. While the MIL lights, short the DLC terminals again with the special tool. The self-diagnostic memory is erased if the malfunction indicator goes off and starts blinking.

## NOTE:

- The DLC must be jumped while the MIL lights. If not, the MIL will not start blinking.
- Note that the self-diagnostic memory cannot be erased if the ignition switch is turned to "OFF" before the MIL starts blinking.



SCS CONNECTOR

SCS CONNECTOR

## **CIRCUIT INSPECTION**


## INSPECTION AT ECM CONNECTOR

- Always clean around and keep any foreign material away from the ECM connector before disconnecting it.
- A faulty PGM-FI system is often related to poorly connected or corroded connections. Check those connections before proceeding.
- In testing at ECM connector (wire side) terminal, always use the test probe. Insert the test probe into the connector terminal, then attach the digital multimeter probe to the test probe.

TOOL:

Test probe

07ZAJ-RDJA110

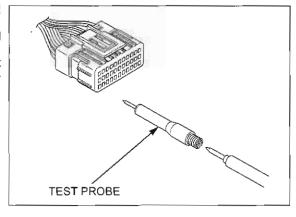

## FUEL SYSTEM (PGM-FI)

# DTC INDEX

DTC (MIL blinks)	Function Failure	Symptom/Fail-safe function	Refer to
1-1 (1)	MAP sensor circuit low voltage (less than 0.2 V)  Sensor unit (MAP sensor) or its circuit malfunction	Engine operates normally     Pre-Program value: 760 mmHg/ 1,013 hPa	5-21
1-2 (1)	MAP sensor circuit high voltage (more than 3.9 V)  Loose or poor contact of the sensor unit connector  Sensor unit (MAP sensor) or its circuit malfunction	Engine operates normally     Pre-Program value: 760 mmHg/ 1,013 hPa	5-22
7-1 (7)	ECT sensor circuit low voltage (less than 0.08 V)  • ECT sensor or its circuit malfunction	<ul> <li>Hard start at a low temperature</li> <li>Pre-Program value: 90°C/194°F</li> <li>Cooling fan turns on</li> </ul>	5-23
7-2 (7)	ECT sensor circuit high voltage (more than 4.93 V)  Loose or poor contact of the ECT sensor connector  ECT sensor or its circuit malfunction	<ul> <li>Hard start at a low temperature</li> <li>Pre-Program value: 90°C/194°F</li> <li>Cooling fan turns on</li> </ul>	5-24
8-1 (8)	TP sensor circuit low voltage (less than 0.3 V)  • Sensor unit (TP sensor) or its circuit malfunction	Poor engine acceleration     Pre-Program value: 0°	5-25
8-2 (8)	TP sensor circuit high voltage (more than 4.93 V)  Loose or poor contact of the sensor unit connector  Sensor unit (TP sensor) or its circuit malfunction	Poor engine acceleration     Pre-Program value: 0°	5-27
9-1 (9)	IAT sensor circuit low voltage (less than 0.08 V)  • Sensor unit (IAT sensor) or its circuit malfunction	Engine operates normally     Pre-program value: 35°C/77°F	5-27
9-2 (9)	IAT sensor circuit high voltage (more than 4.93 V)  Loose or poor contact of the sensor unit connector  Sensor unit (IAT sensor) or its circuit malfunction	Engine operates normally     Pre-Program value: 35°C/77°F	5-28
11-1 (11)	VS sensor no signal Loose or poor contact of the VS sensor connector VS sensor or its circuit malfunction	Engine operates normally	5-29
12-1 (12)	No.1 (rear) injector circuit malfunction  Loose or poor contact of the injector connector  Injector or its circuit malfunction	Engine does not start     Injectors, fuel pump and ignition shut down	5-31
13-1 (13)	No.2 (front) injector circuit malfunction  Loose or poor contact of the injector connector  Injector or its circuit malfunction	Engine does not start     Injectors, fuel pump and ignition shut down	5-33
29-1 (29)	IACV circuit malfunction     Loose or poor contact of the IACV connector     IACV or its circuit malfunction	Engine stalls, hard to start, rough idling	5-33
33-2 (-)	ECM EEPROM malfunction	Engine operates normally	5-34

## DTC TROUBLESHOOTING

# DTC 1-1 (MAP SENSOR LOW VOLTAGE)

## 1. MAP Sensor System Inspection

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Check the MAP sensor with the HDS pocket tester.

## Is about 0 V indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

 Loose or poor contact on the sensor unit 5P connector

## 2. MAP Sensor Input Voltage Inspection

Turn the ignition switch to "OFF".

Disconnect the sensor unit 5P connector.

Turn the ignition switch to "ON" and engine stop switch "O".


Measure the voltage at the wire side.

CONNECTION: Yellow/red (+) - Green/orange (-)

## Is the voltage within 4.75 - 5.25 V?

YES - GO TO STEP 4.

NO - GO TO STEP 3.

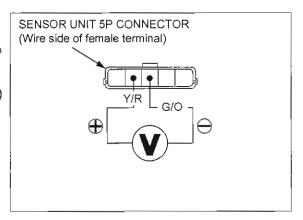

## 3. MAP Sensor Input Line Inspection

Turn the ignition switch to "OFF". Disconnect the ECM 33P (Black) connector.

Check for continuity at the Yellow/red wire between the sensor unit 5P and ECM 33P (Black) connectors.

CONNECTION: A9 - Yellow/red

TOOL:

Test probe

07ZAJ-RDJA110

## Is there continuity?

YES - Replace the ECM with a known good one, and recheck,

NO - Open circuit in Yellow/red wire

# 4. MAP Sensor Output Line Short Circuit Inspection

Connect the ECM 33P (Black) connector.


Check for continuity between the sensor unit 5P connector terminal of the wire side and ground.


CONNECTION: Light green/yellow - Ground

## Is there continuity?

YES - Short circuit in Light green/yellow wire

NO - GO TO STEP 5.

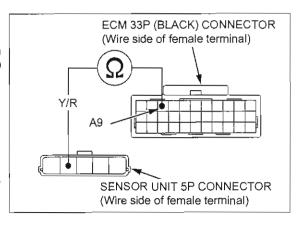

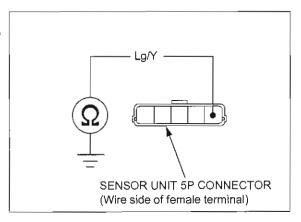

## 5. MAP Sensor Inspection

Replace the sensor unit with a known good one (page 5-51).

Clear the DTC (page 5-18).

Turn the ignition switch to "ON" and engine stop switch "O".

Check the MAP sensor with the HDS pocket tester.

## Is DTC 1-1 indicated?

YES - Replace the ECM with a known good one, and recheck.

NO - Faulty original sensor unit (MAP sensor)

# DTC 1-2 (MAP SENSOR HIGH VOLTAGE)

 Before starting the inspection, check for loose or poor contact on the sensor unit 5P connector and recheck the DTC.

## 1. MAP Sensor System Inspection 1

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Check the MAP sensor with the HDS pocket tester.

## Is about 5 V indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

 Loose or poor contact on the sensor unit 5P connector

## 2. MAP Sensor System Inspection 2

Turn the ignition switch to "OFF".

Disconnect the sensor unit 5P connector. Connect the sensor unit terminals at the wire side with a jumper wire.

# CONNECTION: Light green/yellow – Green/orange

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Check the MAP sensor with the HDS pocket tester.

## Is about 0 V indicated?

YES - Faulty sensor unit (MAP sensor)

NO - GO TO STEP 3.

## 3. MAP Sensor Input Voltage Inspection

Turn the ignition switch to "OFF". Remove the jumper wire.

Turn the ignition switch to "ON" and engine stop switch "O".

Measure the voltage at the wire side.


## CONNECTION: Yellow/red (+) - Green/orange (-)


## Is the voltage within 4.75 - 5.25V?

YES - GO TO STEP 4.

NO - · Open circuit in Green/orange wire

· Open circuit in Yellow/red wire

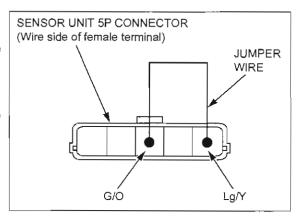

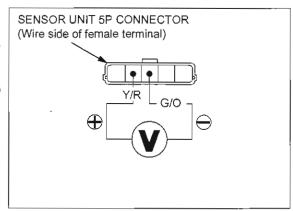

# 4. MAP Sensor Output Line Open Circuit Inspection

Disconnect the ECM 33P (Gray) connector. Check for continuity at the Light green/yellow wire between the sensor unit 5P and ECM 33P (Gray) connectors.

CONNECTION: B9 - Light green/yellow

TOOL:


Test probe

07ZAJ-RDJA110

## Is there continuity?

YES - Replace the ECM with a known good one, and recheck.

NO - Open circuit in Light green/yellow wire

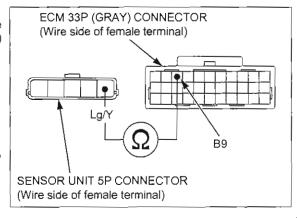

# DTC 7-1 (ECT SENSOR LOW VOLTAGE)

## 1. ECT Sensor System Inspection

Turn the ignition switch to "ON" and engine stop switch "O".

Check the ECT sensor with the HDS pocket tester.

## Is about 0 V indicated?

NO - Intermittent failure

YES - GO TO STEP 2.

## 2. ECT Sensor Inspection

Turn the ignition switch to "OFF". Disconnect the ECT sensor 3P (Gray) connector.

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Check the ECT sensor with the HDS pocket tester.

## Is about 0 V indicated?

NO - GO TO STEP 3.

YES - GO TO STEP 4.

## 3. ECT Sensor Resistance Inspection

Turn the ignition switch to "OFF".


Measure the resistance at the ECT sensor terminals.

CONNECTION: Pink/white (+) – Green/orange (–) STANDARD: 2.3 – 2.6 kΩ (20°C/68°F)

## Is the resistance within 2.3 – 2.6 k $\Omega$ ?

YES - Replace the ECM with a known good one, and recheck.

NO - Faulty ECT sensor

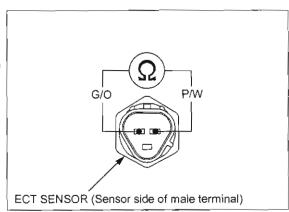

## 4. ECT Sensor Short Circuit Inspection


Check for continuity between the ECT sensor 3P (Gray) connector of the wire side and ground.

## CONNECTION: Pink/white - Ground

## Is there continuity?

YES - Short circuit in Pink/White wire

 NO - Replace the ECM with a known good one, and recheck.

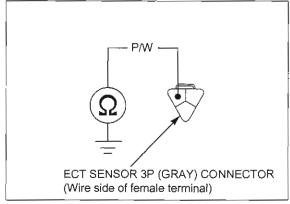

# DTC 7-2 (ECT SENSOR HIGH VOLTAGE)

 Before starting the inspection, check for loose or poor contact on the ECT sensor 3P connector and recheck the DTC.

## 1. ECT Sensor System Inspection

Turn the ignition switch to "ON" and engine stop switch "O".

Check the ECT sensor with the HDS pocket tester.

## Is about 5 V indicated?

NO - Intermittent failure

 Loose or poor contact on the ECT sensor 3P (Gray) connector

YES - GO TO STEP 2.

## 2. ECT Sensor Inspection

Turn the ignition switch to "OFF".

Disconnect the ECT sensor 3P (Gray) connector. Connect the ECT sensor 3P connector of the wire side terminals with a jumper wire.

## CONNECTION: Pink/white - Green/orange


Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Check the ECT sensor with the HDS pocket tester.

## Is about 0 V indicated?

YES - Faulty ECT sensor

NO - GO TO STEP 3.

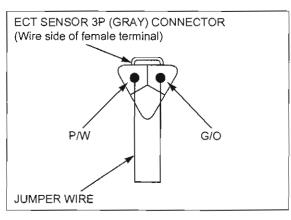

## 3. ECT Sensor Open Circuit Inspection

Turn the ignition switch to "OFF". Disconnect the jumper wire.

Disconnect the ECM 33P connectors.

Check for continuity between the ECM and ECT sensor connectors of the wire side.

CONNECTION: B13 - Pink/white A18 - Green/orange

TOOL: Test probe


07ZAJ-RDJA110

## Is there continuity?

YES - Replace the ECM with a known good one, and recheck.

NO - Open circuit in Pink/white wire

· Open circuit in Green/orange wire

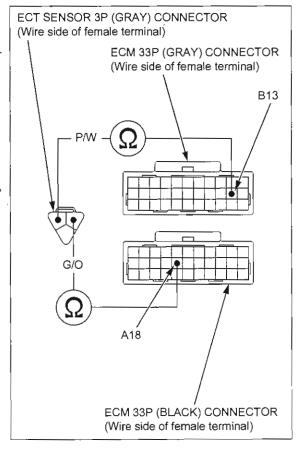

## DTC 8-1 (TP SENSOR LOW VOLTAGE)

 Before starting the inspection, check for loose or poor contact on the sensor unit 5P connector and recheck the DTC.

## 1. TP Sensor System Inspection

Turn the ignition switch to "ON" and engine stop switch "O".

Check the TP sensor with the HDS pocket tester when the throttle fully closed.

## Is about 0 V indicated?

YES - GO TO STEP 2.

NO - • Intermittent failure

 Loose or poor contact on the sensor unit 5P connector

## 2. TP Sensor Input Voltage Inspection

Turn the ignition switch to "OFF".

Disconnect the sensor unit 5P connector.

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".


Measure the voltage at the wire side.

CONNECTION: Yellow/red (+) - Green/orange (-)

Is the voltage within 4.75 - 5.25 V?

YES - GO TO STEP 4.

NO - GO TO STEP 3.

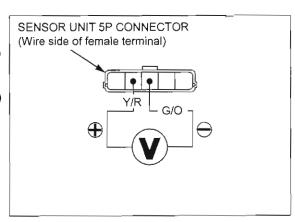

## 3. TP Sensor Circuit Inspection

Turn the ignition switch to "OFF". Disconnect the ECM 33P (Black) connector. Check for continuity at the Yellow/red wire between the sensor unit 5P and ECM 33P (Black) connectors.

CONNECTION: A9 - Yellow/red

TOOL:

Test probe

07ZAJ-RDJA110

#### Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

NO - Open circuit in Yellow/red wire

## 4. TP Sensor Output Line Open Circuit Inspection

Turn the ignition switch to "OFF". Disconnect the ECM 33P (Gray) connector. Check for continuity at the Red/yellow wire between the sensor unit 5P and ECM 33P (Gray) connectors.

CONNECTION: B31 - Red/yellow

TOOL:

Test probe

07ZAJ-RDJA110

## Is there continuity?

YES - GO TO STEP 5.

NO - Open circuit in Red/yellow wire

## 5. TP Sensor Output Line Short Circuit Inspection

Connect the ECM 33P (Gray) connector. Disconnect the sensor unit 5P connector.

Check for continuity between the sensor unit 5P connector terminal of the wire side and ground.


CONNECTION: Red/yellow - Ground


## Is there continuity?

YES - Short circuit in Red/yellow wire

NO - GO TO STEP 6.

# ECM 33P (BLACK) CONNECTOR (Wire side of female terminal) Y/R A9 SENSOR UNIT 5P (BLACK) CONNECTOR (Wire side of female terminal)

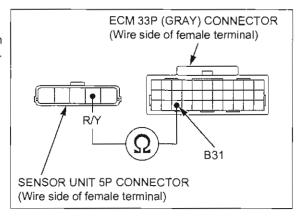

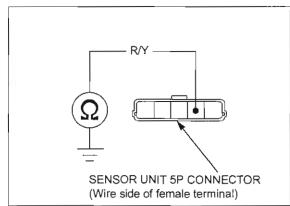

## 6. TP Sensor Inspection

Replace the sensor unit with a known good one. Clear the DTC (page 5-18).

Turn the ignition switch to "ON" and engine stop switch "O".

Check the TP sensor with the HDS pocket tester.

## Is DTC 8-1 indicated?

YES - Replace the ECM with a known good one, and recheck.

NO - Faulty original sensor unit (TP sensor)

## DTC 8-2 (TP SENSOR HIGH VOLTAGE)

## 1. TP Sensor System Inspection

Turn the ignition switch to "ON" and engine stop switch "O".

Check the TP sensor with the HDS pocket tester.

## Is about 5 V indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

## 2. TP Sensor Input Voltage Inspection

Turn the ignition switch to "OFF".

Disconnect the sensor unit 5P connector.

Turn the ignition switch to "ON" and engine stop switch "O".

Measure the voltage at the wire side.

CONNECTION: Yellow/red (+) - Green/orange (-)


Is the voltage within 4.75 - 5.25 V?

YES - GO TO STEP 3.

NO

Open circuit in Green/orange wire

· Open circuit in Yellow/red wire

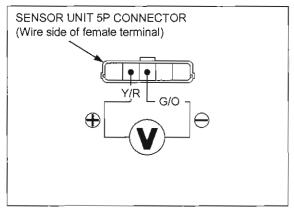

## 3. TP Sensor Resistance Inspection

Turn the ignition switch to "OFF".


Remove the throttle body (page 5-51). Measure the resistance at the sensor unit (TP sensor) side.

CONNECTION: Red/yellow - Green/orange

Is the resistance within  $0.5 - 1.5 \text{ k}\Omega$ ?

YES - Replace the ECM with a known good one, and recheck.

NO - Faulty sensor unit (TP sensor)

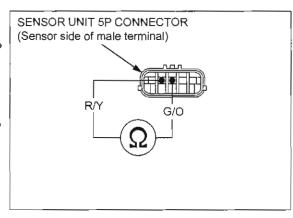

## DTC 9-1 (IAT SENSOR LOW VOLTAGE)

## 1. IAT Sensor System Inspection

Turn the ignition switch to "ON" and engine stop switch "O".

Check the IAT sensor with the HDS pocket tester.

## Is about 0 V indicated?

YES - GO TO STEP 2.

NO

- • Intermittent failure
  - Loose or poor contact on the sensor unit 5P connector

## 2. IAT Sensor Inspection

Turn the ignition switch to "OFF".

Disconnect the sensor unit 5P connector.

Turn the ignition switch to "ON" and engine stop switch "O".

Check the IAT sensor with the HDS pocket tester.

## Is about 0 V indicated?

YES - GO TO STEP 3.

NO - Faulty sensor unit (IAT sensor)

## 3. IAT Sensor Output Line Short Circuit Inspection

Turn the ignition switch to "OFF".


Check for continuity between the sensor unit 5P connector terminal of the wire side and ground.

## CONNECTION: Gray/blue - Ground

## Is there continuity?

YES - Short circuit in Gray/blue wire

NO – Replace the ECM with a known good one, and recheck.

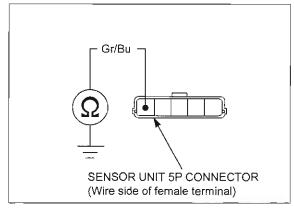

# DTC 9-2 (IAT SENSOR HIGH VOLTAGE)

 Before starting the inspection, check for loose or poor contact on the sensor unit 5P connector and recheck the DTC.

## 1. IAT Sensor System Inspection

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Check the IAT sensor with the HDS pocket tester.

## Is about 5 V indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

 Loose or poor contact on the sensor unit 5P connector

## 2. IAT Sensor Inspection

Turn the ignition switch to "OFF".

Disconnect the sensor unit 5P connector.

Connect the sensor unit 5P connector terminals with a jumper wire.

## CONNECTION: Gray/blue - Green/orange


Turn the ignition switch to "ON" and engine stop switch "O".

Check the IAT sensor with the HDS pocket tester.

## Is about 0 V indicated?

YES - Faulty sensor unit (IAT sensor)

NO - GO TO STEP 3.

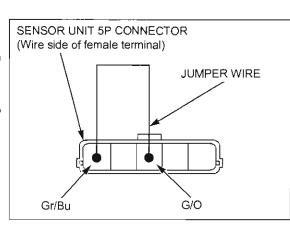

#### 3. IAT Sensor Output Line Inspection

Turn the ignition switch to "OFF". Disconnect the ECM 33P connectors.

Check for continuity at the Gray/blue and Green/ orange wire between the sensor unit 5P and ECM 33P connectors.

CONNECTION: B29 - Gray/blue A18 - Green/orange

TOOL:

Test probe


07ZAJ-RDJA110

#### Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

NO - · Open circuit in Gray/blue wire

· Open circuit in Green/orange wire

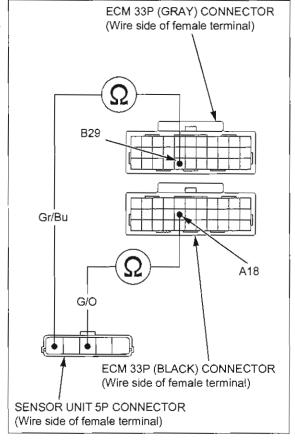

## DTC 11-1 (VS SENSOR)

 Before starting the inspection, check for loose or poor contact on the VS sensor 3P connector and recheck the DTC.

#### 1. VS Sensor System Inspection

Support the motorcycle securely and raise the rear wheel off the ground.

Start the engine and shift the transmission into gear.

Check the VS sensor with the HDS pocket tester.

#### is the vehicle speed indicated normally?

YES - GO TO STEP 2.

NO - GO TO STEP 3.

#### 2. Recheck the DTC

Clear the DTC (page 5-18).

Test ride the motorcycle.

Stop the engine.

Turn the ignition switch to "ON" and engine stop switch "O".

Check the VS sensor with the HDS pocket tester.

#### Is the DTC 11-1 indicated?

YES - Replace the ECM with a known good one, and recheck.

NO - Loose or poor contact on the ECM connectors

Intermittent failure


#### 3. Speedometer Inspection

Check for operation of speedometer.

#### Does the speedometer operate normally?

NO - Inspect the speedometer (page 21-12)

YES - GO TO STEP 4.

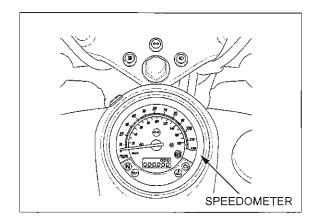

#### 4. VS Sensor Input Voltage Inspection

Turn the ignition switch to "OFF".

Disconnect the VS sensor 3P (White) connector.

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Measure the voltage at the VS sensor connector of the wire side.

CONNECTION: Brown (+) - Green/black (-)

#### Does the battery voltage exist?

NO - Open or short circuit in Brown wire

· Open circuit in Green/black wire

YES - GO TO STEP 5.

#### 5. VS Sensor Signal Line Open Circuit Inspection

Turn the ignition switch to "OFF".

Disconnect the ECM 33P (Gray) connector.

Check for continuity between the ECM 33P (Gray) and VS sensor 3P connectors of the wire side.

CONNECTION: B28 - Pink/green

TOOL:

Test probe

07ZAJ-RDJA110

#### Is there continuity?

NO - Open circuit in Pink/green wire

YES - GO TO STEP 6.

#### 6. VS Sensor Signal Line Short Circuit Inspection

Connect the ECM 33P (Gray) connector.


Check for continuity between the VS sensor 3P connector of the wire side and ground.


CONNECTION: Pink/green - Ground


#### Is there continuity?

YES - Short circuit in Pink/green wire

NO - Faulty VS sensor

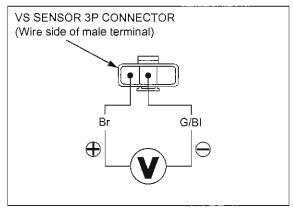

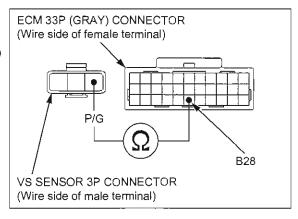

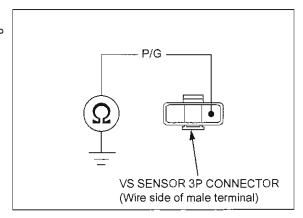

### DTC 12-1 (No.1 REAR INJECTOR)

 Before starting the inspection, check for loose or poor contact on the injector 2P connector and recheck the DTC.

DTC	INJEC- TOR	POWER IN- PUT LINE	SIGNAL LINE	SIGNAL AT ECM
12-1	No.1 Rear	Black/white	Pink/yellow	A17
13-1	No.2 Front	Black/white	Pink/blue	A6

#### 1. Injector System Inspection

Clear the DTC (page 5-18).

Turn the ignition switch to "ON" and engine stop switch "O", start the engine and check the injector with the HDS pocket tester.

#### is the DTC 12-1 indicated?

NO

- Intermittent failure
  - Loose or poor contact on the injector 2P (Gray) connector

YES - GO TO STEP 2.

#### 2. Injector Input Voltage Inspection

Turn the ignition switch to "OFF". Disconnect the injector 2P (Gray) connector.

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".


Measure the voltage between the injector 2P (Gray) connector of the wire side and ground.

#### CONNECTION: Black/white (+) - Ground (-)

#### Does the battery voltage exist?

NO - Open or short circuit in Black/white wire

YES - GO TO STEP 3.

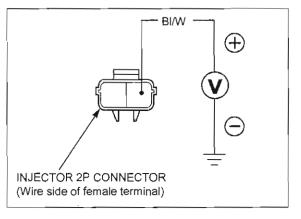

#### 3. Injector Signal Line Open Circuit Inspection

Turn the ignition switch to "OFF".

Disconnect the ECM 33P (Black) connector.

Check for continuity between the ECM 33P (Black) and injector 2P (Gray) connectors of the wire side.

CONNECTION: No.1 Rear: A6 - Pink/blue No.2 Front: A17 - Pink/yellow

TOOL:


Test probe

07ZAJ-RDJA110

#### Is there continuity?

NO - Open circuit in SIGNAL line wire

YES - GO TO STEP 4.

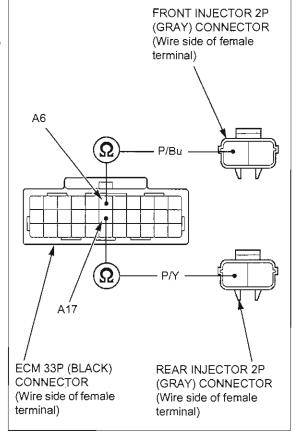

#### 4. Injector Signal Line Short Circuit Inspection

Connect the ECM 33P (Black) connector. Check for continuity between the injector 2P (Gray) connector and ground.


#### CONNECTION:

No.1 Rear: Pink/blue - Ground No.2 Front: Pink/yellow - Ground

#### Is there continuity?

YES - Short circuit in SIGNAL line wire

NO - GO TO STEP 5.

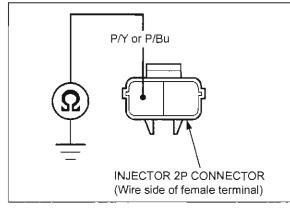

#### 5. Injector Resistance Inspection


Remove the sensor unit (page 5-52). Measure the resistance of the injector connector terminals.

STANDARD: 11 - 13 Ω (20°C/68°F)

Is the resistance within 11 – 13  $\Omega$  (20°C/68°F)?

NO - Faulty injector

YES - Replace the ECM with a known good one, and recheck.

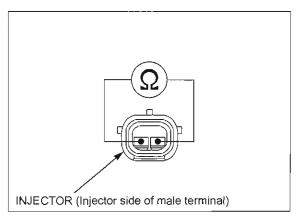

## DTC 13-1 (No.2 FRONT INJECTOR)

See page 5-31

#### **DTC 29-1 (IACV)**

 Before starting the inspection, check for loose or poor contact on the IACV 4P connector and recheck the DTC.

#### 1. Recheck DTC

Clear the DTC (page 5-18). Start the engine and recheck the DTC.

#### Is the DTC 29-1 indicated?

NO - · Intermittent failure

 Loose or poor contact on the IACV 4P (Black) connector

YES - GO TO STEP 2.

#### 2. IACV Short Circuit Inspection

Turn the ignition switch to "OFF". Disconnect the IACV 4P (Black) connector.

Check for continuities between the IACV 4P (Black) connector and ground.

CONNECTION: Black - Ground

Black/blue – Ground Black/yellow – Ground Yellow/green – Ground

#### Are there continuities?

YES - · Short circuit in Black or Black/blue wire

 Short circuit in Black/yellow or Yellow/ green wire

NO - GO TO STEP 3.

#### 3. IACV Circuit Continuity Inspection

Disconnect the ECM 33P (Black) connector.

Check for continuities between the ECM 33P (Black) and IACV 4P (Black) connectors.

CONNECTION: A19 - Yellow/green

A27 – Black/blue A16 – Black A29 – Black/yellow

TOOL:

Test probe


07ZAJ-RDJA110


#### Are there continuities?

YES - GO TO STEP 4.

NO - • Open or loose contact in Yellow/green or Black/blue wire

 Open or loose contact in Black or Black/yellow wire

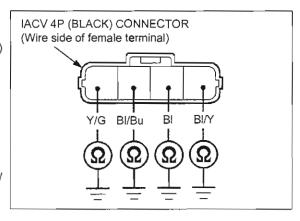

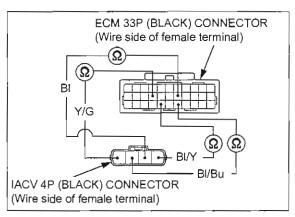

#### 4. IACV Resistance Inspection

Measure the resistance at the IACV 4P (Black) connector terminals.

CONNECTION: Yellow/green - Black/yellow

Black - Black/blue


STANDARD:  $99 - 121 \Omega (25^{\circ}C/77^{\circ}F)$ 

Is the resistance within 99 – 121  $\Omega$  (25°C/77°F)?

YES - Replace the ECM with a known good one,

and recheck.

NO - Faulty IACV

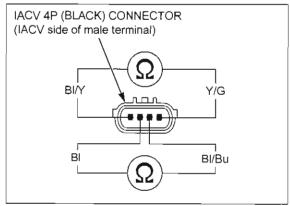

#### DTC 33-2 (EEPROM)

#### 1. Recheck DTC

Clear the DTC (page 5-18).

Turn the ignition switch to "ON" and engine stop switch "O".

Recheck the ECM EEPROM.

#### Is the DTC 29-1 indicated?

NO – Replace the ECM with a known good one, and recheck.

YES - Intermittent failure

## MIL CIRCUIT INSPECTION


If the engine can be started but the MIL does not come on when the ignition switch to "ON" and engine stop switch "O", check as follows:

Check the speedometer function properly.

- If they do not function, check the speedometer power input line (page 21-12).
- If they function properly, check as follows:

Turn the ignition switch to "OFF".

Disconnect the ECM 33P (Black) connector.

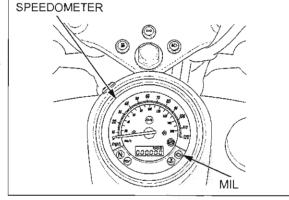

Ground the A20 terminal of the wire side connector with a jumper wire.

#### TOOL:


#### Test probe

07ZAJ-RDJA110

Turn the ignition switch to "ON" and engine stop switch "O", the MIL should come on.

- If the MIL come on, replace the ECM.
- If the MIL does not come on, check for open circuit in White/blue wire between the speedometer and ECM

If the wire is OK, replace the speedometer (page 21-12).

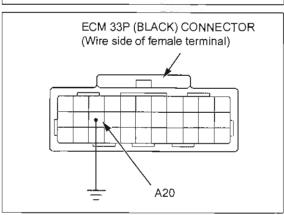


## **FUEL LINE INSPECTION**

## FUEL PRESSURE RELIEVING/QUICK CONNECT FITTING REMOVAL

- Before disconnecting fuel feed hose, relieve pressure from the system as following procedures.
- · Do not bend or twist fuel feed hose.

VT750C2S; Remove the connector boot.


Remove the clips and connector holder.

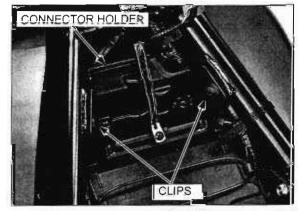

1. Turn the ignition switch to "OFF".


Remove the seat (page 2-3) and disconnect the sub fuel tank/fuel pump 2P (Black) connector.

- 2. Start the engine, and let it idle until it stalls.
- 3. Turn the ignition switch to "OFF".
- Disconnect the battery negative (-) cable (page 18-7).

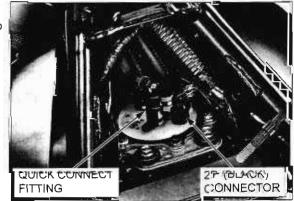

Check the fuel quick connect fitting for dirt, and clean if necessary.


Place a shop towel over the quick connect fitting.

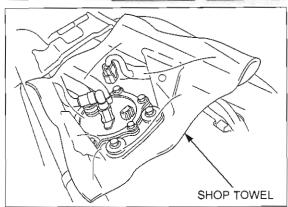


Hold the connector with one hand and squeeze the retainer tabs with the other hand release them from the locking pawls.

Pull the connector off, then remove the retainer and joint rubber from the fuel pipe.

- Prevent the remaining fuel in the fuel feed hose from flowing out with a shop towel.
- · Be careful not to damage the hose or other parts.
- · Do not use tools.
- If the connector does not move, keep the retainer tabs pressed down, and alternately pull and push the connector until it comes off easily.
- To prevent damage and keep foreign matter out, cover the disconnected connector and fuel pipe with the plastic bags.

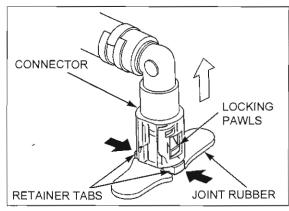

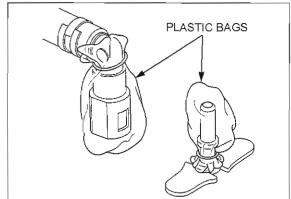


## QUICK CONNECT FITTING INSTALLATION

- Always replace the retainer of the quick connect fitting when the fuel feed hose is disconnected.
- If any retainer needs replacing, use the same manufacture's retainer as the ones being removed (The several manufactures feature different retainer specifications).
- If any damage or cut-out on the joint rubber, replace it with a new one.
- · Do not bend or twist the fuel feed hose.
- 1. Insert a new retainer into the connector.


#### NOTE:

 Align the new retainer locking pawls with the connector grooves.

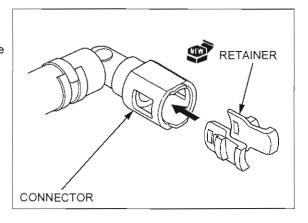


- 2. Set the joint rubber to the fuel pipe as shown.
- Install the connector to the fuel pipe by aligning retainer tabs with joint rubber grooves.
   Then press the quick connect fitting onto the pipe until both retainer pawls lock with a "CLICK".

If it is hard to connect, put a small amount of engine oil on the pipe end.

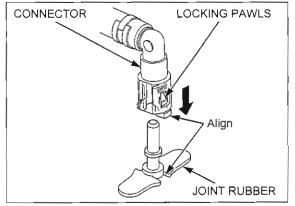

 Make sure the connection is secure and that the pawls are firmly locked into place; check visually and by pulling the connector.

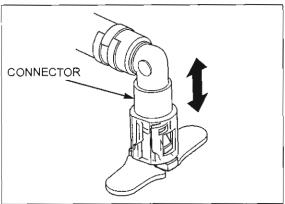


- Connect the sub fuel tank/fuel pump 2P (Black) connector.
- 6. Connect the negative (-) cable to the battery.
- Turn the ignition switch to "ON" and engine stop switch "O".

#### NOTE:

· Do not start the engine.

The fuel pump will run for about 2 seconds, and fuel pressure will rise.


Repeat 2 or 3 times, and check that there is no leakage in the fuel supply system.

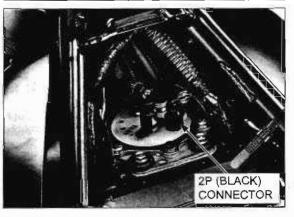

VT750C2S; Install the connector holder and clips securely.

Install the connector boot.

Install the seat (page 2-3).

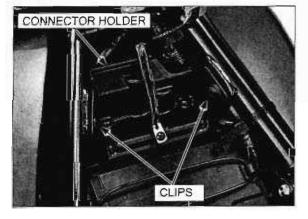

#### **FUEL PRESSURE TEST**

Relieve the fuel pressure and disconnect the quick connect fitting from the sub fuel tank/fuel pump (page 5-35).

Attach the fuel pressure gauge, attachments, joint and manifold.

#### TOOLS (not available in U.S.A.):

 (1): Fuel pressure gauge
 07406-0040004

 (2): Pressure gauge manifold
 07ZAJ-S5A0111

(3): Hose attachment, 6 mm/9 mm 07ZAJ-S5A0130 (4): Hose attachment, 9 mm/9 mm 07ZAJ-S5A0120

(5): Attachment joint, 6 mm/9 mm 07ZAJ-S5A0150

#### U.S.A. TOOLS:

Fuel pressure gauge, 0 – 100 psi 07406-004000B
Fuel pressure manifold 07AMJ-HW3A100
Fuel adaptor male "B" 07AAJ-S6MA200
Fuel adaptor female "B" 07AAJ-S6MA400

Temporally connect the negative (-) cable to the battery.

Connect the sub fuel tank/fuel pump 2P (Black) connector.

Start the engine and let it idle.

Read the fuel pressure.

STANDARD: 333 - 353 kPa (3.4 - 3.6 kgf/cm<sup>2</sup>, 48 - 51 psi)

If the fuel pressure is higher than specified, replace the fuel pump assembly (faulty fuel pump or fuel pressure regulator).


If the fuel pressure is lower than specified, inspect the following:


- Fuel line leaking
- Pinched or clogged fuel feed hose or fuel tank breather hose
- Sub fuel tank/fuel pump (page 5-40)
- Clogged fuel filter (Assembly of the sub fuel tank/fuel pump: page 5-40)

Wrap a shop towel around the attachment to soak up any spilled fuel. After inspection, relieve the fuel pressure by disconnect the quick connect fitting from the sub fuel tank/fuel pump (page 5-35).

Remove the fuel pressure gauge, attachment, joint and manifold from the sub fuel tank/fuel pump.

Connect the quick connect fitting to the sub fuel tank/ fuel pump (page 5-36).

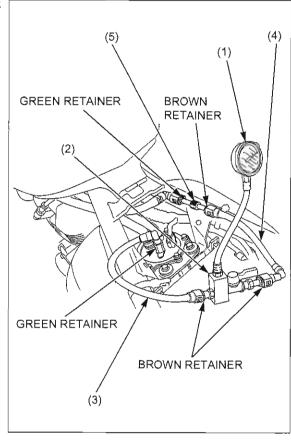

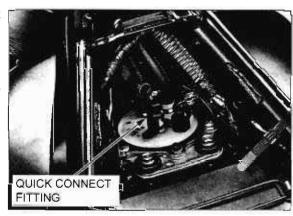


#### **FUEL FLOW INSPECTION**

Relieve the fuel pressure and disconnect the quick connect fitting from the sub fuel tank/fuel pump (page 5-35).

Remove the fuel cut off relay (page 5-46).

Turn the ignition switch to "OFF".

Connect the Brown and Black/white wire terminals of the wire side using a jumper wire.

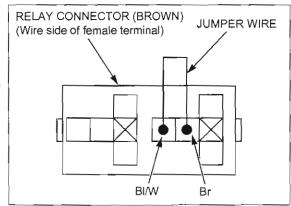

Connect the hose attachment to the fuel pipe of the sub fuel tank/fuel pump.

TOOL (not available in U.S.A.):

Hose attachment, 6 mm/9 mm 07ZAJ-S5A0130

U.S.A. TOOLS:

Fuel pressure manifold
Fuel adaptor female "B"

07AMJ-HW3A100
07AAJ-S6MA400
Note: The fuel pressure gauge must be installed for these test.

Wipe spilled gasoline out of the container.

Place the end of the hose into an approved gasoline container.

Temporally connect the negative (-) cable to the battery.

Connect the sub fuel tank/fuel pump 2P (Black) connector.

Turn the ignition switch to "ON", engine stop switch " $\bigcirc$ " for 10 seconds.

Measure the amount of fuel flow.


#### Amount of fuel flow:

50 cm<sup>3</sup> (1.7 US oz, 1.8 lmp oz) minimum /10 seconds at 12 V

If the fuel flow is less than specified, inspect the following:

- Fuel pump (page 5-40)
- Clogged fuel filter (Assembly of the fuel pump: page 5-41)

Connect the quick connect fitting to the sub fuel tank/ fuel pump (page 5-36).

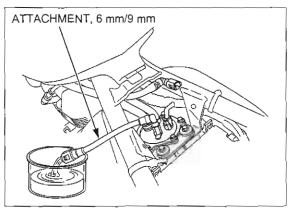

## SUB FUEL TANK/FUEL PUMP

#### **INSPECTION**


Turn the ignition switch to "ON", engine stop switch "O" and confirm that the fuel pump operates for a few seconds.

If the fuel pump does not operate, inspect as follows:

Turn the ignition switch to "OFF".


Remove the connector boot.

VT750C2S; Remove the clips and connector holder.

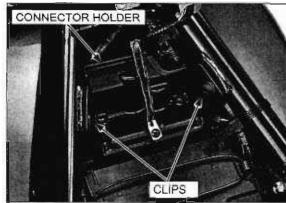

Remove the seat (page 2-3).

Disconnect the sub fuel tank/fuel pump 2P (Black) connector.

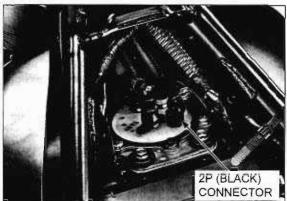

Turn the ignition switch to "ON", engine stop switch "O" and measure the voltage between the terminals.


#### CONNECTION: Brown (+) - Green (-)

There should be battery voltage for a few seconds.

If there is battery voltage, replace the sub fuel tank/fuel pump assembly.

If there is no battery voltage, inspect the following:

- Open circuit in Brown wire and/or Green wire
- Sub fuse 10 A (METER)
- Sub fuse 10 A (IGN, START)
- Main fuse 30 A
- FI fuse 15 A
- Fuel cut off relay (page 5-46)
- Engine stop relay (page 5-65)
- Engine stop switch (page 21-23)
- Bank angle sensor (page 5-63)
- ECM (page 5-66)

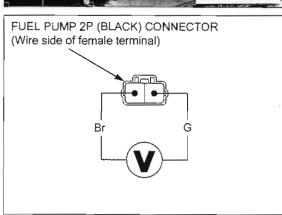


#### **REMOVAL**

· Do not disassemble the sub fuel tank/fuel pump.


Relieve the fuel pressure and disconnect the quick connect fitting from the sub fuel tank/fuel pump (page 5-35).

Remove the following:

- Fuel tank (page 5-48)
- Fuel vapor return hose
- Fuel hose

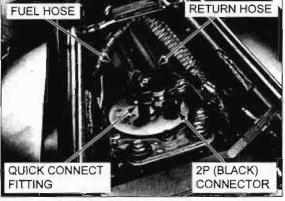

Remove the bolts, collars and sub fuel tank/fuel pump. Check the sub fuel tank/fuel pump for damage, replace it if necessary.

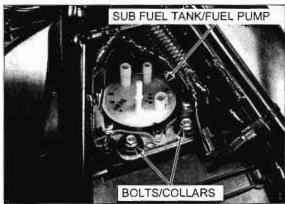

#### DISASSEMBLY


#### NOTE:

- To prevent dirt and debris from entering the fuel pump, always clean it before disassembly.
- Clean the inside of the sub fuel tank, fuel pump unit and fuel pump filter with clean gasoline. Never use commercially available carburetor cleaners.
- Always replace all O-rings with new ones when the fuel pump has been disassembled.
- · Be careful not to damage the fuel pump unit wire.

Set the sub fuel tank/fuel pump in a vise with a piece of wood or soft jaws to prevent damage.

#### NOTE


· Set the sub fuel tank/fuel pump in a vise as shown.

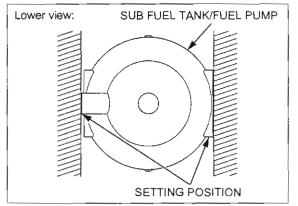

Do not over-tighten the vise on the sub fuel tank/fuel pump.

## **FUEL SYSTEM (PGM-FI)**

Be careful not to Loosen the fuel pump assembly bolts in the specified drop the fuel pump sequence as shown and remove the bolts and spring unit. washers.

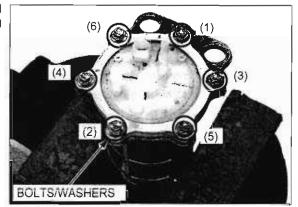


Remove the cover plate and fuel pump unit from the sub fuel tank.

#### NOTE:

· Be careful not to damage the fuel pump unit and fuel pump unit wire.

Wipe excess gasoline out of the container.


Drain the gasoline into an approved gasoline container.

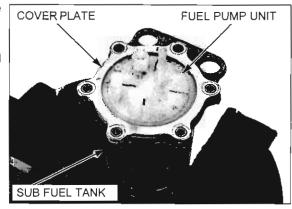


O-rings.

Do not reuse the Remove the O-rings.

Clean the inside of the sub fuel tank with clean gasoline.

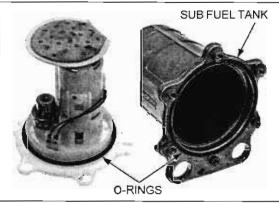


Visually inspect the fuel pump filter for dirt, debris or any clogging, and replace it if necessary.

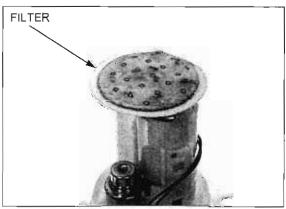

#### **FUEL PUMP FILTER REPLACEMENT**

Be careful not to damage the fuel pump filter and fuel pump unit. Hold the bottom face of the fuel pump filter.

Disengage the fuel pump filter hook from the fuel pump unit boss by turning the fuel pump filter clockwise, then remove the fuel pump filter.

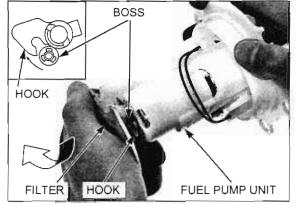


Before installing the fuel pump filter, check the fuel pump unit for dirt.


If necessary, clean the fuel pump unit with compressed air.

#### NOTE:

- Place a shop towel over the fuel pump unit to prevent dirt from entering the feed pipe and suction port.
- Do not blow compressed air directly into the feed pipe or suction port.

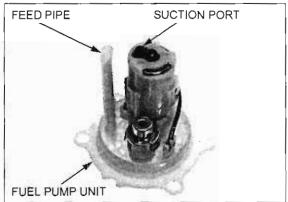


Install the fuel pump filter to the fuel pump unit while aligning the holes for the suction port.

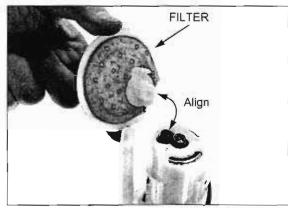


Be careful not to damage the fuel pump filter and fuel pump unit.

Be careful not to Hold the bottom face of the fuel pump filter and push in damage the fuel until it is fully seated on the fuel pump unit.


Engage the fuel pump filter hook to the fuel pump unit boss by turning the fuel pump filter counterclockwise.

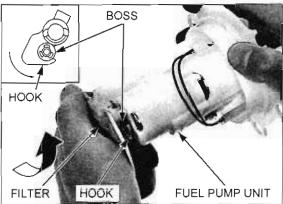

Make sure the fuel pump unit securely connected and that the locking tabs are firmly locked into place.

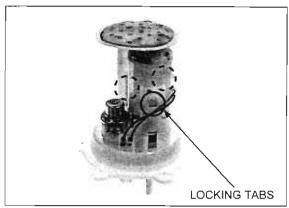


#### **ASSEMBLY**

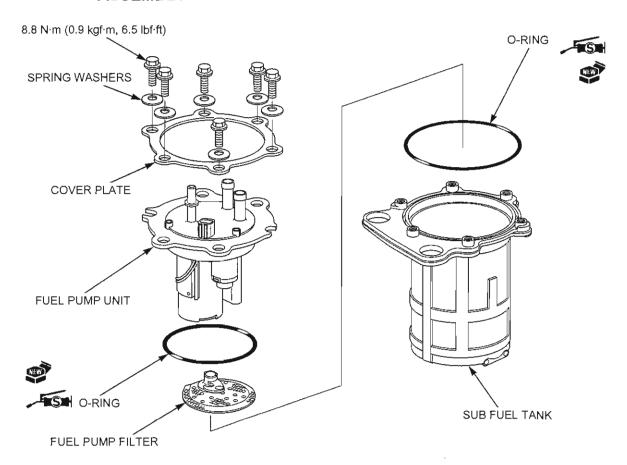


Apply silicone grease to new O-rings.

Install the O-rings onto the fuel pump unit and sub fuel tank.

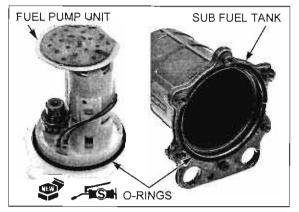


Set the sub fuel tank in a vise (page 5-41).

Install the fuel pump unit into the sub fuel tank while aligning the bosses of the sub fuel tank and fuel pump unit, making sure the fuel pump unit sits flush against the sub fuel tank.

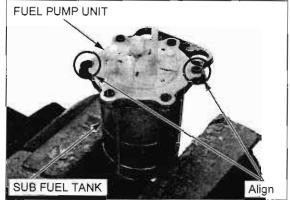


Install the cover plate with the chamfered edges facing up.

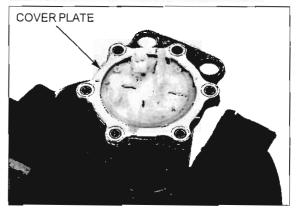

Install the spring washers to the fuel pump assembly bolts as shown.


Install the fuel pump assembly bolts.

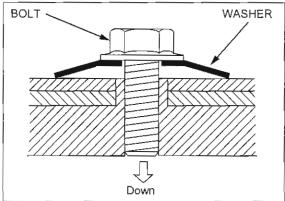

drop the fuel pump unit.

Be careful not to Tighten the fuel pump assembly bolts to the specified torque in the specified sequence as shown.


TORQUE: 8.8 N·m (0.9 kgf·m, 6.5 lbf·ft)

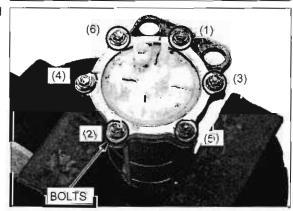

#### **INSTALLATION**

Install the sub fuel tank/fuel pump into the frame by aligning its tab with the grommet of the frame.


Install the collars and bolts. Tighten the bolts securely.

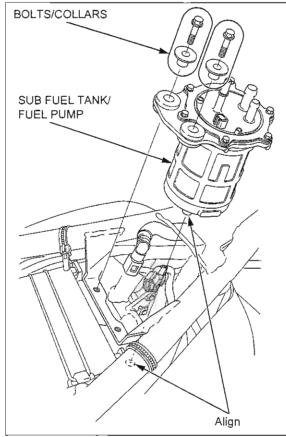

Connect the fuel hose and fuel vapor return hose to the sub fuel tank/fuel pump.

Install the fuel tank (page 5-48).

Connect the quick connect fitting to the sub fuel tank/ fuel pump (page 5-36).

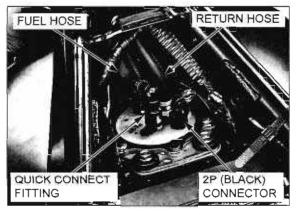

## **FUEL CUT OFF RELAY**

## **INSPECTION (VT750C2/C2B)**


Remove the left side cover (page 2-3).

Remove the relay box.



Release the tabs and remove the relay connector (Brown) from the connector cover.

Disconnect the fuel cut off relay from the relay connector.

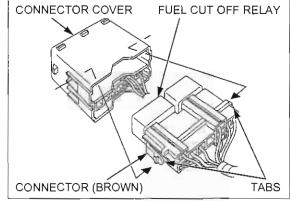

Connect the ohmmeter to the fuel cut off relay connector terminals.


#### CONNECTION: A - B

Connect the 12 V battery to the following fuel cut off relay connector terminals.

#### CONNECTION: C - D

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the fuel cut off relay.

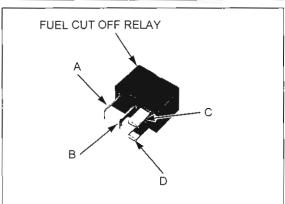


#### **INSPECTION (VT750C2S)**

Remove the left side cover (page 2-3).

Remove the relay box cover.

Disconnect the fuel cut off relay from the relay box.

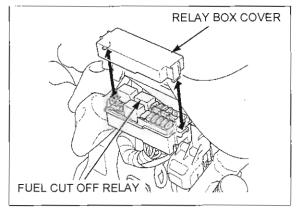

Connect the ohmmeter to the fuel cut off relay connector terminals.


#### CONNECTION: A - B

Connect the 12 V battery to the following fuel cut off relay connector terminals.

#### CONNECTION: C - D

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the fuel cut off relay.

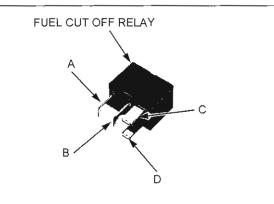


## **FUEL TANK**

#### REMOVAL/INSTALLATION


Remove the speedometer assembly (page 21-15).

Disconnect the fuel reserve sensor connectors.

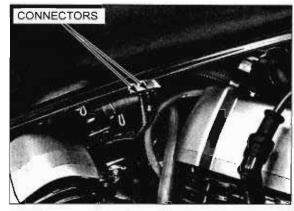

Disconnect the fuel tank breather hose.

Remove the fuel tank mounting bolt washer and collar. Remove the fuel tank by moving it rearward.

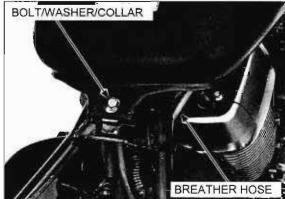

Disconnect the fuel hose and fuel vapor return hose from the fuel tank.

Plug the fuel hose and fuel vapor return hose joint of the fuel tank.

Connect the fuel vapor return hose and fuel hose to the fuel tank.

Install the fuel tank by inserting its grooves over the mounting rubbers.


Install the collar and washer with the flat of the washer facing rearward.

Install and tighten the bolt to the specified torque.

#### TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)

Connect the fuel reserve sensor connectors.

Install the speedometer assembly (page 21-15).

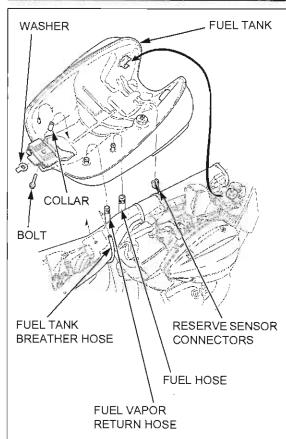


## AIR CLEANER HOUSING

#### **REMOVAL**

Remove the fuel tank (page 5-48).


Remove the air cleaner housing mounting bolts and collars.

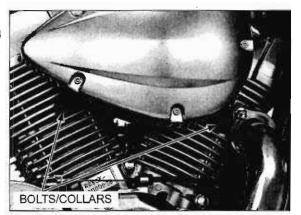


Disconnect the crankcase breather hose from the air cleaner housing.

Loosen the air cleaner housing connecting tube band screw.


Remove the air cleaner housing.

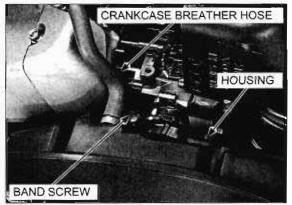

Disconnect the PAIR air suction hose from the air cleaner housing.

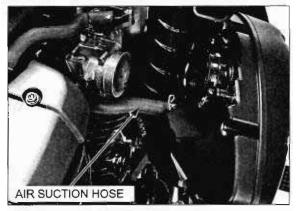


#### DISASSEMBLY/ASSEMBLY

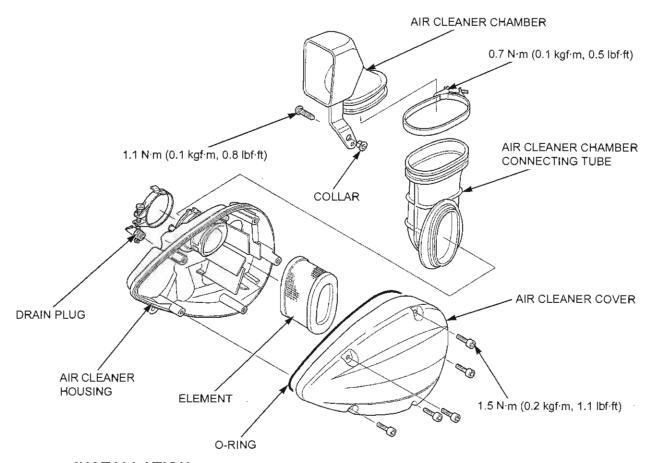

#### INSTALLATION


Connect the PAIR air suction hose to the air cleaner housing as shown.

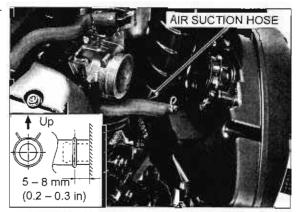

Connect the crankcase breather hose to the air cleaner housing.


Connect the connecting tube to the throttle body.

Tighten the air cleaner housing connecting tube band screw securely.

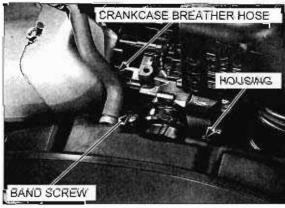

Install the collars, air cleaner housing mounting bolts, and tighten the mounting bolts securely.

Install the fuel tank (page 5-48).

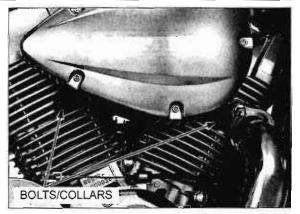

## THROTTLE BODY


#### **REMOVAL**

Remove the air cleaner housing (page 5-49).


Disconnect the IACV 4P and sensor unit 5P connectors.

Loosen the insulator band screw.

Remove the throttle body from the insulator.

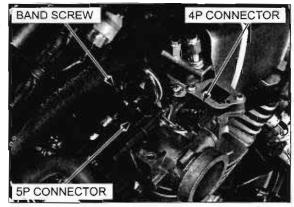

Loosen the throttle cable lock nuts and adjusting nut then disconnect the throttle cables from the throttle drum and cable bracket.

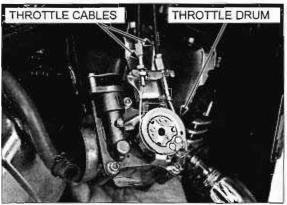

#### DISASSEMBLY/ASSEMBLY


#### NOTICE

- The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.
- Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.
- Do not damage the throttle body. It may cause incorrect throttle valve.
- Do not loosen or tighten the white painted bolts, nuts and screws of the throttle body. Loosening or tightening them can cause throttle and idle valve synchronization failure.

#### NOTE:


 Perform the throttle valve fully closed reset procedure (page 5-54), if the sensor unit is removed from the throttle body.

For IACV replacement (page 5-68).

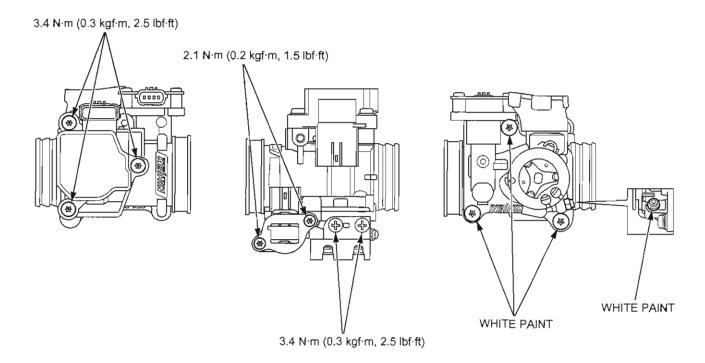

Cleaning the air passages and sensor hole with a piece of wire will damage the throttle body.


Cleaning the air Blow open all air passages and sensor holes in the passages and throttle body with compressed air.

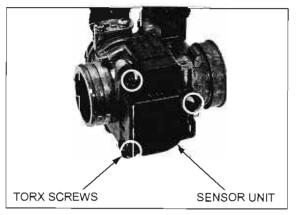

Install a new O-ring into the groove of the throttle body. Install the sensor unit while aligning TP sensor slot with the throttle valve shaft.

Tighten the torx screws to the specified torque.


TORQUE: 3.4 N·m (0.3 kgf·m, 2.5 lbf·ft)

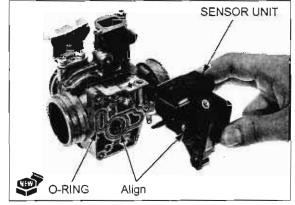

#### INSTALLATION

Route the throttle cables properly (page 1-26).


Connect the throttle cables to the throttle drum and cable bracket.

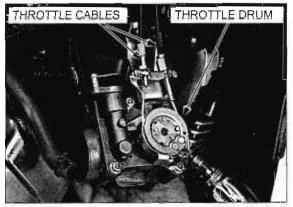

Install the throttle body to the insulator by aligning its lug with the slot in the insulator.




Tighten the insulator band screw so the insulator band distance is  $7.5 \pm 1$  mm (0.30  $\pm$  0.04 in).

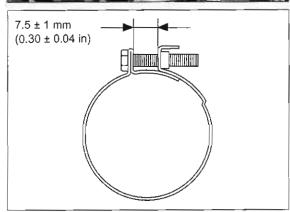

Connect the sensor unit 5P and IACV 4P connectors.

Adjust the throttle grip freeplay (page 3-5).

Install the air cleaner housing (page 5-49).

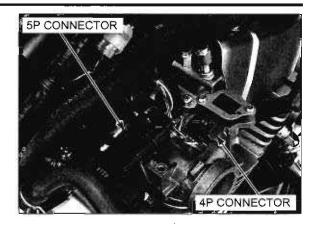

# THROTTLE VALVE FULLY CLOSED POSITION RESET PROCEDURE (VT750C2/C2B)

 If the sensor unit is removed, reset the throttle valve fully closed position as following procedure.


Remove the right side cover (page 2-3).

- 1. Clear the DTC (page 5-18).
- 2. Turn the ignition switch to "OFF".
- 3. Remove the dummy connector and short DLC terminals using the special tool.

TOOL:

**SCS** connector


070PZ-ZY30100

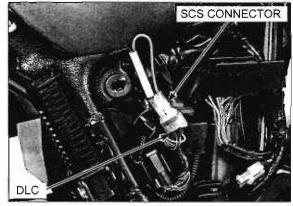

4. Disconnect the ECT sensor 3P (Gray) connector.


Short the ECT sensor 3P (Gray) connector terminals of the wire side using the jumper wire.

CONNECTION: Pink/white - Green/orange

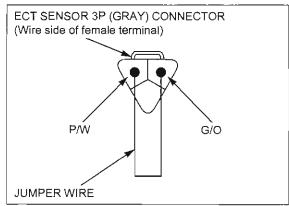


5. Turn the ignition switch to "ON" and engine stop switch "O".

Disconnect the jumper wire while the MIL blinking (10 seconds).

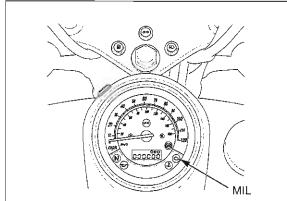

6. Check if the MIL blinks.

If the MIL begins short blink (0.3 seconds), the throttle valve fully closed position is reset.

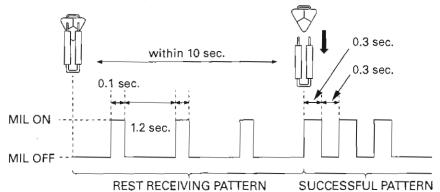

If the MIL stays lit, the throttle valve fully closed position is not reset, repeat the reset procedure from step 1.

# THROTTLE VALVE FULLY CLOSED POSITION RESET PROCEDURE (VT750C2S)

 If the sensor unit is removed, reset the throttle valve fully closed position as following procedure.

Remove the left side cover (page 2-3).

- 1. Clear the DTC (page 5-18).
- 2. Turn the ignition switch to "OFF".
- Remove the dummy connector and short DLC terminals using the special tool.

TOOL:


SCS connector

070PZ-ZY30100




Disconnect the ECT sensor 3P (Gray) connector.
 Short the ECT sensor 3P (Gray) connector terminals of the wire side using the jumper wire.

CONNECTION: Pink/white - Green/orange

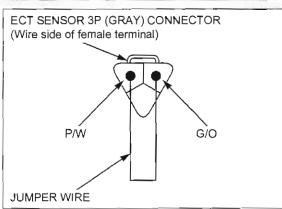


Turn the ignition switch to "ON" and engine stop switch "O".

Disconnect the jumper wire while the MIL blinking (10 seconds).

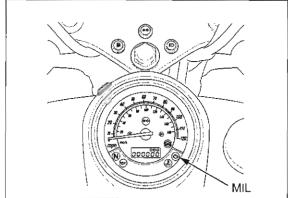

6. Check if the MIL blinks.

If the MIL begins short blink (0.3 seconds), the throttle valve fully closed position is reset.

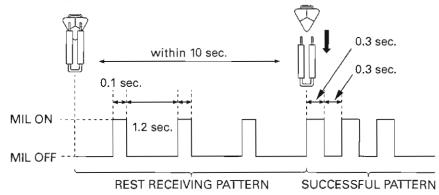

If the MIL stays lit, the throttle valve fully closed position is not reset, repeat the reset procedure from step 1.

## INTAKE MANIFOLD


#### **REMOVAL**

Relieve the fuel pressure and disconnect the quick connect fitting from the sub fuel tank/fuel pump (page 5-35).

Disconnect the fuel feed hose from the injector cap (page 5-59).


Remove the throttle body (page 5-51).

Loosen the insulator band screw and remove the insulator from the intake manifold.

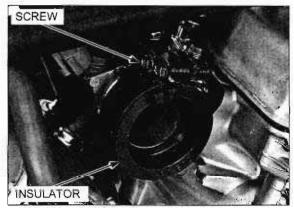

Disconnect the injector 2P (Gray) connectors.


Disconnect the EVAP purge control solenoid valve hose.

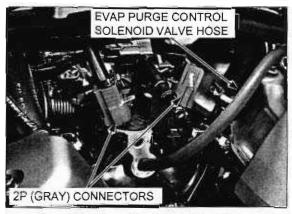

Remove the bolts, intake manifold and O-rings.


Seal the intake ports of the cylinder heads with tape or clean cloths to keep dirt and debris from entering the engine.

For the injector removal (page 5-58).

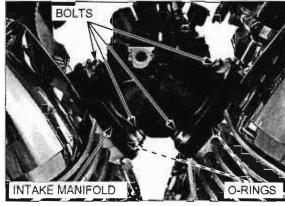


#### INSTALLATION

Install new O-rings onto the intake manifold.
Install the injectors, if they are removed (page 5-58).

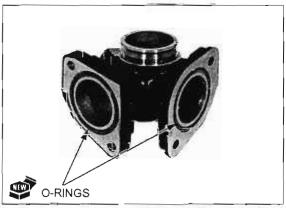


Install the intake manifold onto the cylinder heads. Install the bolts and tighten them.

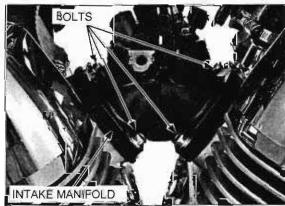


Connect the EVAP purge control solenoid valve hose. Connect the injector 2P (Gray) connectors.

#### NOTE:

Align the tab of the injector cap with groove of the injector connector as shown.

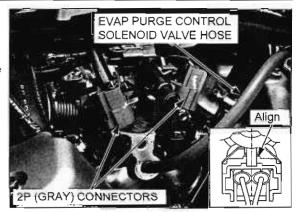

Install the insulator with the "THROT BODY" mark facing the throttle body side, aligning its slot with the lug on the intake manifold.

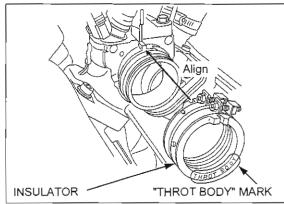


Tighten the insulator band screw so the insulator band distance is  $14.5 \pm 1$  mm ( $0.57 \pm 0.04$  in).

Connect the fuel feed hose to the injector cap (page 5-61).

Install the throttle body (page 5-51).

Connect the quick connect fitting to the sub fuel tank/ fuel pump (page 5-36).

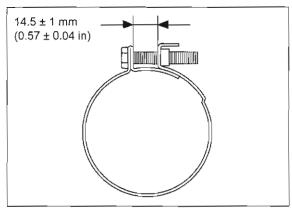


## **INJECTOR**

#### INSPECTON

Start the engine and let it idle.

Confirm the injector operating sounds with a sounding rod or stethoscope.

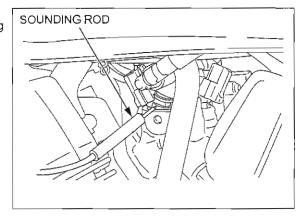

## REMOVAL

Relieve the fuel pressure and disconnect the quick connect fitting from the sub fuel tank/fuel pump (page 5-35).

Clean around the injector base and fuel hose quick connector with compressed air before removing the injector, and be sure that no debris is allowed to enter into the intake manifold.

Disconnect the fuel feed hose quick connector as following procedures.


- QUICK CONNECTOR


  FUEL FEED HOSE
- 1. Slide and release the rubber cap from the retainer.
- Hold the connector with one hand and squeeze the retainer tabs with the other hand release them from the locking pawls.

Pull the connector off, then remove the rubber cap and retainer.

#### NOTE:

- Prevent the remaining fuel in the fuel feed hose from flowing out with a shop towel.
- Be careful not to damage the hose, pipe or other parts.
- · Do not use tools.
- If the connector does not move, keep the retainer tabs pressed down, and alternately pull and push the connector until it comes off easily.
- To prevent damage and keep foreign matter out, cover the disconnected connector and pipe end with the plastic bags.

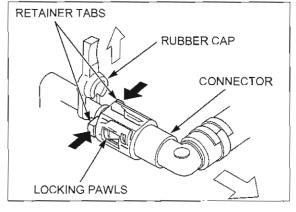


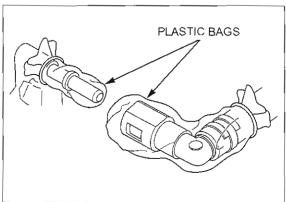


Disconnect the injector 2P (Gray) connectors.



Remove the bolts and injector cap from the injectors.

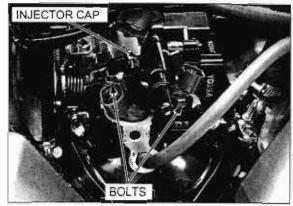

Remove the injectors from the intake manifold. Remove the O-ring and seal ring.

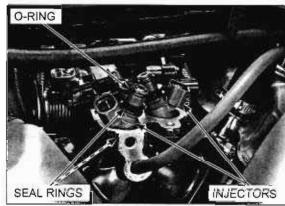


#### **INSTALLATION**


Coat new O-rings and new seal rings with engine oil.

and seal ring with not to damage. new ones as a set.

Replace the O-ring Install new O-rings and new seal rings, being careful

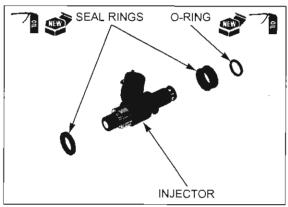


Install the injectors into the intake manifold, being careful not to damage the seal ring.

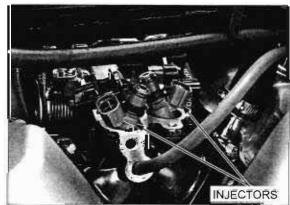

Install the injector cap to the injectors.

Install and tighten the bolts to the specified torque.


TORQUE: 5.1 N·m (0.5 kgf·m, 3.8 lbf·ft)

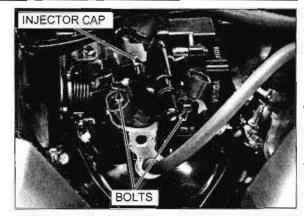


Connect the injector 2P (Gray) connectors.

#### NOTE:

Align the tab of the injector cap with groove of the injector connector as shown.

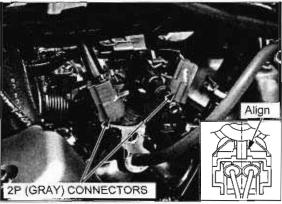


Connect the fuel feed hose quick connector as following procedures.

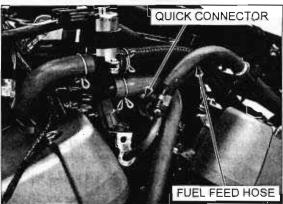

- Always replace the retainer of the quick connect fitting when the fuel feed hose is disconnected.
- If any retainer needs replacing, use the same manufacture's retainer as the ones being removed (The service manufactures feature different retainer specifications).
- If any damage or cut-out on the rubber cap, replace it with a new one.
- · Do not bend or twist the fuel feed hose.
- 1. Insert a new retainer into the connector.

#### NOTE:


 Align the new retainer locking pawls with the connector grooves.

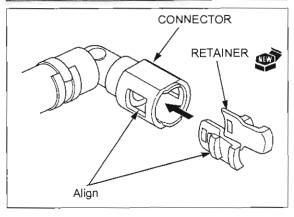

2. Install the rubber cap and seat it onto the fuel pipe flange as shown.

Align the quick connect fitting with the pipe. Then press the quick connect fitting onto the pipe until both retainer pawls lock with a "CLICK".


If it is hard to connect, put a small amount of engine oil on the pipe end.

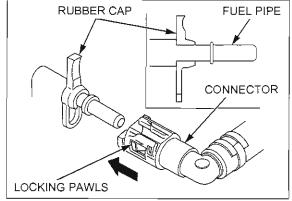

Make sure the connection is secure and that the pawls are firmly locked into place; check visually and by pulling the connector.

Connect the quick connect fitting to the sub fuel tank/fuel pump (page 5-36).

Install the removed parts in the reverse order of removal.

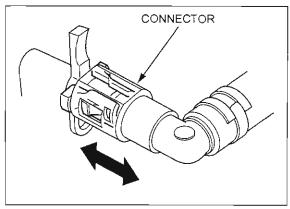

#### **ECT SENSOR**

#### REMOVAL/INSTALLATION

Drain the coolant (page 6-6). Remove the steering side covers (page 2-4).

Replace the ECT sensor while the engine is cold.

Disconnect the ECT sensor 3P (Gray) connector from the sensor.

Remove the ECT sensor and sealing washer.


Always replace a sealing washer with a new one. Install a new sealing washer and ECT sensor. Tighten the ECT sensor to the specified torque.

#### TORQUE: 24.5 N·m (2.5 kgf·m, 18 lbf·ft)

Connect the ECT sensor 3P (Gray) connector.

Install the steering side covers (page 2-4).

Fill the cooling system with recommended coolant (page 6-6).

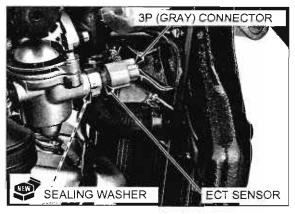

## **BANK ANGLE SENSOR**

#### INSPECTION

Support the motorcycle securely on a level surface.

Remove the following:

- Steering side covers (page 2-4)
- Fuel tank (page 5-48)

Disconnect the bank angle sensor 3P (Black) connector and connect the inspection test harness.

#### TOOL:

Inspection test harness

07GMJ-ML80100

Turn the ignition switch to "ON" and engine stop switch "O".


Measure the voltage between the test harness terminals.


CONNECTION	STANDARD	
White clip (+) – Red clip (–)	Battery voltage	
Green clip (+) - Red clip (-)	0 – 1 V	

Turn the ignition switch to "OFF".

Do not disconnect the bank angle sensor connector during inspection.

Do not disconnect Remove the bolt and bank angle sensor/stay assembly.

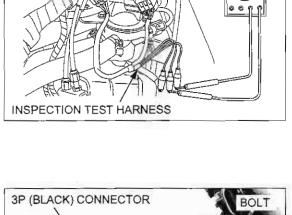

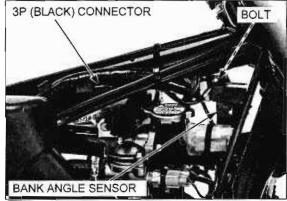


Place the bank angle sensor horizontal (normal position) as shown, and ignition switch to "ON" and engine stop switch "O".

Bank angle sensor is normal if the engine stop relay clicks and power supply is closed.

Incline the bank angle sensor approximately 42.5° to the left or right with keep the ignition switch to "ON" and engine stop switch "O".

Bank angle sensor is normal if the engine stop relay clicks and power supply is open.

If you repeat this test, first turn the ignition switch to "OFF", then turn the ignition switch to "ON".

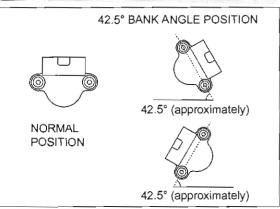


### **REMOVAL/INSTALLATION**


Remove the following:

- Fuel tank (page 5-48)
- Steering side covers (page 2-4)

Remove the wire band and disconnect the bank angle sensor 3P (Black) connector.

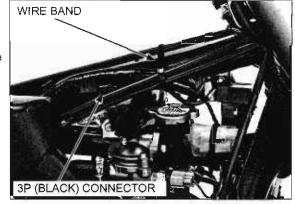


Remove the bolt and bank angle sensor/stay.

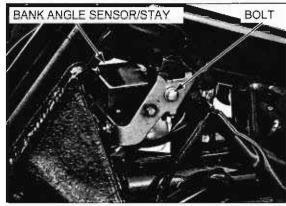

Remove the screws, collars and bank angle sensor from the stay.

Install the bank angle sensor to the stay.


Install the collars, screws and tighten the screws securely.

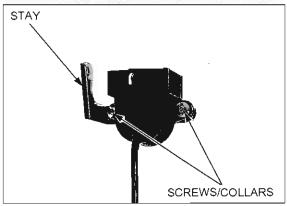

Install the bank angle sensor with its "UP" mark facing

wire properly (page 1-26).

Route the sensor Install the removed parts in the reverse order of removal.

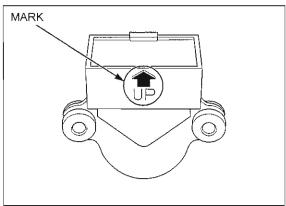

# **ENGINE STOP RELAY**

### INSPECTION (VT750C2/C2B)


Remove the left side cover (page 2-3).

Remove the relay box.



Release the tabs and remove the relay connector (Brown) from the connector cover.

Remove the engine stop relay from the relay connector.

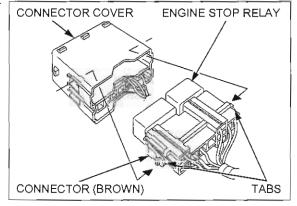

Connect the ohmmeter to the relay connector terminals.


#### CONNECTION: A - B

Connect the  $12\ V$  battery to the following relay connector terminals.

#### CONNECTION: C - D

There should be continuity only when the 12 V battery is connected

If there is no continuity when the 12 V battery is connected, replace the engine stop relay.

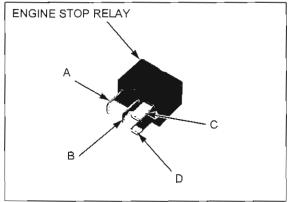


### **INSPECTION (VT750C2S)**

Remove the left side cover (page 2-3).

Remove the relay box cover.

Remove the engine stop relay from the relay connector.

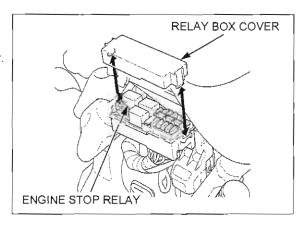

Connect the ohmmeter to the relay connector terminals.


CONNECTION: A - B

Connect the 12 V battery to the following relay connector terminals.

CONNECTION: C - D

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the engine stop relay.

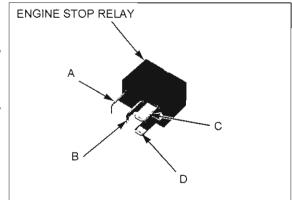

## **ECM**

# ECM POWER/GROUND LINE INSPECTION

Engine does not start (MIL does not blink)

#### 1. ECM Power Input Voltage Inspection

Disconnect the ECM 33P connectors (page 5-67).

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Measure the voltage at the ECM 33P (Black) connector terminals and ground.

CONNECTION: A4 (+) - Ground (-)

TOOL:

Test probe

07ZAJ-RDJA110

#### Does the battery voltage exist?

YES - GO TO STEP 2.

NO - GO TO STEP 3.

#### 2. ECM Ground Line Inspection

Turn the ignition switch to "OFF".

Check for continuity between the ECM 33P connector terminals and ground.

CONNECTION: A23 - Ground

B4 - Ground

TOOL:


Test probe


07ZAJ-RDJA110

#### Is there continuities?

YES - Replace the ECM with a known good one, and recheck.

NO - Open circuit in GROUND line

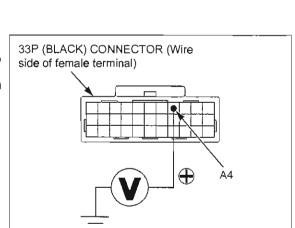

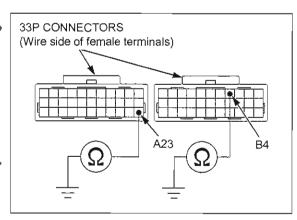

#### 3. Engine Stop Relay Inspection 1

Turn the ignition switch to "OFF".

Remove the engine stop relay from the relay connector (page 5-65).

Turn the ignition switch to "ON" and engine stop switch "O".

Measure the voltage at the engine stop relay terminals.

CONNECTION: Black (+) - Red/blue (-)

#### Does the battery voltage exist?

NO - Inspect the bank angle sensor (page 5-63)

YES - GO TO STEP 4.

#### 4. Engine Stop Relay Inspection 2

Turn the ignition switch to "OFF".

Jump the engine stop relay connector terminals.

#### CONNECTION: Black/white - Red/white

Turn the ignition switch to "ON" and engine stop switch " $\bigcirc$ ".

Measure the voltage at the ECM 33P (Black) connector terminals and ground.

CONNECTION: A4 (+) - Ground (-)

#### TOOL:

Test probe

07ZAJ-RDJA110


#### Does the battery voltage exist?


YES - • Inspect the engine stop relay (page 5-65)

Inspect the engine stop switch (page 21-22)

NO - Open circuit in Black/white or Red/ white wire between the battery and

Faulty FI fuse (15 A)

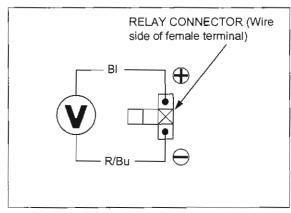

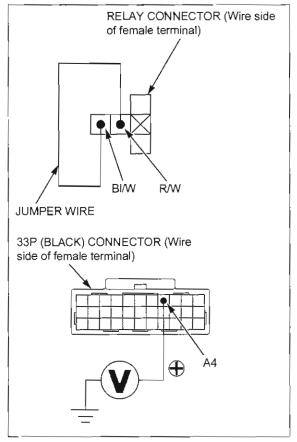

#### REMOVAL/INSTALLATION


Remove the battery case cover (page 18-7).

Turn the ignition switch to "OFF".

Open the cover.

Be careful not to damage the ECM and wire harnesses. Release the tab and remove the ECM. Disconnect the ECM 33P connectors.

Installation is in the reverse order of removal.

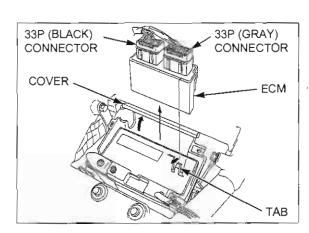

### **ENGINE IDLE SPEED**

#### **IDLE SPEED INSPECTION**

#### NOTE

- Inspect the idle speed after all other engine maintenance items have been performed and are within specifications.
- Before checking the idle speed, inspect following items.
  - No DTC and MIL blinking.
  - Spark plug condition (page 3-7).
  - Air cleaner condition (page 3-6).
- The engine must be warm for accurate idle speed inspection.
- This system eliminates the need for manual idle speed adjustment from the previous designs.
- Use a tachometer with graduations of 50 rpm smaller that will accurately indicate 50 rpm change.

Start the engine and warm it up to coolant temperature is 80°C (176°F).

Stop the engine and connect a tachometer according to its manufacturer's instructions.

Start the engine and let it idle. Check the idle speed.

#### ENGINE IDLE SPEED:1,200 ± 100 rpm

If the idle speed is out of the specification, check the following:

- Throttle operation and throttle grip freeplay (page 3-5).
- Intake air leak or engine top-end problem (page 8-5).
- · IACV operation (page 5-68).


# **IACV**

#### INSPECTION

Remove the air cleaner housing (page 5-49).


The IACV is installed on the throttle body and is operated by the step motor. When the ignition switch is turned to "ON", the IACV operates for a few seconds.

Check the step motor operating (beep) sound with the ignition switch turned to "ON".

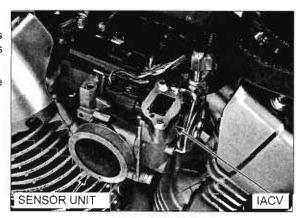

The IACV operation can be checked visually as following:

 Remove the IACV (page 5-68) from the throttle body with its 4P (Black) connector connected, then turn the ignition switch to "ON".

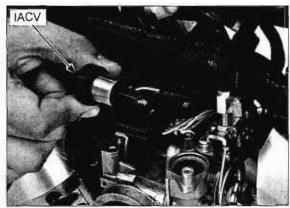


#### REMOVAL

 Always clean the throttle body before the IACV removal to prevent dirt and debris from entering the IACV passage.

Remove the air cleaner housing (page 5-49).


Disconnect the IACV 4P connector.

Remove the torx screws, set plate and IACV.

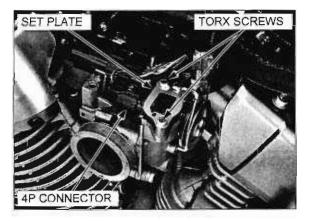


#### INSTALLATION

Turn the slide valve clockwise until lightly seated on IACV.

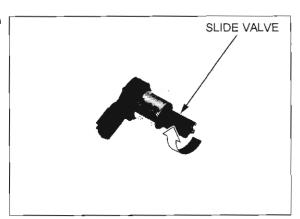


Install a new O-ring to the IACV.

Install the IACV into the throttle body while aligning the valve slit with the guide pin in the throttle body.

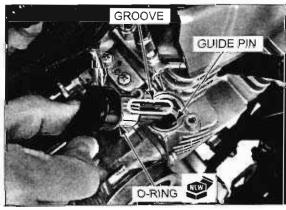

Install the set plate while aligning its groove with the boss of the IACV.


Connect the IACV 4P connector.

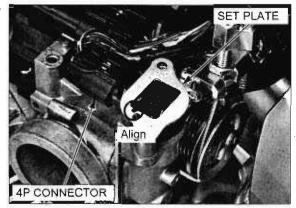

Install and tighten the torx screws to the specified torque.

TORQUE: 2.1 N·m (0.2 kgf·m, 1.5 lbf·ft)

Install the air cleaner housing (page 5-49).

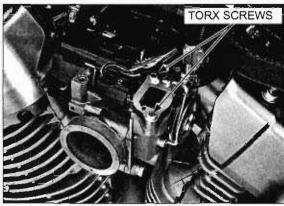

# SECONDARY AIR SUPPLY SYSTEM

#### SYSTEM INSPECTION

Start the engine and warm it up to coolant temperature is 80°C (176°F).

Stop the engine.


Remove the air cleaner cover (page 3-6).

Check that the secondary air intake port is clean and free of carbon deposits.

Check the PAIR check valve if the port is carbon fouled (page 5-72).



Start the engine and open the throttle slightly to be certain that air is sucked in through the air supply hose. If the air is not drawn in, check the air supply hoses for clogs and PAIR control solenoid valve (page 5-71).

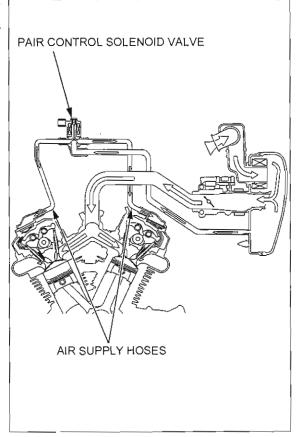


### PAIR CONTROL SOLENOID VALVE

#### INSPECTION

Remove the PAIR control solenoid valve (page 5-72).


Check that air does not flow (A) to (B) when the 12 V battery is connected to the PAIR control solenoid valve terminals. Air should flow (A) to (B) when there is no voltage applied to the PAIR control solenoid valve terminals.

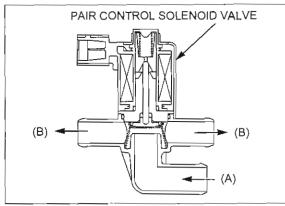

Measure the resistance between the connector terminals.

#### STANDARD: 23 - 27 Ω (20°C/68°F)

If it is out of the standard, replace the PAIR control solenoid valve.

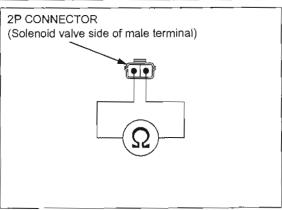

#### **REMOVAVAL/INSTALLATION**


Remove the fuel tank (page 5-48).

Disconnect the PAIR control solenoid valve 2P (Black) connector.

Disconnect the air suction and air supply hoses from the PAIR control solenoid valve.

Remove the PAIR control solenoid valve from the stay of the frame.


Installation is in the reverse order of removal.

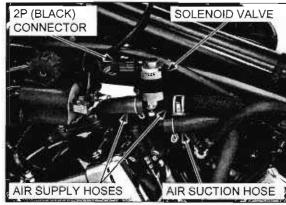


#### PAIR CHECK VALVE INSPECTION

Remove the fuel tank (page 5-48).

Remove the bolts and PAIR check valve cover.

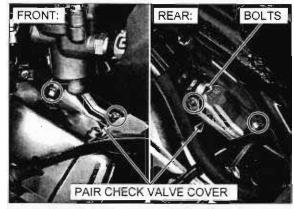

Remove the PAIR check valve from the cylinder head cover.

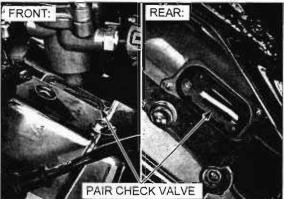


Check the reed for damage or fatigue. Replace if necessary.

Replace the PAIR check valve if the rubber seat is cracked, deteriorated or damaged, or if there is clearance between the reed and seat.

Install the PAIR check valve in the reverse order of removal.

TORQUE: 7 N·m (0.7 kgf·m, 5.2 lbf·ft)

Install the fuel tank (page 5-48).

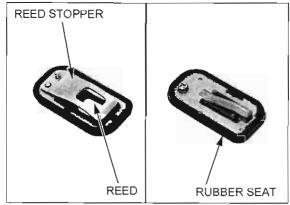


# **EVAP CONTROL SYSTEM (California type only)**

#### EVAP CANISTER REMOVAL/ INSTALLATION

Disconnect the EVAP canister air vent hose and EVAP canister drain hose.

Remove the bolt and collar.


Remove the grommet on the EVAP canister from the tab on the frame.

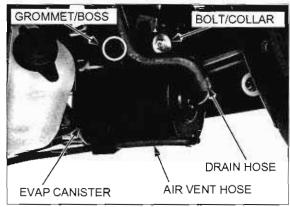

Disconnect the EVAP canister hose (to fuel tank) and EVAP canister hose.

Remove the EVAP canister.

Installation is in the reverse order of removal.

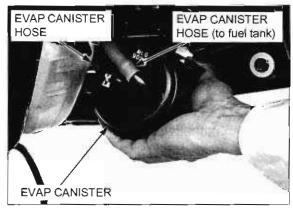

# EVAP PURGE CONTROL SOLENOID VALVE

#### **REMOVAL/INSTALLATION**

Support the motorcycle securely on a level surface.

Remove the following:

- Rear wheel (page 15-7)
- Rear fender (page 2-7)
- Starter relay switch (page 20-16)
- Battery (page 18-7)
- Rear ignition coil (page 19-9)
- ECM (page 5-67)

Remove the tool.

Remove the screws and tool box cover.




### **FUEL SYSTEM (PGM-FI)**

Remove the bolts.

Release the tab on the battery box from the grommet on the stay.

Remove the battery box and stay.

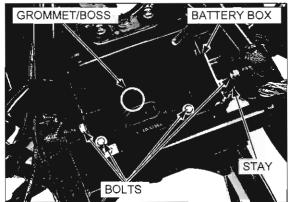


Disconnect the EVAP purge control solenoid valve hose (to throttle body) and EVAP canister hose.

Disconnect the EVAP purge control solenoid valve 2P (Black) connector.

Remove the bolts and EVAP purge control solenoid valve.


Installation is in the reverse order of removal.

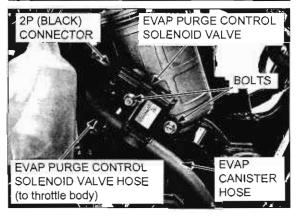

#### INSPECTION

Remove the EVAP purge control solenoid valve.


Check that the air should not flow (A) to (B), only when the 12 V battery is connected to the EVAP purge control solenoid valve terminals.

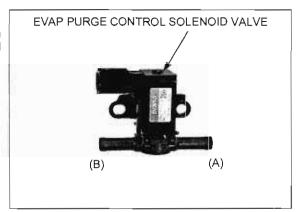

Check the resistance between the terminals of the EVAP purge control solenoid valve connector.

#### STANDARD: 30 - 34 Ω (20°C/68°F)

If the resistance is out of specification, replace the EVAP purge control solenoid valve.

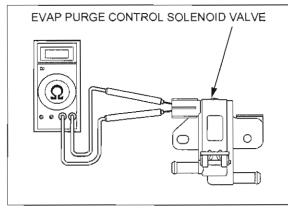


# **6. COOLING SYSTEM**

SYSTEM FLOW PATTERN6-2	THERMOSTAT HOUSING
SERVICE INFORMATION6-3	RADIATOR/COOLING FA
TROUBLESHOOTING6-4	WATER PUMP ·····
SYSTEM TESTING6-5	RADIATOR RESERVE T
COOLANT REPLACEMENT6-6	FAN CONTROL RELAY
THERMOSTAT6-8	

THERMOSTAT HOUSING6-
RADIATOR/COOLING FAN6-1
WATER PUMP 6-1
RADIATOR RESERVE TANK 6-1
FAN CONTROL RELAY 6-1

# **SYSTEM FLOW PATTERN**

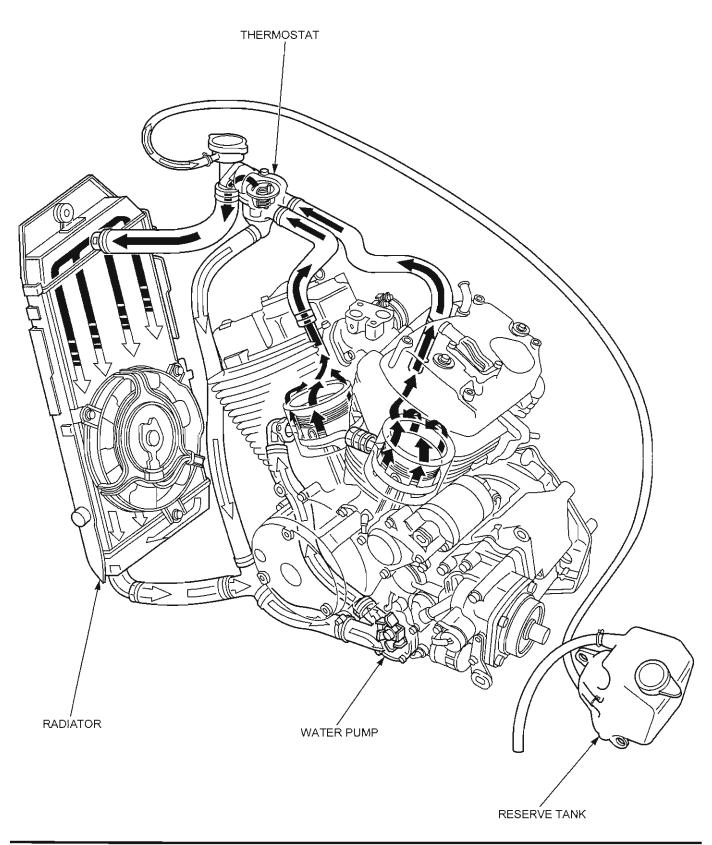

# SERVICE INFORMATION GENERAL

#### **AWARNING**

Removing the radiator cap while the engine is hot can allow the coolant to spray out, seriously scalding you. Always let the engine and radiator cool down before removing the radiator cap.

### NOTICE

Using coolant with silicate corrosion inhibitors may cause premature wear of water pump seals or blockage of radiator passages. Using tap water may cause engine damage.

- · Add coolant at the reserve tank. Do not remove the radiator cap except to refill or drain the system.
- · All cooling system service can be done with the engine in the frame.
- Avoid spilling coolant on painted surfaces.
- After servicing the system, check for leaks with a cooling system tester.
- For the ECT sensor inspection (page 21-18).

#### **SPECIFICATIONS**

	ITEM	SPECIFICATIONS		
Coolant capacity Radiator and engine		1.58 liters (1.67 US qt, 1.39 lmp qt)		
	Reserve tank	0.38 liter (0.40 US qt, 0.33 lmp qt)		
Radiator cap relief pressure		108 - 137 kPa (1.1 - 1.4 kgf/cm², 16 - 20 psi)		
Thermostat Begin to open Fully open		80 – 84°C (177 – 182°F)		
		95°C (203°F)		
	Valve lift	8 mm (0.3 in) minimum at 95°C (203°F)		
Recommended antifreeze		Pro Honda HP coolant or an equivalent high quality ethylene glycol antifreeze containing silicate-free corrosion inhibitors		
Standard coolant concentration		1 : 1 (mixture with distilled water)		

#### **TORQUE VALUES**

Radiator filler mounting bolt
Thermostat housing cover bolt
Fan motor mounting bolt
Cooling fan mounting nut
Water pump cover bolt
Fan motor assembly mounting bolt

Water hose band screw

10 N·m (1.0 kgf·m, 7 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft) 5.1 N·m (0.5 kgf·m, 3.8 lbf·ft) 2.7 N·m (0.3 kgf·m, 2.0 lbf·ft)

13 N·m (1.3 kgf·m, 10 lbf·ft) 8.4 N·m (0.9 kgf·m, 6.2 lbf·ft)

See page 6-10

Apply locking agent to the threads

# **TROUBLESHOOTING**

- Engine temperature too highFaulty coolant temperature indicator or ECT sensor
- Thermostat stuck closed
- · Faulty radiator cap
- Insufficient coolant
- · Passages blocked in radiator, hoses or water jacket
- · Air in system
- · Faulty fan motor
- Faulty water pump

#### Engine temperature too low

Thermostat stuck open

#### Coolant leaks


- · Faulty water pump mechanical seal
- Deteriorated O-rings
- Faulty radiator cap
- · Damaged or deteriorated cylinder head gasket
- · Loose hose connection or band
- · Damaged or deteriorated hoses

# SYSTEM TESTING


# **COOLANT (HYDROMETER TEST)**

Remove the fuel tank (page 5-48).

Remove the radiator cap.

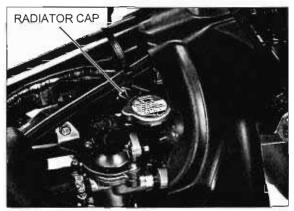

Test the coolant specific gravity using a hydrometer. Look for contamination and replace the coolant if necessary.

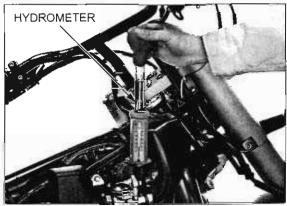

#### COOLANT GRAVITY CHART

		Coolant temperature °C (°F)										
		0	5	10	15	20	25	30	35	40	45	50
		(32)	(41)	(50)	(59)	(68)	(77)	(86)	(95)	(104)	(113)	(122)
	5	1.009	1.009	1.008	1.008	1.007	1.006	1.005	1.003	1.001	0.999	0.997
	10	1.018	1.017	1.017	1.016	1.015	1.014	1.013	1.011	1.009	1.007	1.005
	15	1.028	1.027	1.026	1.025	1.024	1.022	1.020	1.018	1.016	1.014	1.012
%	20	1.036	1.035	1.034	1.033	1.031	1.029	1.027	1.025	1.023	1.021	1.019
ratio	25	1.045	1.044	1.043	1.042	1.040	1.038	1.036	1.034	1.031	1.028	1.025
	30	1.053	1.052	1.051	1.049	1.047	1.045	1.043	1.041	1.038	1.035	1.032
aut	35	1.063	1.062	1.060	1.058	1.056	1.054	1.052	1.049	1.046	1.043	1.040
Coolant	40	1.072	1.070	1.068	1.066	1.064	1.062	1.059	1.056	1.053	1.050	1.047
Ö	45	1.080	1.078	1.076	1.074	1.072	1.069	1.066	1.063	1.060	1.057	1.054
	50	1.086	1.084	1.082	1.080	1.077	1.074	1.071	1.068	1.065	1.062	1.059
	55	1.095	1.093	1.091	1.088	1.085	1.082	1.079	1.076	1.073	1.070	1.067
	60	1.100	1.098	1.095	1.092	1.089	1.086	1.083	1.080	1.077	1.074	1.071

# RADIATOR CAP/SYSTEM PRESSURE INSPECTION

Remove the radiator cap (page 6-5).

Wet the sealing surfaces of the cap, then install the cap onto the tester.

#### TOOLS:

Cooling system pressure tester SVTS4AH
Cooling system adaptor OTCJ33984A

Pressurize the radiator cap using the tester. Replace the radiator cap if it does not hold pressure, or if relief pressure is too high or too low. It must hold the specified pressure for at least 6 seconds.

#### **RADIATOR CAP RELIEF PRESSURE:**

108 - 137 kPa (1.1 - 1.4 kgf/cm<sup>2</sup>, 16 - 20 psi)

Pressurize the radiator, engine and hoses using the tester, and check for leaks.


#### NOTICE

Excessive pressure can damage the cooling system components. Do not exceed 137 kPa (1.4 kgf/cm², 20 psi).

Repair or replace components if the system will not hold the specified pressure for at least 6 seconds.

Remove the tester and install the radiator cap.

Install the fuel tank (page 5-48).

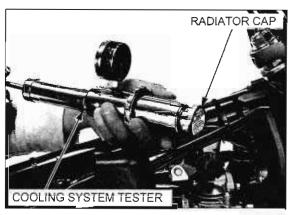



# COOLANT REPLACEMENT

#### **PREPARATION**

#### NOTE:


- The effectiveness of coolant decreases with the accumulation of rust or if there is a change in the mixing proportion during usage. Therefore, for best performance change the coolant regularly as specified in the maintenance schedule.
- Mix only distilled, low mineral water with the recommended antifreeze.

#### RECOMMENDED ANTIFREEZE:

High quality ethylene glycol antifreeze containing silicate-free corrosion inhibitors

#### STANDARD COOLANT CONCENTRATION:

1:1 (mixture with distilled water)

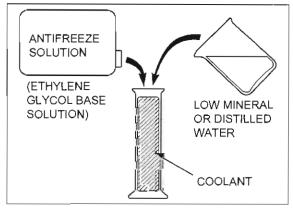


#### REPLACEMENT/AIR BLEEDING

#### NOTE:

When filling the system or reserve tank with coolant, or checking the coolant level, hold the motorcycle in an upright position.

Remove the fuel tank (page 5-48).

Remove the radiator cap.

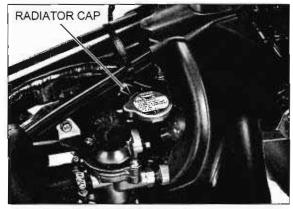

Drain the coolant from the system by removing the drain bolt and sealing washer.

Reinstall the drain bolt with a new sealing washer and tighten it to the specified torque.

TORQUE: 13 N·m (1.3 kgf·m, 10 lbf·ft)




Remove the left crankcase rear cover (page 2-4).

Disconnect the siphon hose from the reserve tank and drain the coolant.

Empty the coolant by removing the reserve tank (page 6-17) and rinse the inside of the reserve tank with water.

Install the following:

- Reserve tank (page 6-17)
- Left crankcase rear cover (page 2-4)

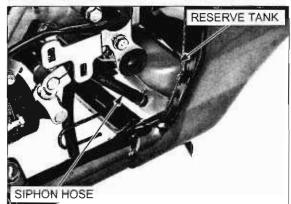

Fill the system with the recommended coolant through the filler opening up to the filler neck.

Install the fuel tank (page 5-48).

Bleed air from the system as follows:


- Shift the transmission into neutral.
   Start the engine and let it idle for 2 3 minutes.
- Snap the throttle three to four times to bleed air from the system,
- Stop the engine, remove the fuel tank (page 5-48) and add the coolant up to the filler neck.
- 4. Install the radiator cap.



Remove the reserve tank cap.

Fill the reserve tank to the upper level line and install the tank cap.

Install the fuel tank (page 5-48).

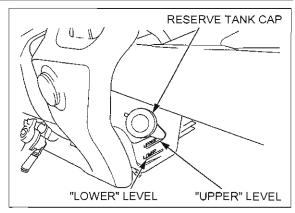

# **THERMOSTAT**

#### **REMOVAL**


Drain the coolant from the system (page 6-7).

Remove the following:

- Steering side covers (page 2-4)
- Air cleaner housing (page 5-49)

Place a shop towel under the thermostat housing.

Disconnect the ECT sensor 3P connector. Remove the thermostat housing cover bolts.

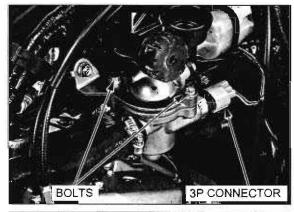

Pull out the thermostat housing and remove the O-ring and thermostat.



# THERMOSTAT INSPECTION

Visually inspect the thermostat for damage.

Replace the thermostat if the valve stays open at room temperature.

Heat a container of water with an electric heating

element for 5 minutes. Suspend the thermostat in the heated water to check its operation.


## THERMOSTAT BEGIN TO OPEN:

80 - 84°C (177 - 182°F)

#### **VALVE LIFT:**

8 mm (0.3 in) minimum at 95°C (203°F)


Replace the thermostat if the valve opens at a temperature other than those specified.

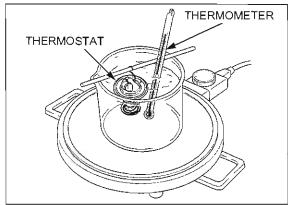

Wear insulated gloves and adequate eye protection.
Keep flammable materials away from the electric heating element.
Do not let the thermostat or thermometer touch the pan, or you will get false readings.

#### INSTALLATION

Install the thermostat by aligning its flange with the thermostat housing slot.

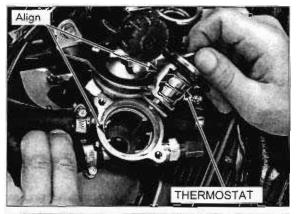

Install a new O-ring into the thermostat housing groove.



Install the thermostat housing to the cover and tighten the bolts to the specified torque.


#### TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Connect the ECT sensor 3P connector.

Fill and bleed the cooling system (page 6-7).

Install the following:

- Air cleaner housing (page 5-49)
- Steering side covers (page 2-4)

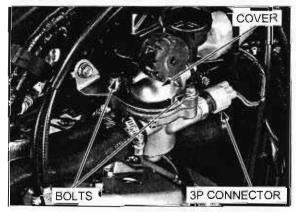

# THERMOSTAT HOUSING


#### REMOVAL/INSTALLATION

Drain the coolant from the system (page 6-7).

Remove the following:


- Steering side covers (page 2-4)
- Air cleaner housing (page 5-49)

Disconnect the ECT sensor 3P connector. Disconnect the siphon hose.

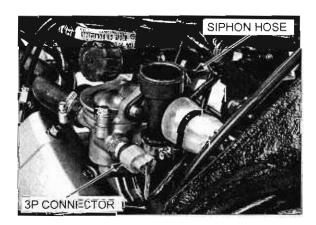

Loosen the water hose band screws and disconnect the water hoses.

Remove the bolt and thermostat housing assembly.

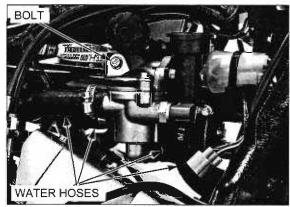


and wires properly order of removal. (page 1-26).

Route the hoses Install the thermostat housing assembly in the reverse

#### NOTE:

Tighten the water hose band screws to the specified range as shown.

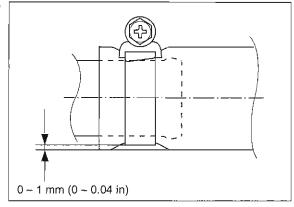


#### **DISASSEMBLY**

Remove the following:

- Thermostat housing (page 6-9)
- Thermostat (page 6-8)
- ECT sensor (page 5-62)


Remove the bolts and O-ring.

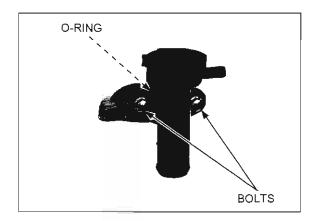

#### **ASSEMBLY**

Install a new O-ring to the radiator filler.

Assemble the radiator filler and thermostat housing cover.

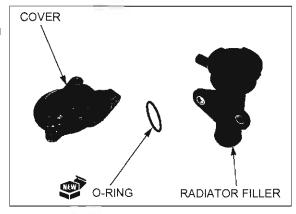


Install and tighten the bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the following:

- ECT sensor (page 5-62)
- Thermostat (page 6-9)
- Thermostat housing (page 6-9)

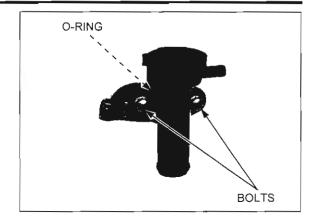


# RADIATOR/COOLING FAN


#### **REMOVAL**

Be careful not to damage the radiator fins while servicing the radiator and fan motor. Drain the coolant from the system (page 6-7). Remove the steering side covers (page 2-4).


Remove the wire band and disconnect the fan motor 2P (White) connector.

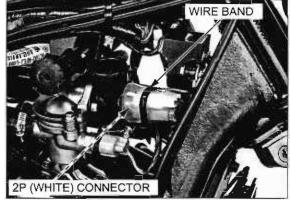

Loosen the water hose band screw and disconnect the radiator upper water hose from the radiator.

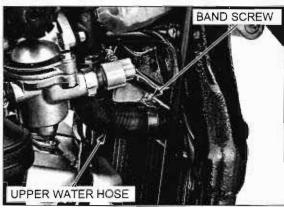


Loosen the water hose band screw and disconnect the radiator lower water hose from the radiator.

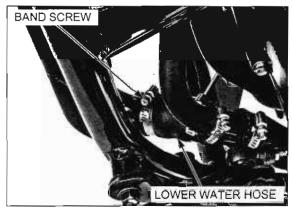

Remove the bolt and collar.

Release the rear brake light switch and CKP sensor wires from the radiator grill.


Release the fan motor wire from the clamp and remove the radiator.

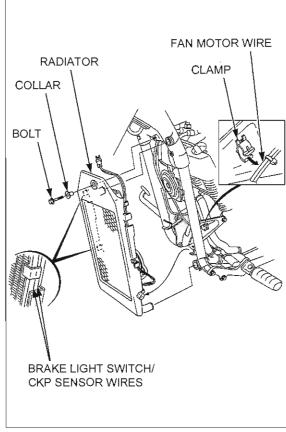


#### **DISASSEMBLY**

Release the fan motor wires from the radiator grill.


Remove the radiator mounting rubbers and radiator grill.

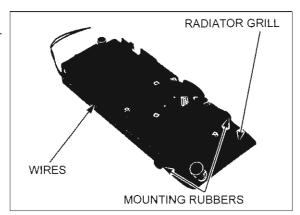


Remove the clamp, bolts and fan motor assembly.

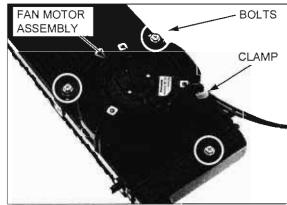


Remove the nut and cooling fan.

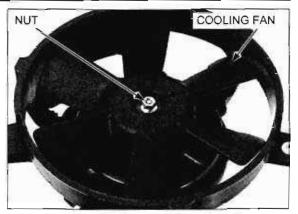

Remove the bolts and fan motor from the shroud.

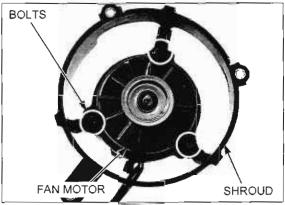


# **ASSEMBLY**

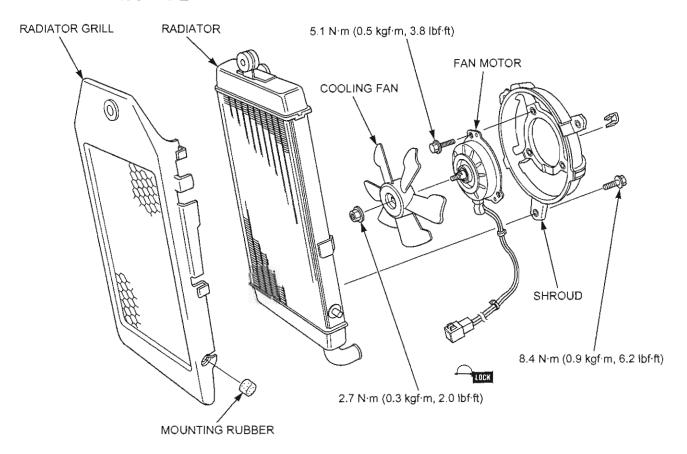


Install the fan motor on the shroud in the direction as shown and tighten the bolts to the specified torque.

TORQUE: 5.1 N·m (0.5 kgf·m, 3.8 lbf·ft)

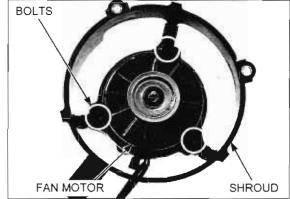


Install the cooling fan onto the motor shaft, aligning the flat surfaces.

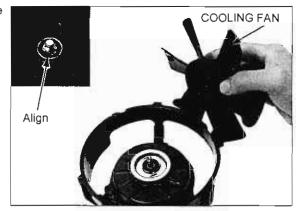

Clean and apply locking agent to the nut threads. Tighten the nut to the specified torque.


TORQUE: 2.7 N·m (0.3 kgf·m, 2.0 lbf·ft)

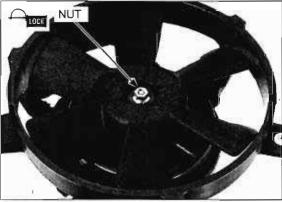


Install the fan motor assembly on the radiator and tighten the bolts with the ground terminal as shown.

TORQUE: 8.4 N·m (0.9 kgf·m, 6.2 lbf·ft)

Clamp the fan motor wires.

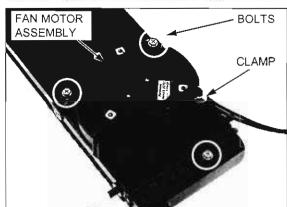

Install the radiator on the radiator grill.
Install the mounting rubbers.
Route the fan motor wires through the radiator grill.

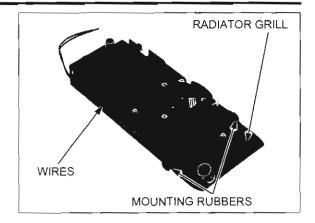

#### INSTALLATION

Install the radiator by inserting its mounting rubbers into the holder of the frame.

Route the rear brake light switch and CKP sensor wires through the radiator grill (page 1-26).


Connect the fan motor wire to the clamp.

Install the collar, bolt and tighten the bolt.

Connect the radiator upper and lower water hoses (page 1-26).

Tighten the water hose band screws to the specified range (page 6-10).

Install the steering side covers (page 2-4). Fill and bleed the cooling system (page 6-7).

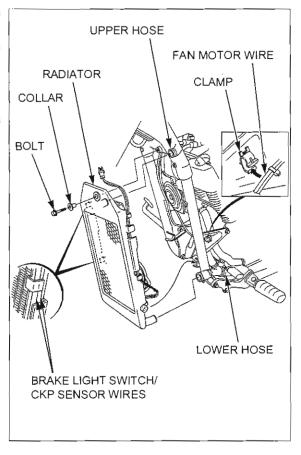

## **WATER PUMP**


#### **MECHANICAL SEAL INSPECTION**

Check the bleed hole of the water pump for signs of coolant leakage.

#### NOTE:

- A small amount of "weeping" from the bleed hole is normal.
- Make sure that there are no continuous coolant leakage from the bleed hole while operating the engine.

Replace the water pump as an assembly if necessary.

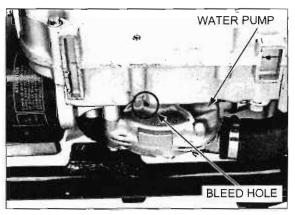


#### REMOVAL


Drain the coolant from the system (page 6-7).

Loosen the water hose band screw and disconnect the water hose.

Remove the bolts, sealing washer and water pump cover.

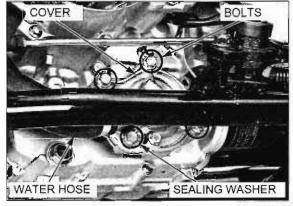


Disconnect the water hose. Remove the O-rings and water pump.

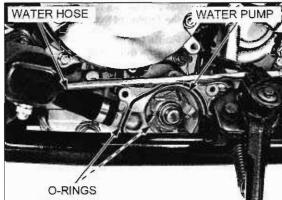

#### INSTALLATION


Coat a new O-ring with engine oil and install it onto the stepped section of the water pump.

Install the water pump while aligning its groove with the projection of the oil pump shaft.

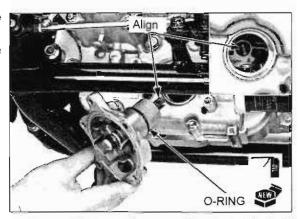

Connect the water hose (page 1-26). Tighten the water hose band screw to the specified range (page 6-10).

Install a new O-ring into the groove in the water pump.

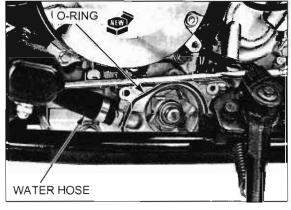


Align the bolt holes in the pump and crankcase, then install the water pump cover with the bolts and a new sealing washer.

Tighten the bolts to the specified torque in a crisscross pattern in several steps.

#### TORQUE: 13 N·m (1.3 kgf·m, 10 lbf·ft)

Connect the water hose (page 1-26).

Tighten the water hose band screw to the specified range (page 6-10).

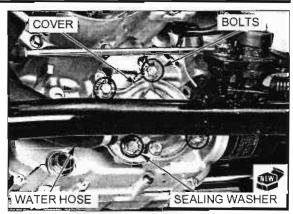

# RADIATOR RESERVE TANK


#### REMOVAL/INSTALLATION

Disconnect the siphon hose from the reserve tank and drain the coolant.

Remove the bolt and reserve tank.

Route the hoses properly (page 1-26).

Installation is in the reverse order of removal.

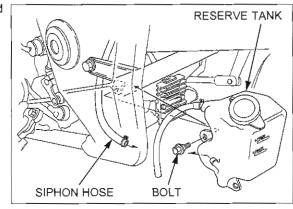

# **FAN CONTROL RELAY**

#### SYSTEM INSPECTION

The coolant temperature is low but the fan motor does not stop

Remove the fan control relay (page 6-18) and turn the ignition switch to "ON".

If the fan motor stops, replace the fan control relay.


The coolant temperature indicator comes on but the fan motor does not start

Before testing, check for a blown sub fuse 20 A (FAN).

Remove the fan control relay (page 6-18). Jump the fan control relay terminals.

#### CONNECTION: Black/blue - Blue/orange


Turn the ignition switch to "ON" and check the fan motor.

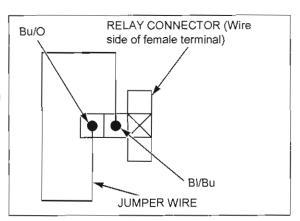

- · If the motor starts, replace the fan control relay.
- If the fan motor does not start, remove the steering side covers (page 2-4) and disconnect the fan motor 2P (White) connector.

Measure the voltage between the Black/blue wire and ground.

- If there is battery voltage, replace the fan motor (page 6-11).
- If there is no voltage, check for an open circuit in the Green and Black/blue wires.

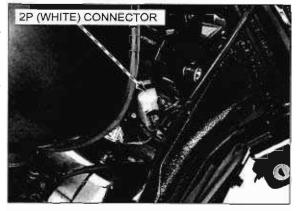

### **INSPECTION (VT750C2F/C2B)**


Remove the left side cover (page 2-3).

Remove the relay box from the battery box.



Release the tabs (Blue) and remove the relay connector from the connector cover.

Disconnect the fan control relay from the relay connector.

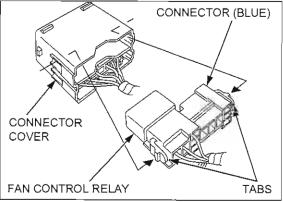

Connect the ohmmeter to the relay connector terminals.


#### CONNECTION: A - B

Connect the 12 V battery to the following relay connector terminals.

#### CONNECTION: C - D

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the fan control relay.

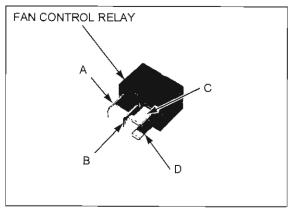


#### **INSPECTION (VT750C2S)**

Remove the left side cover (page 2-3).

Remove the relay box cover.

Disconnect the fan control relay from the relay connector.

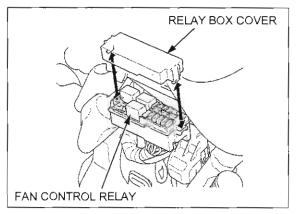

Connect the ohmmeter to the relay connector terminals.


#### CONNECTION: A - B

Connect the 12 V battery to the following relay connector terminals.

#### CONNECTION: C - D

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the fan control relay.

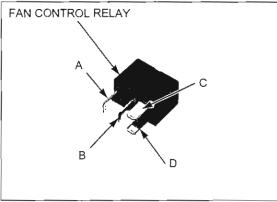


# МЕМО

# 7. ENGINE REMOVAL/INSTALLATION

COMPONENT LOCATION7-2	ENGINE REMOVAL ·······7-4	7
SERVICE INFORMATION7-3	ENGINE INSTALLATION7-8	

# **COMPONENT LOCATION**

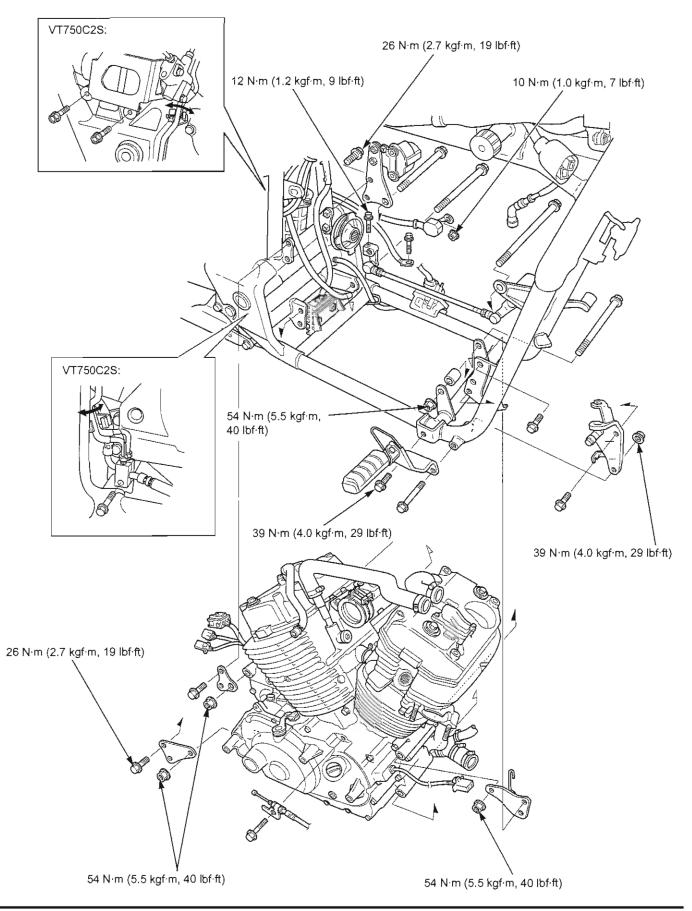

# SERVICE INFORMATION

#### **GENERAL**

- · A hoist or equivalent is required to support the motorcycle when removing and installing the engine.
- A floor jack or other adjustable support is required to support and maneuver the engine.
- When installing the engine, be sure to tighten the engine mounting fasteners to the specified torque in the specified sequence. If
  you make a mistake with the tightening torque or sequence, loosen all mounting fasteners, then tighten them again to the
  specified torque in the correct sequence.
- · Do not support the engine using the engine oil filter or it will be damaged.
- · When removing/installing the engine, tape the frame around the engine beforehand for frame protection.
- The following components require engine removal for servicing.
  - Cylinder head (page 8-13)
  - Cylinder/piston (page 9-4)
  - Crankshaft (page 12-10)
  - Transmission (Including gearshift drum/shift fork: page 12-20)
  - Output gear case (page 12-28)
  - Oil pump (page 4-6)
- The following components can be serviced with the engine in the frame.
  - Camshaft (page 8-7)
  - Throttle body (page 5-51)
  - Water pump (page 6-15)
  - Clutch/gearshift linkage (page 10-3)
  - ~ Alternator/starter clutch (page 11-3)
  - Starter motor (page 20-7)

#### **SPECIFICATIONS**

ITEM	SPECIFICATIONS
Engine dry weight	71.5 kg (157.6 lbs)
Engine oil capacity at disassembly	3.2 liters (3.4 US qt, 2.8 lmp qt)
Coolant capacity (radiator and engine)	1.58 liters (1.67 US qt, 1.39 lmp qt)

#### **TORQUE VALUES**

Engine mounting nut	54 N·m (5.5 kgf·m, 40 lbf·ft)
Engine hanger plate bolt	26 N·m (2.7 kgf·m, 19 lbf·ft)
Starter motor cable terminal nut	10 N·m (1.0 kgf·m, 7 lbf·ft)
EOP switch terminal screw	1.9 N·m (0.2 kgf·m, 1.4 lbf·ft)
Main footpeg bracket mounting bolt	39 N·m (4.0 kgf·m, 29 lbf·ft)
Main footpeg bracket mounting nut	39 N·m (4.0 kgf·m, 29 lbf·ft)
Gearshift arm pinch bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)

## **ENGINE REMOVAL**

Drain the engine oil (page 3-12). Drain the coolant from the cooling system (page 6-7).


#### Remove the following:

- Fuel tank (page 5-48)
- Front ignition coil (page 19-8)
- Spark plug caps (page 3-7)
- Thermostat housing (page 6-9)
   Rear brake light switch (page 21-25)
- Brake pedal (page 15-24)Left crankcase rear cover (page 2-4)
- Exhaust system (page 2-9)
- Injectors (page 5-58)
- Throttle body (page 5-51)Radiator (page 6-11)
- Over head covers (page 2-4)
- Clutch cover (page 10-5)
- Alternator cover (page 3-8)


#### NOTE:

Wrap the intake manifold port with a shop towel or cover them with a piece of tape to prevent any foreign material from dropping into the engine.


VT750C2S; Remove the bolts/washers and brake hose clamp.

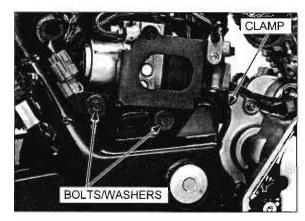


VT750C2S; Remove the bolt and brake hose clamp.

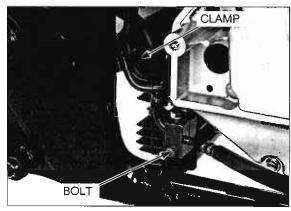


Disconnect the CKP sensor 2P (Red) connector.

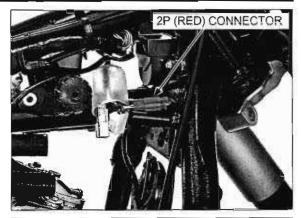


Release the wire band. Disconnect the ignition switch 2P connector.

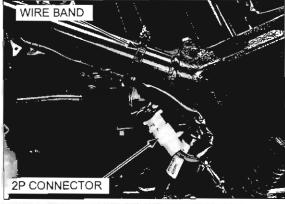


Release the wire band. Disconnect the VS sensor 3P (White), alternator 3P (White) and EOP/neutral switch 2P (Black) connectors.

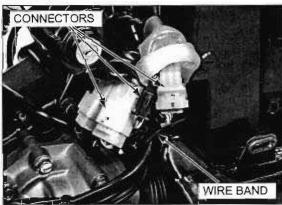


Release the wires from the clamps and wire band.

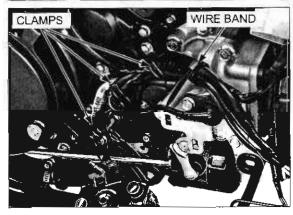


Remove the pinch bolt and gearshift arm.

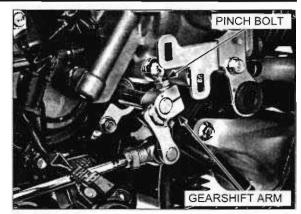

Disconnect the secondary air supply hoses from the PAIR check valve covers.

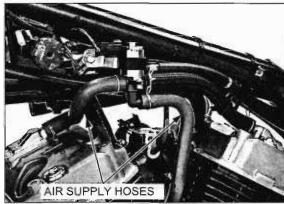


Remove the clutch cable holder by removing the bolt and disconnect the clutch cable end from the clutch lifter arm.

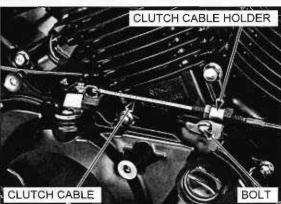


Open the terminal cover and remove the starter motor terminal nut.

Disconnect the starter motor cable.

Remove the bolt and disconnect the ground cable.

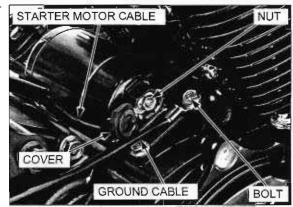


Remove the bolts, nut, right main footpeg and brake pedal brackets from the frame.

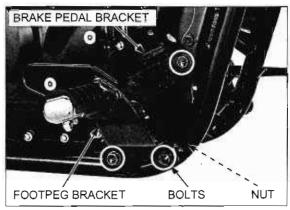


The jack height must be continually adjusted to relieve stress for bolt removal.

The jack height Place a floor jack or other adjustable support under the st be continually engine.

Remove the rear engine mounting nuts. Remove the bolts and right rear engine hanger plates.

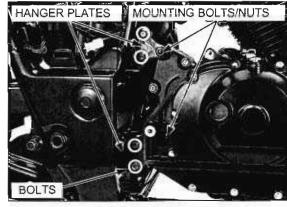


Remove the rear engine mounting bolts. Remove the bolts and left rear engine hanger plate.

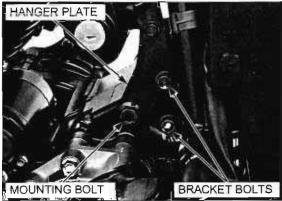

Remove the front engine mounting nuts. Remove the bolts and front engine hanger plate.

Remove the engine mounting bolts and collar.

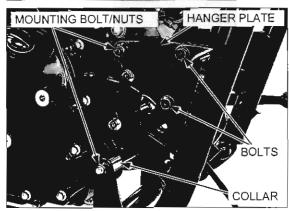


# **ENGINE REMOVAL/INSTALLATION**

Release the joint boot from the output gear case.

During engine removal, hold the engine securely and be careful not to damage the frame and engine. Move the engine forward and release the output shaft from the universal joint in the swingarm.

Carefully maneuver the engine and remove it out of the frame to the right.

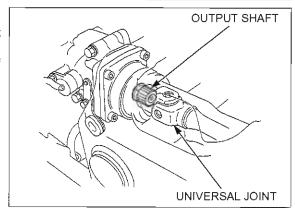


# **ENGINE INSTALLATION**

Note the direction of engine hanger bolts.

## NOTE:

- All the engine mounting bolts and nuts loosely install, then tighten the bolts and nuts to the specified torque in the specified sequence.
- Route the wires, hoses and cables properly (page 1-26).

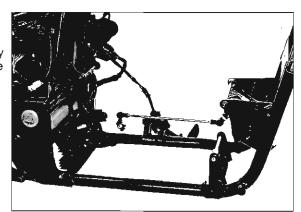


Apply 1 g of molybdenum disulfide paste to the output shaft splines (universal joint side).

During engine installation, hold the engine securely and be careful not to damage the frame and engine. Using a floor jack or other adjustable support, carefully place the engine into the frame and maneuver it into place.

## NOTE:


Engage the output shaft with the universal joint.

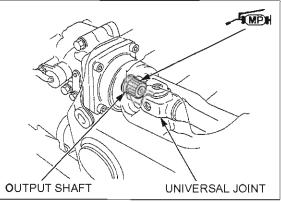

Loosely install the all engine hanger plates, mounting fasteners and collar.


Tighten the front lower, then front upper engine mounting nuts to the specified torque.

TORQUE: 54 N·m (5.5 kgf·m, 40 lbf·ft)

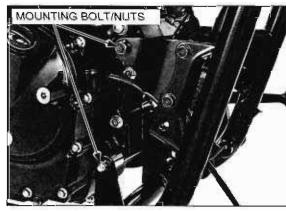


Tighten the rear lower, then rear upper engine mounting nuts to the specified torque.

TORQUE: 54 N·m (5.5 kgf·m, 40 lbf·ft)

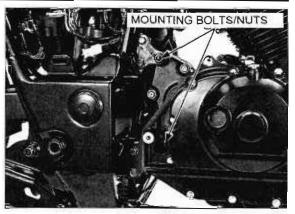


Tighten the front engine hanger plate bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

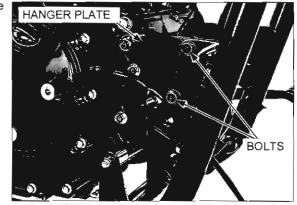


Tighten the right rear lower engine hanger plate bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

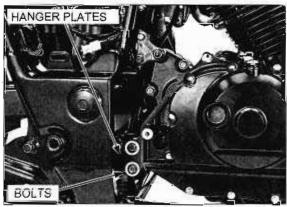

Tighten the left rear upper engine hanger plate bolts to the specified torque.


TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

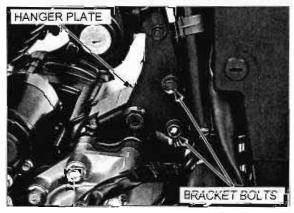

# **ENGINE REMOVAL/INSTALLATION**

Tighten the right rear upper engine hanger plate bolts to the specified torque.


TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

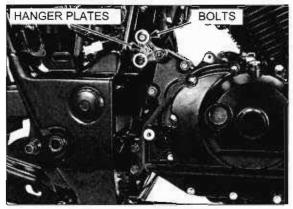

Install the right main footpeg and brake pedal brackets and tighten the bolts and nut to the specified torque.

### TORQUE:


Main footpeg bracket mounting bolt/nut: 39 N·m (4.0 kgf·m, 29 lbf·ft)

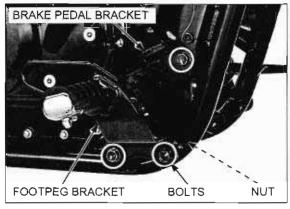


Connect the starter motor cable and tighten the terminal nut to the specified torque.

# TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)


Connect the ground cable and tighten the bolt securely. Close the terminal cover securely.

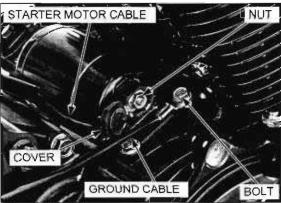

Connect the clutch cable end to the clutch lifter arm. Install the clutch cable holder and bolt. Tighten the bolt securely.

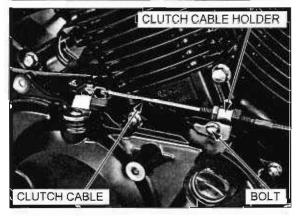


Connect the secondary air supply hoses to the PAIR check valve covers.

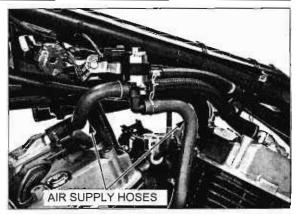


Install the gearshift arm to the gearshift spindle, aligning with the punch marks.

Tighten the gearshift arm pinch bolt to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

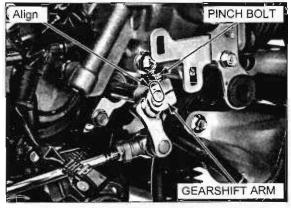

Clamp and bind the wires with the clamps and wire band.

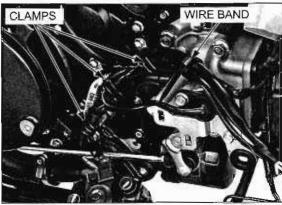


Connect the VS sensor 3P (White), alternator 3P (White) and EOP/neutral switch 2P (Black) connectors. Bind the wires with the wire band.

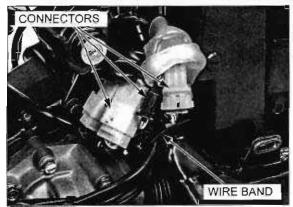


# **ENGINE REMOVAL/INSTALLATION**


Connect the ignition switch 2P connectors. Bind the wires with the wire band.

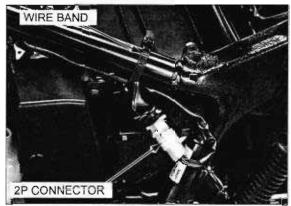

Connect the CKP sensor 2P (Red) connector. Install the following:

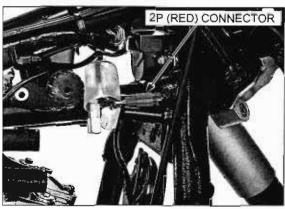

VT750C2S; Install the brake hose clamp and tighten the bolt securely.

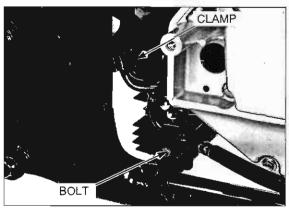


VT750C2S; Install the brake hose clamp and tighten the bolts/ washers securely.

- Radiator (page 6-15)
- Throttle body (page 5-51)
- Injectors (page 5-58)
- Exhaust system (page 2-12)
- Left crankcase rear cover (page 2-4)
- Spark plug caps (page 3-8)
- Thermostat housing (page 6-9)
- Rear brake light switch (page 21-25)
- Brake pedal (page 15-25)
- Over head covers (page 2-4)
- Clutch cover (page 10-22)
- Alternator cover (page 3-10)
- Front ignition coil (page 19-8)
- Fuel tank (page 5-48)

Fill the crankcase with engine oil (page 3-12). Fill and bleed the cooling system (page 6-7).

Check the engine oil level (page 3-11).

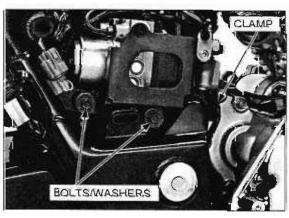


# 8. CYLINDER HEAD/VALVES

COMPONENT LOCATION8-2	CYLINDER HEAD DISASSEMBLY8-14
SERVICE INFORMATION8-3	VALVE GUIDE REPLACEMENT 8-17
TROUBLESHOOTING8-5	VALVE SEAT INSPECTION/REFACING ··· 8-18
CYLINDER COMPRESSION8-6	CYLINDER HEAD ASSEMBLY8-21
CYLINDER HEAD COVER REMOVAL8-6	CYLINDER HEAD INSTALLATION8-23
CAMSHAFT REMOVAL ······8-7	CAMSHAFT INSTALLATION8-25
CYLINDER HEAD REMOVAL8-13	CYLINDER HEAD COVER

8

# **COMPONENT LOCATION**

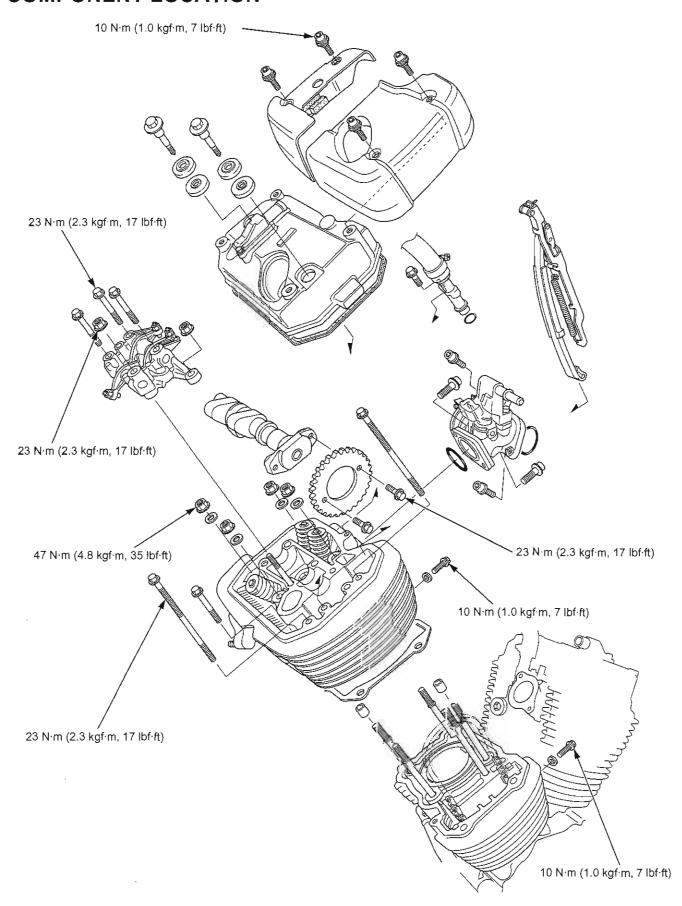

# SERVICE INFORMATION

# **GENERAL**

- · This section covers service of the rocker arm, camshaft, cylinder head and valve.
- The rocker arm and camshaft services can be done with the engine installed in the frame. The cylinder head and valve service requires engine removal.
- Be careful not to damage the mating surfaces when removing the cylinder head cover and cylinder head. Do not strike the
  cylinder head cover and cylinder head too hard during removal.
- When disassembling, mark and store the disassembled parts to ensure that they are reinstalled in their original locations.
- Clean all disassembled parts with cleaning solvent and dry them by blowing them off with compressed air before inspection.
- Camshaft and rocker arm lubricating oil is fed through oil passages in the cylinder head and camshaft holder. Clean the oil
  passages before assembling the cylinder head and cover.

# **SPECIFICATIONS**

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Cylinder compression at 400 rpm		1,373 ± 98 kPa (14.0 ± 1.0 kgf/cm², 199 ± 14 psi)	_	
Valve clearance IN EX		IN	0.15 ± 0.02 (0.006 ± 0.001)	_
		EX	$0.20 \pm 0.02 \ (0.008 \pm 0.001)$	
Cam chain tensioner wedge B length				6 (0.2)
Camshaft	Cam lobe height	IN	37.188 – 37.348 (1.4641 – 1.4704)	37.16 (1.463)
		EX	37.605 - 37.765 (1.4805 - 1.4868)	37.58 (1.480)
	Runout	IN/EX	_	0.05 (0.002)
	Journal O.D.	IN/EX	21.959 - 21.980 (0.8645 - 0.8654)	21.90 (0.862)
	Oil clearance	IN/EX	0.020 - 0.141 (0.0008 - 0.0056)	0.16 (0.006)
Rocker arm, rocker arm shaft	Rocker arm shaft O.D.	IN/EX	11.966 - 11.984 (0.4711 - 0.4718)	11.83 (0.466)
	Rocker arm I.D.	IN/EX	12.000 - 12.018 (0.4724 - 0.4731)	12.05 (0.474)
	Rocker arm-to-shaft clearance		0.016 - 0.052 (0.0006 - 0.0020)	0.07 (0.003)
Valve, valve guide	Valve stem O.D.	IN	5.475 - 5.490 (0.2156 - 0.2161)	5.45 (0.215)
		EX	5.455 - 5.470 (0.2148 - 0.2154)	5.41 (0.213)
	Valve guide I.D.	IN	5.500 - 5.510 (0.2165 - 0.2169)	5.56 (0.219)
		EX	5.500 - 5.512 (0.2165 - 0.2170)	5.56 (0.219)
	Stem-to-guide clearance	IN	0.010 - 0.035 (0.0004 - 0.0014)	0.10 (0.004)
		EX	0.030 - 0.057 (0.0012 - 0.0022)	0.11 (0.004)
	Valve guide projection	IN	18.7 - 18.9 (0.736 - 0.744)	_
	above cylinder head	EX	17.2 – 17.4 (0.68 – 0.69)	_
	Valve seat width	IN/EX	0.90 - 1.10 (0.035 - 0.043)	1.5 (0.06)
Valve spring	Free length	. IN	42.14 (1.659)	40.58 (1.598)
		EX	46.11 (1.815)	44.72 (1.761)
Cylinder warpage		-	0.10 (0.004)	

# **TORQUE VALUES**

Cylinder head cover bolt Cylinder head 10 mm nut Cylinder head 8 mm bolt Cam sprocket bolt Cam chain tensioner bolt Camshaft holder bolt Camshaft holder nut	10 N·m (1.0 kgf·m, 7 lbf·ft) 47 N·m (4.8 kgf·m, 35 lbf·ft) 23 N·m (2.3 kgf·m, 17 lbf·ft) 23 N·m (2.3 kgf·m, 17 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft) 23 N·m (2.3 kgf·m, 17 lbf·ft) 23 N·m (2.3 kgf·m, 17 lbf·ft)	Apply engine oil to the threads and seating surface Apply engine oil to the threads and seating surface Apply locking agent to the threads See page 8-24
Rear PAIR check valve cover		

7 N·m (0.7 kgf·m, 5.2 lbf·ft)

# CYLINDER HEAD/VALVES

# TOOLS

Valve spring compressor 07757-0010000	Valve guide reamer, 5.510 mm 07984-2000001	Valve guide driver, 5.5 mm 07742-0010100
	07984-200000D (U.S.A. only)	
Seat cutter, 27.5 mm (45° IN) 07780-0010200	Seat cutter, 35 mm (45° EX) 07780-0010400	Flat cutter, 28 mm (32° IN) 07780-0012100
Equivalent commercially available in U.S.A.	Equivalent commercially available in U.S.A.	Equivalent commercially available in U.S.A.
Flat cutter, 35 mm (32° EX) 07780-0012300	Interior cutter, 30 mm (60° IN) 07780-0014000	Interior cutter, 37.5 mm (60° EX) 07780-0014100
Equivalent commercially available in U.S.A.	Equivalent commercially available in U.S.A.	Equivalent commercially available in U.S.A.
Cutter holder, 5.5 mm 07781-0010101	Valve guide driver 07743-0020000	
Equivalent commercially available in U.S.A.	Not available in U.S.A.	

# **TROUBLESHOOTING**

Engine top-end problems usually affect engine performance. These can be diagnosed by a compression test, or by tracing top-end noise with a sounding rod or stethoscope.

#### Compression too low, hard starting or poor performance at low speed

- Valves
  - Incorrect valve adjustment
  - Burned or bent valves
  - Incorrect valve timing
  - Broken valve spring
  - Uneven valve seating
  - Valve stuck open
- · Cylinder head
  - Leaking or damaged cylinder head gasket
  - Warped or cracked cylinder head
  - Loose spark plug
- · Cylinder/piston problem (page 9-3)

## Compression too high

· Excessive carbon build-up on piston head or combustion chamber

#### Excessive smoke

- · Worn valve stem or valve guide
- · Damaged stem seal
- · Cylinder/piston problem (page 9-3)

# Excessive noise

- · Incorrect valve clearance
- · Sticking valve or broken valve spring
- Excessive worn valve seat
- · Worn or damaged camshaft
- · Worn or damaged rocker arm and/or shaft
- · Worn rocker arm follower or valve stem end
- Worn cam sprocket teeth
- Worn cam chain
- · Wom or damaged cam chain tensioner
- Cylinder/piston problem (page 9-3)

#### Rough idle

· Low cylinder compression

# CYLINDER COMPRESSION

NOTE:

If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area.

To measure the cylinder compression of each cylinder, remove only one plug at a time.

Warm up the engine to normal operating temperature. Stop the engine, disconnect the spark plug caps and remove one spark plug at a time.

Shift the transmission into neutral.

Install a compression gauge into the spark plug hole.

Open the throttle all the way and crank the engine with the starter motor until the gauge reading stops rising.

To avoid discharging the battery, do not operate the starter motor for more than seven seconds.

The maximum reading is usually reached within 4-7 seconds.

#### Compression pressure:


1,373  $\pm$  98 kPa (14.0  $\pm$  1.0 kgf/cm<sup>2</sup>, 199  $\pm$  14 psi) at 400 rpm

Low compression can be caused by:

- Blown cylinder head gasket
- Improper valve adjustment
- Valve leakage
- Worn piston ring or cylinder

High compression can be caused by:

 Carbon deposits in combustion chamber or on piston head

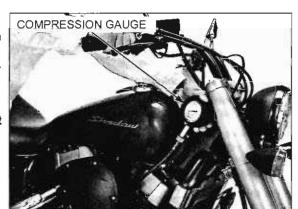


# CYLINDER HEAD COVER REMOVAL

# **FRONT**


Remove the following:

- Over head covers (page 2-4)
- Ignition coil (page 19-8)
- PAIR check valve (page 5-72)

Remove the thermostat housing assembly bolt to get the clearance for cylinder head cover removal.

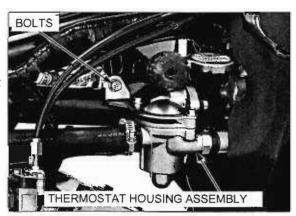


Remove the cylinder head cover bolts, washers and rubber seals.

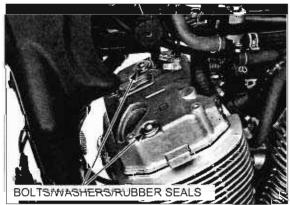

Be careful not to damage the wire hamess and mating surfaces when removing the cylinder head cover.

Remove the cylinder head cover and gasket.

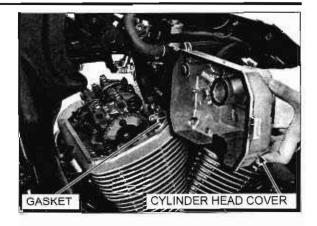

# **REAR**

Remove the following:


- Over head covers (page 2-4)
- PAIR check valve (page 5-72)

VT750C2S;

Remove the mounting bolts and ignition switch (page 21-21).


Disconnect the crankcase breather hose from the cylinder head cover.

Remove the cylinder head cover bolts, washers and rubber seals.

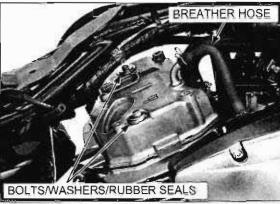

Be careful not to damage the wire harness and mating surfaces when removing the cylinder head cover.

Be careful not to Remove the cylinder head cover and gasket.

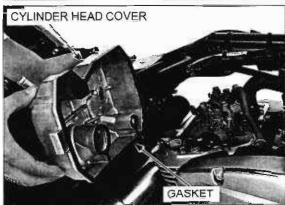


# **CAMSHAFT REMOVAL**

#### NOTE


 The front and rear camshafts service procedures are the same.

Remove the rear cylinder head cover (page 8-7).

Remove the socket bolts and alternator cover.

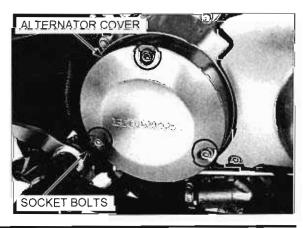


Remove the crankshaft and timing hole caps from the left crankcase cover.

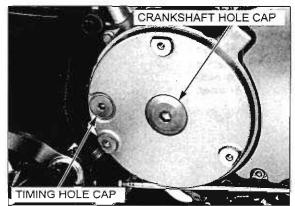

Turn the crankshaft counterclockwise and align the "RT" mark (front cylinder: "FT" mark) with the index notch on the left crankcase cover.

Make sure the piston is at TDC (Top Dead Center) on the exhaust stroke so the piston is at TDC on the compression stroke when removing the camshaft holder.

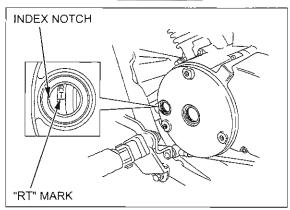

Measure the cam chain tensioner wedge B length.

# SERVICE LIMIT: 6 mm (0.2 in)

Replace the cam chain with a new one if the projection exceeds the service limit.

For the cam chain replacement, remove the following:

#### Front:


- Front camshaft
- ~ Flywheel (page 11-5)


### Rear:

- Rear camshaft
- Primary drive gear (page 10-12)

crankcase.


Be careful not to let Install an O.D. 2 mm pin into the cam chain tensioner an O.D. 2 mm pin wedge A hole while pulling the wedge A straight up and fall into the pushing down the wedge B.

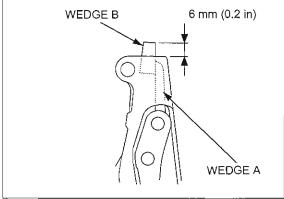

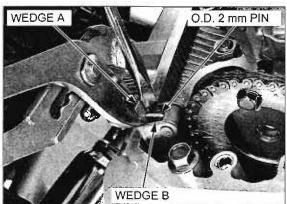


the cam sprocket bolts fall into the crankcase.

Be careful not to let Remove the cam sprocket bolt, turn the crankshaft counterclockwise one full turn (360°) and remove the other cam sprocket bolt.

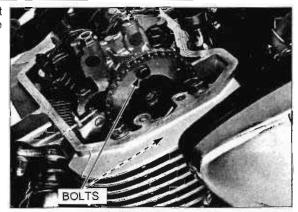


wire to the cam surface. chain to prevent it from falling into the crankcase.

Attach a piece of Remove the cam sprocket from the camshaft flange

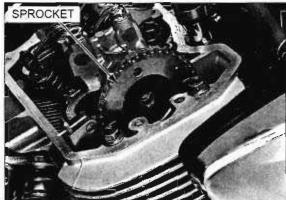


Make sure the piston is at TDC (Top Dead Center) on the compression stroke.

Loosen the bolts and nuts in a crisscross pattern in several steps, then remove them and camshaft holder assembly.

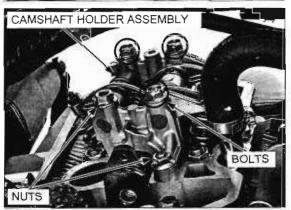

Remove the camshaft.

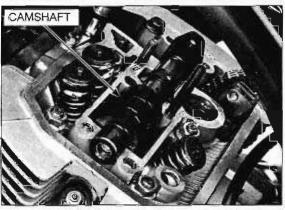


# **INSPECTION**

# **CAMSHAFT RUNOUT**

Support both end journals of the camshaft with V-blocks and check the camshaft runout with a dial indicator. Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.05 mm (0.002 in)

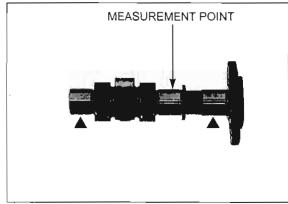

#### **CAM LOBE HEIGHT**

Check the cam lobe surfaces for scoring or evidence of insufficient lubrication.


Measure each cam lobe height.

SERVICE LIMITS: IN: 37.16 mm (1.463 in)

EX: 37.58 mm (1.480 in)

### NOTE:

Check the rocker arm if the cam lobe is worn or damaged.

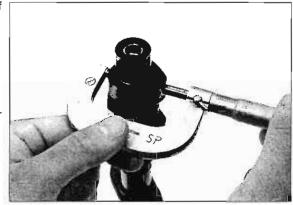

#### **CAMSHAFT JOURNAL**


Check the camshaft journal surfaces for scoring or evidence of insufficient lubrication.

Measure the O.D. of each camshaft journal.

SERVICE LIMIT: 21.90 mm (0.862 in)


## NOTE:

Check the oil passages and camshaft holder for wear or damage if the journal surface is worn or damaged.

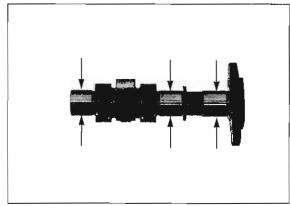


### **CAM SPROCKET**

Check the cam sprocket for wear or damage.

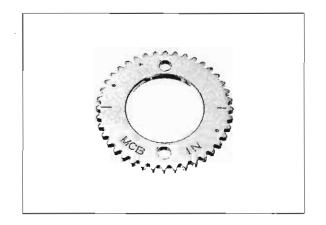

#### CYLINDER HEAD

Check the camshaft journal surfaces of cylinder head for scoring, scratches or evidence of insufficient lubrication.

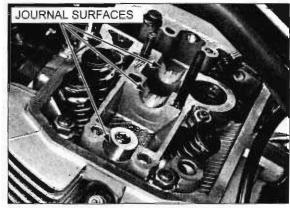


## CAMSHAFT OIL CLEARANCE

Clean off any oil from the journals of the camshaft holders, cylinder head and camshaft.

Put the camshaft onto the cylinder head and lay a strip of plastigauge lengthwise on each camshaft journal.


#### NOTE:

- · Do not block any oil passages with the plastigauge.
- Do not rotate the camshaft during inspection.

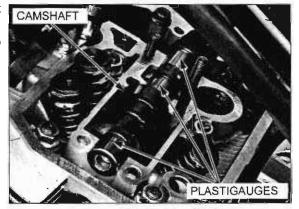

Carefully install the camshaft holder and tighten the camshaft holder bolts and nuts to the specified torque in a crisscross pattern in several steps.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

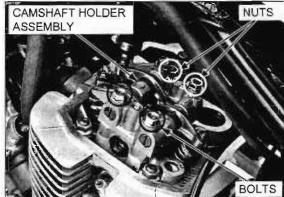


Remove the camshaft holder and measure the width of each plastigauge.

The widest thickness determines the oil clearance.

# SERVICE LIMIT: 0.16 mm (0.006 in)

When the service limit is exceeded, replace the camshaft and recheck the oil clearance.

Replace the cylinder head and camshaft holder if the oil clearance still exceeds the service limit.

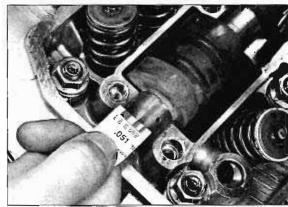


# **CAMSHAFT HOLDER DISASSEMBLY**

NOTE

The front and rear camshaft holders service procedures are the same.

Remove the rocker arm shafts, intake and exhaust rocker arms.

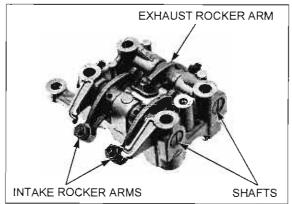


## **ROCKER ARM INSPECTION**

Check the sliding surface of the rocker arms for wear or damage where they contact the camshaft, or for clogged oil holes.

Check the contact surface of the valve adjusting screw for wear or damage.

Measure the I.D. of each rocker arm.

SERVICE LIMIT: 12.05 mm (0.474 in)

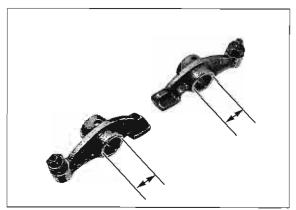

# **ROCKER ARM SHAFT INSPECTION**

Check the rocker arm shafts for wear or damage.


Measure each rocker arm shaft O.D.

SERVICE LIMIT: 11.83 mm (0.466 in)

Calculate the rocker arm-to-shaft clearance.


SERVICE LIMIT: 0.07 mm (0.003 in)

Replace the rocker arm and/or shaft if necessary.

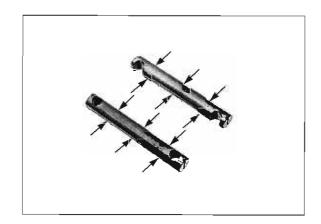

## **CAMSHAFT HOLDER INSPECTION**

Check the camshaft journal surfaces of each camshaft holder for scoring, scratches or evidence of insufficient lubrication.

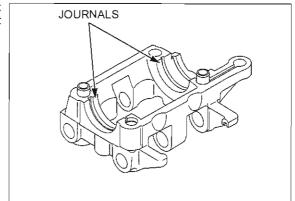

# CYLINDER HEAD REMOVAL


#### NOTE:

- The engine must be removed from the frame before servicing the cylinder head.
- The front and rear cylinder heads service procedures are the same.

# Remove the following:

- Engine (page 7-4)
- Cylinder head cover (page 8-6)
- Camshaft (page 8-7)
- Intake manifold (page 5-56)


Remove the bolt and water hose joint from the cylinder.

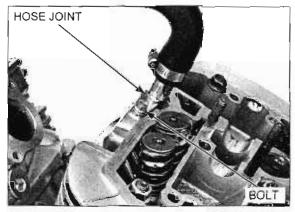

Remove the cam chain tensioner bolts and sealing washers.



Remove the cam chain tensioner.

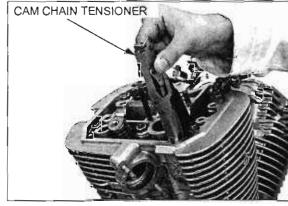


Loosen the bolts and nuts in a crisscross pattern in several steps.

Loosen the bolts Remove the following cylinder head bolts and nuts:


- 6 mm bolt
- 8 mm bolts
- 10 mm nuts/washers

Be careful not to Remove the cylinder head.


Be careful not to damage the mating surface when removing the cylinder head.

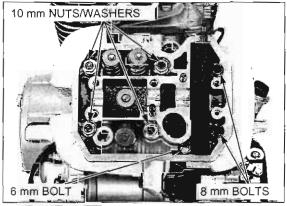

Remove the gasket and dowel pins.

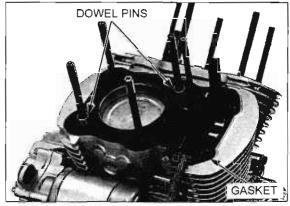

Remove the cam chain guide.

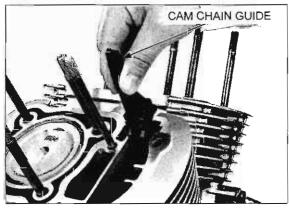

# CYLINDER HEAD DISASSEMBLY

during disassembly so they can be placed back in their original position.

Mark all parts Remove the spark plugs (page 3-7).


Remove the cotters using a special tool.

TOOL:

Valve spring compressor


07757-0010000

Compressing the valve spring more than necessary will cause loss of valve spring tension.

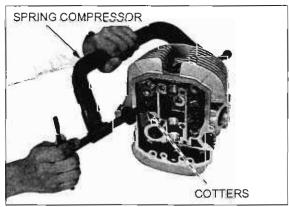


Do not reuse the Remove the valve spring compressor, then remove the removed stem seal. retainer, spring and valve.

Remove the stem seal and spring seat.

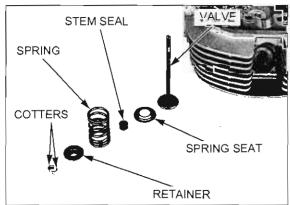

Remove the carbon deposits from the combustion chamber and clean off the head gasket surface.

Check the spark plug holes and valve areas for cracks.

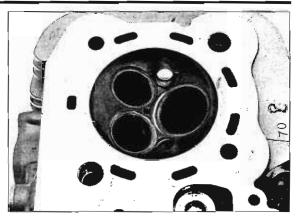


# **INSPECTION**

## CYLINDER HEAD

Check the cylinder head for warpage with a straight edge and feeler gauge.

SERVICE LIMIT: 0.10 mm (0.004 in)

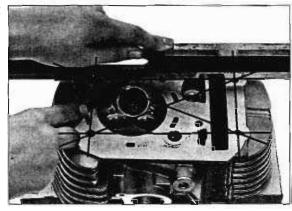


# **VALVE SPRING**

Check the valve spring for fatigue or damage. Measure the free length of each valve spring.

SERVICE LIMITS: IN: 40.58 mm (1.598 in)

EX: 44.72 mm (1.761 in)

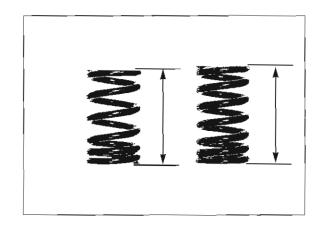

# **VALVE STEM**


Check each valve for bending, burning, scratches or abnormal wear.

Insert the valves in their original positions in the cylinder head. Check that each valve moves up and down smoothly without binding.

Measure each valve stem O.D. and record it.

SERVICE LIMITS: IN: 5.45 mm (0.215 in)

EX: 5.41 mm (0.213 in)

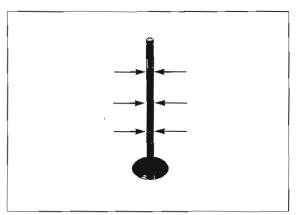

## VALVE GUIDE

Ream the valve guide to remove any carbon build-up before measuring the guide I.D.

#### NOTE:

- Take care not to tilt or lean the reamer in the guide while reaming. Otherwise, the valves maybe installed slanted, causing oil leakage from the stem seal and improper valve seat contact. This may prevent valve seat refacing.
- Insert the reamer from the combustion chamber side of the head and always rotate the reamer clockwise.

## TOOL:

Valve guide reamer 5.510 mm (IN/EX)

07984-2000001 or 07984-200000D (U.S.A. only)

Measure each valve guide I.D. and record it.

SERVICE LIMITS: IN: 5.56 mm (0.219 in) EX: 5.56 mm (0.219 in)

Subtract each valve stem O.D. from the corresponding guide I.D. to obtain the stem-to-guide clearance.

SERVICE LIMITS: IN: 0.10 mm (0.004 in) EX: 0.11 mm (0.004 in)

If the stem-to-guide clearance exceeds the service limit, determine if a new guide with standard dimensions would bring the clearance within tolerance.


If so, replace any guides as necessary and ream to fit. If the stem-to-guide clearance exceeds the service limit with a new guide, also replace the valve.


#### NOTE:


Inspect and reface the valve seats whenever the valve guides are replaced (page 8-18).

# CAM CHAIN GUIDE

Check the cam chain guide for wear or damage. Replace the cam chain guide if necessary.

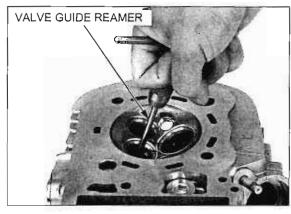


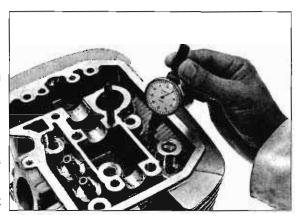

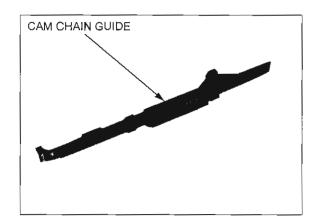

#### **CAM CHAIN TENSIONER**

Check the cam chain tensioner for wear or damage. Replace the cam chain tensioner if necessary.

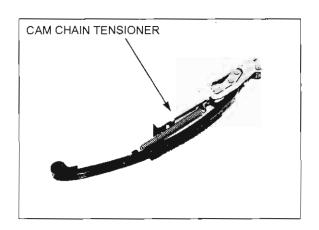

# VALVE GUIDE REPLACEMENT

#### NOTE:

Refinish the valve seats whenever the valve guides are replaced to prevent uneven seating.

Chill new valve guides in a freezer section of refrigerator for about an hour.

Do not use a torch to heat the cylinder head; it may cause warping.

Heat the cylinder head to 130 – 140°C (266 – 284°F) with a hot plate or oven. Do not heat the cylinder head beyond 150°C (302°F). Use temperature indicator sticks, available from welding supply stores, to be sure the cylinder head is heated to the proper temperature.


To avoid burns, wear insulated gloves when handling the heated cylinder head.

Be careful not to damage the cylinder head. Support the cylinder head and drive out the old guides from the combustion chamber side of the head.

# TOOL:

Valve guide driver 5.5 mm (IN/EX)

07742-0010100

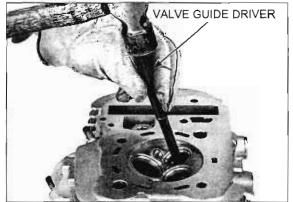

Adjust the valve guide driver to the valve guide height.

#### TOOL:

Valve guide driver

07743-0020000 (Not available in U.S.A.)


VALVE GUIDE PROJECTION ABOVE CYLINDER HEAD:

IN: 18.7 – 18.9 mm (0.736 – 0.744 in) EX: 17.2 – 17.4 mm (0.68 – 0.69 in)

Drive new guides in from the camshaft side of the cylinder head to the valve guide height while the cylinder head is still heated.

# NOTE:

U.S.A. only use the existing valve guide driver and install the guide to the specified height.

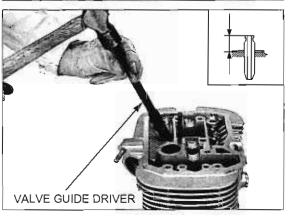

Let the cylinder head cool to room temperature, then ream new valve guides.

TOOL:

Valve guide reamer 5.510 mm (IN/EX)


07984-2000001 or 07984-200000D (U.S.A. only)

## NOTE:

- Take care not to tilt or lean the reamer in the guide while reaming. Otherwise, the valves maybe installed slanted, causing oil leakage from the stem seal and improper valve seat contact. This may prevent valve seat refacing.
- Insert the reamer from the combustion chamber side of the head and always rotate the reamer clockwise.

Clean the cylinder head thoroughly to remove any metal particles after reaming.

Reface the valve seat (page 8-19).

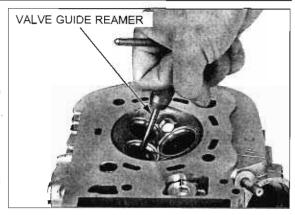


# VALVE SEAT INSPECTION/REFACING

# INSPECTION

Clean all intake and exhaust valves thoroughly to remove carbon deposits.

Apply a thin coat of Prussian Blue to each valve face. Tap the valve against the valve seat several times using a hand-lapping tool without rotating valve to make a clear pattern.

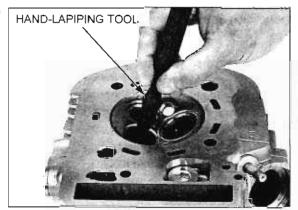


Remove the valve and inspect the valve seat face.

#### NOTE


The valve cannot be ground. If the valve face is burned or badly worn or if it contacts the seat unevenly, replace the valve.

Inspect the valve seat face for:

- · Damaged face:
  - Replace the valve and reface the valve seat.
- · Uneven seat width:
  - Replace the valve and reface the valve seat.

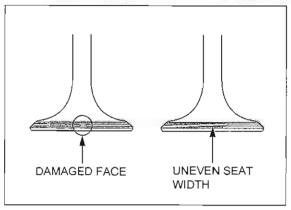

- · Contact area (too high or too low area):
  - Reface the valve seat.

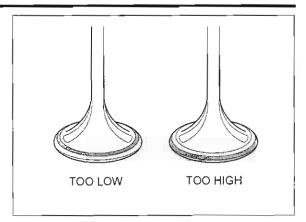


Inspect the width of the valve seat.

The valve seat contact should be within the specified width and even all around the circumference.

STANDARD: 0.90 - 1.10 mm (0.035 - 0.043 in)SERVICE LIMIT: 1.5 mm (0.06 in)


If the valve seat width is not within specification, reface the valve seat.

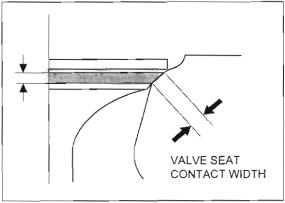

# **VALVE SEAT REFACING**


#### NOTE:

- Follow the refacing manufacturer's operating instructions.
- Reface the valve seat whenever the valve guide has been replaced.
- Be careful not to grind the seat more than necessary.

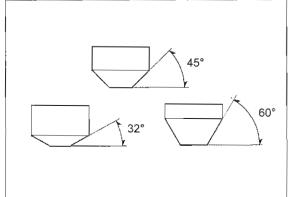

If the contact area is too high on the valve, the seat must be lowered using a 32° flat cutter.

If the contact area is too low on the valve, the seat must be raised using a  $60^{\circ}$  interior cutter.

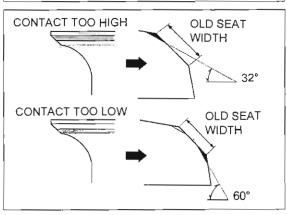

# CYLINDER HEAD/VALVES

Using a 45° cutter, remove any roughness or irregularities from the seat.


## TOOLS:

 Seat cutter, 27.5 mm (IN)
 07780-0010200

 Seat cutter, 35 mm (EX)
 07780-0010400

 Cutter holder, 5.5 mm
 07781-0010101


 Equivalent commercially available in U.S.A.

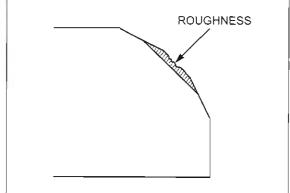

Using a 32° cutter, remove the top 1/4 of the existing valve seat material.

#### TOOLS:

Flat cutter, 28 mm (IN) 07780-0012100
Flat cutter, 35 mm (EX) 07780-0012300
Cutter holder, 5.5 mm 07781-0010101
Equivalent commercially available in U.S.A.

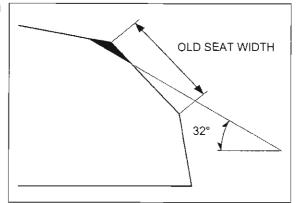

Using a 60° cutter, remove the bottom 1/4 of the old seat.


#### TOOLS:

 Interior cutter, 30 mm (IN)
 07780-0014000


 Interior cutter, 37.5 mm (EX)
 07780-0014100

 Cutter holder, 5.5 mm
 07781-0010101

 Equivalent commercially available in U.S.A.

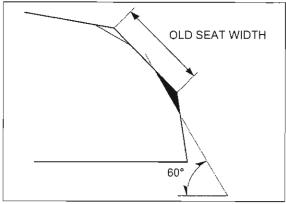

Using a 45° seat cutter, cut the seat to the proper width. Make sure that all pitting and irregularities are removed.

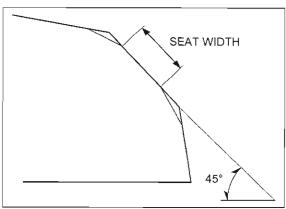


After cutting the seat, apply lapping compound to the valve face, and lap the valve using light pressure.


- Excessive lapping pressure may deform or damage the seat.
- Change the angle of lapping tool frequently to prevent uneven seat wear.
- Lapping compound can cause damage if it enters between the valve stem and guide.

After lapping, wash any residual compound off the cylinder head and valve.

Recheck the seat contact after lapping.

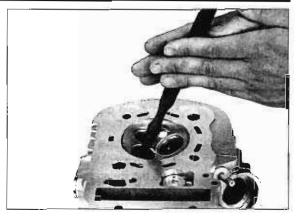


# CYLINDER HEAD ASSEMBLY

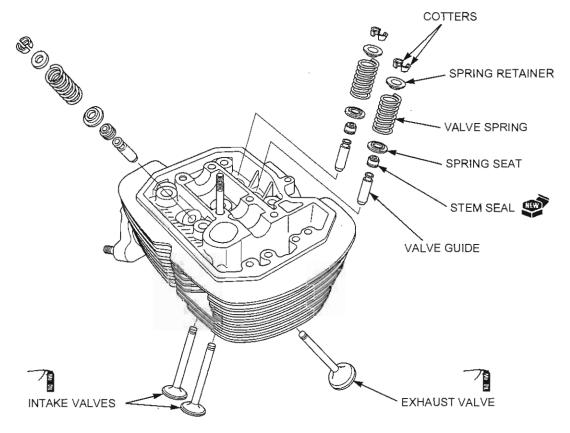

Blow out all of the oil passages in the cylinder head with compressed air.

Exhaust stem seal has stopper rings.

Install the spring seat and new stem seal.

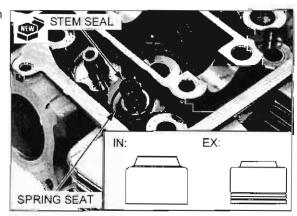

# CYLINDER HEAD/VALVES

Lubricate the molybdenum disulfide oil to the valve guide sliding surface of the valve stem.

Install the valve into the valve guide.

#### NOTE:

- Exhaust valve spring has a larger O.D. than intake valve spring.
- To avoid damage to the stem seal, turn the valve slowly when installing the valve.

Install the valve spring with tightly wound coils facing the combustion chamber.

Install the spring retainer.

Grease the cotters to ease installation.

Install the cotters using a special tool.


#### TOOL:


Valve spring compressor

07757-0010000

#### NOTE:

Compressing the valve springs more than necessary will cause loss of valve spring tension.

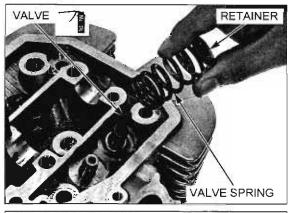


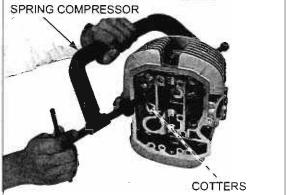

Support the cylinder head so the valve heads will not contact anything and possibly get damaged.

Tap the valve stems gently with a plastic hammer and pin driver to seat the cotters firmly as shown.

Install the spark plugs (page 3-8).

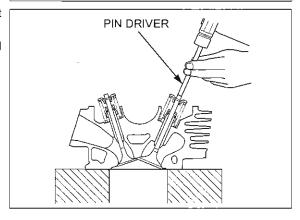


# CYLINDER HEAD INSTALLATION

## NOTE:


- The front and rear cylinder head service procedures are the same.
- Be careful not to damage the mating surfaces when cleaning the cylinder head mating surface.
- When cleaning the cylinder head mating surface, place the shop towel over the cylinder opening to prevent dust or dirt from entering the engine.

Clean the gasket mating surfaces of the cylinder and cylinder head thoroughly, being careful not to damage them.

Install the cam chain guide by aligning the guide end with the groove in the crankcase and the bosses with the groove in the cylinder.

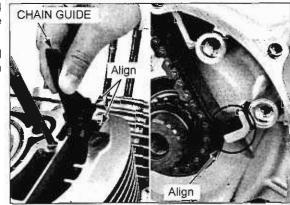


Install the dowel pins and a new gasket.

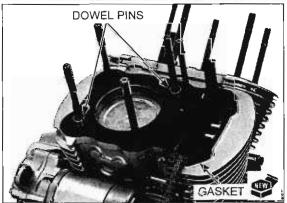

The cylinder heads are identified by marks on their oil pockets.

- · "F": Front cylinder head
- · "R": Rear cylinder head

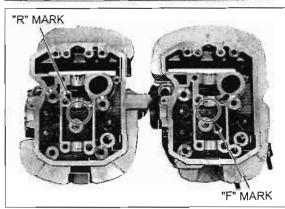

Install the cylinder head to the cylinder.

Apply engine oil to the cylinder head each bolts and nuts threads and seating surfaces.

Install and tighten the cylinder head 8 mm bolts, 10 mm nuts and washer to the specified torque.

#### TORQUE:


10 mm nut: 47 N·m (4.8 kgf·m, 35 lbf·ft) 8 mm bolt: 23 N·m (2.3 kgf·m, 17 lbf·ft)


Install and tighten the 6 mm bolt securely.

#### NOTE:

- Tighten all to hand-tight, then torque the larger fasteners before tightening the smaller fasteners.
- Tighten the bolts and nuts in a crisscross pattern in several steps.

Install the cam chain tensioner, aligning its end with the groove in the crankcase.

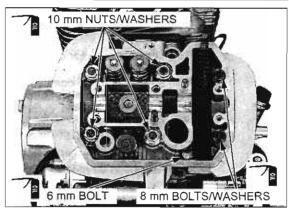

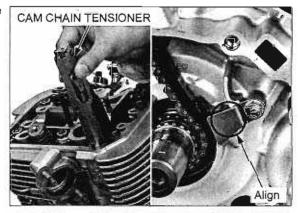

Tighten the tensioner bolts as follow:

- 1. Temporarily install the tensioner bolts with new sealing washers.
- Tighten the cylinder head side cam chain tensioner bolt to the specified torque.


TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Tighten the cylinder side cam chain tensioner bolt to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install a new O-ring to the water hose joint.



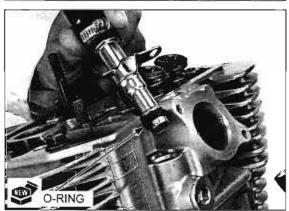


Install the water hose joint by aligning the bolt holes in the stopper plate and cylinder head. Install and tighten the bolt securely.


Install the engine into the frame (page 7-8).

Install the following:

- Camshaft (page 8-25)
- Cylinder head cover (page 8-30)
- Intake manifold (page 5-56)

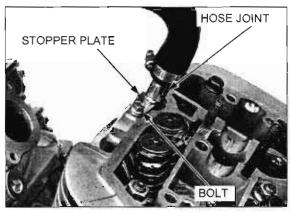


# CAMSHAFT INSTALLATION CAMSHAFT HOLDER ASSEMBLY

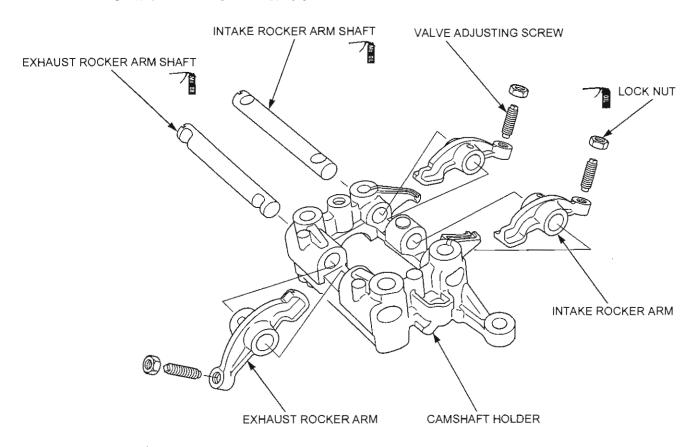

When disassembling the valve adjusting lock nut and adjusting screw.

When Apply engine oil to the valve adjusting screw lock nut ing the threads and seating surface.

Install the valve adjusting screw and lock nut.

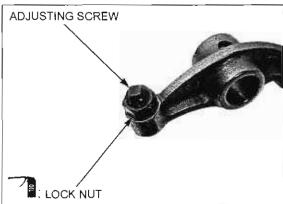


## NOTE:

- The exhaust rocker arm has larger slipper face than the intake rocker arm.
- The intake rocker arm shaft has two holes on each end
- The exhaust rocker arm shaft has two grooves on each end.


Apply molybdenum disulfide oil solution to the rocker arm shaft outer surface.

Install the rocker arms and shafts.

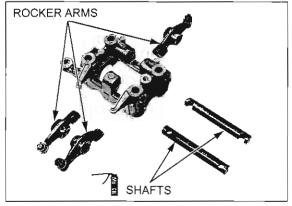

Align the intake rocker arm shaft holes with the camshaft holder holes.


Align the exhaust rocker arm shaft grooves with the camshaft holder holes.

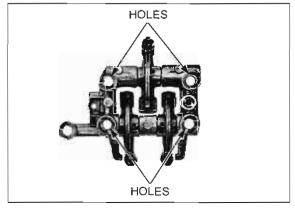

# CAMSHAFT TIMING PROCEDURE

### NOTE:

- The camshafts are identified by the stamped marks: "F": Front cylinder camshaft
  - "R": Rear cylinder camshaft
- If both (front and rear) camshafts are removed, install the front cylinder camshaft first, then install the rear cylinder camshaft.
- If the rear cylinder head is not serviced, remove the rear cylinder head cover to check the camshaft position.
- If the front cylinder head is not serviced, remove the front cylinder head cover to check the camshaft position.

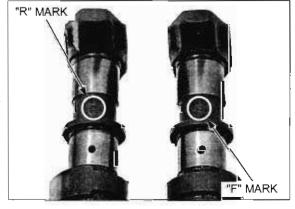


#### FRONT CYLINDER TDC SETTING

If the rear cylinder has not been serviced, begin here. Remove the rear cylinder head cover (page 8-7) and check the rear cylinder camshaft position as follows:

Turn the crankshaft counterclockwise and align the "RT" mark on the flywheel with the index notch on the left crankcase cover, then check the identification mark "R" on the rear camshaft.

- If the "R" mark faces up, turn the crankshaft counterclockwise 1-1/7 (412°) turn (align the "FT" mark on the flywheel with the index notch) and begin installation of the front camshaft.
- If the "R" mark faces down (cannot be seen), turn the crankshaft counterclockwise 1/7 (52°) turn (align the "FT" mark with the index notch) and begin installation of the front carnshaft.

Install the front camshaft (page 8-28).

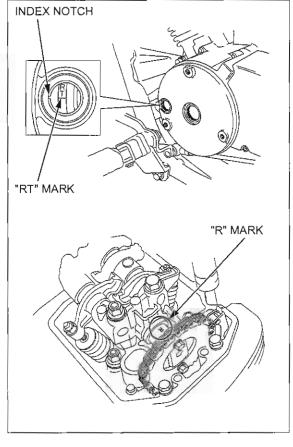


#### **BOTH CYLINDER TDC SETTING**

If both camshafts have been serviced, begin installation of the front camshaft. Align the "FT" mark on the flywheel with the index notch on the left crankcase cover.

install the front camshaft (page 8-28).

Set the rear cylinder at TDC (page 8-28). Install the rear camshaft (page 8-28).

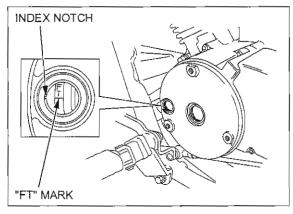


#### REAR CYLINDER TDC SETTING

If the front cylinder has not been serviced, begin here. Remove the front cylinder head cover (page 8-6) and check the front cylinder camshaft position as follows:

Turn the crankshaft counterclockwise and align the "FT" mark on the flywheel with the index notch on the left crankcase cover, then check the identification mark "F" on the front camshaft.

- If the "F" mark faces up, turn the crankshaft counterclockwise 6/7 (308°) turn (align the "RT" mark on the flywheel with the index notch) and begin installation of the rear camshaft.
- If the "F" mark faces down (cannot be seen), turn the crankshaft counterclockwise 1-6/7 (668°) turn (align the "RT" mark with the index notch) and begin installation of the rear camshaft.

Install the rear camshaft using the following procedure.

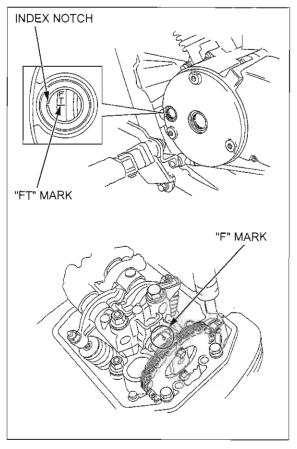

# CAMSHAFT INSTALLATION


NOTE:

The front and rear camshafts service procedures are the same.

Make sure to follow the CAMSHAFT TIMING PROCEDURE (page 8-26) before installing the camshaft.

Lubricate the camshaft lobes and journal surfaces with molybdenum disulfide oil.

Install the camshaft with the camshaft identification mark (R: rear camshaft, F: front camshaft) facing up.

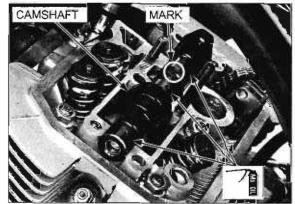


Lubricate each rocker arm slipper surface with molybdenum disulfide oil.

## NOTE:

Before camshaft holder installation, loosen the valve adjusting screw and lock nut fully.


Install the camshaft holder assembly.

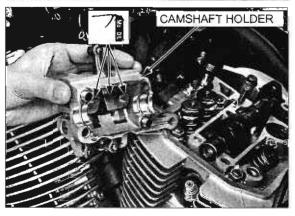


Install the camshaft holder bolts and nuts. Tighten the bolts and nuts to the specified torque in a crisscross pattern in several steps.

## TORQUE:


Camshaft holder bolt: 23 N·m (2.3 kgf·m, 17 lbf·ft) Camshaft holder nut: 23 N·m (2.3 kgf·m, 17 lbf·ft)

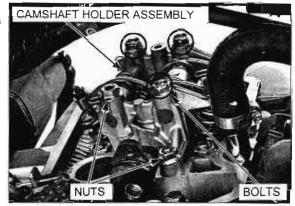

Install the cam sprocket to the cam chain with the "IN" mark facing inside.

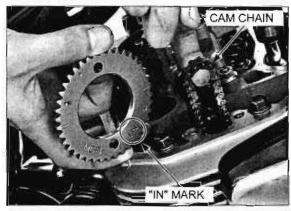

Install the cam sprocket on the camshaft flange and check that the timing marks align with the upper surface of the cylinder head.

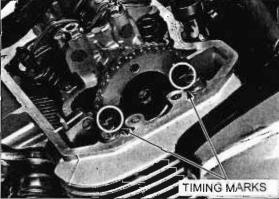

Be careful not to let the cam sprocket bolts fall into the crankcase.

Be careful not to let Clean and apply a locking agent to the cam sprocket the cam sprocket bolt threads.


Align the cam sprocket bolt holes in the cam sprocket and camshaft.

Temporarily install the cam sprocket bolt.

Tum the crankshaft counterclockwise 360° and tighten the other sprocket bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)


Tum the crankshaft counterclockwise 360° and tighten the other sprocket bolt to the specified torque.

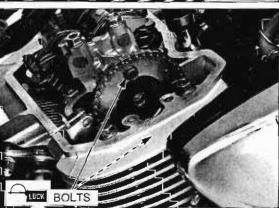


Remove an O.D. 2 mm pin while holding cam chain tensioner wedge A and pushing down the wedge B.

#### NOTE:

- Be careful not to let an O.D. 2 mm pin fall into the crankcase.
- Do not forget to remove an O.D. 2 mm pin before installing the cylinder head cover.

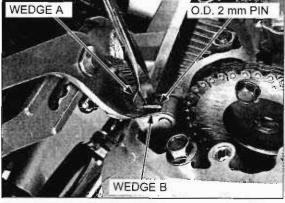

Fill the oil pockets in the cylinder head with engine oil. Adjust the valve clearance (page 3-8).

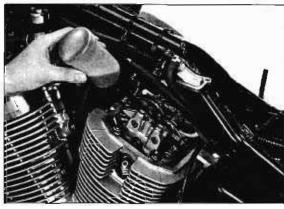


# CYLINDER HEAD COVER INSTALLATION

Clean the gasket groove and cylinder head mating surface of the cylinder head cover.

Check the gasket is in good condition, replace it if necessary.

Apply Honda Bond A or equivalent to the gasket groove of the cylinder head cover.


Install the gasket into the groove.

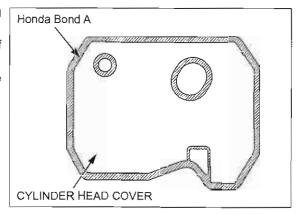

# **FRONT**


Clean the cylinder head cover mating surface of the cylinder head.

Install the front cylinder head cover on the front cylinder head.

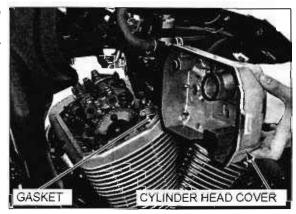

Check the condition of the rubber seals, replace them if necessary.


Install the rubber seals onto the cylinder head cover in the direction as shown.

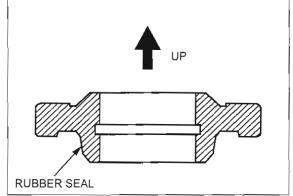

Install the washers.

Install and tighten the cylinder head cover bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

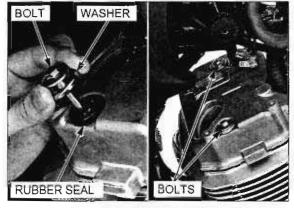


Set the thermostat housing assembly to its original position.

Install and tighten the bolt securely.

Install the following:


- PAIR check valve (page 5-72)
- Ignition coil (page 19-8)
- Over head covers (page 2-4)

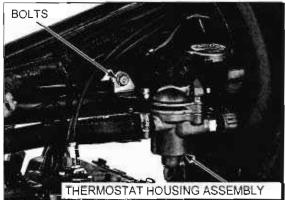

#### **REAR**

Clean the cylinder head cover mating surface of the cylinder head.

Install the rear cylinder head cover on the rear cylinder head.

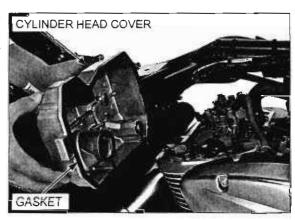

#### **CYLINDER HEAD/VALVES**

Install the rubber seals (page 8-31).

Install the washers.

Install and tighten the cylinder head cover bolts to the

specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)


Connect the crankcase breather hose.

VT7510C2S; Install the ignition switch (page 21-21).

Install the following:

- PAIR check valve (page 5-72)

Over head covers (page 2-4)

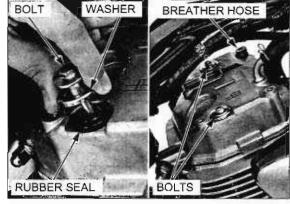


# 9. CYLINDER/PISTON

COMPONENT LOCATION9-2	CYLINDER/PISTON REMOVAL9-4
SERVICE INFORMATION9-3	CYLINDER/PISTON INSTALLATION 9-9
TROUBLESHOOTING9-3	

a

# COMPONENT LOCATION

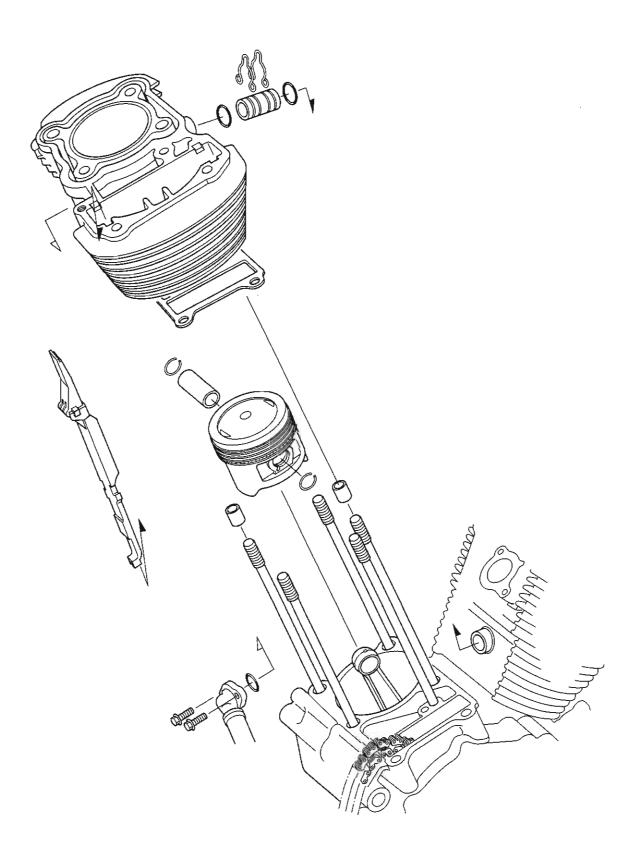

#### SERVICE INFORMATION

#### **GENERAL**

- · This section covers service of the piston and cylinder. To service these parts, the engine must be removed from the frame.
- · Take care not to damage the cylinder walls and pistons.
- · Be careful not to damage the mating surfaces when removing the cylinder. Do not strike the cylinder too hard during removal.
- When disassembling, mark and store the disassembled parts to ensure that they are reinstalled in their original locations.
- Clean all disassembled parts with cleaning solvent and dry them by blowing them off with compressed air before inspection.
- Camshaft and rocker arm lubricating oil is fed through oil passages in the cylinder. Clean the oil passages before installing the cylinder.

#### SPECIFICATIONS

Unit: mm (in)

	ITEM		STANDARD	SERVICE LIMIT
Cylinder I.D.			79.000 – 79.015 (3.1102 – 3.1108)	79.10 (3.114)
	Out-of-round		_	0.06 (0.002)
	Taper		_	0.06 (0.002)
	Warpage			0.10 (0.004)
Piston, piston pin,	Piston O.D. at 17 mm bottom	(0.7 in) from the	78.97 – 78.99 (3.109 – 3.110)	78.90 (3.106)
pìston rings	Piston pin bore I.D.		18.002 - 18.008 (0.7087 - 0.7090)	18.05 (0.711)
	Piston pin O.D.		17.994 - 18.000 (0.7084 - 0.7087)	17.98 (0.708)
	Piston-to-piston pin cl	earance	0.002 - 0.014 (0.0001 - 0.0006)	0.04 (0.002)
	Piston ring end gap	Тор	0.15 - 0.25 (0.006 - 0.010)	0.4 (0.02)
		Second	0.25 - 0.40 (0.010 - 0.016)	0.6 (0.02)
		Oil (side rail)	0.20 - 0.80 (0.008 ~ 0.031)	1.0 (0.04)
	Piston ring-to-ring	Тор	0.025 - 0.055 (0.0010 - 0.0022)	0.08 (0.003)
	groove clearance	Second	0.015 - 0.045 (0.0006 - 0.0018)	0.07 (0.003)
Cylinder-to-piston clearance		0.010 - 0.045 (0.0004 - 0.0018)	0.10 (0.004)	
Connecting rod small end I.D.		18.016 - 18.034 (0.7093 - 0.7100)	18.07 (0.711)	
Connecting rod-to-piston pin clearance		0.016 - 0.040 (0.0006 - 0.0016) 0.06 (0.0		

#### **TORQUE VALUES**

Cylinder stud bolt (8 mm)

Cylinder stud bolt (10 mm)

Cylinder stud bolt (10 mm)

See page 9-8

Cylinder stud bolt (12 mm)

See page 9-8

#### TROUBLESHOOTING

#### Compression too low, hard starting or poor performance at low speed

- · Leaking cylinder head gasket
- · Worn, stuck or broken piston ring
- · Wom or damaged cylinder and piston

#### Compression too high, overheating or knocking

· Excessive carbon built-up on piston head or combustion chamber

#### Excessive smoke

- · Worn cylinder, piston or piston rings
- · Improper installation of piston rings
- · Scored or scratched piston or cylinder wall

#### Abnormal noise

- · Worn piston pin or piston pin bore
- Worn cylinder, piston or piston rings
- Worn connecting rod small end


#### CYLINDER/PISTON REMOVAL

#### CYLINDER REMOVAL

The front cylinder uses the same service procedure as the rear cylinder.


Remove the cylinder head (page 8-13).

Front cylinder only: Remove the bolts, water hose joint and O-ring.

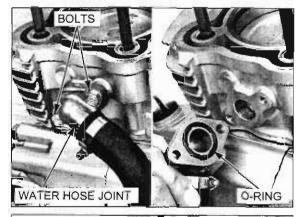

Remove the retaining clips.


Slide the cylinder joint collar toward either the front or rear cylinder.

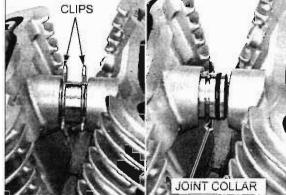

Lift the cylinder and remove it, being careful not to damage the piston with the stud bolts.


#### NOTE:

- · Attach a piece of wire to the cam chain to prevent it from falling into the crankcase.
- · Do not strike the cylinder too hard and do not damage the mating surface with a screwdriver.

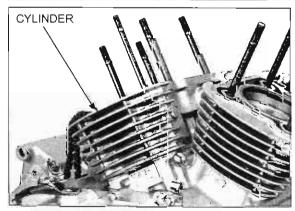

Remove the joint collar from the cylinder.


Remove the O-rings.

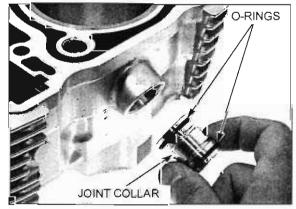

Remove the gasket and dowel pins.

Be careful not to damage the gasket surface.


Clean off any gasket material from the cylinder mating

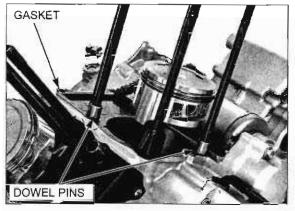

#### **PISTON REMOVAL**

Place a clean shop towel over the crankcase to prevent the piston pin clips from falling into the crankcase.

Remove the piston pin clips with pliers. Push the piston pin out of the piston and connecting rod, and remove the piston.

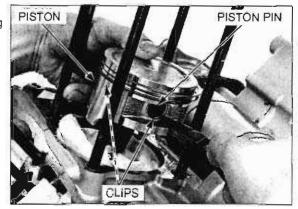


piston ring by spreading the ends too far.

Do not damage the Spread each piston ring and remove it by lifting up a point opposite the gap.



the groove.

Never use a wire Clean carbon deposits from the ring grooves with a brush; it will scratch used piston ring that will be discarded.

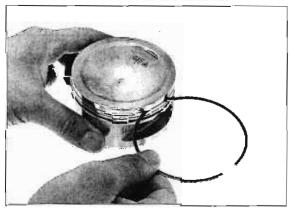

#### INSPECTION

#### PISTON/PISTON RING

Always replace the Inspect the piston rings for smooth movement by piston rings as a rotating them. The rings should be able to move in their set. grooves without catching.

> Push the ring until the outer surface of the piston ring is nearly flush with the piston and measure the ring-to-ring groove clearance.

#### SERVICE LIMITS:

Top: 0.08 mm (0.003 in) Second: 0.07 mm (0.003 in)



Insert the piston ring into the bottom of the cylinder squarely using the piston crown. Measure the piston ring end gap.

#### SERVICE LIMITS:

Top: 0.4 mm (0.02 in) Second: 0.6 mm (0.02 in) Oil (side rail): 1.0 mm (0.04 in)




Measure the piston O.D. at a point 17 mm (0.7 in) from the bottom and 90° to the piston pin hole.

#### SERVICE LIMIT: 78.90 mm (3.106 in)


Compare this measurement against the maximum cylinder I.D. measurement and calculate the cylinderto-piston clearance (page 9-7).

SERVICE LIMIT: 0.10 mm (0.004 in)

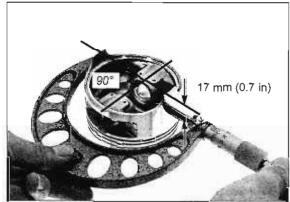

Measure the piston pin O.D. at three points,

SERVICE LIMIT: 17.98 mm (0.708 in)

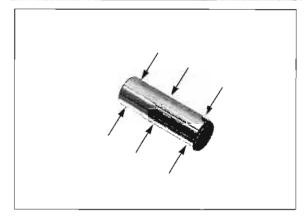


Measure the piston pin bore I.D.

SERVICE LIMIT: 18.05 mm (0.711 in)

Calculate the piston-to-piston pin clearance.

SERVICE LIMIT: 0.04 mm (0.002 in)

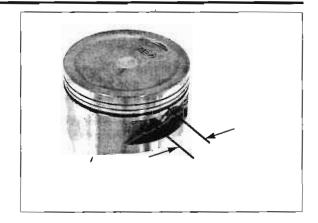


#### **CONNECTING ROD**

Measure the connecting rod small end I.D.

SERVICE LIMIT: 18.07 mm (0.711 in)

Calculate the connecting rod-to-piston pin clearance.


SERVICE LIMIT: 0.06 mm (0.002 in)

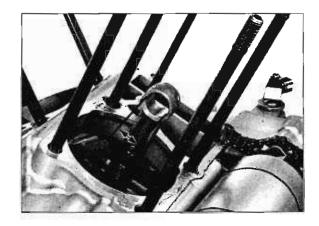

#### **CYLINDER**

Check the top of the cylinder for warpage with a straight edge and feeler gauge across the stud holes.

SERVICE LIMIT: 0.10 mm (0.004 in)

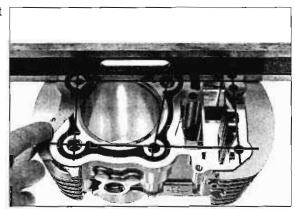


Check the cylinder wall for scratches or wear. Measure the cylinder I.D. at three levels on the X and Y axes. Take the maximum reading to determine the cylinder wear.

SERVICE LIMIT: 79.10 mm (3.114 in)

Calculate the cylinder-to-piston clearance.

SERVICE LIMIT: 0.10 mm (0.004 in)

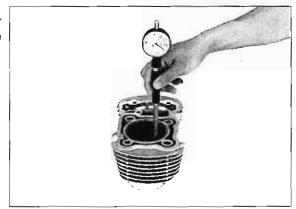

Calculate the cylinder taper and out-of-round at three levels on the X and Y axes. Take the maximum reading to determine the taper and out-of-round.

#### SERVICE LIMITS:


Taper: 0.06 mm (0.002 in)
Out-of-round: 0.06 mm (0.002 in)

The cylinder must be rebored and an oversize piston fitted if the service limits are exceeded.

The following oversize pistons are available:


0.25 mm (0.010 in) 0.50 mm (0.020 in)

The piston to cylinder clearance for the oversize piston must be: 0.010 – 0.045 mm (0.0004 – 0.0018 in).

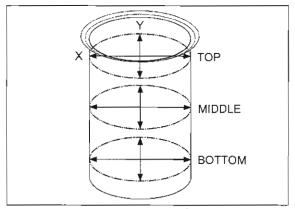

# CYLINDER STUD BOLT REPLACEMENT


Thread two nuts onto the stud and tighten them together, and use a wrench on them to turn the stud bolt out.

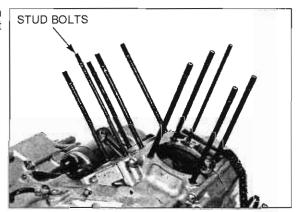

Apply engine oil to the lower threads of a new stud bolt and install it.


#### NOTE:

Install the 8 mm and 10 mm stud bolts with its tab side facing the cylinder head side.

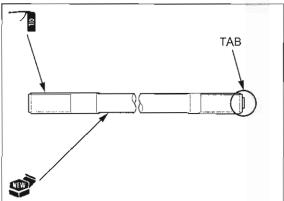

Be sure to verify the stud height from the crankcase surface.

Adjust the height if necessary.

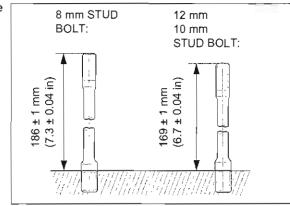

#### CYLINDER/PISTON INSTALLATION

#### PISTON RING INSTALLATION

Apply engine oil to the piston and piston ring outer surface.


Be careful not to damage the piston and rings. Carefully install the piston rings into the piston ring grooves with the markings facing up.

#### NOTE:

- · Do not confuse the top and second rings.
- To install the oil ring, install the spacer first, then install the side rails.


Stagger the piston ring end gaps 120° apart from each other.

Stagger the side rail end gaps as shown.

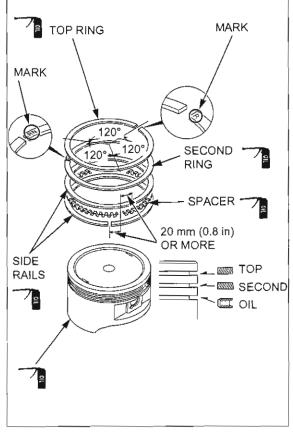

#### **PISTON INSTALLATION**

Apply molybdenum disulfide oil to the connecting rod small end inner surface.

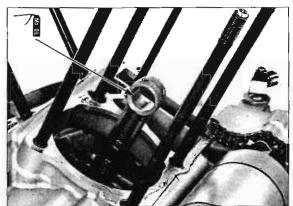


Place a clean shop towel over the crankcase to prevent the clip from falling into the crankcase.

Apply engine oil to the piston pin outer surface.

Install the piston.


Install the piston pin through the piston and connecting

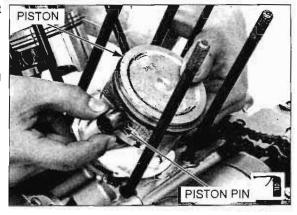

Install new piston pin clips into the grooves in the piston pin hole.

#### NOTE:

- · Make sure the piston pin clips are seated securely.
- · Do not align the clip end gap with the piston cutout.

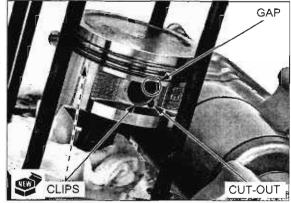


#### CYLINDER INSTALLATION


The front cylinder uses the same service procedure as the rear cylinder.

Clean the gasket surfaces of the cylinder and crankcase thoroughly, being careful not to damage them.

Install new O-rings to the joint collar. Install the joint collar to the cylinder.

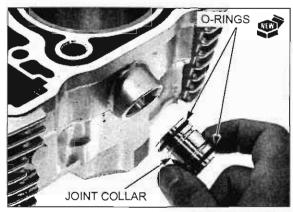


Install the dowel pins and a new gasket.

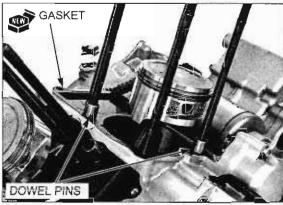


rings and cylinder wall.

Be careful not to Apply engine oil to the cylinder wall, piston outer damage the piston surface and piston rings.


> Route the cam chain through the cylinder and install the cylinder over the piston while compressing the piston rings with your fingers.

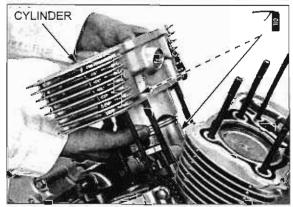

Slide the joint collar into the hole in the cylinder and connect it.
Install the retaining clips into the joint collar grooves.

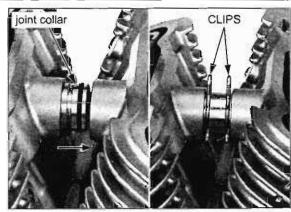

Front cylinder only: Install a new O-ring into the water hose joint groove. Install and tighten the hose joint bolts securely. Install the cylinder head (page 8-23).

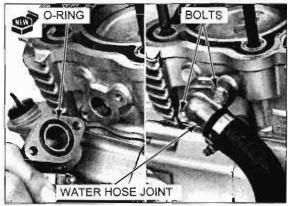


# **MEMO**

# 10. CLUTCH/GEARSHIFT LINKAGE

COMPONENT LOCATION10-2	PRIMARY DRIVE GEAR10-12
SERVICE INFORMATION10-3	GEARSHIFT LINKAGE10-14
TROUBLESHOOTING10-4	CLUTCH INSTALLATION 10-18
RIGHT CRANKCASE COVER REMOVAL10-5	RIGHT CRANKCASE COVER INSTALLATION10-21
CLUTCH REMOVAL ······10-7	

**1**0

## **COMPONENT LOCATION**

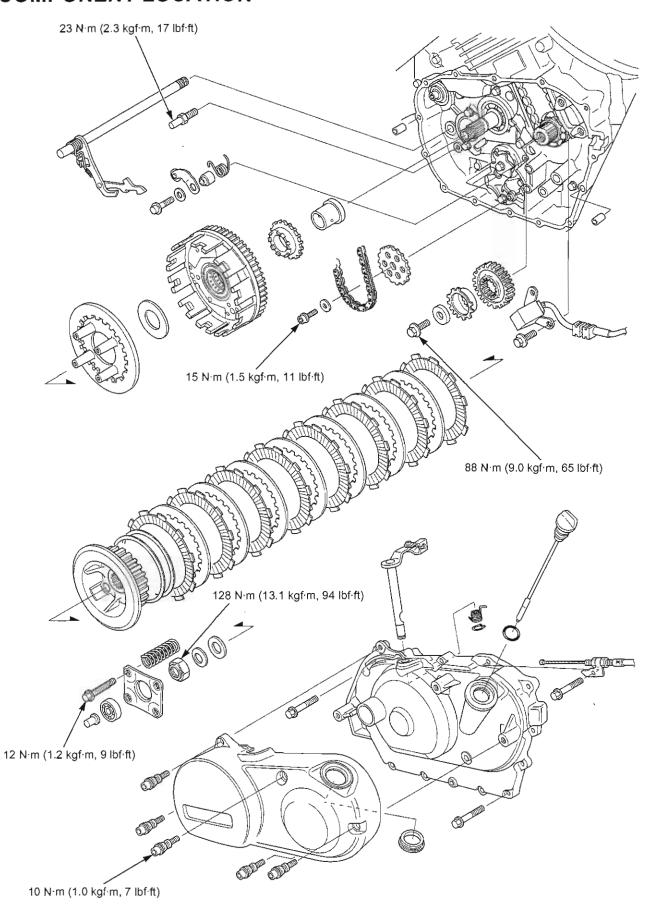

#### SERVICE INFORMATION

#### **GENERAL**

- The clutch and gearshift linkage can be serviced with the engine in the frame.
- Engine oil viscosity, oil level and the use of oil additives have an effect on clutch disengagement. Oil additives of any kind are specifically not recommended. When the clutch does not disengage or the motorcycle creeps with the clutch disengaged, inspect the engine oil and oil level before servicing the clutch system.

#### **SPECIFICATIONS**

Unit: mm (in)

ITEM Clutch lever freeplay		STANDARD	SERVICE LIMIT	
		10 - 20 (3/8 - 13/16)		
Clutch	Spring free length		45.3 (1.78)	43.9 (1.73)
	Disc thickness	Disc A	2.62 - 2.78 (0.103 - 0.109)	2.3 (0.09)
		End disc	2.92 - 3.08 (0.115 - 0.121)	2.6 (0.10)
Plate warpage		_	0.30 (0.012)	
Clutch outer guide I.D.		21.991 - 22.016 (0.8658 - 0.8668)	22.03 (0.867)	
		O.D.	31.959 - 31.975 (1.2582 - 1.2589)	31.92 (1.257)
Mainshaft O.D. at clutch outer guide		21.967 - 21.980 (0.8648 - 0.8654)	21.95 (0.864)	
Clutch outer guide-to-mainshaft clearance		0.011 - 0.049 (0.0004 - 0.0019)	0.08 (0.003)	
Clutch outer I.D.		32.000 - 32.025 (1.2598 - 1.2608)	32.09 (1.263)	
Clutch outer-to-outer guide clearance		0.025 - 0.066 (0.0010 - 0.0026)	0.18 (0.007)	
Oil pump drive sprocket I.D.		32.025 - 32.145 (1.2608 - 1.2655)	32.16 (1.266)	
Oil pump drive sprocket-to-clutch outer guide clearance		0.050 - 0.186 (0.0020 - 0.0073)	0.23 (0.009)	

#### **TORQUE VALUES**


Gearshift spindle oil seal stopper

Clutch lifter plate bolt Clutch center lock nut	12 N·m (1.2 kgf·m, 9 lbf·ft) 128 N·m (13.1 kgf·m, 94 lbf·ft)	Lock nut; replace with a new one and stake Apply engine oil to the threads and seating sur- face
Clutch cover socket bolt Primary drive gear bolt	10 N·m (1.0 kgf·m, 7 lbf·ft) 88 N·m (9.0 kgf·m, 65 lbf·ft)	Apply engine oil to the threads and seating surface
Gearshift arm pinch bolt Oil pump driven sprocket bolt Gearshift pedal pivot bolt Gearshift spindle return spring pin	12 N·m (1.2 kgf·m, 9 lbf·ft) 15 N·m (1.5 kgf·m, 11 lbf·ft) 39 N·m (4.0 kgf·m, 29 lbf·ft) 23 N·m (2.3 kgf·m, 17 lbf·ft)	Apply locking agent to the threads

13 N·m (1.3 kgf·m, 10 lbf·ft)

#### **TOOLS**

plate bolt

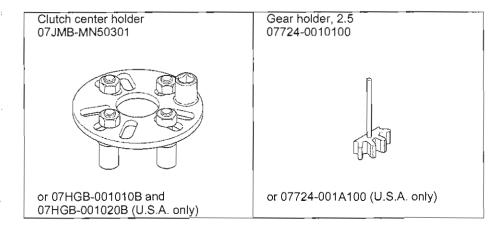

#### **CLUTCH/GEARSHIFT LINKAGE**

#### **TROUBLESHOOTING**

#### Clutch lever too hard to pull in

- · Damaged, kinked or dirty clutch cable
- · Improperly routed clutch cable
- · Damaged clutch lifter mechanism
- · Faulty clutch lifter bearing

#### Clutch will not disengage or motorcycle creeps with clutch disengaged

- · Too much clutch lever freeplay
- · Warped clutch plates
- · Loose clutch center lock nut
- · Engine oil level too high, improper oil viscosity or oil additive used

#### Clutch slips

- · No clutch lever freeplay
- · Worn clutch discs
- · Weak clutch springs
- · Clutch lifter sticking
- · Engine oil level too low or oil additive used

#### Hard to shift

- · Improper clutch operation
- · Incorrect engine oil viscosity
- · Incorrect clutch adjustment
- · Bent or damaged gearshift spindle
- · Damaged gearshift cam
- · Bent fork shaft or damaged shift forks and shift drum (page 12-21)


#### Transmission jumps out of gear

- · Broken shift drum stopper arm
- · Weak or broken gearshift spindle return springs
- · Worn or damaged gearshift cam
- · Bent fork shaft or worn shift forks and shift drum (page 12-21)
- · Worn gear dogs or dog holes (page 12-21)

## RIGHT CRANKCASE COVER **REMOVAL**

Drain the engine oil (page 3-12).


Remove the bolts, clutch cover and oil seal rubber.

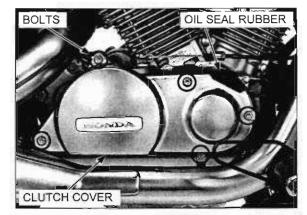

Remove the bolts in a crisscross pattern in several


Remove the clutch cable holder and disconnect the clutch cable.

Remove the right crankcase cover.

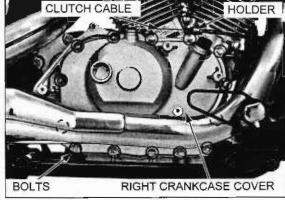


damage the mating the mating surface. surfaca.

Be careful not to Remove the dowel pins and clean off the sealant from

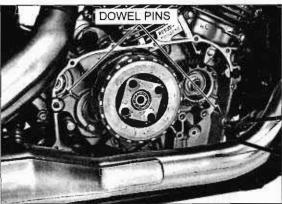


#### **DISASSEMBLY**


Remove the clutch lifter piece while turning the clutch lifter arm clockwise.

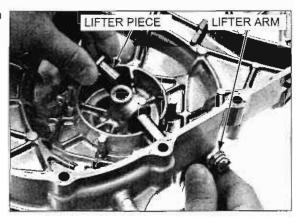

Remove the snap ring and return spring from the clutch lifter arm.

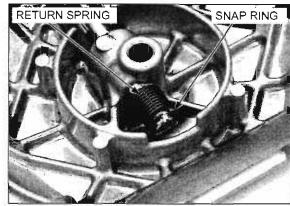

Remove the clutch lifter arm from the right crankcase cover.

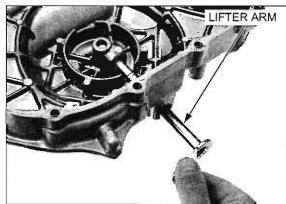


#### INSPECTION

Check the oil seal for fatigue or damage. Check the lifter arm sliding surface of the right crankcase cover for wear, damage or loose fit.

Replace these parts if necessary.

#### NOTE


If the oil seal replacement is required, install the oil seal flash with the case surface.

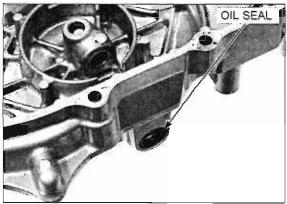

Check the clutch lifter arm for wear, damage or bending.

Check the spring for fatigue or damage.


Replace these parts if necessary.

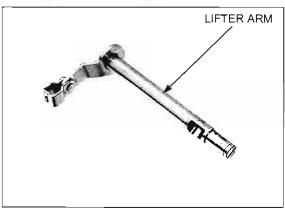

## **CLUTCH REMOVAL**


Remove the right crankcase cover (page 10-5).

If the oil pump driven sprocket will be removed, loosen the driven sprocket bolt while the clutch is still installed.

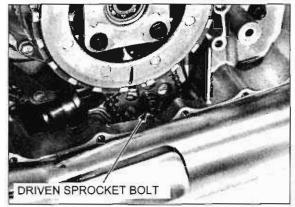


Loosen the clutch lifter plate bolts in a crisscross pattern in several steps.

Remove the lifter plate/bearing and clutch springs.

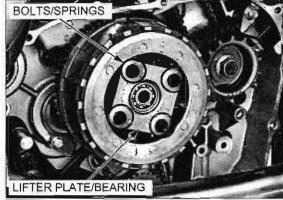

Be careful not to damage the mainshaft threads.

Be careful not to Unstake the clutch center lock nut.

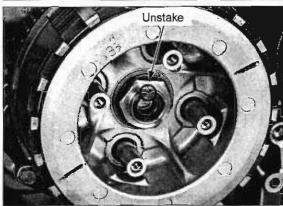

Hold the clutch center using a special tool and loosen the clutch center lock nut.

TOOL:

Clutch center holder


07JMB-MN50301

**USA TOOLS:** 

Clutch holder plater Clutch holder collars (set of 4)

07HGB-001010B 07HGB-001020B

Remove the special tool and clutch center lock nut.

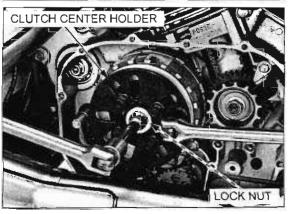


Remove the spring washer and thrust washer.


# 

Remove the following:


- Clutch center
- Pressure plate
- End clutch disc
- Clutch plates
- Clutch disc A
- Judder spring
- Spring seat

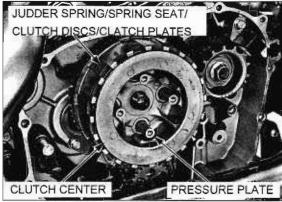


Remove the thrust washer and clutch outer.

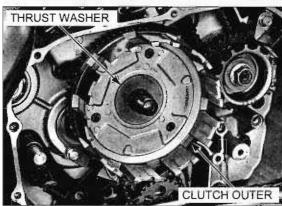


Remove the oil pump driven sprocket bolt and washer.

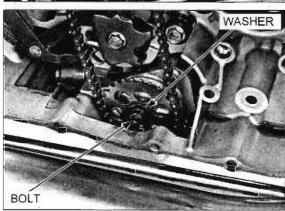

Remove the oil pump drive sprocket, driven sprocket and drive chain as a set.

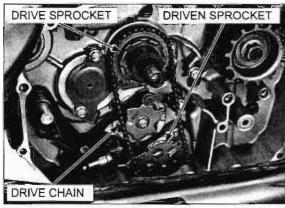

Remove the clutch outer guide.

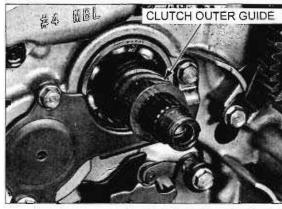


#### **INSPECTION**

#### **CLUTCH LIFTER BEARING**

Turn the inner race of the bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the lifter plate.


Remove and discard the bearing if the races do not turn smoothly and quietly, or if they fit loosely in the lifter plate.

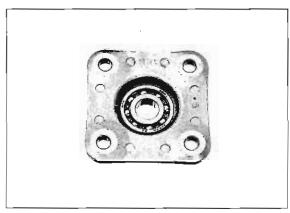

#### **CLUTCH SPRING**

Replace the clutch springs as a set. Check the clutch spring free length.

SERVICE LIMIT: 43.9 mm (1.73 in)

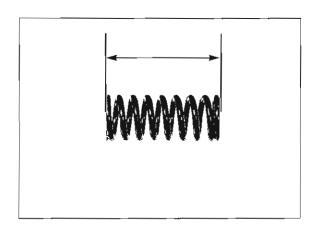

#### **CLUTCH/GEARSHIFT LINKAGE**

#### **CLUTCH DISC**


discs and plates as

Replace the clutch Replace the clutch discs for signs of scoring or discoloration.

> a set. Measure the clutch disc thickness.

> > SERVICE LIMITS: Disc A: 2.3 mm (0.09 in)

End disc: 2.6 mm (0.10 in)

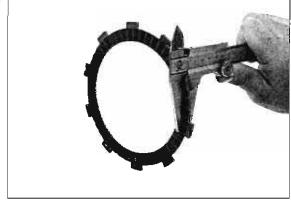


#### **CLUTCH PLATE**

Replace the clutch discs and plates as a set.

Check the clutch plate for discoloration.

Check the clutch plate warpage on a surface plate using a feeler gauge.

SERVICE LIMIT: 0.30 mm (0.012 in)

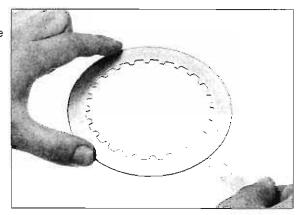

#### **CLUTCH CENTER**

Check the clutch center for nicks, indentations or abnormal wear caused by the clutch plates.




#### **CLUTCH OUTER**

Check the slot in the clutch outer for nicks, indentations or abnormal wear caused by the clutch discs.

Measure the clutch outer I.D.

**SERVICE LIMIT: 32.09 mm (1.263 in)** 

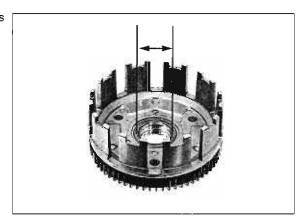

#### **CLUTCH OUTER GUIDE**

Check the clutch outer guide for damage or abnormal wear.

Measure the clutch outer guide I.D.


SERVICE LIMIT: 22.03 mm (0.867 in)

Measure the clutch outer guide O.D.

SERVICE LIMIT: 31.92 mm (1.257 in)

Calculate the clutch outer-to-outer guide clearance.

SERVICE LIMIT: 0.18 mm (0.007 in)

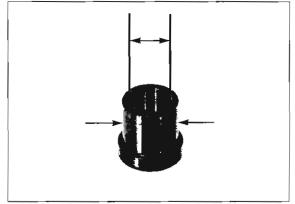

#### OIL PUMP DRIVE SPROCKET

Check the oil pump drive sprocket for wear or damage.


Measure the I.D. of the drive sprocket.

SERVICE LIMIT: 32.16 mm (1.266 in)

Calculate the oil pump drive sprocket-to-clutch outer

guide clearance.

SERVICE LIMIT: 0.23 mm (0.009 in)

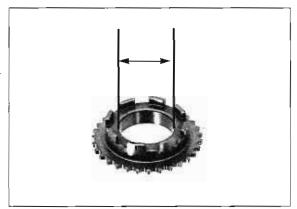

#### MAINSHAFT


Measure the mainshaft O.D. at the clutch outer guide sliding surface.

SERVICE LIMIT: 21.95 mm (0.864 in)

Calculate the clutch outer guide-to-mainshaft


clearance.

SERVICE LIMIT: 0.08 mm (0.003 in)

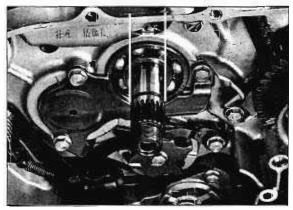


#### JUDDER SPRING/SPRING SEAT

Check the spring seat and judder spring for distortion, wear or damage.

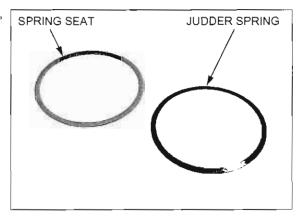

#### OIL PUMP DRIVEN SPROCKET

Check the oil pump driven sprocket for wear or damage.

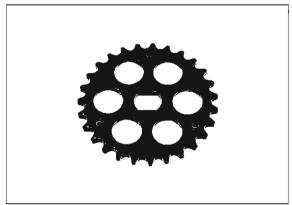


#### PRIMARY DRIVE GEAR

#### **REMOVAL**

Remove the clutch (page 10-7).

Remove the CKP sensor mounting bolts.

Remove the CKP sensor and grommets.

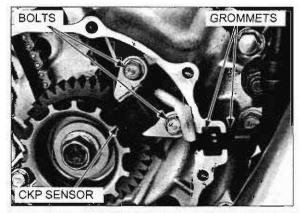

Temporarily install the clutch outer guide, oil pump drive sprocket and clutch outer onto the mainshaft (page 10-18).

Hold the primary drive gear using a special tool and remove the primary drive gear bolt and washer.


#### TOOL:


Gear holder, 2.5

07724-0010100 or 07724-001A100 (U.S.A. only)

Remove the gear holder and temporarily installed parts.

Remove the CKP sensor rotor and primary drive gear.

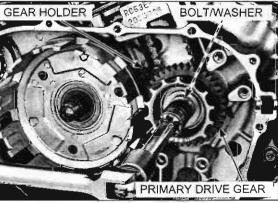

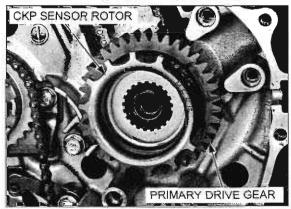

#### **INSPECTION**

Check the CKP sensor rotor for wear or damage.



Check the primary drive gear for wear or damage.




#### **INSTALLATION**


Install the primary drive gear on the crankshaft.

#### NOTE

- Install the primary drive gear, aligning its wide groove with the wide tooth of the crankshaft.
- Install the primary drive gear with its "OUT" mark facing out.

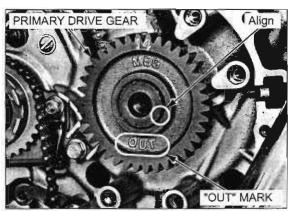

Install the CKP sensor rotor, aligning its wide groove with the wide tooth of the crankshaft.

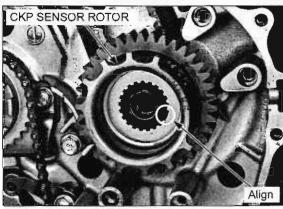

#### CLUTCH/GEARSHIFT LINKAGE

Temporarily install the clutch outer guide, oil pump drive sprocket and clutch outer onto the mainshaft.

Apply engine oil to the primary drive gear bolt threads and seating surface.

Install the washer and primary drive gear bolt.

Hold the primary drive gear using a special tool.

TOOL:

Gear holder, 2.5

07724-0010100 or 07724-001A100 (U.S.A. only)


Tighten the bolt to the specified torque.


TORQUE: 88 N·m (9.0 kgf·m, 65 lbf·ft)

Remove the gear holder and temporarily installed parts.

Install the CKP sensor, wire grommets and tighten the bolts.

Install the clutch (page 10-18).

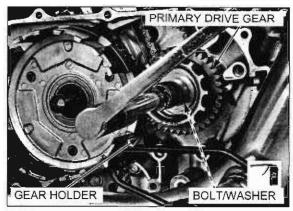

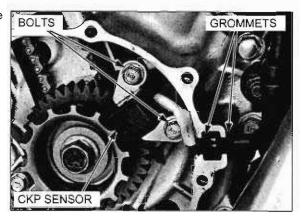

#### **GEARSHIFT LINKAGE**


#### **REMOVAL**

Remove the following:


- Left crankcase rear cover (page 2-4)
- ~ Clutch (page 10-7)

Remove the pinch bolt and gearshift arm from the spindle.

Clean the gearshift spindle.

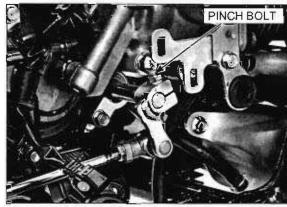


Remove the pivot bolt, washer and gearshift pedal.

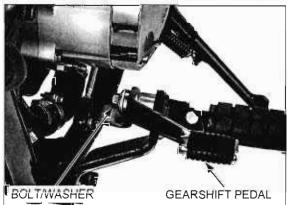

Remove the pivot collar and dust seals from the gearshift pedal.


Check the dust seals for wear or damage.

Replace the dust seal if necessary.

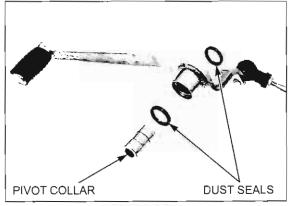

#### Remove the following:

- Bolt
- Washer
- Stopper arm
- Collar
- Return spring

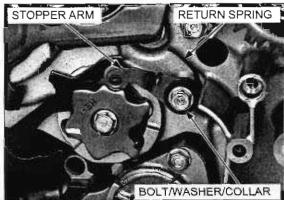

Remove the gearshift spindle from the crankcase while unhooking the shifter arm from the gearshift cam plate.



#### **INSPECTION**

Remove the bolt and stopper plate.

Apply grease to the oil seal lips.


Check the gearshift spindle oil seal for deterioration or damage, replace it if necessary.

#### NOTE

Install the oil seal with its marked side facing out.


Install the stopper plate and tighten the bolt to the specified torque.

TORQUE: 13 N·m (1.3 kgf·m, 10 lbf·ft)

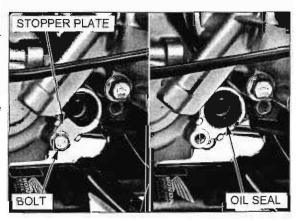


#### CLUTCH/GEARSHIFT LINKAGE

Check the gearshift spindle for bend, wear or damage. Check the return springs for fatigue or damage.

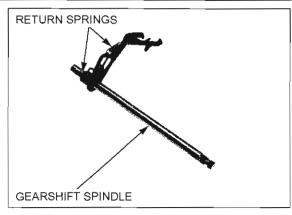

Check the gearshift pedal rod for damage or loose lock nuts.


Replace the rod if necessary.

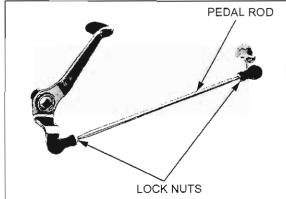

#### **INSTALLATION**


Install the gearshift spindle, aligning the return spring ends with the gearshift spindle return spring pin in the crankcase.

Hook the shifter arm to the gearshift cam plate.

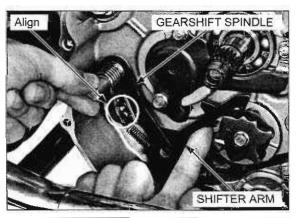


Install the following:


- Collar
- Return spring
- Stopper arm
- Washer
- Bolt

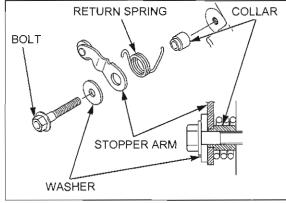

Hold the stopper arm with the screwdriver, and tighten the bolt securely as shown.

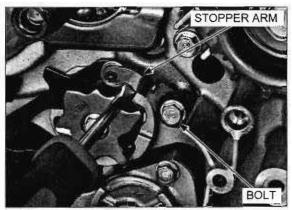


Apply grease to the dust seal lips. Install the dust seals and pivot collar to the gearshift pedal.

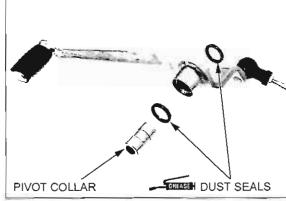

Install the gearshift pedal, washer and pivot bolt. Tighten the pivot bolt to the specified torque.


TORQUE: 39 N·m (4.0 kgf·m, 29 lbf·ft)

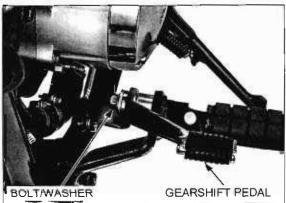

Install the gearshift arm to the spindle, aligning with the punch marks.

Tighten the pinch bolt to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

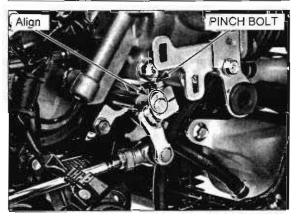

## **CLUTCH INSTALLATION**

Apply molybdenum disulfide oil to the clutch outer guide outer surface.


Install the clutch outer guide to the mainshaft.

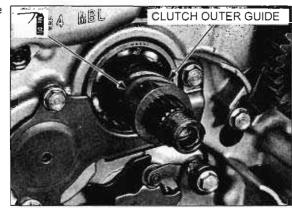

Install the oil pump drive chain, drive sprocket and driven sprocket as a set.

#### NOTE:


- Install the oil pump driven sprocket with the "O" marks side facing inside.
- Align the flat surfaces of the driven sprocket hole and oil pump shaft end.

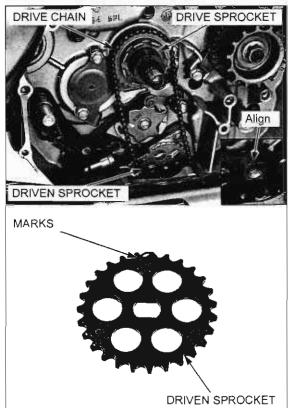

Apply locking agent to the oil pump driven sprocket bolt threads and install the washer and bolt.


#### NOTE

Tighten the driven sprocket bolt to the specified torque after installing the clutch.

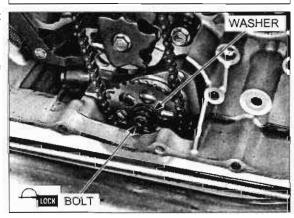


Install the clutch outer onto the mainshaft.

Align the grooves in the clutch outer with the bosses on the oil pump drive sprocket while turning the sprocket with the chain and pushing the clutch outer onto the mainshaft.

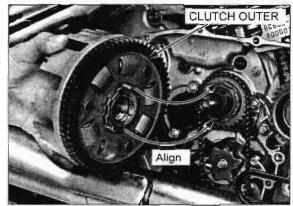

Install the thrust washer onto the mainshaft.

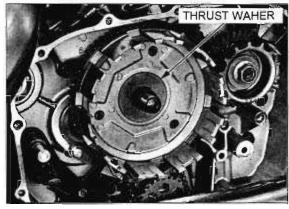


Coat the clutch discs and plates with engine oil. Install the spring seat and judder spring to the clutch center as shown.

disc A.


End clutch disc has Install the end clutch disc.

a larger I.D. than Install the seven clutch plates and seven discs A, starting with the clutch plate.


Install the pressure plate.

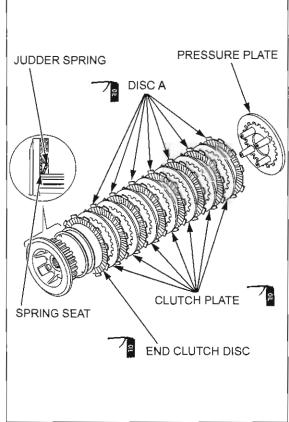

Install the clutch assembly into the clutch outer.

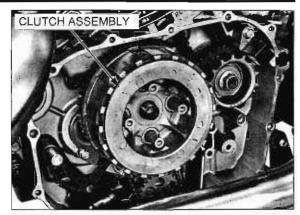


Install the end clutch disc into the shallow slots of the clutch outer.

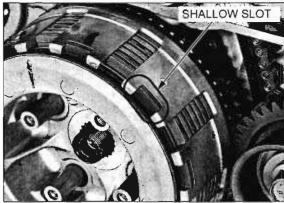

Install the thrust washer.

Install the spring washer with its "OUT SIDE" mark facing out.

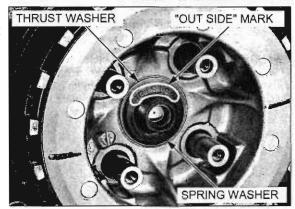

Apply engine oil to the threads and seating surface of a new clutch center lock nut and install it onto the mainshaft.

Hold the clutch center using a special tool and tighten the lock nut to the specified torque.

#### TOOL:

Clutch center holder


07JMB-MN50301

#### **USA TOOLS:**


Clutch holder plater Clutch holder collars (set of 4) 07HGB-001020B

07HGB-001010B

TORQUE: 128 N·m (13.1 kgf·m, 94 lbf·ft)

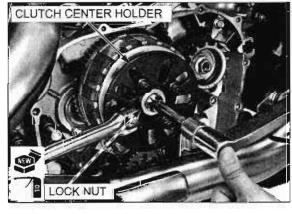


Be careful not to damage the mainshaft threads. Stake the clutch center lock nut into the mainshaft groove.

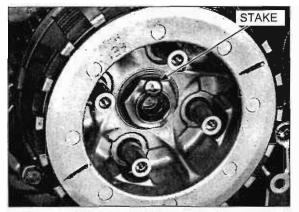

Install the clutch springs, lifter plate/bearing and bolts. Tighten the bolts in a crisscross pattern in several steps to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

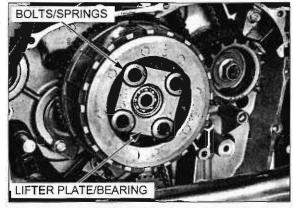

If the oil pump driven sprocket is removed, tighten the oil pump driven sprocket bolt to the specified torque.

TORQUE: 15 N·m (1.5 kgf·m, 11 lbf·ft)

Install the right crankcase cover (page 10-21).

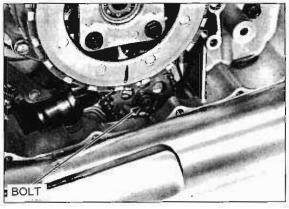


# RIGHT CRANKCASE COVER INSTALLATION

#### **ASSEMBLY**

Apply engine oil to the clutch lifter arm sliding surface of the right crankcase cover.


Apply grease to the oil seal lips.

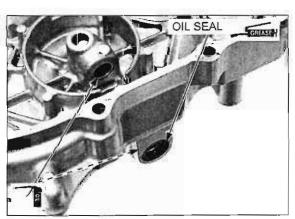

#### **CLUTCH/GEARSHIFT LINKAGE**

Apply engine oil to the clutch lifter arm sliding surface and slit.


Install the clutch lifter arm.

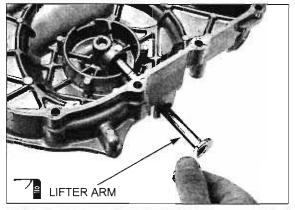


Install the return spring by inserting its short end into the clutch lifter arm groove.

Install the snap ring to the clutch lifter arm groove securely.

Hook the long spring end to the cover tab.

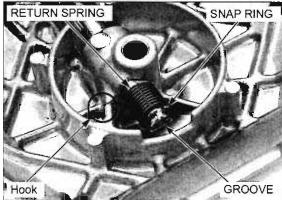


Install the clutch lifter piece, aligning the piece end with the groove in the clutch lifter arm by turning the clutch lifter arm clockwise.

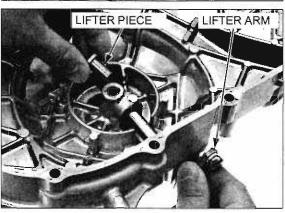

#### INSTALLATION


Install the dowel pins.

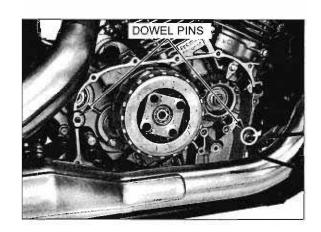


Be careful not to damage the mating surfaces.

Clean the mating surfaces of the right crankcase and cover.

Apply liquid sealant (Three Bond 1207B or equivalent) to the right crankcase cover mating surface.

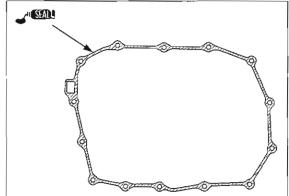

Connect the clutch cable. Install the right crankcase cover, clutch cable holder and tighten the bolts in a crisscross pattern in several steps.

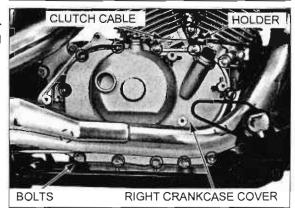


Install the oil seaf rubber to the clutch cover with its small flange side facing up.

Install the clutch cover and tighten the bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Fill the crankcase with the recommended engine oil (page 3-11).

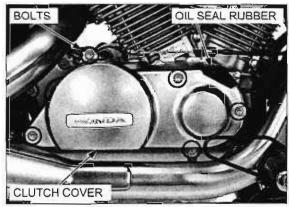


# МЕМО

# 11. ALTERNATOR/STARTER CLUTCH

COMPONENT LOCATION11-2	STATOR REMOVAL ······11-4
SERVICE INFORMATION11-3	FLYWHEEL/STARTER CLUTCH11-5
TROUBLESHOOTING11-3	STATOR INSTALLATION 11-11

11

# **COMPONENT LOCATION**

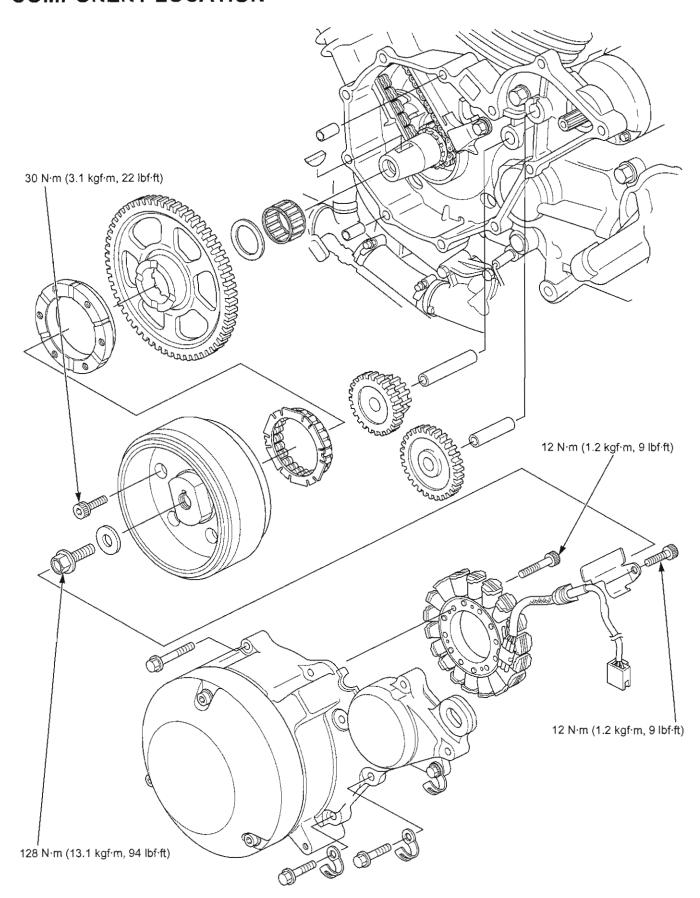

## SERVICE INFORMATION

#### **GENERAL**

- This section covers service of the alternator stator and flywheel. All service can be done with the engine installed in the frame.
- · For alternator inspection (page 18-10).
- · For starter motor service (page 20-7).

#### **SPECIFICATIONS**

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Starter driven gear	I.D.	37.000 - 37.025 (1.4567 - 1.4577)	37.10 (1.461)
	O.D.	57.749 - 57.768 (2.2736 - 2.2743)	57.73 (2.273)
Starter clutch outer I.D.		74.414 – 74.440 (2.9297 – 2.9307)	74.46 (2.931)


#### **TORQUE VALUES**

Stator socket bolt Flywheel bolt 12 N·m (1.2 kgf·m, 9 lbf·ft) 128 N·m (13.1 kgf·m, 94 lbf·ft) Apply locking agent to the threads Apply engine oil to the threads and seat-

ing surface Left hand threads

Stator wire holder socket bolt Starter one-way clutch outer socket bolt 12 N·m (1.2 kgf·m, 9 lbf·ft) 30 N·m (3.1 kgf·m, 22 lbf·ft) Apply locking agent to the threads Apply locking agent to the threads

#### **TOOLS**

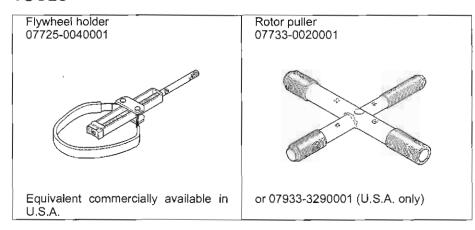

## **TROUBLESHOOTING**

Starter motor turns, but engine does not turn

- · Faulty starter clutch
- · Damaged reduction gear
- · Damaged starter idle gear

# STATOR REMOVAL

Remove the following:

- Left side cover (page 2-3)
- Left crankcase rear cover (page 2-4)

Disconnect the alternator 3P (White) connector. Release the alternator wire from the wire bands.



Release the wires from the clamps.


Place a container under the left crankcase cover to catch the engine oil.

a crisscross pattern irı several steps.

Loosen the bolts in Remove the bolts, clamps and left crankcase cover.


#### NOTE:

- · The left crankcase cover (stator) is magnetically attached to the flywheel, be careful during removal.
- · Be careful not to damage the alternator cover.

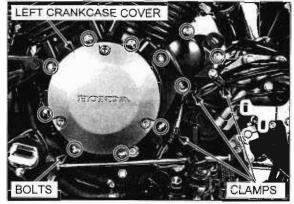


surface.

Be careful not to Remove the dowel pins and clean off the sealant from damage the mating the mating surface.

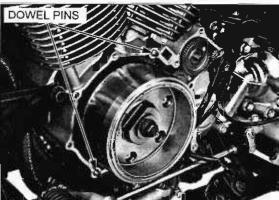


Remove the bolt and stator wire holder from the left crankcase cover.

Remove the wire grommet.

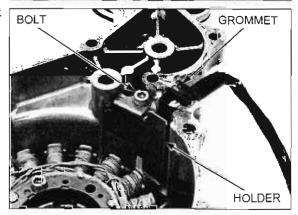

Remove the bolts and stator from the left crankcase cover.

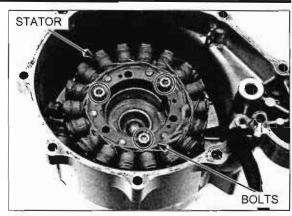


# FLYWHEEL/STARTER CLUTCH

#### **FLYWHEEL REMOVAL**

For alternator charging coil inspection (page 18-10).

Remove the left crankcase cover (page 11-4).

Remove the starter reduction gear and shaft. Remove the starter idle gear and shaft.

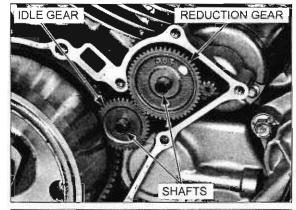

The flywheel bolt has left hand threads.

Remove the flywheel bolt and washer while holding the flywheel using a special tool.

TOOL:

Flywheel holder

07725-0040001 (Equivalent commercially available in U.S.A.)




Remove the flywheel using a special tool.

TOOL:

Rotor puller

07733-0020001 or 07933-3290001 (U.S.A. only)

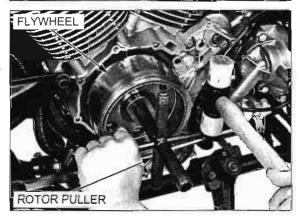


# ALTERNATOR/STARTER CLUTCH

Remove the washer, needle bearing and woodruff key from the crankshaft.

#### NOTE:


- During woodruff key removal, be careful not to damage the key groove and crankshaft.
- · Do not lose the woodruff key.

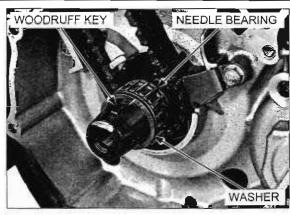

# STARTER IDLE/REDUCTION GEAR INSPECTION


#### STARTER IDLE GEAR/SHAFT

Check the starter idle gear and shaft for wear or damage.

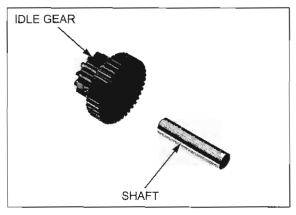

#### STARTER REDUCTION GEAR/SHAFT

Check the starter reduction gear and shaft for wear or damage.

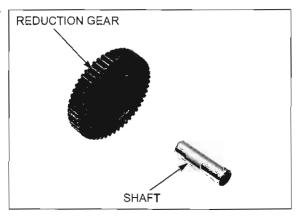


# STARTER DRIVEN GEAR/STARTER CLUTCH REMOVAL

Check the operation of the one-way clutch by turning the starter driven gear.

You should be able to turn the driven gear counterclockwise smoothly, but the gear should not turn clockwise.

Remove the starter driven gear from the flywheel while tuming the driven gear counterclockwise.

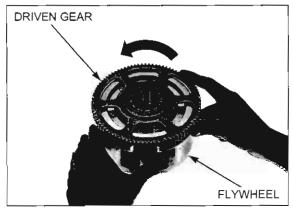


Remove the socket bolts while holding the flywheel using a special tool.


TOOL:

Flywheel holder

07725-0040001 (Equivalent commercially available in U.S.A.)

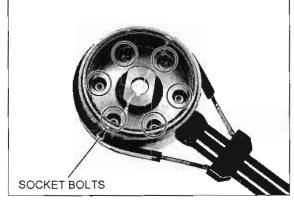


Remove the starter clutch outer/one-way clutch from the flywheel.

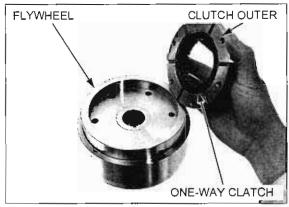

#### STARTER CLUTCH INSPECTION

#### **NEEDLE BEARING**

Check the needle bearing for abnormal wear or damage.

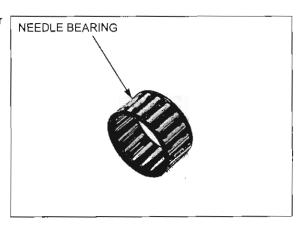

#### ONE-WAY CLUTCH/STARTER CLUTCH OUTER

Check the one-way clutch sprag for abnormal wear, damage or irregular movement.

#### NOTE:

- Do not remove the one-way clutch from the clutch outer, unless it is necessary to replace with a new one
- If the spring is removed from the one-way clutch groove, replace the one-way clutch assembly with a new one.

Check the starter clutch outer inner contact surface for wear or damage.

Measure the starter clutch outer I.D.

SERVICE LIMIT: 74.46 mm (2.931 in)

#### STARTER DRIVEN GEAR


Check the one-way clutch sprag contact surface for wear or damage.


Measure the starter driven gear O.D.

SERVICE LIMIT: 57.73 mm (2.273 in)


Measure the starter driven gear I.D.

**SERVICE LIMIT: 37.10 mm (1.461 in)** 

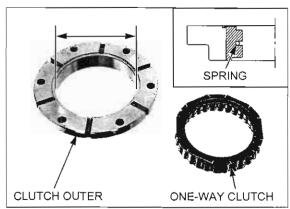

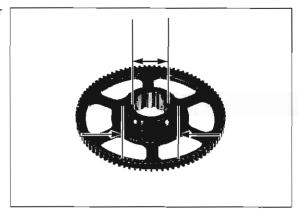

# STARTER DRIVEN GEAR/STARTER CLUTCH INSTALLATION

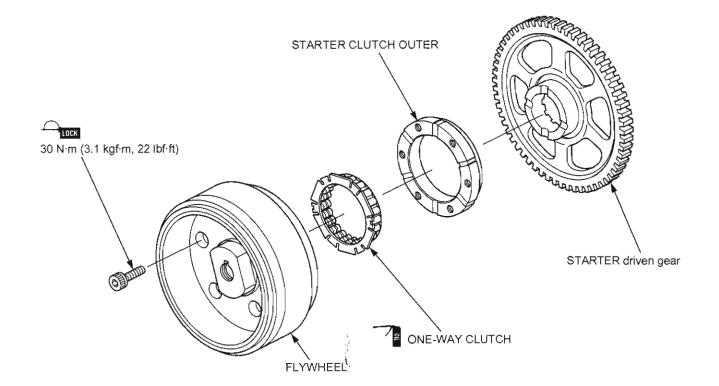


Clean the one-way clutch and apply engine oil to the sprag.


Install the one-way clutch into the starter clutch outer with its flange side facing the flywheel.

#### NOTE:

If the spring is removed from the one-way clutch groove, replace the one-way clutch assembly with a new one.

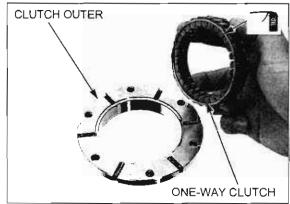

Install the starter clutch outer/one-way clutch to the flywheel.

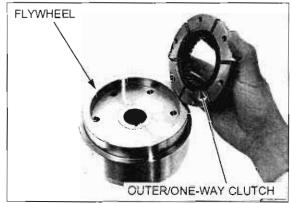

Hold the flywheel using a special tool.

#### TOOL:

Flywheel holder

07725-0040001 (Equivalent commercially available in U.S.A.)


Clean and apply a locking agent to the socket bolt threads.


Install and tighten the socket bolts to the specified torque.

TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

Install the starter driven gear to the flywheel while turning the driven gear counterclockwise.

Recheck the one-way clutch operation (page 11-7).

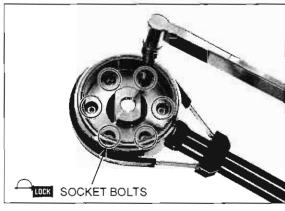

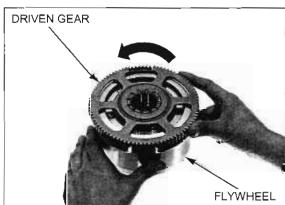


#### FLYWHEEL INSTALLATION

During woodruff key installation, be careful not to damage the key groove or crankshaft. Install the woodruff key to the key groove of the crankshaft.


Apply engine oil to the needle bearing and install it to the crankshaft.

Install the washer to the crankshaft.

Wipe any oil off the mating surface of the crankshaft.

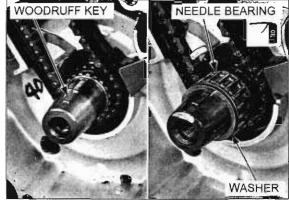

Wipe any oil off the mating surface of the flywheel. Install the flywheel to the crankshaft, aligning the key groove of the flywheel with the woodruff key on the crankshaft.

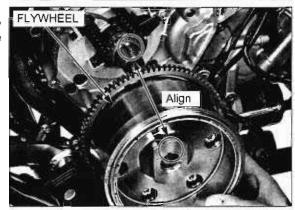

Hold the flywheel using a special tool.

TOOL:

Flywheel holder

07725-0040001 (Equivalent commercially available in U.S.A.)

Apply engine oil to the flywheel bolt threads and seating surface.

The flywheel bolt has left hand threads.

Install and tighten the flywheel bolt with the washer to the specified torque.

TORQUE: 128 N·m (13.1 kgf·m, 94 lbf·ft)


Apply engine oil to the starter reduction gear and starter idle gear shaft outer surface.


Install the starter reduction gear, idle gear and shafts to the left crankcase as an assembly.

#### NOTE:


Install the starter reduction gear with its "OUT" mark facing out.

Install the stator and left crankcase cover (page 11-11).

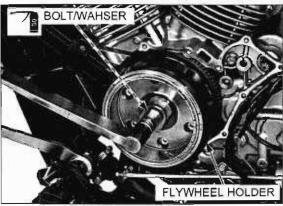

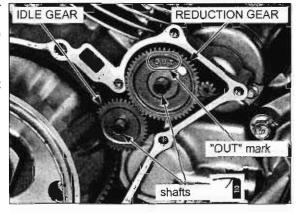

# STATOR INSTALLATION

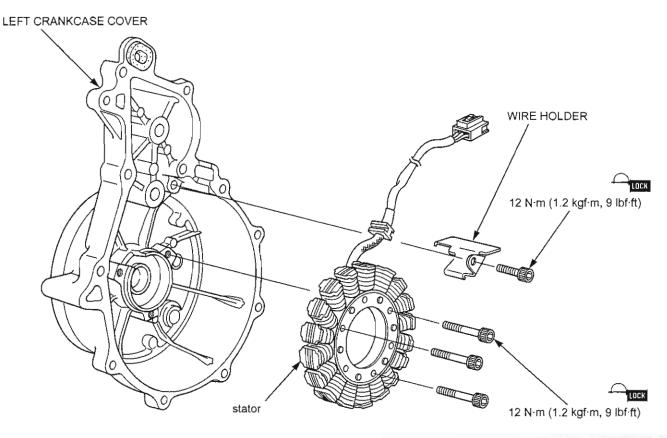


Install the stator to the left crankcase cover.

Clean and apply a locking agent to the bolt threads (page 1-23).

Install and tighten the stator socket bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

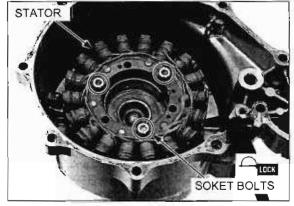


Install the grommet into the grooves in the left crankcase cover.

Clean and apply a locking agent to the bolt threads (page 1-23).

Install the wire holder to the left crankcase cover. Install and tighten the bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

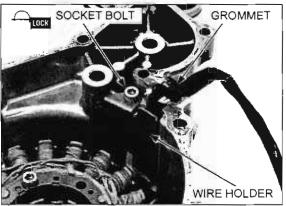


#### **ALTERNATOR/STARTER CLUTCH**


Clean off the sealant from the left crankcase cover mating surface.

Do not wipe off the excessive sealant by using the organic solvent.

Do not wipe off the Apply liquid sealant (Three Bond 1207B or equivalent) excessive sealant to the left crankcase cover mating surface.

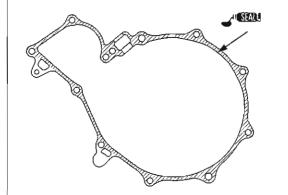


Install the dowel pins.

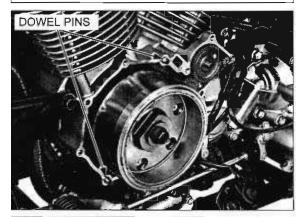

The left crankcase cover (stator) is magnetically attracted to the flywheel, be careful during installation.

The left crankcase Install the left crankcase cover.

Apply locking agent to the one left crankcase cover bolt (marked "△") threads as shown.

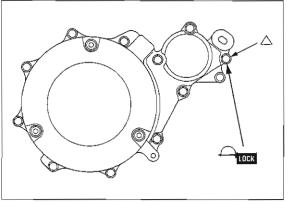

Install the clamps and left crankcase cover bolts. Tighten the left crankcase cover bolts in a crisscross pattern in several steps.

Route the wires properly (page 1-26).

Clamp the wires with the clamps.



## **ALTERNATOR/STARTER CLUTCH**

Route the wires properly (page 1-26).


Clamp and bind the alternator wire with the clamp and wire bands.

Connect the alternator 3P (White) connector.

Install the following:

- Left crankcase rear cover (page 2-4)Left side cover (page 2-3)

Check the engine oil level (page 3-11).

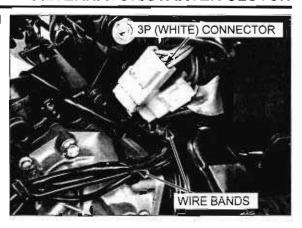


# MEMO

COMPONENT LOCATION12-2
SERVICE INFORMATION12-3
TROUBLESHOOTING12-8
CRANKCASE SEPARATION12-9
CRANKSHAFT/CONNECTING ROD12-10
CRANKDIN PEADING

MAIN JOURNAL BEARING12-16
TRANSMISSION12-20
OUTPUT GEAR12-28
CRANKCASE BEARING REPLACEMENT12-47
CRANKCASE ASSEMBLY12-49

12

# **COMPONENT LOCATION**

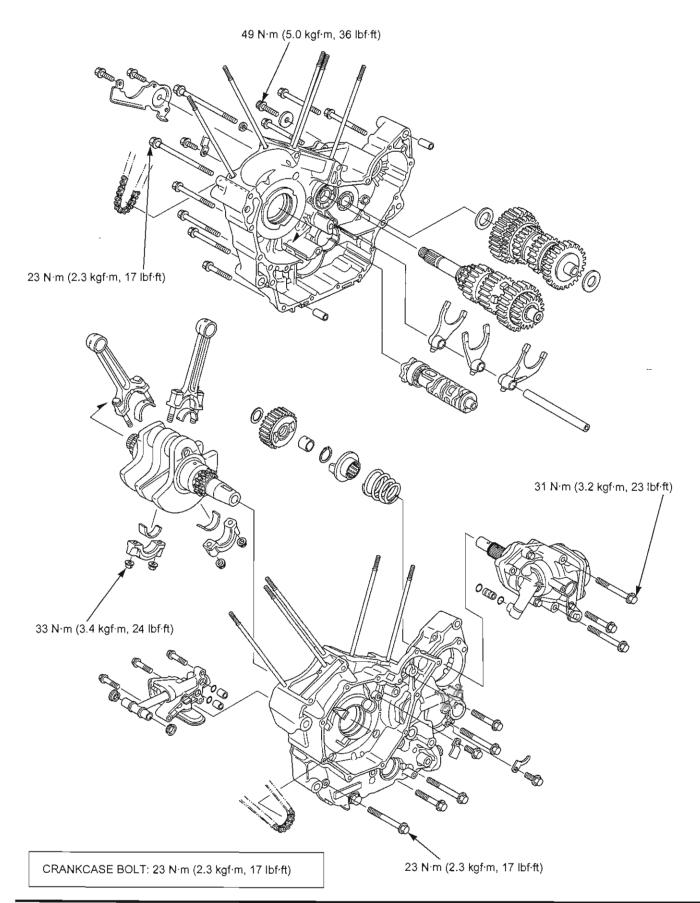

## SERVICE INFORMATION

#### **GENERAL**

- . The crankcase must be separated to service the following:
  - Oil pump
  - Crankshaft/connecting rod
  - Output gear
  - Transmission
- The following parts must be removed before separating the crankcase:
  - Oil filter cartridge (page 3-12)
- Water pump (page 6-15)
- Cylinder head (page 8-13)
- Cylinder/piston (page 9-4)
- Clutch (page 10-7)
- Gearshift linkage (page 10-14)
- Primary drive gear (page 10-12)
- Flywheel (page 11-5)
- Starter motor (page 20-7)
- VS sensor (page 21-16)
- Neutral switch (page 21-26)
- EOP switch (page 4-5)
- · Be careful not to damage the crankcase mating surfaces when servicing.
- · Mark and store the connecting rods, bearing caps and bearing inserts to be sure of their correct locations for reassembly.
- The crankpin and main journal bearing inserts are select fit and are identified by color codes. Select replacement bearings from the code tables. After selecting new bearings, recheck the oil clearance. Incorrect oil clearance can cause major engine damage.
- · Prior to assembling the crankcase halves, apply sealant to their mating surfaces. Wipe off excess sealant thoroughly.
- Whenever you replace the output driven/drive gears, bearings, bearing holder or gear case, perform the gear contact pattern
  and backlash inspection and adjust the shim. The extension lines from the gear engagement surfaces should intersect at one
  point.
- When using the lock nut wrench for the output gear case, use a deflecting beam type torque wrench 20 inches long. The lock nut wrench increases the torque wrench's leverage, so the torque wrench reading will be less than the torque actually applied to the lock nut. The specification given is the actual torque applied to the lock nut, not the reading on the torque wrench. Do not over tighten the lock nuts. The specification later in the text gives both actual and indicated.
- Protect the output gear case with a shop towel or soft jaws while holding it in vise. Do not clamp it too tightly as it could damage
  the gear case.

# SPECIFICATIONS


Unit: mm (in)


	ITEM		STANDARD		
Crankshaft	Connecting rod big e		0.05 - 0.20 (0.002 - 0.008)	0.30 (0.012)	
	Crankpin bearing oil		0.028 - 0.052 (0.0011 - 0.0020)	0.07 (0.003)	
	Main journal oil cleara	ance	0.020 - 0.038 (0.0008 - 0.0015)		
	Crankshaft runout		_		
	Main journal O.D.		52.982 - 53.000 (2.0859 - 2.0866)	52.976 (2.0857)	
Main journal I.D.			58.010 - 58.022 (2.2839 - 2.2843)	58.070 (2.2862)	
Shift fork, fork	I.D.		13.000 - 13.018 (0.5118 - 0.5125)	13.03 (0.513)	
shaft	Claw thickness		5.93 - 6.00 (0.233 - 0.236)	5.6 (0.22)	
	Fork shaft O.D.		12.966 ~ 12.984 (0.5105 - 0.5112)	12.90 (0.508)	
Shift drum O.D. a	at left end		11.966 - 11.984 (0.4711 - 0.4718)	11.94 (0.470)	
Shift drum journa	al I.D.		12.000 - 12.018 (0.4724 - 0.4731)	0020)         0.07 (0.003)           0015)         0.07 (0.003)           0.03 (0.001)         0.03 (0.001)           2.0866)         52.976 (2.0857)           2.2843)         58.070 (2.2862)           0.5125)         13.03 (0.513)           5.6 (0.22)           0.5112)         12.90 (0.508)           0.4718)         11.94 (0.470)           0.4731)         12.05 (0.474)           0020)         0.09 (0.035)           1.1032)         28.04 (1.104)           1.2215)         31.05 (1.222)           0.9457)         24.04 (0.946)           1.1016)         27.94 (1.100)           1.2195)         30.93 (1.218)           0.9441)         23.94 (0.943)           0.024)         0.10 (0.004)           0.0851)         25.04 (0.986)           0.7882)         20.04 (0.789)           0.9835)         24.94 (0.982)           0.7871)         19.96 (0.786)           0024)         0.10 (0.004)           0.09457)         24.04 (0.946)           0.9441)         23.70 (0.933)           0.7890)         20.06 (0.790)           0.7874)         19.97 (0.786)           0024)         0.082 (0	
Shift drum-to-shi	ft drum journal clearance		0.016 - 0.052 (0.0006 - 0.0020)	0.09 (0.035)	
Transmission	Gear I.D.	M3, M5	28.000 - 28.021 (1.1024 - 1.1032)	28.04 (1.104)	
		C1, C4	31.000 - 31.025 (1.2205 - 1.2215)	31.05 (1.222)	
		C2	24.000 - 24.021 (0.9449 - 0.9457)	24.04 (0.946)	
	Gear busing O.D.	M3, M5	27.959 - 27.980 (1.1007 - 1.1016)		
		C1, C4	30.950 - 30.975 (1.2185 - 1.2195)	30.93 (1.218)	
		C2	23.959 - 23.980 (0.9433 - 0.9441)	23.94 (0.943)	
	Gear-to-bushing	M3, M5, C2	0.020 - 0.062 (0.0008 - 0.0024)	0.10 (0.004)	
	clearance	C1, C4	0.025 - 0.075 (0.0010 - 0.0030)	0.11 (0.004)	
	Gear bushing I.D.	M3	25.000 25.021 (0.9843 0.9851)	25.04 (0.986)	
		C2	20.000 - 20.021 (0.7874 - 0.7882)	20.04 (0.789)	
	Mainshaft O.D.	at M3 bushing	24.959 - 24.980 (0.9826 - 0.9835)	24.94 (0.982)	
	Countershaft O.D.	at C2 bushing	19.980 - 19.993 (0.7866 - 0.7871)	19.96 (0.786)	
	Bushing-to-shaft	M3	0.020 - 0.062 (0.0008 - 0.0024)	0.10 (0.004)	
	clearance	C2	0.007 - 0.041 (0.0003 - 0.0016)	0.07 (0.003)	
Output drive	Output gear I.D.		24.000 - 24.021 (0.9449 - 0.9457)	24.04 (0.946)	
train	Output gear bush-	O.D.	23.959 - 23.980 (0.9433 - 0.9441)	23.70 (0.933)	
	ing	I.D.	20.020 - 20.041 (0.7882 - 0.7890)	20.06 (0.790)	
	Output drive gear sha	aft O.D.	19.979 - 20.000 (0.7866 - 0.7874)	19.97 (0.786)	
	Gear-to-bushing clea		0.020 - 0.062 (0.0008 - 0.0024)		
	Gear bushing-to-shaf	t clearance	0.020 - 0.042 (0.0008 - 0.0017)		
	Output gear damper :	spring free length	62.3 (2.45)		
	Output drive gear bac		0.08 - 0.23 (0.003 - 0.009)		
	Backlash difference			0.10 (0.004)	
	ments			0.10 (0.004)	


# TOEQUE VALUES

Crankcase bolt (8 mm)	23 N·m (2.3 kgf·m, 17 lbf·ft)	
Crankpin bearing cap nut	33 N·m (3.4 kgf·m, 24 lbf·ft)	Apply engine oil to the threads and seating surface
Gearshift cam plate bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply locking agent to the threads
Output gear case mounting bolt	31 N·m (3.2 kgf·m, 23 lbf·ft)	Apply sealant to the threads
Output drive gear assembly mounting bolt	31 N·m (3.2 kgf·m, 23 lbf·ft)	Apply engine oil to the threads and seating surface
Output drive gear bearing lock nut		
(inner)	73 N·m (7.4 kgf·m, 54 lbf·ft)	Lock nut; replace with a new one and stake
		Apply engine oil to the threads and seating surface
(outer)	98 N·m (10.0 kgf·m, 72 lbf·ft)	Lock nut; replace with a new one and stake
		Apply engine oil to the threads and seating surface
Output driven gear bearing lock nut		-
(inner)	73 N·m (7.4 kgf·m, 54 lbf·ft)	Lock nut; replace with a new one and stake
		Apply engine oil to the threads and seating surface
(outer)	98 N·m (10.0 kgf·m, 72 lbf·ft)	Lock nut; replace with a new one and stake
		Apply engine oil to the threads and seating surface
Output driven gear shaft bolt Output driven gear assembly mounting socket	49 N·m (5.0 kgf·m, 36 lbf·ft)	
bolt	31 N·m (3.2 kgf·m, 23 lbf·ft)	Apply engine oil to the threads and seating surface

### **TOOLS**

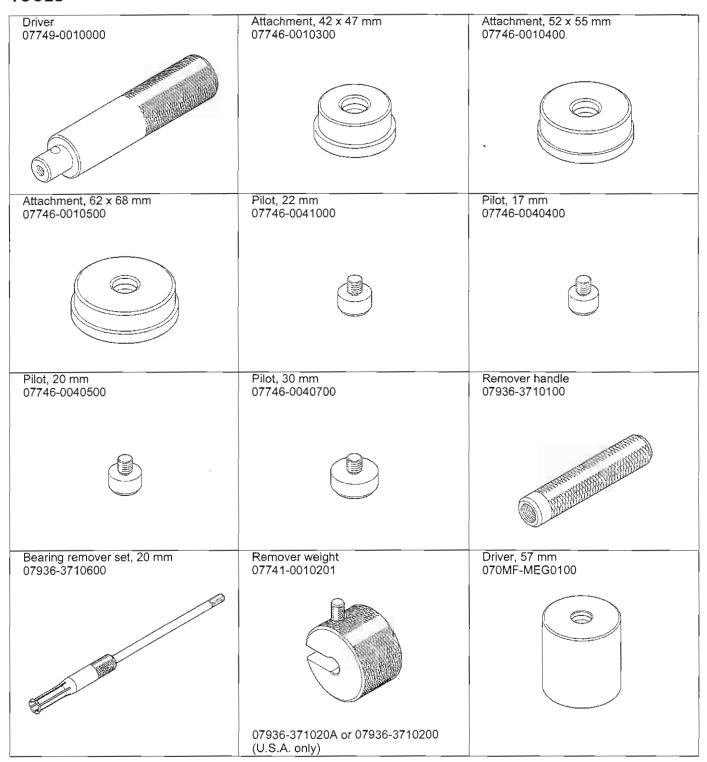

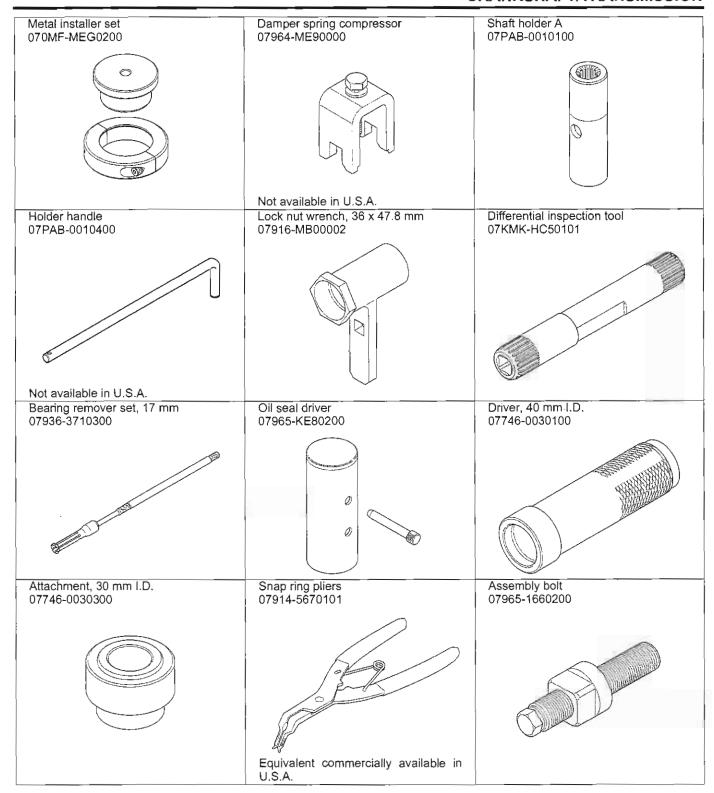

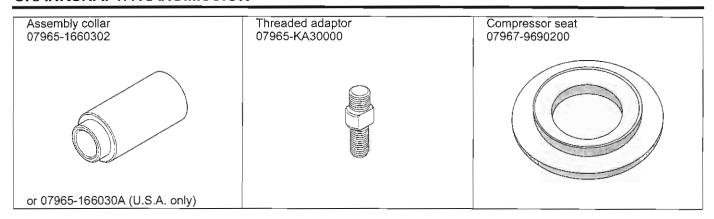

## TROUBLESHOOTING

#### Excessive engine noise

- · Worn main journal bearings
- · Worn crankpin bearings
- · Worn or damaged transmission gear
- · Worn or damaged transmission bearings

#### Excessive noise in side gear

- · Worn or damaged output shaft and final drive shaft gears
- · Worn or damaged output gear case bearing
- · Incorrect adjusted shim

#### Hard to shift

- Improper clutch operation (page 10-9)
- · Incorrect engine oil viscosity
- · Bent shift forks
- · Bent shift fork shaft
- · Bent shift fork claw
- · Damaged shift drum cam grooves
- Bent gearshift spindle

#### Transmission jumps out of gear

- Worn gear dogs or holes
- · Worn gear shifter groove
- · Bent shift fork shaft
- Broken shift drum stopper arm
- Worn or bent shift forks
- · Broken drum stopper arm spring
- · Broken gearshift spindle return spring


# **CRANKCASE SEPARATION**

Remove the engine from the frame (page 7-4).

Refer to Service Information (page 12-3) for removal of necessary parts before separating the crankcase.

Remove the bolts and cam chain tensioner setting plates.

Remove the cam chains.

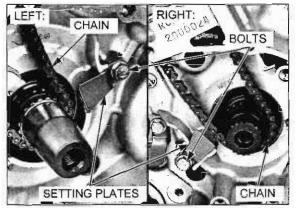


Hold the output driven gear shaft using the special tools, loosen the output drive gear shaft bolt and remove it with the washer.


TOOLS:

Shaft holder A Holder handle


07PAB-0010100 07PAB-0010400

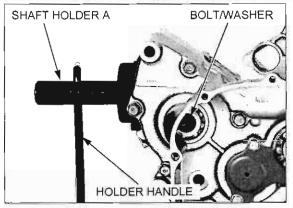

Remove the bolts and bearing setting plate.

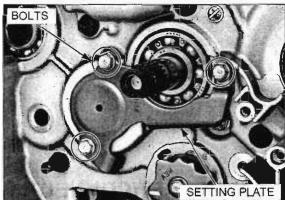


Loosen and remove the 6 mm and 8 mm bolts in a crisscross pattern in several steps.

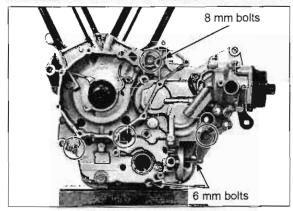

Loosen and remove the 6 mm and 8 mm bolts with washer in a crisscross pattern in several steps.


Turn the shift drum until the position as shown.

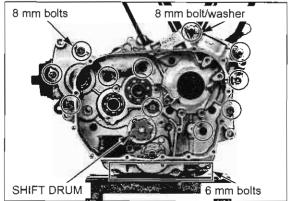

Place the crankcase with the left crankcase down and remove the right crankcase.


#### NOTE:

- Separate the right crankcase from the left crankcase while prying at the points as shown.
- Separate the right crankcase from the left crankcase while tapping them at several locations with a soft hammer.

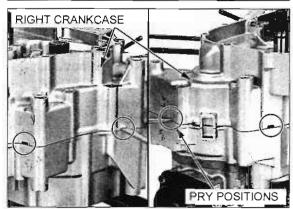

Remove the dowel pins and pipe seal.

Clean off the sealant from the left and right crankcase mating surfaces.

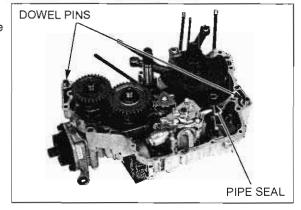


# CRANKSHAFT/CONNECTING ROD CRANKSHAFT REMOVAL

Separate the crankcase (page 12-9).

During crankshaft and connecting rod service, be careful not to damage the main journal or crankpin bearing inserts.

During crankshaft Remove the crankshaft/connecting rod from the left and connecting rod crankcase.

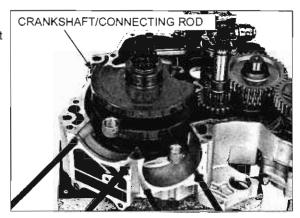


#### SIDE CLEARANCE INSPECTION

Before removing the connecting rods, check the big end side clearance.

Measure the side clearance by inserting the feeler gauge between the crankshaft and connecting rod big end.


SERVICE LIMIT: 0.30 mm (0.012 in)

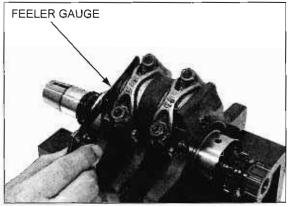

#### CONNECTING ROD REMOVAL


Tap the side of the cap lightly if bearing cap is hard to remove.

Remove the crankpin bearing cap nuts and the bearing caps.

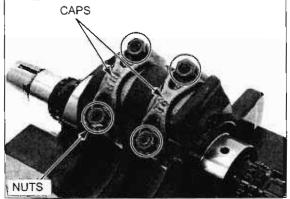

Mark the rods, bearings and caps as you remove them to indicate the correct cylinder and position on the crankpins for reassembly.

For the connecting rod small end inspection (page 9-7).

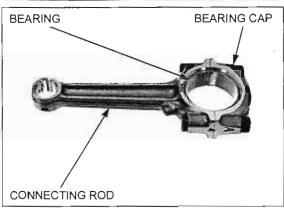


#### CRANKSHAFT INSPECTION

Check the crankshaft journal surfaces for damage, discoloration or scratch.

#### CRANKSHAFT RUNOUT

Place the crankshaft on a stand or V-blocks. Set a dial indicator on the main journals. Rotate the crankshaft two revolutions and read the runout.

SERVICE LIMIT: 0.03 mm (0.001 in)

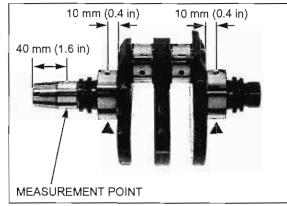

#### CONNECTING ROD INSTALLATION

#### NOTICE

Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

Wipe any oil from the connecting rod, cap and bearing inserts.

Install the bearing inserts on the connecting rods and caps by aligning the tab with the groove.

Apply molybdenum disulfide oil to the thrust surface of the crankpin bearings.

Install the rods and caps on the crankshaft by aligning the I.D. code on the rod and cap. Be sure each part is installed in its original position, as noted during removal.


#### NOTE:


- Face the oil jet of front cylinder connecting rod to rearward (intake side) of the cylinder.
- Face the oil jet of rear cylinder connecting rod to rearward (exhaust side) of the cylinder.

Apply engine oil to the bearing cap nut threads and seating surface, then tighten them in several steps alternately.

#### TORQUE: 33 N·m (3.4 kgf·m, 24 lbf·ft)

After tightening the nuts, check that the connecting rods move freely without binding.

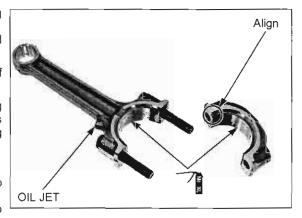


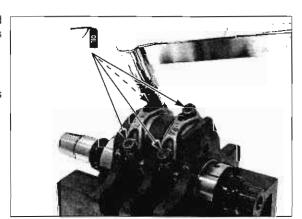

#### CRANKSHAFT INSTALLATION

Apply molybdenum disulfide oil to the crankshaft main journals and install the crankshaft into the left crankcase.

Assemble the crankcase (page 12-49).

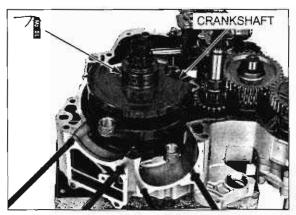

# **CRANKPIN BEARING**

## **NOTICE**


Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

Remove the connecting rod (page 12-11).

#### BEARING INSPECTION

Check the bearing inserts for unusual wear, damage or peeling and replace them if necessary.

Select the replacement bearing (page 12-14).

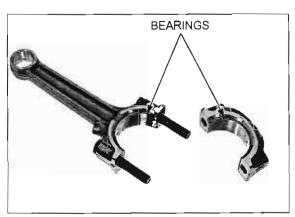


#### OIL CLEARANCE INSPECTION

Clean off any oil from the bearing inserts and crankpins.

Put a strip of plastigauge lengthwise on each crankpin avoiding the oil hole.

Carefully install the connecting rods and bearing caps on the correct crankpins.

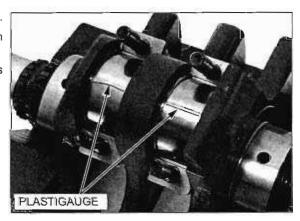


crankshaft during

Do not rotate the Apply engine oil to the threads and seating surfaces of the bearing cap nuts.

inspection. Install the nuts and tighten them evenly.


TORQUE: 33 N·m (3.4 kgf·m, 24 lbf·ft)

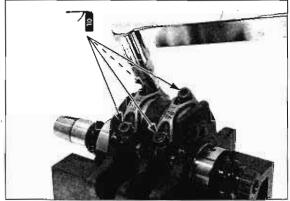

Remove the bearing caps and measure the compressed plastigauge at its widest point on each crankpin to determine the oil clearance.

SERVICE LIMIT: 0.07 mm (0.003 in)

If the clearance exceeds the service limit, select the correct replacement bearings as follows.

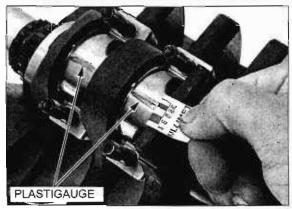


#### BEARING SELECTION

Record the connecting rod I.D. code number.

NOTE:

Number 3 or 4 on the connecting rod is the code for the connecting rod I.D.

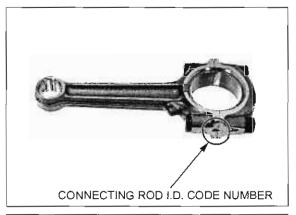


Record the crankpin O.D. code letter.

NOTE:

Letters A or B on each crank weight is the code for the crankpin O.D.

Cross reference the connecting rod and crankpin codes to determine the replacement bearing color code.

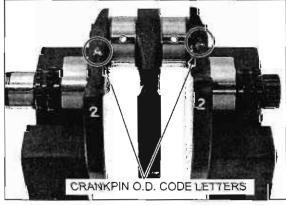

#### **CRANKPIN BEARING SELECTION TABLE:**


			CONNECTING ROD I.E	O. CODE
			3	4
			43.000 – 43.008 mm	43.008 – 43.016 mm
			(1.6929 – 1.6932 in)	(1.6932 – 1.6935 in)
CRANKPIN O.D.		39.982 - 39.990 mm	С	В
CODE	_ ^	(1.5741 – 1.5744 in)	(Pink)	(Yellow)
	В	39.974 – 39.982 mm	В	A
		(1.5738 – 1.5741 in)	(Yellow)	(Green)

#### **BEARING THICKNESS:**

A (Green): Thick B (Yellow): <sup>‡</sup> C (Pink): Thin

# NOTICE

After selecting new bearings, recheck the clearance with a plastigauge. Incorrect clearance can cause severe engine damage.

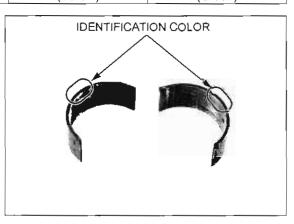

## MAIN JOURNAL BEARING

#### NOTICE

Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.


Remove the crankshaft (page 12-10).

#### **BEARING INSPECTION**

Clean off any oil from the bearings.

Check the bearings for unusual wear, damage or peeling and replace them if necessary.

Measure and record the main journal bearing I.D. at between the bearing groove and crankcase outside end of the bearing, and 90 degrees to the index mark.

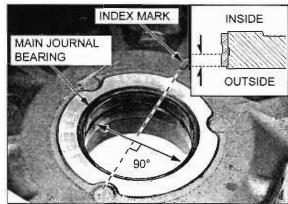

Clean off any oil from the crankshaft journals.


Measure and record the crankshaft main journal O.D.

SERVICE LIMIT: 52.976 mm (2.0857 in)

Calculate the main journal oil clearance.

SERVICE LIMIT: 0.07 mm (0.003 in)

If the clearance exceeds the service limit, select the bearing.

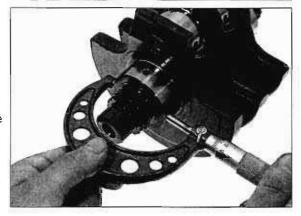


#### **BEARING SELECTION**

Set a special tool and hydraulic press on the outside of the crankcase.


TOOL:

Driver, 57 mm

070MF-MEG0100

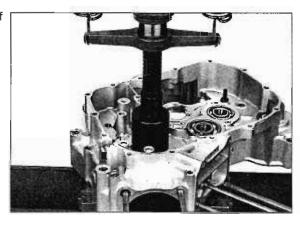


Press the main journal bearings toward the inside of the crankcase.

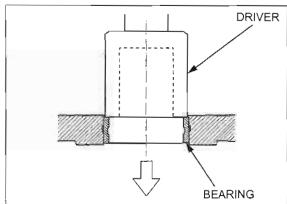

Measure and record the crankcase main journal I.D. at between the main journal groove and crankcase outside end, and 90 degrees to the index mark.

SERVICE LIMIT: 58.070 mm (2.2862 in)

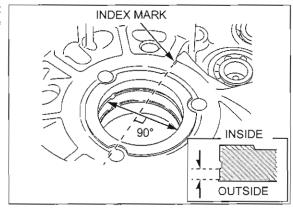

Depending upon the results of the above measurements there are four possible scenarios for main journal bearing selection:

- · Crankshaft and crankcase are replaced
- · Crankcase only is replaced
- · Crankshaft only is replaced
- · Main journal bearings only are replaced

Carefully refer to the following instructions and tables for main journal bearing selection.

Record the bearing support I.D. code letter.

#### NOTE:


Letters A or B on each crankcase is the code for the crankcase I.D.


Record the main journal O.D. code number.

#### NOTE

Letters 1, 2 or 3 on each crank weight is the code for crankshaft journal O.D.

Cross-reference the crankshaft and crankcase codes to determine the replacement bearing color.

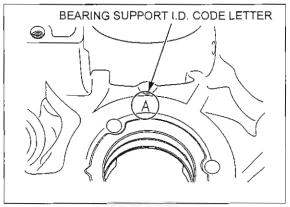

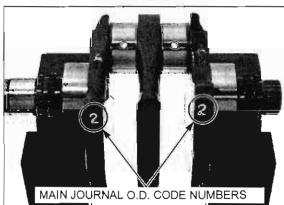

#### In case the crankshaft and crankcase are replaced:

			MAIN JOURNAL O.D. CODE				
			1	2	3		
			52.994 - 53.000 mm	52.988 - 52.994 mm	52.982 - 52.988 mm		
		(2.0864 – 2.0866 in)	(2.0861 - 2.0864 in)	(2.0859 – 2.0861 in)			
BEARING		58.016 - 58.022 mm	С	В	A		
SUPPORT	A	(2.2841 – 2.2843 in)	(Brown)	(Black)	(Blue)		
I.D. CODE	В	58.010 - 58.016 mm	D	С	В		
		(2.2839 – 2.2841 in)	(Green)	(Brown)	(Black)		

#### In case the crankcase only is replaced:

			MAIN JOURNAL O.D.			
		5.70	52.994 – 53.000 mm (2.0864 – 2.0866 in)	52.988 – 52.994 mm (2.0861 – 2.0864 in)	52.982 – 52.988 mm (2.0859 – 2.0861 in)	52.976 – 52.982 mm (2.0857 – 2.0859 in)
BEARING SUPPORT	Α	58.016 - 58.022 mm (2.2841 - 2.2843 in)	C (Brown)	B (Black)	A (Blue)	A (Blue)
I.D. CODE	В	58.010 - 58.016 mm (2.2839 - 2.2841 in)	D (Green)	C (Brown)	B (Black)	A (Blue)

#### In case the crankshaft only is replaced:

		N	IAIN JOURNAL O.D. COD	E
		1	2	3
		52.994 - 53.000 mm	52.988 - 52.994 mm	52.982 - 52.988 mm
		(2.0864 – 2.0866 in)	(2.0861 – 2.0864 in)	(2.0859 – 2.0861 in)
MAIN JOURNAL	58.010 - 58.016 mm	D	С	В
I.D.	(2.2839 – 2.2841 in)	(Green)	(Brown)	(Black)
	58.016 - 58.022 mm	С	В	Α
	(2.2841 – 2.2843 in)	(Brown)	(Black)	(Blue)
	58.022 – 58.034 mm	В	A	A
	(2.2843 – 2.2848 in)	(Black)	(Blue)	(Blue)
	58.034 - 58.046 mm	A	0.S. G	O.S. G
	(2.2848 – 2.2853 in)	(Blue)	(Red)	(Red)
·	58.046 - 58.058 mm	O.S. G	0.S. F	O.S. F
	(2.2853 – 2.2857 in)	(Red)	(Pink)	(Pink)
	58.058 - 58.070 mm	O.S. F	O.S. E	O.S. E
	(2.2857 – 2.2862 in)	(Pink)	(Yellow)	(Yellow)

#### In case of main bearing replacement only:

		MAIN JOURNAL O.D.			
		52.994 – 53.000 mm (2.0864 ~ 2.0866 in)	52.988 – 52.994 mm (2.0861 – 2.0864 in)	52.982 – 52.988 mm (2.0859 – 2.0861 in)	52.976 – 52.982 mm (2.0857 – 2.0859 in)
BEARING	58.010 – 58.016 mm	D (2	C	B	A
SUPPORT I.D.	(2.2839 – 2.2841 in)	(Green)	(Brown)	(Black)	(Blue)
	58.016 – 58.022 mm	C	В	Α	Α
	(2.2841 – 2.2843 in)	(Brown)	(Black)	(Blue)	(Blue)
	58.022 - 58.034 mm	В	A	Α	O.S. G
	(2.2843 – 2.2848 in)	(Black)	(Blue)	(Blue)	(Red)
	58.034 – 58.046 mm	A	0.\$. G	O.S. G	0.S. F
	(2.2848 – 2.2853 in)	(Blue)	(Red)	(Red)	(Pink)
	58.046 - 58.058 mm	O.S. G	0.S. F	O.S. F	O.S. E
	(2.2853 – 2.2857 in)	(Red)	(Pink)	(Pink)	(Yellow)
	58.058 – 58.070 mm	0.S. F	O.S. E	0.S. E	O.S. E
	(2.2857 – 2.2862 in)	(Pink)	(Yellow)	(Yellow)	(Yellow)

**BEARING THICKNESS:** 

O.S. E (Yellow): Thick

O.S. F (Pink):


O.S. G (Red):

A (Blue): Middle

B (Black): C (Brown):

1

D (Green): Thin

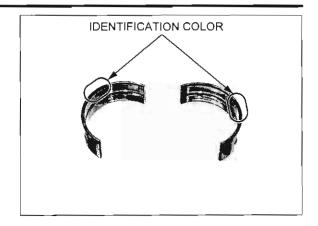

#### **BEARING INSTALLATION**

Apply engine oil to new bearing surface. Set new bearings to the metal installer aligning its side edge with the metal installer grooves.


TOOL:

Metal installer set

070MF-MEG0200


Tighten the bolts alternately in several steps to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

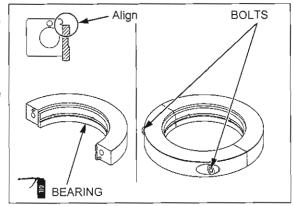

Set the bearings and special tools assembly on inside of the crankcase, fitting the bearing edge in the crankcase main journal.

Align the mating line of the bearings with the index mark on the crankcase as shown.

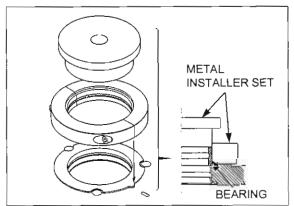


Set the hydraulic press.


TOOL:

Metal installer set

070MF-MEG0200

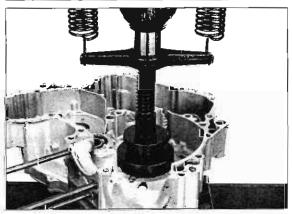

Press the new bearings until the metal installer flange fully seated.

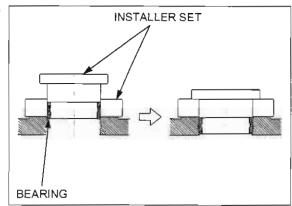


Make sure the bearing mating line aligns with the index mark on the crankcase.

Check the oil clearance (page 12-16).

 After selecting new bearings, recheck the clearance. Incorrect clearance can cause severe engine damage.

Install the crankshaft (page 12-13).

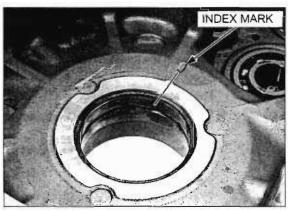


## **TRANSMISSION**


#### **REMOVAL**

Separate the crankcase (page 12-9).


Remove the fork shaft from the shift forks.

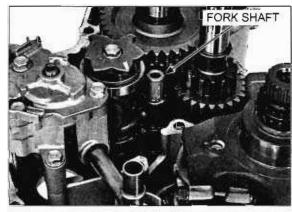

Remove the shift forks and shift drum.

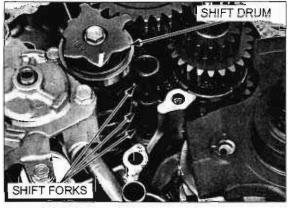


Remove the mainshaft and countershaft together.

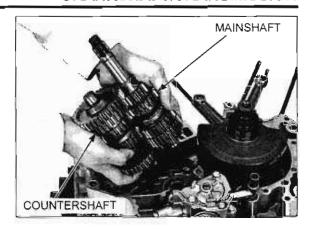

#### TRANSMISSION DISASSEMBLY


Disassemble the mainshaft and countershaft.

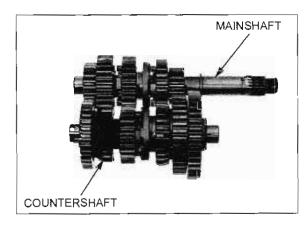

#### **INSPECTION**

#### **GEARS**


Check the gear dogs, dog slots and teeth for damage or excessive wear.

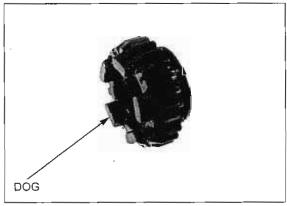

Measure the I.D. of each gear.

#### SERVICE LIMITS:

M3, M5 gears: 28.04 mm (1.104 in) C1, C4 gears: 31.05 mm (1.222 in) C2 gear: 24.04 mm (0.946 in)

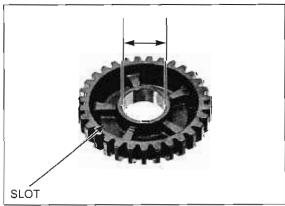

#### **BUSHINGS**

Check the bushings for wear or damage. Measure the O.D. of each bushing.


#### SERVICE LIMITS:

M3, M5, gear bushings: 27.94 mm (1.100 in) C1, C4 gear bushings: 30.93 mm (1.218 in) C2 gear bushing: 23.94 mm (0.943 in)

Measure the I.D. of each bushing.

#### SERVICE LIMITS:

M3 gear bushing: 25.04 mm (0.986 in) C2 gear bushing: 20.04 mm (0.789 in)

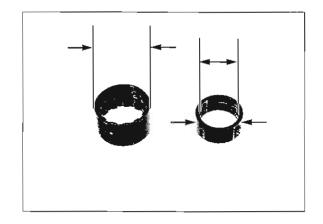

#### MAINSHAFT/COUNTERSHAFT

Check the spline grooves and sliding surfaces for abnormal wear or damage.

Measure the O.D. of the mainshaft and countershaft at the gear and bushing sliding areas.

#### SERVICE LIMITS:

Mainshaft (at M3 gear bushing): 24.94 mm (0.982 in) Countershaft (at C2 gear bushing): 19.96 mm (0.786 in)

Calculate the gear-to-bushing and bushing-to-shaft clearance.

#### SERVICE LIMITS:

Gear-to-bushing

M3, M5, C2: 0.10 mm (0.004 in) C1, C4: 0.11 mm (0.004 in)

Bushing-to-shaft

M3: 0.10 mm (0.004 in) C2: 0.07 mm (0.003 in)


#### SHIFT FORK


Check for deformation or abnormal wear. Measure the shift fork claw thickness.

SERVICE LIMIT: 5.6 mm (0.22 in)

Measure the shift fork I.D.

SERVICE LIMIT: 13.03 mm (0.513 in)

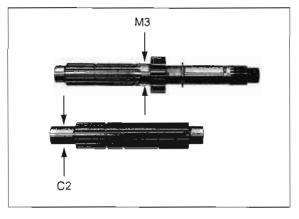

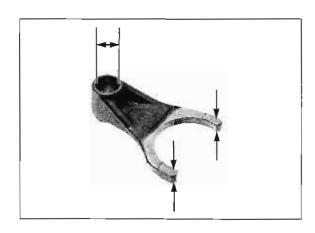


#### SHIFT FORK SHAFT

Check the shift fork shaft for bend, abnormal wear or damage.


Measure the shift fork shaft O.D.

SERVICE LIMIT: 12.90 mm (0.508 in)

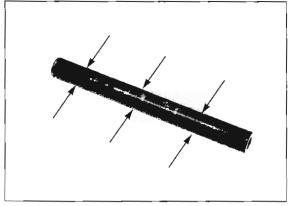


#### SHIFT DRUM/SHIFT DRUM BEARING


Remove the bolt and gearshift cam plate.

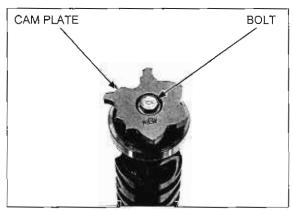

Remove the dowel pin and bearing.

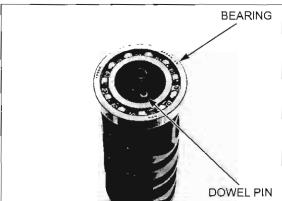

Remove the dowel pins from the gearshift cam plate.

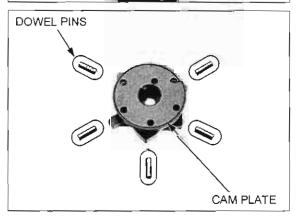


#### CRANKSHAFT/TRANSMISSION

Temporarily install the bearing on the shift drum. Turn the outer race of the bearing with your finger. The bearing should turn smoothly and quietly.

Also check that the bearing inner race fits tightly on the shift drum.

Remove and discard the bearing if the races do not turn smoothly, quietly, or if it fits loosely on the shift drum.

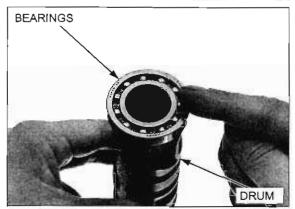


Check the shift drum end for scoring, scratches, or evidence of insufficient lubrication.

Check the shift drum grooves for abnormal wear or damage.

Measure the shift drum O.D. at left end.

SERVICE LIMIT: 11.94 mm (0.470 in)

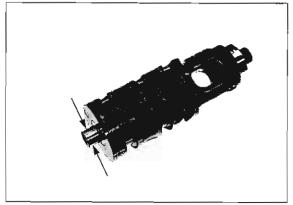


Check the shift drum journal in the left crankcase for excessive wear or damage.

Measure the shift drum journal I.D.


**SERVICE LIMIT: 12.05 mm (0.474 in)** 

Calculate the shift drum-to-shift drum journal clearance.

SERVICE LIMIT: 0.09 mm (0.035 in)

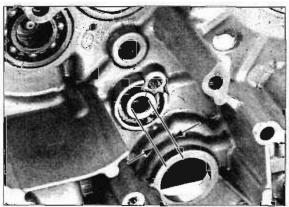


Install the dowel pins into the gearshift cam plate holes.

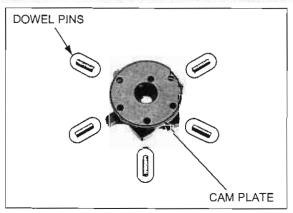


### **CRANKSHAFT/TRANSMISSION**

Install the bearing on the shift drum.
Install the dowel pin into the shift drum hole.

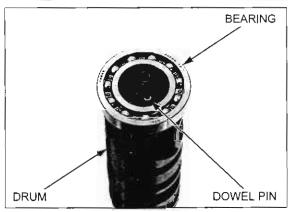


Install the gearshift cam plate by aligning its hole with the dowel pin.

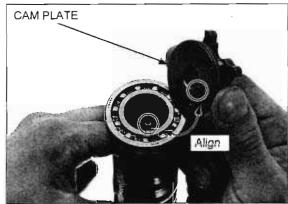

Clean and apply a locking agent to the gearshift cam plate bolt (page 1-23). Install and tighten the bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

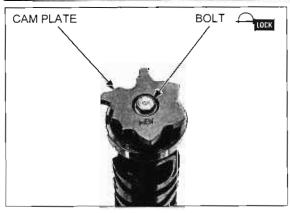

### TRANSMISSION ASSEMBLY

Clean all parts in solvent.

Apply engine oil to the all gear teeth.


Apply molybdenum disulfide oil to the gear bushing sliding surface and shift fork grooves to ensure initial lubrication.

Assemble all parts into their original positions.


#### NOTE:

- Check the gears for freedom of movement or rotation on the shaft.
- Install the washers and snap rings with the chamfered edges facing the thrust load side.
- Do not reuse a worn snap ring which could easily spin in the groove.
- Check that the snap rings are seated in the grooves and align their end gaps with the grooves of the spline.
- Align the lock washer tabs with the spline washer grooves.
- Align the oil holes in the M5 gear bushing and mainshaft, and C1, C4 gear bushing and countershaft.

#### **MAINSHAFT**

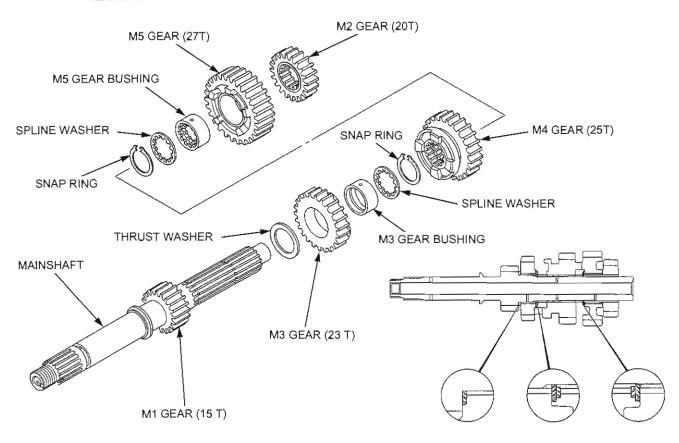


#### COUNTERSHAFT

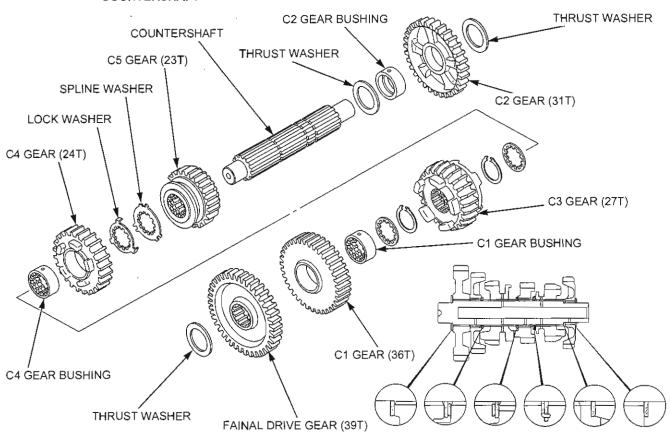

#### **INSTALLATION**


Install the mainshaft and countershaft together into the left crankcase.

Be sure to install the thrust washers of the countershaft both ends.

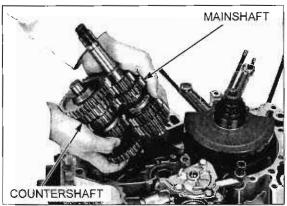


The shift forks have the following identification marks.

- "L": Left shift fork"C": Center shift fork"R": Right shift fork

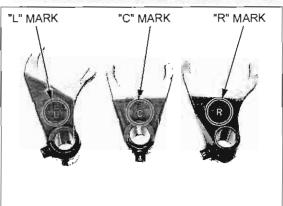

#### CRANKSHAFT/TRANSMISSION

Install the shift forks into the shifter gear grooves with the markings facing up (right crankcase side). Install the shift drum by aligning the shift fork guide pins with the shift drum guide grooves.

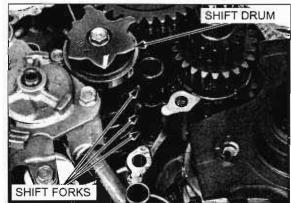


Apply engine oil to the shift fork shaft whole surface.

Insert the shift fork shaft through the shift forks into the left crankcase.


After installation, check for smooth transmission operation.

Assemble the crankcase (page 12-49).

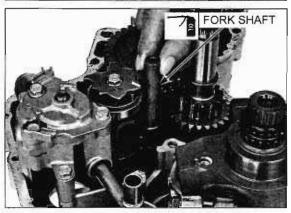

## **OUTPUT GEAR**

Description of the output gear assembly:

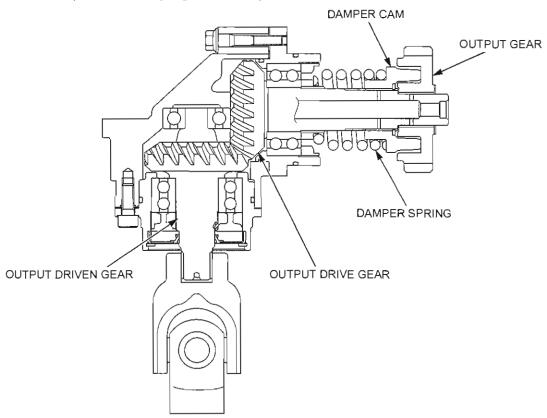


#### **REMOVAL**

Separate the crankcase (page 12-9).


Remove the following:

- Crankshaft (page 12-10)Transmission (page 12-20)

Remove the thrust washer and output gear.

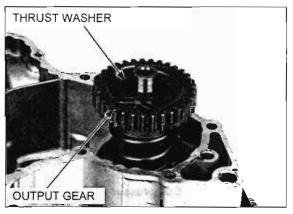

Remove the bushing from the output drive gear shaft.

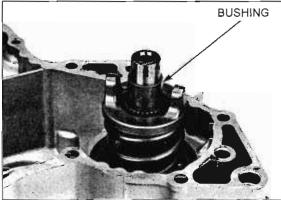

#### Except U.S.A.:


Set the damper spring compressor onto the damper cam and output drive gear shaft.

Compress the damper spring by turning the compressor bolt clockwise until the snap ring can be removed.

#### TOOLS:

Damper spring compressor Snap ring pliers

07964-ME90000 07914-5670101

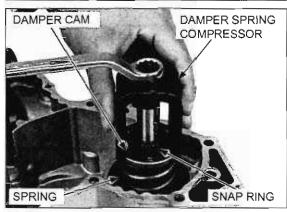

#### U.S.A. only:

Place the threaded adaptor in the end of the output drive gear shaft and tighten the adaptor.

Place the compressor seat over the threaded adaptor with the stepped side facing upward.

Install the assembly bolt through the assembly collar and attach it to the threaded adaptor.

Center the compressor seat with the damper cam then begin to tighten the 23 mm nut of the assembly bolt until the snap ring is visible so it can be removed.

#### TOOLS:

Assembly bolt Assembly collar

Compressor seat

Threaded adaptor


Snap ring pliers


07965-1660200 07965-166030A or 07965-1660302 07967-9690200 07965-KA30000 07914-5670101

(Equivalent commercially available in U.S.A.)


Remove the bolt and stay.

Remove the output gear case mounting bolts.

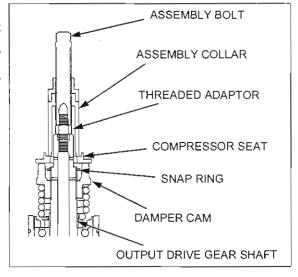

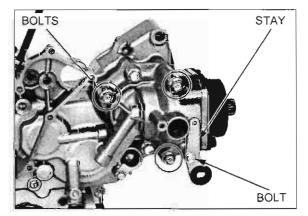


Remove the output gear case assembly and O-ring.

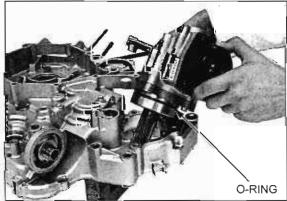

Remove the orifice and O-rings. Check the orifice for clog or damage.


Replace it if necessary.

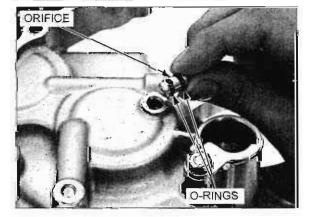

#### **INSPECTION**

#### DAMPER CAM

Check the projections of damper cam for damage or excessive wear.

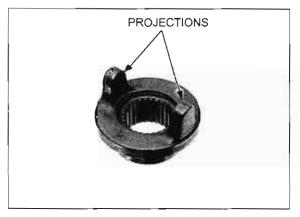


#### **OUTPUT GEAR**

Check the output gear teeth for damage or excessive wear, and the gear dog holes for damage.

Measure the output gear I.D.

SERVICE LIMIT: 24.04 mm (0.946 in)

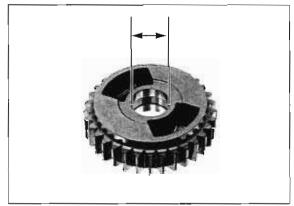

#### **BUSHING**


Check the output gear bushing for wear or damage. Measure the bushing I.D. and O.D.

SERVICE LIMITS: O.D. 23.70 mm (0.933 in) I.D. 20.06 mm (0.790 in)

•

Calculate the output gear-to-bushing clearance.

SERVICE LIMIT: 0.082 mm (0.0032 in)

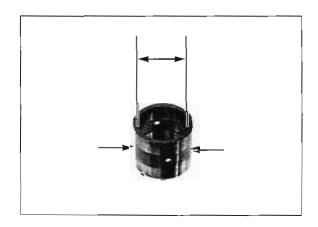


#### **OUTPUT DRIVE GEAR SHAFT**

Measure the O.D. of the output drive gear shaft at the bushing sliding area.

SERVICE LIMIT: 19.97 mm (0.786 in)

Calculate the bushing-to-shaft clearance.


SERVICE LIMIT: 0.08 mm (0.003 in)

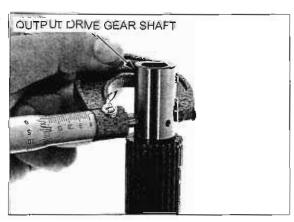

#### DAMPER SPRING

Measure the damper spring free length.

SERVICE LIMIT: 59 mm (2.3 in)

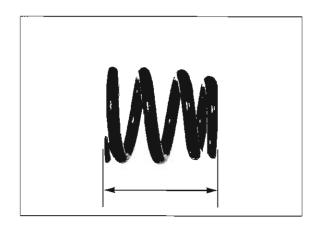


#### **OUTPUT GEAR CASE ASSEMBLY**

Turn the output drive gear shaft and check that the output drive and driven gear shafts turn smoothly and quietly without binding.

If the shafts do not turn smoothly or quietly, the gears and/or bearing may be damaged or faulty.


They must be checked after disassembly; replace faulty parts/assemblies as required.

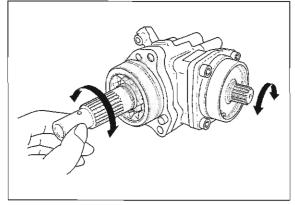

# BACKLASH INSPECTION/GEAR TOOTH CONTACT PATTERN CHECK

#### NOTE:

Perform the backlash inspection and contact pattern check whenever you replace the output driven/drive gears, bearings, bearing holder and gear case. The extension lines from the gear engagement surfaces should intersect at one point.

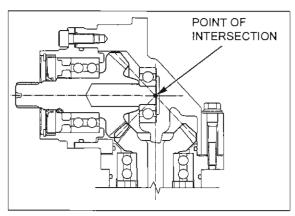

DRIVE GEAR SHAFT

DRIVEN GEAR SHAFT

#### **BACKLASH INSPECTION**

Set the output gear case in a vise with soft jaws.

Set a horizontal type dial indicator on the output driven gear, through the VS sensor hole.

Hold the output drive gear shaft with your hand and rotate the driven gear shaft until gear slack is taken up.

Turn the driven gear shaft back and forth to read backlash.

STANDARD: 0.08 - 0.23 mm (0.003 - 0.009 in) SERVICE LIMIT: 0.40 mm (0.016 in)

Remove the dial indicator. Turn the driven gear shaft 120° and measure backlash. Repeat this procedure once more.

Compare the difference of the three measurements.

## Backlash difference between measurements SERVICE LIMIT: 0.10 mm (0.004 in)

If the difference in measurements exceeds the service limit, it indicates that the bearing is not installed squarely or the case is deformed. Inspect the bearings and case.

GEAR CASE
DRIVEN GEAR

DIAL INDICATOR

If the backlash is excessive, replace the output drive gear shim with a thinner one.

If the backlash is too small, replace the output drive gear shim with a thicker one.

Backlash is changed by about  $0.06-0.07~\mathrm{mm}$  ( $0.002-0.003~\mathrm{in}$ ) when shim thickness is changed by 0.10 mm (0.004 in).

#### **OUTPUT DRIVE GEAR SHIMS:**

0.30 mm (0.012 in)

0.35 mm (0.014 in)

0.40 mm (0.016 in)

0.45 mm (0.018 in)

0.50 mm (0.020 in) - Standard

0.55 mm (0.022 in)

0.60 mm (0.024 in)


0.65 mm (0.026 in)


0.70 mm (0.028 in)

0.75 mm (0.030 in)

#### **OUTPUT DRIVE GEAR SHIM REPLACEMENT**

Remove the bolts and drive gear assembly from the gear case.

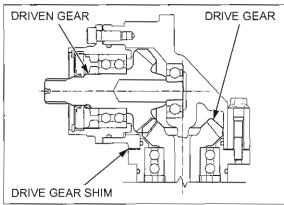

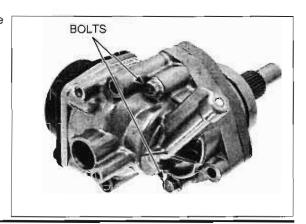

### CRANKSHAFT/TRANSMISSION

Remove the dowel pin, shim and O-ring from the bearing holder.

Select the replacement shim (page 12-33).


Coat a new O-ring with engine oil and install it into the bearing holder groove.

Install the dowel pin and shim.

Install the drive gear assembly into the gear case and tighten the bolts (page 12-44).


Recheck the backlash (page 12-32).

After backlash adjustment has been made, check the gear tooth contact pattern as described below.

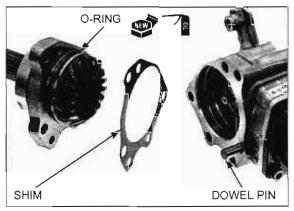

#### GEAR TOOTH CONTACT PATTERN CHECK

#### Description of the tooth:

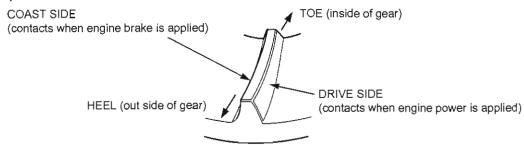

Remove the drive gear assembly from the gear case (page 12-33).

Apply a thin coat of Prussian Blue to the output driven gear teeth.


Reinstall the drive gear with the shim.


Rotate the drive gear shaft several times in the normal direction of rotation.

Remove the drive gear assembly and check the gear tooth contact pattern.


Contact is normal if Prussian Blue is transferred to the approximate center of each tooth and slightly to the toe.

If the pattern is not correct, remove and replace the output driven gear shim.

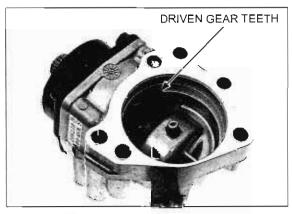

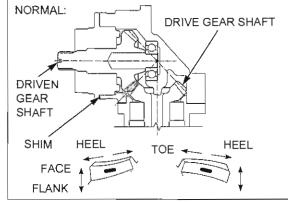

Replace the shim with a thinner one if the contact pattern is too high, toward the face.

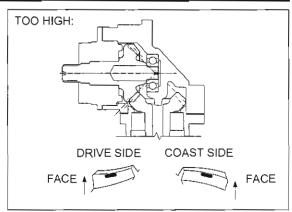

Replace the shim with a thicker one if the contact pattern is too low, toward the flank.

The pattern will shift about 1.5-2.0 mm (0.06-0.08 in) when the shim thickness is changed by 0.10 mm (0.04 in).

### **OUTPUT DRIVEN GEAR SHIMS:**

0.20 mm (0.008 in)

0.25 mm (0.010 in)

0.30 mm (0.012 in)

0.35 mm (0.014 in)

0.40 mm (0.016 in) - Standard

0.45 mm (0.018 in)

0.50 mm (0.020 in)


0.55 mm (0.022 in)


0.60 mm (0.024 in)

#### OUTPUT DRIVEN GEAR SHIM REPLACEMENT

Hold the output gear case in a vise with soft jaws.

Remove the bolts and output driven gear assembly.

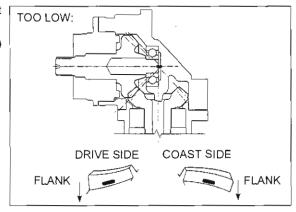

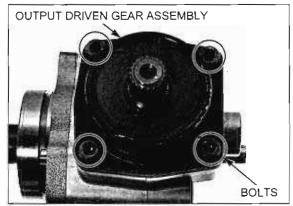

Remove the shim and O-ring from the bearing holder.


Select the replacement shim (page 12-35).

Coat a new O-ring with engine oil and install it into the bearing holder groove.

Install the shim.


Install the driven gear assembly to the gear case and tighten the bolts (page 12-41).

Recheck the contact pattern (page 12-34).

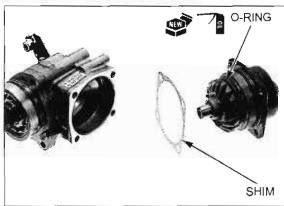

#### **OUTPUT DRIVE GEAR DISASSEMBLY**

Hold the output gear case in a vise with soft jaws. Unstake the bearing inner/outer race lock nuts.

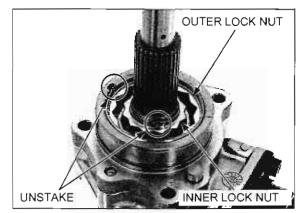


Remove the bearing inner race lock nut using the special tools.

#### TOOLS:

 Shaft holder A
 07PAB-0010100

 Holder handle
 07PAB-0010400


 Lock nut wrench, 36 x 47.8 mm
 07916-MB00002

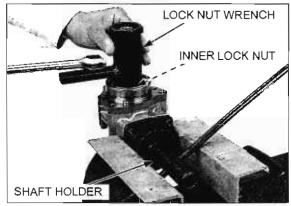


Remove the bearing outer race lock nut using a special tool.

#### TOOL:


Lock nut wrench, 36 x 47.8 mm 07916-MB00002

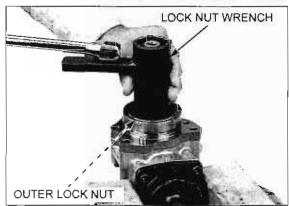


Remove the two bolts and drive gear assembly from the gear case.

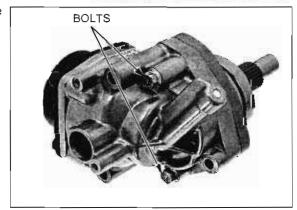

Remove the dowel pin, shim and O-ring from the bearing holder.

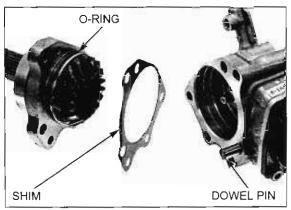

Press the drive gear out of the bearing using a hydraulic press.

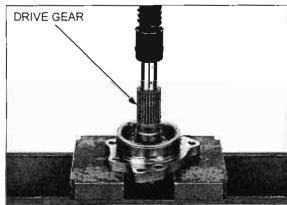


Press the drive gear bearing out of the bearing holder using the special tools and a hydraulic press.

#### TOOLS:

 Driver
 07749-0010000


 Attachment, 52 x 55 mm
 07746-0010400

 Pilot, 30 mm
 07746-0040700

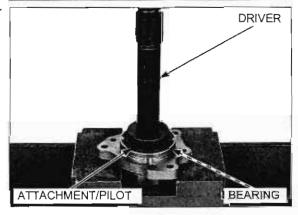


# OUTPUT DRIVEN GEAR DISASSEMBLY

Hold the output gear case in a vise with soft jaws. Remove the stopper ring and oil seal.

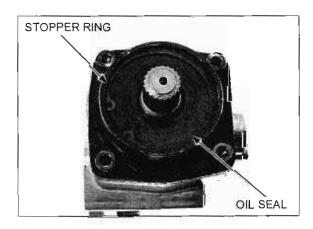

Unstake the bearing inner and outer race lock nuts.

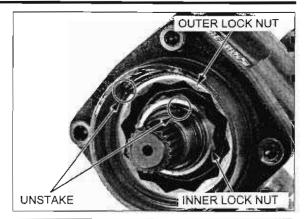


Hold the driven gear shaft and remove the bearing inner race lock nut using the special tools.

TOOLS:

 Shaft holder A
 07PAB-0010100

 Lock nut wrench, 36 x 47.8 mm
 07916-MB00002


 Differential inspection tool
 07KMK-HC50101

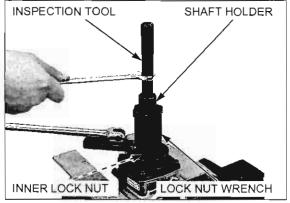


Remove the bearing outer race lock nut using a special tool.

TOOL:


Lock nut wrench, 36 x 47.8 mm 07916-MB00002

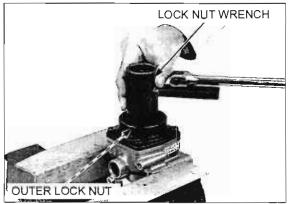


Remove the bolts and driven gear assembly from the gear case.

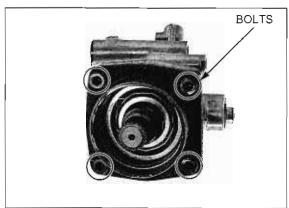

Remove the shim and O-ring from the bearing holder.

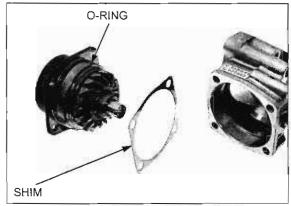


Press the driven gear out of the bearing using a hydraulic press.

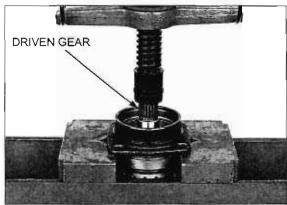

Press the driven gear bearing out of the bearing holder using the special tools and a hydraulic press.

#### TOOLS:


Driver 07749-0010000 Attachment, 52 x 55 mm 07746-0010400 Pilot, 30 mm 07746-0040700

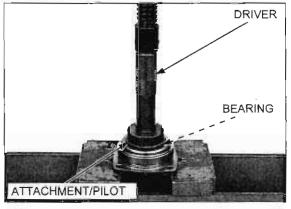


Remove the driven gear case bearing using the special tools.

#### TOOLS:


Bearing remover set, 17 mm Remover handle Remover weight 07936-3710300 07936-3710100 07741-0010201 or 07936-371020A or 07936-3710200 (U.S.A. only)

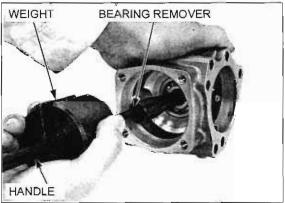

Blow oil passage in the output gear case with compressed air.

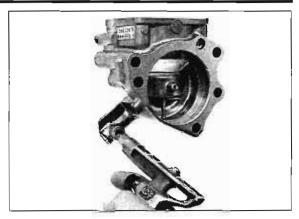


#### **OUTPUT DRIVEN GEAR ASSEMBLY**

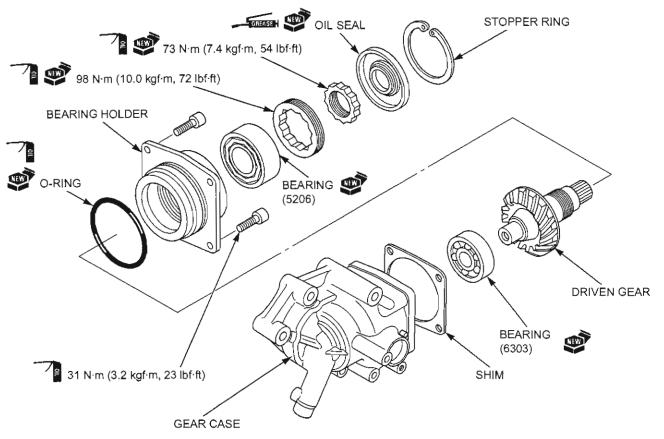

Drive a new bearing into the gear case with the marked side facing up until it is fully seated.

TOOLS:

Driver 07749-0010000 Attachment, 42 x 47 mm 07746-0010300 Pilot, 17 mm 07746-0040400

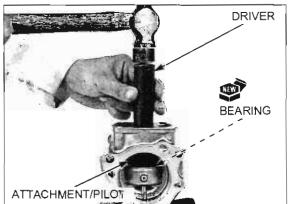


#### CRANKSHAFT/TRANSMISSION

Press a new bearing into the bearing holder with the marked side facing up until it is fully seated and make sure it rotates freely after installation.

Oil seal driver

07965-KE80200

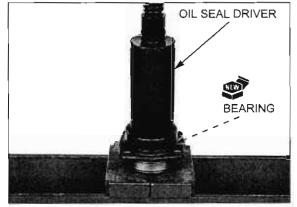


If the output driven gear requires replacement, the driven and drive gear must be replaced as a set. Support the bearing inner race and press the output driven gear into the bearing holder using the special

TOOLS:

Driver, 40 mm I.D. Attachment, 30 mm I.D. 07746-0030100


07746-0030300

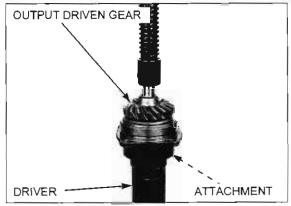

Coat a new O-ring with engine oil and install it into the bearing holder groove.

Install the shim.


When the bearing, gear, holder and/or case have been replaced, use the 0.40 mm (0.016 in) shim for initial reference.

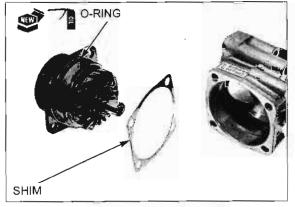

Hold the output gear case in a vise with soft jaws. Install the driven gear assembly into the gear case, aligning with the bolt holes.

Apply engine oil to the threads and seating surface of the bolts and tighten them.

TORQUE: 31 N·m (3.2 kgf·m, 23 lbf·ft)

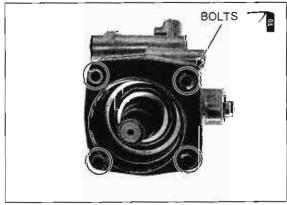

#### CRANKSHAFT/TRANSMISSION


Apply engine oil to the threads and seating surface of a new bearing outer race lock nut and tighten it to the specified torque using a special tool.

Lock nut wrench, 36 x 47.8 mm 07916-MB00002

wrench reading information, on page 12-3 "Service information".

#### Refer to torque TORQUE:

Actual: 98 N·m (10.0 kgf·m, 72 lbf·ft) Indicated:89 N·m (9.1 kgf·m, 66 lbf·ft)

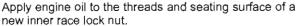

Hold the driven gear shaft and tighten it to the specified torque using the special tools.


#### TOOLS:


07PAB-0010100 Shaft holder A Lock nut wrench, 36 x 47.8 mm 07916-MB00002 Differential inspection tool 07KMK-HC50101


Refer to torque TORQUE: wrench reading information, on page 12-3 "Service information".

Actual: 73 N·m (7.4 kgf·m, 54 lbf·ft) Indicated:66 N·m (6.7 kgf·m, 49 lbf·ft)

Stake the bearing inner and outer race lock nuts.

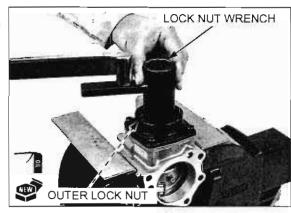

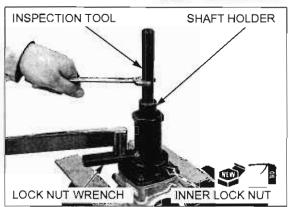

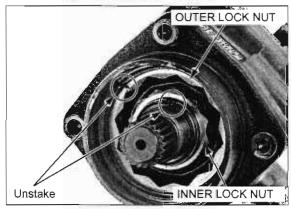


Pack grease into the seal lip cavity of a new oil seal and install it until the ring groove is visible so the stopper ring can be installed.


Install the stopper ring into the bearing holder groove securely.

#### NOTE:

- · Install the stopper ring with the chamfered edge facing the thrust load side.
- · Do not reuse worm stopper ring which could easily spin in the groove.
- · Check that the stopper ring is seated in the groove.

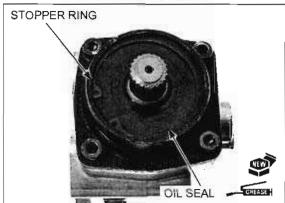

#### **OUTPUT DRIVE GEAR ASSEMBLY**

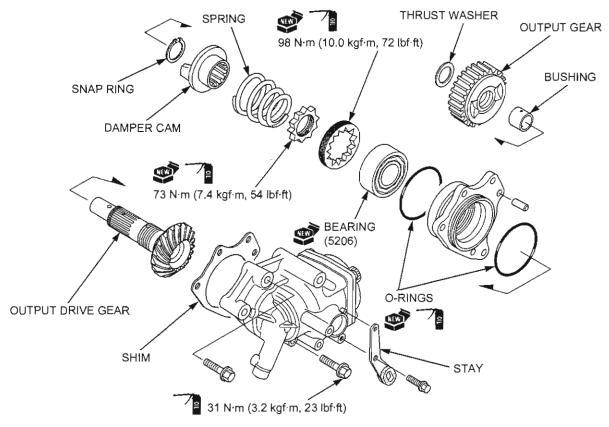


Press a new bearing into the bearing holder with the marked side facing up until it is fully seated.

#### TOOLS:

 Driver
 07749-0010000

 Attachment, 62 x 68 mm
 07746-0010500

 Pilot, 30 mm
 07746-0040700

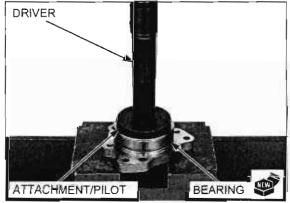

If the output drive gear requires replacement, the drive and driven gears must be replaced as a set.


Support the bearing inner race and press the output drive gear using the special tools.

#### TOOLS:

Driver, 40 mm I.D. 07746-0030100 Attachment, 30 mm i.D. 07746-0030300 Pilot, 22 mm 07746-0041000


#### NOTE:

- · Place the pilot's threaded end into the drive shaft.
- If the bearing, gear, holder and/or case is replaced, a new shim must be selected (See page 12-33, Backlash Inspection).

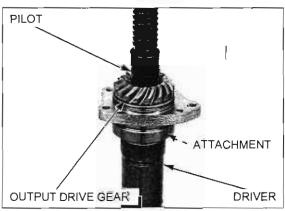


Coat a new O-ring with engine oil and install it into the bearing holder groove. Install the dowel pin and shim.

· When the bearing, gear, holder and/or case have been replaced, use the 0.50 mm (0.020 in) shim for initial reference.

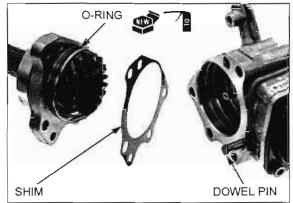

Install the drive gear assembly into the gear case. Apply engine oil to the bolt threads and seating surface. Tighten the bolts to the specified torque.

TORQUE: 31 N·m (3.2 kgf·m, 23 lbf·ft)

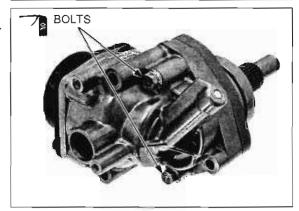

Hold the gear case in a vise with soft jaws.

Apply engine oil to the threads and seating surface of a new bearing outer race lock nut and tighten it to the specified torque using a special tool.

#### TOOL:

Lock nut wrench, 36 x 47.8 mm 07916-MB00002

Refer to torque TORQUE: wrench reading information, on page 12-3 "Service information".

Actual: 98 N·m (10.0 kgf·m, 72 lbf·ft) Indicated:89 N·m (9.1 kgf·m, 66 lbf·ft)


Apply engine oil to the threads and seating surface of a new bearing inner race lock nut and tighten it to the specified torque using the special tools.


#### TOOLS:

Lock nut wrench, 36 x 47.8 mm 07916-MB00002 Shaft holder A 07PAB-0010100 Holder handle 07PAB-0010400


#### TORQUE:

Actual: 73 N·m (7.4 kgf·m, 54 lbf·ft) Indicated:66 N·m (6.7 kgf·m, 49 lbf·ft)

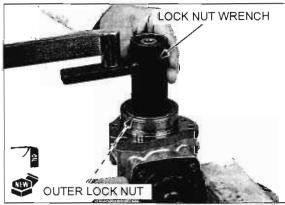

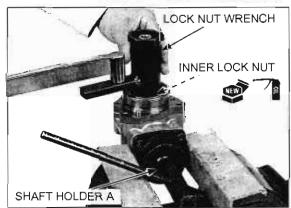


Stake the bearing inner and outer race lock nuts.

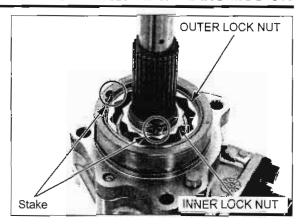

#### INSTALLATION


Coat new O-rings with engine oil and install them into the orifice grooves.

Install the orifice into the crankcase.

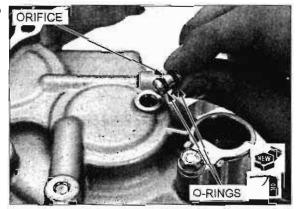

Coat a new O-ring with engine oil and install it into the groove in the gear case.


Install the output gear case assembly into the left crankcase by aligning the dowel pin with the crankcase hole.

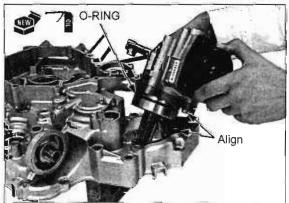

Apply liquid sealant (Three Bond 1207B or equivalent) to the output gear case mounting bolt threads. Tighten the bolts to the specified torque.


#### TORQUE: 31 N·m (3.2 kgf·m, 23 lbf·ft)

Install the stay, aligning its hole with the gear case boss and tighten the bolt securely.

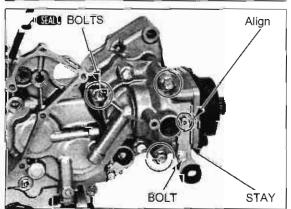

Apply 1 g of molybdenum disulfide grease to the output drive gear and damper cam splines.

Install the damper spring over the output drive gear with the tightly wound coil facing the left crankcase. Install the damper cam onto the spring.

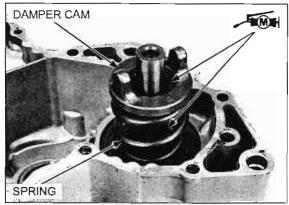

Install the snap ring on the damper cam.

#### Except U.S.A.

Set the damper spring compressor onto the damper cam and drive gear shaft.

Compress the damper spring by turning the compressor bolt clockwise until the snap ring groove is visible, then install the snap ring into the groove in the shaft.

#### TOOL:

Damper spring compressor Snap ring pliers 07964-ME90000 07914-5670101

available in U.S.A.)



Place the threaded adaptor in the end of the output drive gear shaft and tighten the adaptor.

Place the compressor seat over the threaded adaptor with the stepped side facing upward.

Install the assembly bolt through the assembly collar and attach it to the threaded adaptor.

Center the compressor seat with the damper cam, then begin to tighten the 23 mm nut of the assembly bolt until the snap ring is visible so snap ring can be installed into the groove.

Install the snap ring into the groove in the shaft.

#### TOOLS:

Assembly bolt 07965-1660200

Assembly collar 07965-166030A
or 07965-1660302

Compressor seat 07967-9690200


Threaded adaptor 07965-KA30000


Snap ring pliers 07914-5670101
(Equivalent commercially

#### NOTE:

- Install the snap ring with the chamfered edges facing the thrust load side.
- Do not reuse worn snap ring which could easily spin in the groove.
- · Check that the snap ring is seated in the groove.


Loosen and remove the special tool.

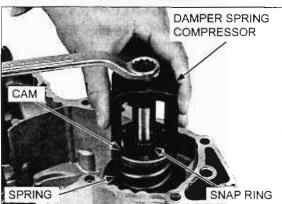

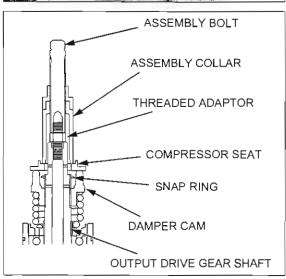

Install the bushing into the output gear shaft.


Install the output gear onto the gear shaft by aligning the damper cam projections with the output gear holes.

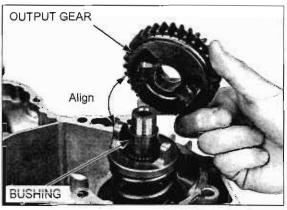

Install the thrust washer.
Install the following:

- Crankshaft (page 12-13)
- Transmission (page 12-27)
- Oil pump (page 4-11)

Assemble the crankcase (page 12-49).

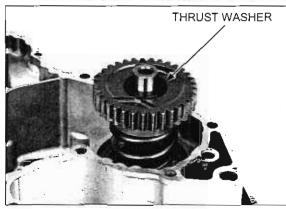

# CRANKCASE BEARING REPLACEMENT

#### INSPECTION

Remove the following:

- Crankshaft (page 12-10)
- Transmission (page 12-20)
- Output gear (page 12-29)
- Oil pump (page 4-6)

Turn the inner race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the crankcase.

Remove and discard the bearings if the races does not turn smoothly, quietly, or if they fit loosely in the crankcase.

# BEARING


#### LEFT CRANKCASE BEARINGS

Remove the mainshaft and countershaft bearings using the special tools.

#### TOOLS:

Bearing remover set, 20 mm Remover handle Remover weight

07936-3710600 07936-3710100 07741-0010201 or 07936-371020A or 07936-3710200 (U.S.A. only)

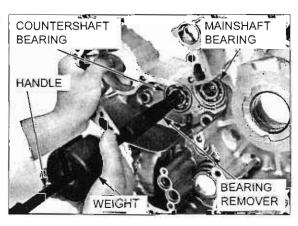


Remove the oil guide plate from the crankcase. Check the oil guide plate for clog or deformation. Install the oil guide plate into the crankcase.



Drive new bearings into the left crankcase with the marked side facing up until they are fully seated.


#### TOOLS:

Driver 07749-0010000 Attachment, 42 x 47 mm 07746-0010300

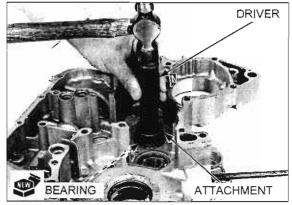

#### RIGHT CRANKCASE BEARINGS

Drive the bearings out of the right crankcase.

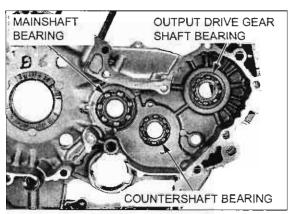

Drive new bearings into the right crankcase with the marked side facing up until they are fully seated.


#### TOOLS:

Mainshaft bearing:

Driver 07749-0010000
Attachment, 52 x 55 mm 07746-0010400
Pilot, 22 mm 07746-0041000

Countershaft/output drive gear shaft bearings:

Driver 07749-0010000 Attachment, 42 x 47 mm 07746-0010300 Pilot, 20 mm 07746-0040500

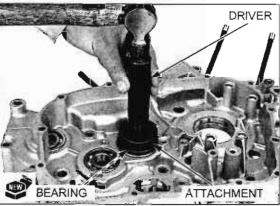


## **CRANKCASE ASSEMBLY**

Clean the left and right crankcase mating surfaces thoroughly, being careful not to damage them.

Make sure the all parts are installed in the left crankcase.


Apply liquid sealant (Three Bond 1207B or equivalent) to the right and left crankcase mating surfaces.

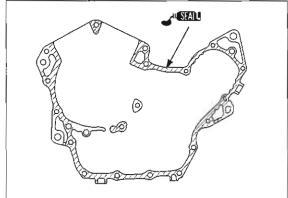


Install the two dowel pins into the left crankcase. Coat a new pipe seal with engine oil and install it to the oil pipe.

#### NOTE:

Install a new pipe seal with its tapered side facing out.

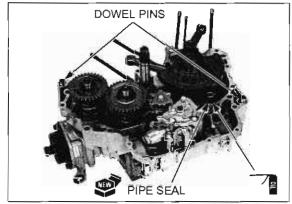

Install the right crankcase over the left crankcase.

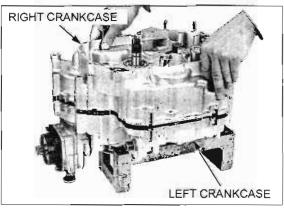


Turn the shift drum until the position as shown. Install the right crankcase bolts with the washer.

Tighten the 8 mm bolts in a crisscross pattern in several steps.

#### TORQUE:

8 mm bolt: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Tighten the 6 mm bolts securely.

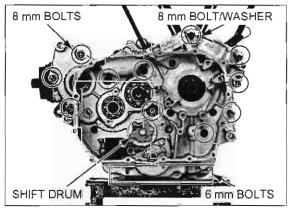


Install the left crankcase bolts and tighten the 8 mm bolts in a crisscross pattern in several steps.

#### TORQUE:


8 mm bolt: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Tighten the 6 mm bolts securely.

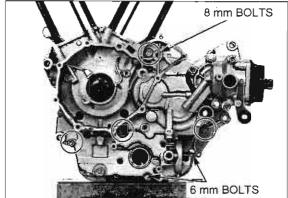

Clean and apply locking agent to the bolt threads (page 1-23).

Install the bearing setting plate and tighten the bolts.

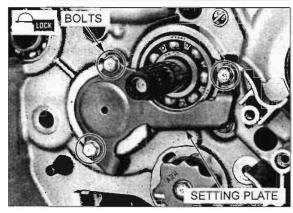


Install and tighten the bott with the washer by holding the output driven gear shaft using the special tools.

#### TOOLS:

Shaft holder A Holder handle 07PAB-0010100 07PAB-0010400

TORQUE: 49 N·m (5.0 kgf·m, 36 lbf·ft)

Recheck the all crankcase bolt torque values.

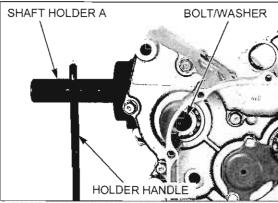


Install the cam chains.

Apply locking agent to the cam chain tensioner setting plate bolt threads (page 1-23).

Install the cam chain tensioner setting plates and tighten the bolts.

Install the remaining parts (page 12-3). Install the engine into the frame (page 7-8).

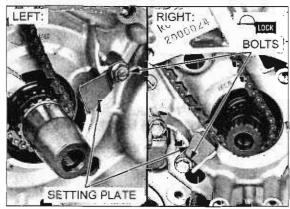


# 13. FINAL DRIVE

COMPONENT LOCATION13-2
SERVICE INFORMATION13-3
TROUBLESHOOTING13-6
FINAL DRIVE REMOVAL13-7

FINAL DRIVE DISASSEMBLY/ INSPECTION13-8
FINAL DRIVE ASSEMBLY13-17
FINAL DRIVE INSTALLATION 13-22

13

## **COMPONENT LOCATION**

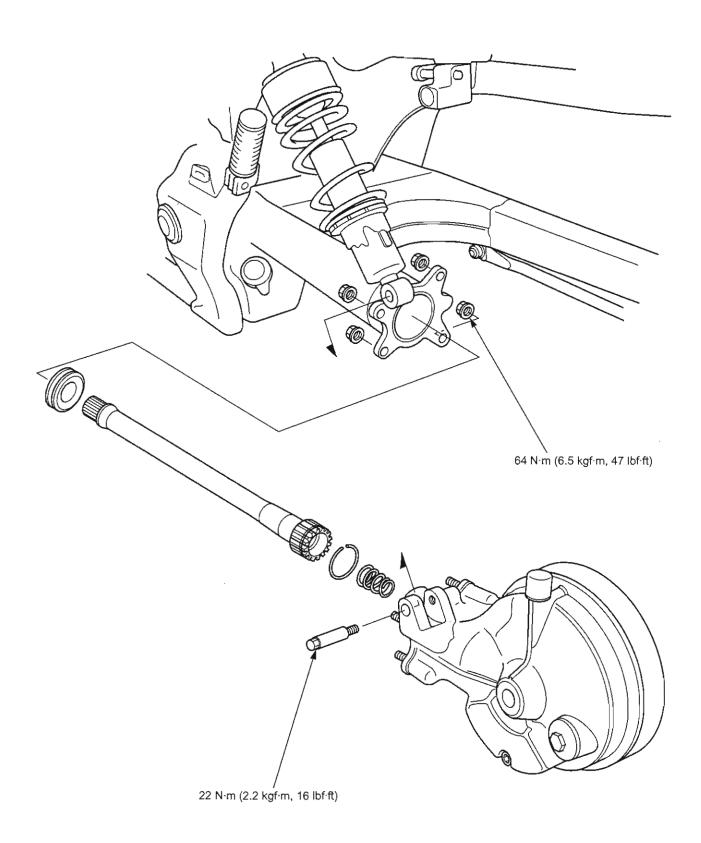

## SERVICE INFORMATION

#### **GENERAL**

- · The final drive gear assembly and final drive shaft must be removed together.
- Perform the gear contact pattern and backlash inspection whenever you replace the bearings, gears or gear case, the extension
  lines from the gear engagement surfaces should intersect at one point.
- Protect the gear case with a shop towel or soft jaws while holding it in a vise. Do not clamp the gear case too tightly or it could be damaged.
- · Replace the ring and pinion gears as a set.

#### **SPECIFICATIONS**

Unit: mm (in)

ITEM Recommended final drive oil		STANDARD	SERVICE LIMIT
		Hypoid gear oil, SAE #80	
Final drive oil capacity	At draining	160 cm <sup>3</sup> (5.4 US oz, 5.6 lmp oz)	_
	At disassembly	170 cm <sup>3</sup> (5.7 US oz, 6.0 lmp oz)	_
Final drive gear backlash		0.05 - 0.15 (0.002 - 0.006)	0.30 (0.012)
Backlash difference between measurements			0.10 (0.004)
Ring gear-to-stop pin clearance		0.30 - 0.60 (0.012 - 0.024)	_
Final drive gear assembly pre-load		0.2 – 0.4 N·m (2.0 – 4.1kgf·m, 0.1 – 0.3 lbf·ft)	_

#### **TORQUE VALUES**

Pinion retainer
Pinion retainer lock tab bolt
Pinion joint nut
Dust guard plate bolt
Final gear case cover 10 mm bolt
Final gear case cover 8 mm bolt
Final gear case assembly mounting nut
Rear shock absorber lower mounting bolt (left side)
Final gear case stud bolt


108 N·m (11.0 kgf·m, 80 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft) 108 N·m (11.0 kgf·m, 80 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft) 47 N·m (4.8 kgf·m, 35 lbf·ft) 25 N·m (2.5 kgf·m, 18 lbf·ft) 64 N·m (6.5 kgf·m, 47 lbf·ft)

22 N·m (2.2 kgf·m, 16 lbf·ft) See page 13-22 Apply locking agent to the threads

Apply locking agent to the threads

#### **FINAL DRIVE**

#### **TOOLS**

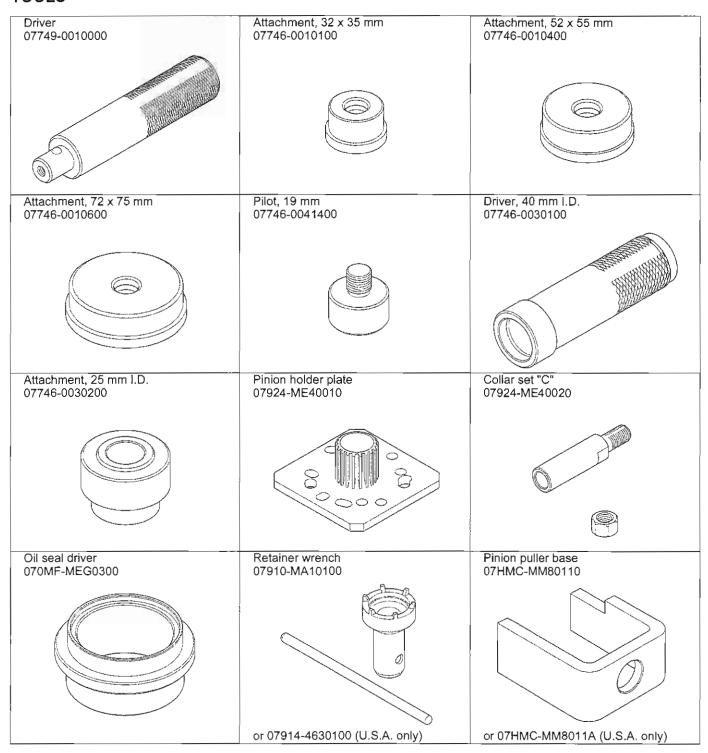

Puller shaft 07931-ME40000	Bearing remover, 35 mm 07936-3710400	Remover handle 07936-3710100
or 07931-ME4010B and 07931-HB3020A (U.S.A. only)		
Remover weight	Bearing remover, 20 mm	Bearing driver attachment
07741-0010201 07936-371020A or 07936-3710200 (U,S,A, only)	07936-3710600	07GAD-SD40101
Oil seal driver attachment 07LAD-SM40100	Oil seal driver, 55.7 x 60.3 mm 07965-KE80200	Attachment, 44 x 49.5 mm 07945-3330300
or 07LAD-SM4A100 (U.S.A. only)		

## **TROUBLESHOOTING**

#### Excessive noise

- · Worn or scored ring gear shaft and driven flange
- Scored driven flange and wheel hub (page 15-9)
- · Worn or scored drive pinion and splines
- · Worn pinion and ring gears
- · Excessive backlash between pinion and ring gears
- · Oil level too low
- Worn or damaged pinion gear and/or pinion joint splines

#### Oil leak

- · Clogged breather
- · Oil level too high
- Damaged seals
- · Loose case cover bolts

#### Excessive rear wheel backlash


- · Worn drive shaft splines
- Excessive backlash between pinion and ring gears
- · Worn driven flange and ring gear splines
- · Excessive play in final drive case bearings
- · Worn drive shaft, universal joint and/or pinion joint splines
- · Excessive play or worn universal joint bearing

# FINAL DRIVE REMOVAL


Drain the final drive oil (page 3-16). Remove the rear wheel (page 15-7).

Remove the left shock absorber lower mounting bolt.


Remove the four mounting nuts and final drive gear case assembly.

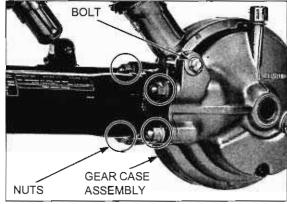

Remove the drive shaft from the final drive gear case assembly by gently turning the drive shaft and pulling it.

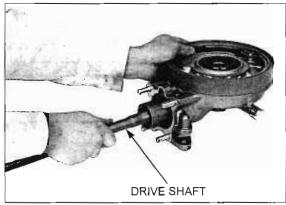


Remove the spring, oil seal and stopper ring from the drive shaft.

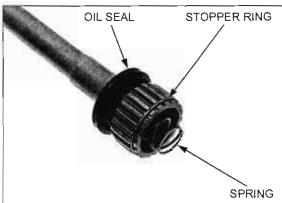

# INSPECTION


Check the splines of the drive shaft for wear or damage. If the splines of the drive shaft are damaged, check the universal joint splines also (page 15-30).

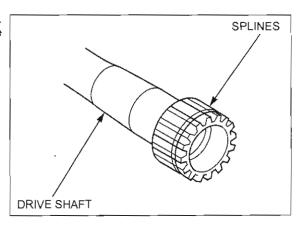

Turn the pinion joint and check that the pinion and ring gears turn smoothly and quietly without binding.

If the gears do not turn smoothly or quietly, the gears and/or bearing may be damaged or faulty.

They must be checked after disassembly; replace faulty parts/assemblies as required.

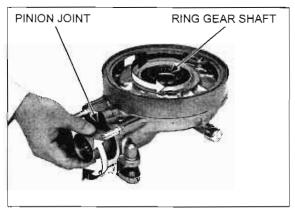


# FINAL DRIVE DISASSEMBLY/INSPECTION

#### NOTE:

Perform the backlash inspection and contact pattern check whenever you replace the pinion gear, ring gear, bearings and gear case. The extension lines from the gear engagement surfaces should intersect at one point.

Remove the final drive and drive shaft (page 13-7).

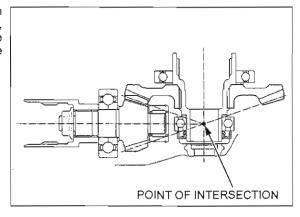

#### BACKLASH INSPECTION

Remove the oil filler cap.

Do not over-tighten the vice on the final drive case. Hold the final drive gear case assembly in a vise with soft jaws.

Install the special tools onto the gear case and into the pinion joint to hold the pinion gear.

#### TOOLS:

Pinion holder plate Collar set "C" 07924-ME40010 07924-ME40020

Set a horizontal type dial indicator on the ring gear, through the oil filler hole.


Turn the ring gear back and forth to read the backlash.


STANDARD: 0.05 – 0.15 mm (0.002 – 0.006 in) SERVICE LIMIT: 0.30 mm (0.012 in)

Remove the dial indicator and special tools. Turn the ring gear 120° and measure the backlash. Repeat this procedure once more. Compare the difference of the three measurements.

SERVICE LIMIT: 0.10 mm (0.004 in)

If the difference in measurements exceeds the service limit, it indicates that the bearing is not installed squarely, or the case is deformed. Inspect the bearings and case.

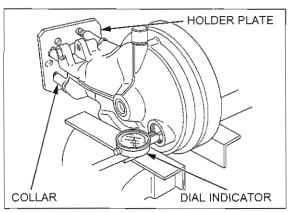

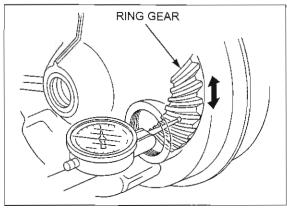

If the backlash is excessive, replace the ring gear shim with a thicker one.

If the backlash is too small, replace the ring gear shim with a thinner one.

#### RING GEAR SHIMS:

A: 1.82 mm (0.072 in) G: 2.18 mm (0.086 in)
B: 1.88 mm (0.074 in) H: 2.24 mm (0.088 in)
C: 1.94 mm (0.076 in) I: 2.30 mm (0.091 in)


D: 2.00 mm (0.079 in) - Standard


E: 2.06 mm (0.081 in) F: 2.12 mm (0.083 in)

For ring gear shim replacement (page 13-11).

## FINAL GEAR CASE SEPARATION

Remove the bolt, washer and the dust guard plate by turning it clockwise.

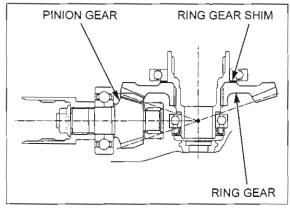

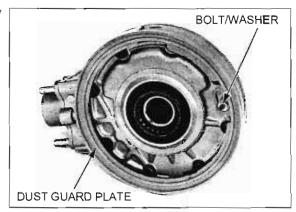


#### Remove the O-ring.

Loosen the cover bolts in a crisscross pattern in several steps and remove them.


Pry the gear case cover and remove it from the case.

Remove the wave washer.

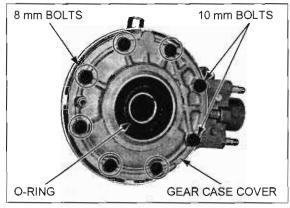

# GEAR TOOTH CONTACT PATTERN CHECK

Description of the tooth:

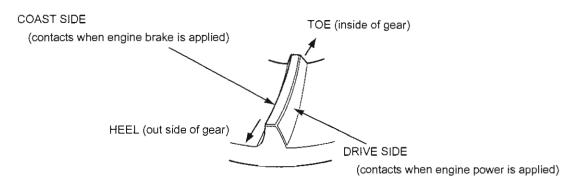


out of the case and cover.

Keep dust and dirt Clean the sealing material off the mating surfaces of the gear case and cover, being careful not to damage them.

> Apply a thin coat of Prussian Blue to the pinion gear teeth.

Install the wave washer.

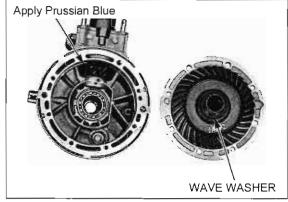


Install the case cover and tighten the bolts in a crisscross pattern in several steps until the cover evenly touches the gear case.

Tighten the two 10 mm bolts to the specified torque in several steps alternately.

TORQUE: 47 N·m (4.8 kgf·m, 35 lbf·ft)

Tighten the six 8 mm bolts to the specified torque in a cosscross pattern in several times.

TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)

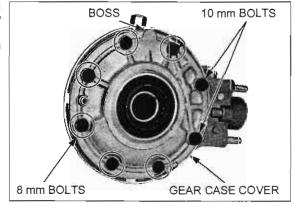


Remove the oil filler cap.

Rotate the ring gear several times in normal direction of rotation.


Check the gear tooth contact pattern through the oil filler hole.

Contact is normal if the Prussian Blue is transferred to the approximate center of each tooth and slightly towards the face.

If the patterns are not correct, remove and replace the pinion gear shim with a suitable one (page 13-14).

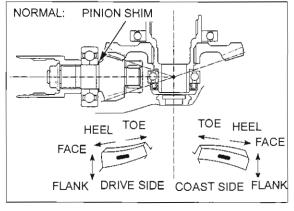

Replace the pinion gear shim with a thicker one if the contact pattern is too high, toward the face.

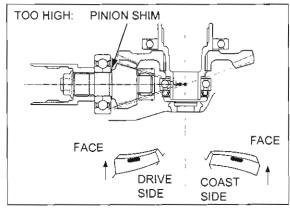

Replace the pinion gear shim with a thinner one if the contact pattern is too low, toward the flank.

The patterns will shift about 1.5 - 2.0 mm (0.06 - 0.08 in) when the thickness of the shim is changed by 0.1 mm (0.004 in).

## **PINION GEAR SHIMS:**

A: 1.82 mm (0.072 in)

B: 1.88 mm (0.074 in)

C: 1.94 mm (0.076 in)


D: 2.00 mm (0.079 in) - Standard

E: 2.06 mm (0.081 in)

F: 2.12 mm (0.083 in)

G: 2.18 mm (0.086 in)

For pinion gear shim replacement (page 13-14).

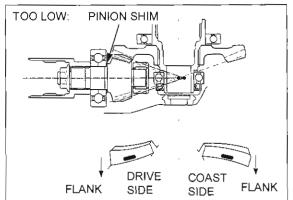

# RING GEAR REMOVAL/SHIM REPLACEMENT

Remove the final gear case cover (page 13-9).

If the ring gear stays in the cover, remove it as follows:

Press the ring gear out of the gear case cover using the special tools and hydraulic press.

#### TOOLS:

Driver

Oil seal driver attachment


07749-0010000 07LAD-SM40100 or 07LAD-SM4A100

(U.S.A. only)

ATTACHMENT

RING GEAR

Remove the oil seal.

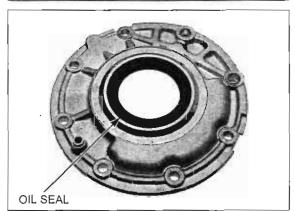


If the bearing remained in the cover, remove it as follows:

Press the oil seal and bearing out of the cover using the special tools and hydraulic press.

TOOLS:

Driver Oil seal driver Attachment, 72 x 75 mm 07749-0010000 070MF-MEG0300 07746-0010600

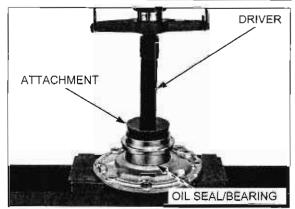


If the bearing remained on the ring gear, remove it as follows:

Remove the ring gear bearing using a commercially available bearing puller.

This bearing may not need to be replaced after removal. However, inspect the bearing for excessive play after removal.


Replace it if necessary.

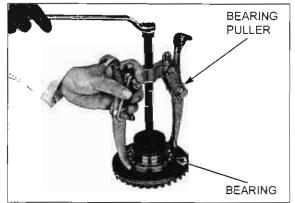

Select the replacement shim (page 13-9).

#### NOTE:


When the gear set, pinion bearing, ring gear bearing and/or gear case has been replaced, use a 2.00 mm (0.079 in) thickness shim for initial reference.

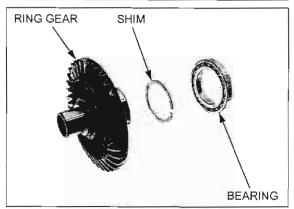

Press the ring gear bearing into the cover with the marked side facing inside until it is fully seated.

## TOOLS:

Driver Bearing driver attachment 07749-0010000 07GAD-SD40101

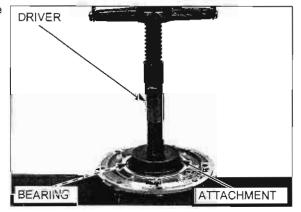

# **PINION GEAR REMOVAL**


Hold the gear case in a vise with soft jaws.

Hold the pinion joint and remove the pinion joint nut using the special tools.


TOOLS:

Pinion holder plate Collar set "C" 07924-ME40010 07924-ME40020

Remove the pinion joint.

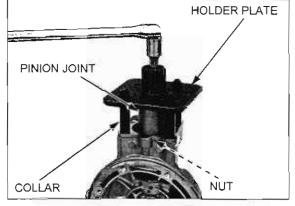

Remove the bolt and retainer lock tab.

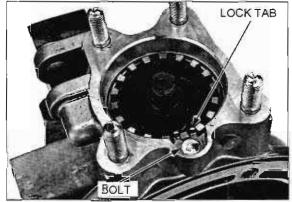


Remove the pinion retainer using the special tool.


TOOL:

Retainer wrench

07910-MA10100 or 07910-4630100 (U.S.A. only)

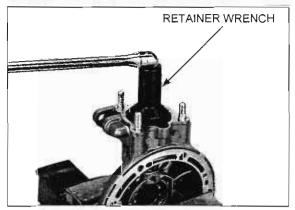

Remove the O-ring and oil seal from the pinion retainer.

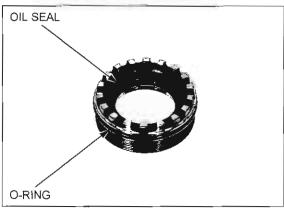

Install the special tools onto the pinion gear shaft and gear case.

TOOLS:

Pinion puller base

07HMC-MM80110 or 07HMC-MM8011A

(U.S.A. only)


Puller shaft

07931-ME40000 or 07931-ME4010B

and

07931-HB3020A (U.S.A. only)

Pull the pinion gear assembly out of the gear case. Check the pinion gear needle bearing in the gear case for wear or damage.

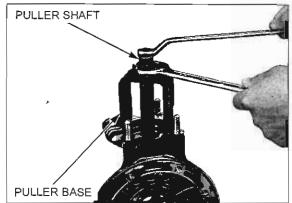

# PINION GEAR BEARING REMOVAL/ SHIM REPLACEMENT


Pull the pinion gear bearing from the shaft with a commercially available bearing puller.

This bearing may not need to be replaced after removal. However, inspect the bearing for excessive play after removal.

Remove the pinion shim.

Replace the pinion gear bearing and inner races as a set.

Replace the pinion Replace it if necessary.

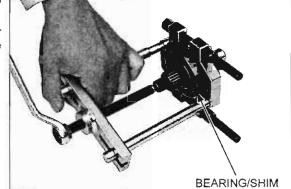


Select the replacement shim (page 13-11).

Install the shim, bearing and inner races onto the pinion gear.

#### NOTE:


When the gear set, pinion bearing, ring gear bearing and/or gear case has been replaced, use a 2.00 mm (0.079 in) thickness shim for initial reference.

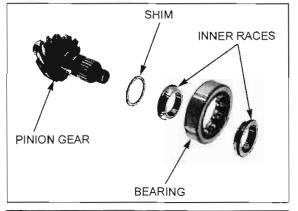

Drive the bearing with the marked side facing up.

TOOLS:

Driver, 40 mm l.D. Attachment, 25 mm l.D. 07746-0030100 07746-0030200

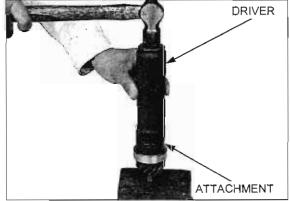

# CASE BEARING REPLACEMENT

#### RING GEAR CASE BEARING

Be sure to wear heavy gloves when handling the heated gear case. Heat the gear case to 80°C (176°F) evenly using a heat


Remove the ring gear case bearing from the gear case using the special tools.


## TOOLS:

Bearing remover, 35 mm Remover handle Remover weight 07936-3710400 07936-3710100 07741-0010201 or 07936-371020A or 07936-3710200

(U.S.A. only)


Remove the oil seal.

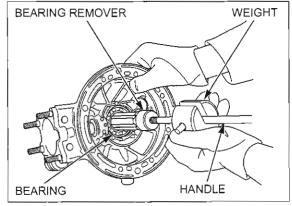

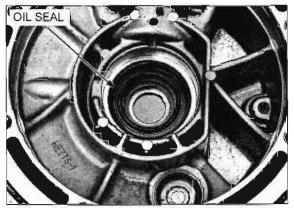

Remove the breather cap and blow compressed air through the hole.

Install the breather cap.

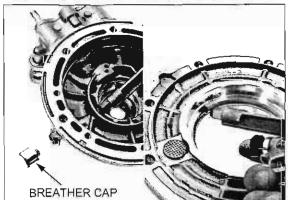


Apply grease to a new oil seal lips.

Drive the oil seal into the gear case with the marked side facing down until it is fully seated.

## TOOLS:


Driver Attachment, 44 x 49.5 mm 07749-0010000 07945-3330300

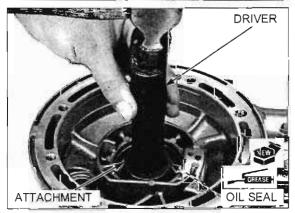

Drive a new ring gear case bearing into the gear case with the marked side facing inside until it is fully seated using the special tools.

TOOLS:

Driver 07749-0010000 Attachment, 52 x 55 mm 07746-0010400

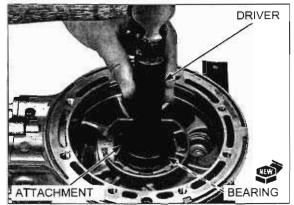


#### PINION NEEDLE BEARING

Rotate the stopper ring until the end of the stopper ring appears in the access hole.

Strike gently near the end of the ring with a punch to bend the end upward.

Grasp the end of the ring with needle-nose pliers and pull the stopper ring out through the access hole.

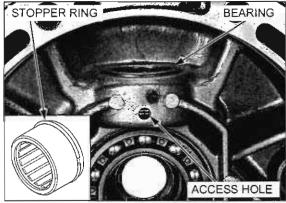


Be sure to wear heavy gloves when handling the heated gear case.


Heat the gear case to 80°C (176°F) and remove the needle bearing using the special tools.

TOOLS:

Bearing remover, 20 mm 07936-3710600
Remover handle 07936-3710100
Remover weight 07741-0010201 or 07936-371020A or 07936-3710200
(U.S.A. only)

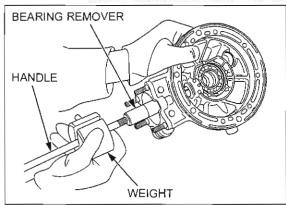

Install a new stopper ring into the groove of a new bearing securely.

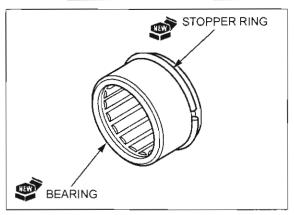

Place the needle bearing in a freezer.

Heat the gear case to 80°C (176°F).


Remove the needle bearing from the freezer and drive it into the gear case with the marked side facing up until it is fully seated.

#### TOOLS:


 Driver
 07749-0010000

 Attachment, 32 x 35 mm
 07746-0010100


 Pilot, 19 mm
 07746-0041400

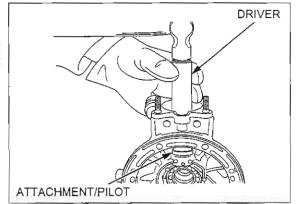

Make sure the stopper ring is securely set in the groove of the gear case.

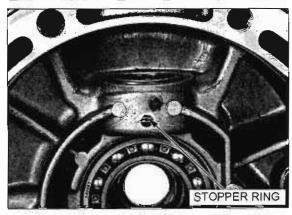


# FINAL DRIVE ASSEMBLY PINION GEAR INSTALLATION

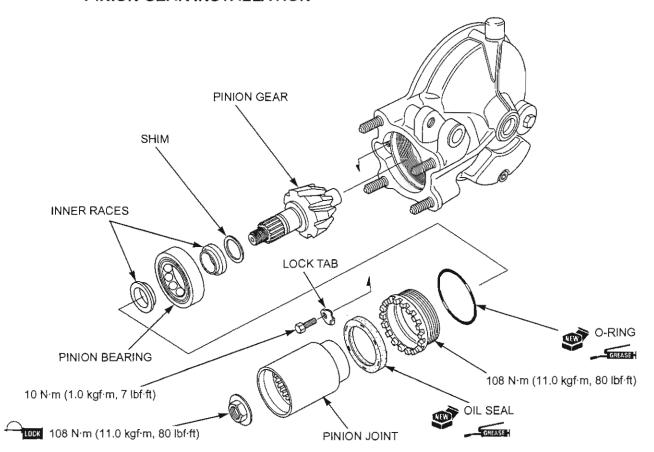

Drive the pinion gear assembly into the gear case using the special tool.

TOOL:

Oil seal driver, 55.7 x 60.3 mm 07965-KE80200

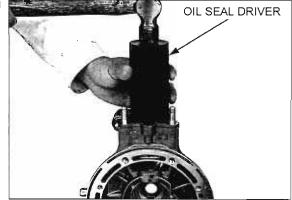


Apply grease to a new oil seal lips.

Drive the oil seal into the pinion retainer with the marked side facing up until it is fully seated.


TOOLS:

Driver 07749-0010000 Attachment, 44 x 49.5 mm 07945-3330300

Pack grease into the seal lip cavity.

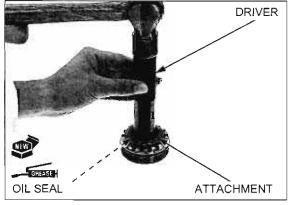

Coat a new O-ring with grease and install it into the retainer groove.

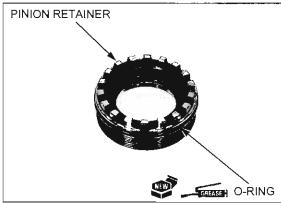


Hold the gear case in a vise with soft jaws. Install the pinion retainer into the gear case and tighten it to the specified torque using a special tool.

TOOL:

Retainer wrench

07910-MA10100 or 07910-4630100 (U.S.A. only)


TORQUE: 108 N·m (11.0 kgf·m, 80 lbf·ft)

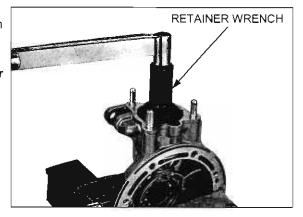

available in the two types (A and B) as shown.


The lock tab is Install the lock tab with its tab facing up, depending on the position of the pinion retainer grooves in relation to the lock tab and tighten the bolt.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

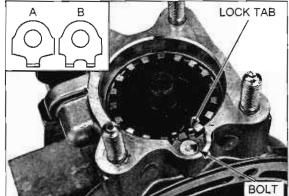

Clean the threads of the pinion gear shaft and pinion joint nut thoroughly.

Apply locking agent to the joint nut threads and install the pinion joint and joint nut onto the pinion gear shaft.

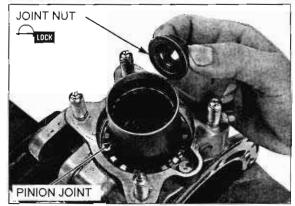


Hold the pinion joint with the special tools and tighten the pinion joint nut to the specified torque.

TOOLS:


Pinion holder plate Collar set "C"

07924-ME40010 07924-ME40020

TORQUE: 108 N·m (11.0 kgf·m, 80 lbf·ft)

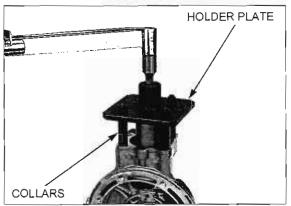

# RING GEAR INSTALLATION

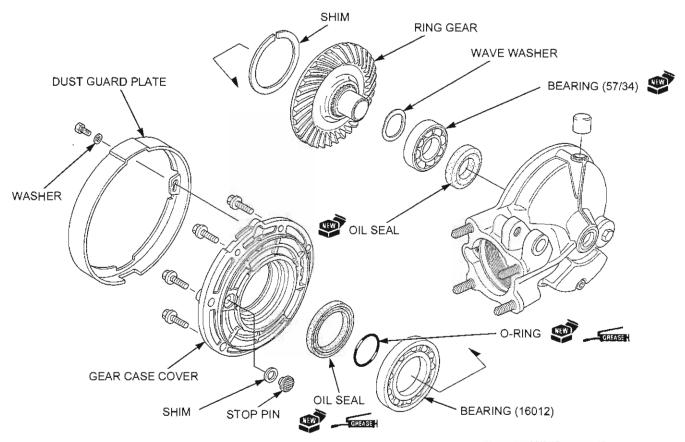


Install the shim onto the ring gear.

Support the bearing inner race with the special tool and press the ring gear into the bearing using a hydraulic press.

TOOL:

Oil seal driver


070MF-MEG0300

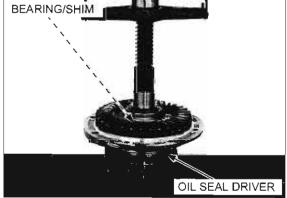

Measure the clearance between the ring gear and stop pin with a feeler gauge.

CLEARANCE: 0.30 - 0.60 mm (0.012 - 0.024 in)


Remove the ring gear if the clearance does not fall within the specification.

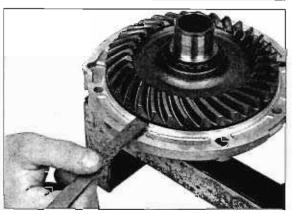

heavy gloves when handling the heated gear case.

Be sure to wear Heat the gear case cover to approximately 80°C (176°F). Heat the case cover evenly and slowly to prevent warpage.


When the gear case cover is heated to the proper temperature, remove the stop pin by tapping the cover.

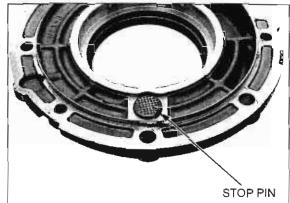

Select a stop pin shim to obtain the correct clearance.

SHIM THICKNESS: A: 0.10 mm (0.004 in) B: 0.15 mm (0.006 in)

Install the shim and drive the stop pin into the gear case cover.

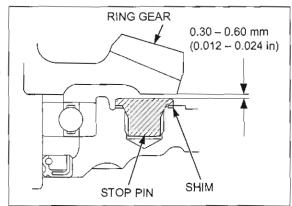


Apply grease to a new oil seal lips.

Install the oil seal until it is flush with the cover surface using the special tools.

TOOLS:

Driver Oil seal driver Attachment, 72 x 75 mm 07749-0010000 070MF-MEG0300

07746-0010600

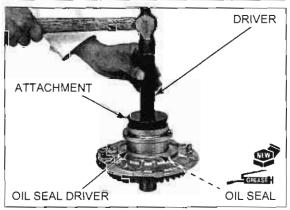

# FINAL GEAR CASE ASSEMBLY

When the gear set, bearing and/or gear case has been replaced, check the following:

- Tooth contact pattern (page 13-10)
- Gear case backlash (page 13-8)


out of the case and

Keep dust and dirt Clean the mating surface of the gear case and cover, being careful not to damage them.

> Apply liquid sealant (Three Bond 1207B or equivalent) to the mating surface of the gear case.

Install the wave washer.

Install the case cover onto the gear case.

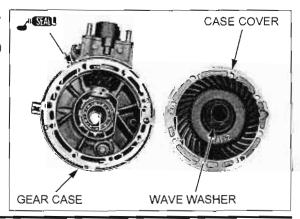

Apply locking agent to the threads of the case cover 10 mm bolts.

Install the bolts, and tighten them in a crisscross pattern in several steps until the cover evenly touches the gear case.

Tighten the two 10 mm bolts to the specified torque in several steps alternately.

#### TORQUE: 47 N·m (4.8 kgf·m, 35 lbf·ft)

Tighten the six 8 mm bolts to the specified torque in a crisscross pattern in several steps.

## TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)

Apply grease to a new O-ring.

Install the O-ring in the ring gear groove.


Check that the gear assembly turns smoothly without binding.

Measure the final gear assembly pre-load.

#### STANDARD:

0.2 - 0.4 N·m (2.0 - 4.1 kgf·m, 1.2 - 3.6 lbf·in)


If the preload reading does not fall within the specification, check the bearings for proper installation.

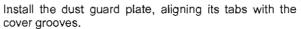



Turn the dust guard plate counterclockwise and install the bolt and washer.

Tighten the bolt to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

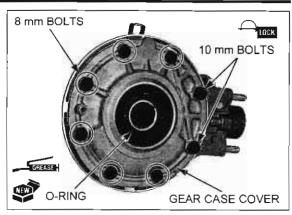

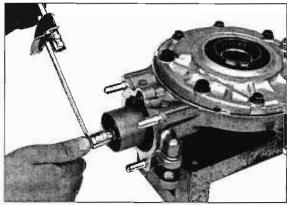


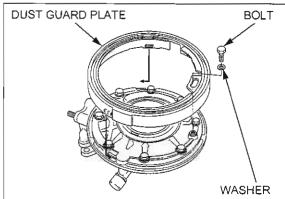

# FINAL DRIVE INSTALLATION

Check that the gear case stud bolts are tight. If any are loose, remove them, clean their threads with contact cleaner, then install them using a locking agent.


After installation, be sure to measure the distance from the top of each stud to the gear case surface as shown.

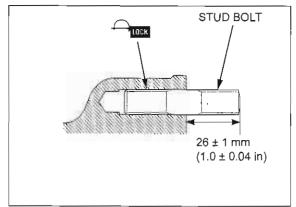

Install a new stopper ring into the drive shaft groove. Install the spring into the drive shaft.


Apply 0.5 g of molybdenum disulfide grease to a new oil seal lips and install it onto the drive shaft.

Apply 1 g of molybdenum disulfide grease to the universal joint side splines of the drive shaft.

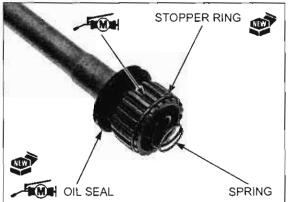

Apply 2 g or more of molybdenum disulfide grease to the pinion joint splines.

Make sure the stopper ring is seated properly by pulling on the drive shaft lightly. Be careful not to damage the drive shaft oil seal. Install the drive shaft into the pinion joint until the stopper ring seats in the pinion joint spline groove.

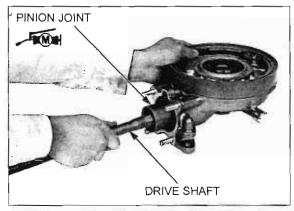

Insert the final drive assembly into the swingarm and align the drive shaft splines with the universal joint splines.

Install the gear case mounting nuts.

Tighten the gear case mounting nuts in a crisscross pattern in several steps.


#### TORQUE: 64 N·m (6.5 kgf·m, 47 lbf·ft)

Tighten the shock absorber lower mounting bolt to the specified torque.

#### TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

Install the rear wheel (page 15-16).

Fill the gear case with the recommended final drive gear oil (page 3-16).

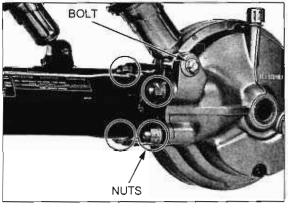


# MEMO

COMPONENT LOCATION14-2	FRONT WHEEL14-17
SERVICE INFORMATION14-5	FORK14-24
TROUBLESHOOTING14-8	STEERING STEM14-36
HANDLEBAR14-9	


14

# **COMPONENT LOCATION**


VT750C2F:

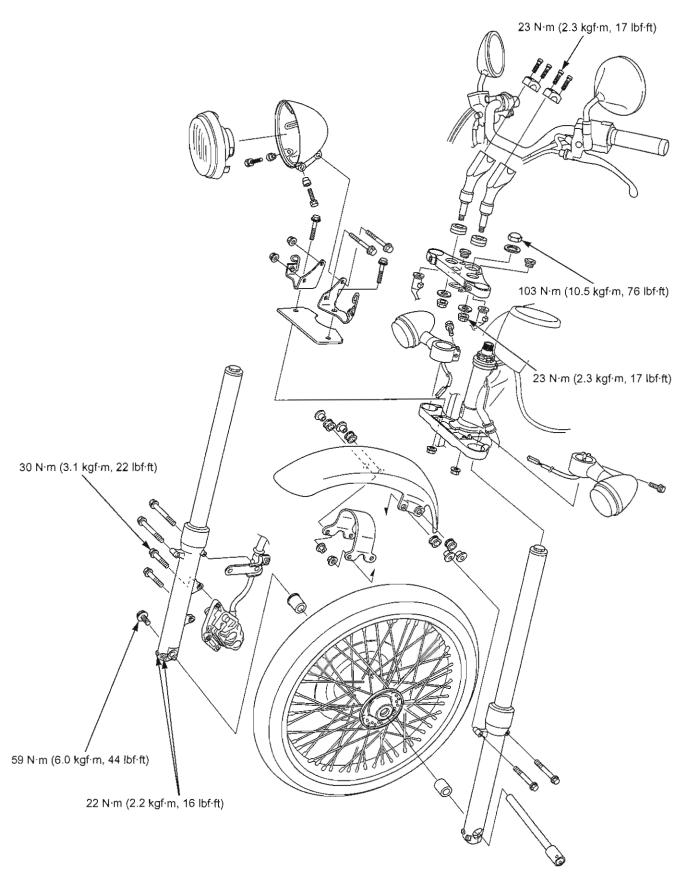

# VT750C2S:

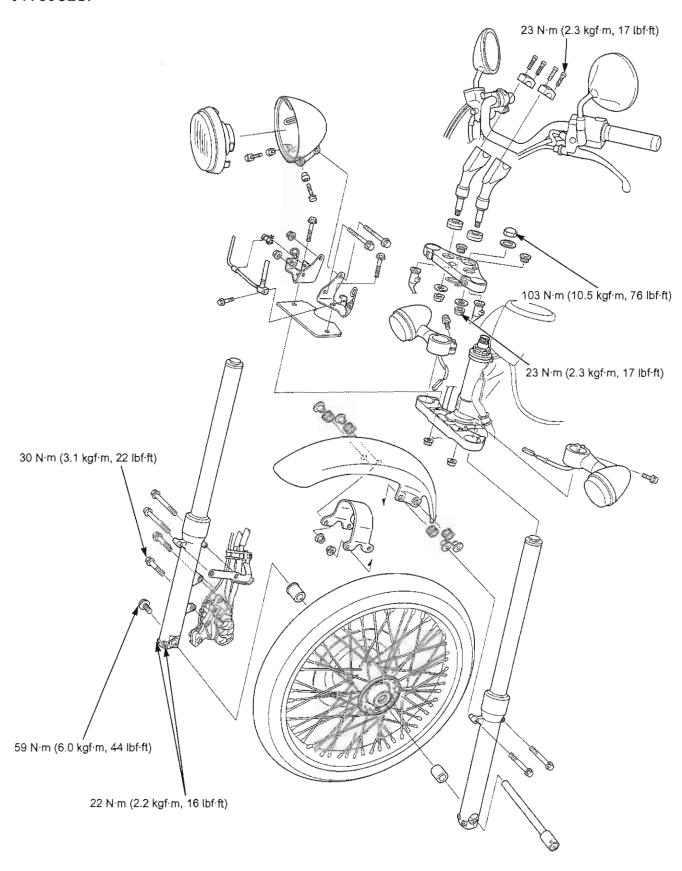

# VT750C2B:

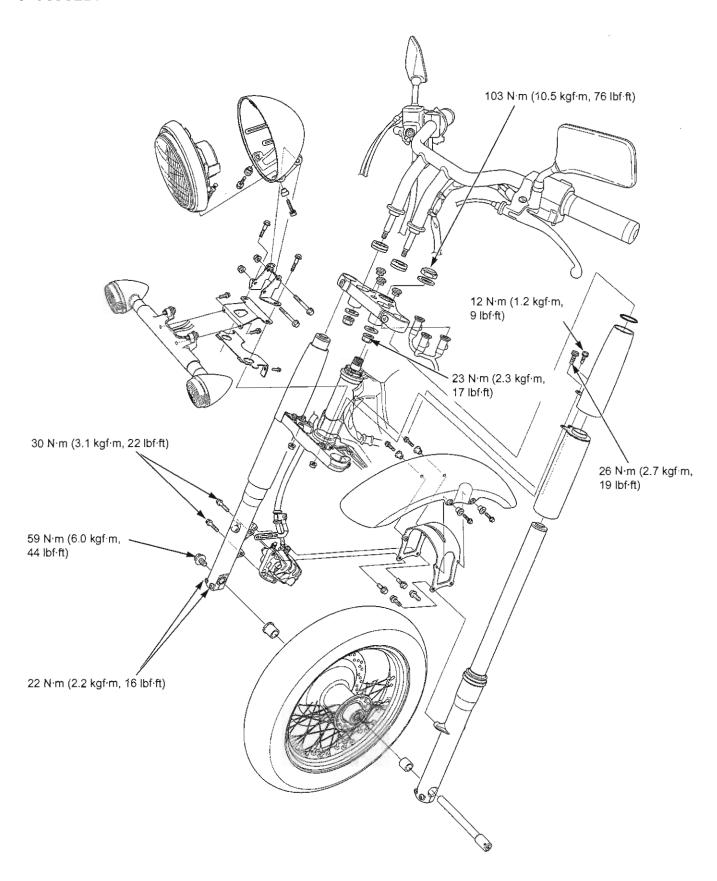

# **SERVICE INFORMATION**

# **GENERAL**

- · Riding on damaged rims impairs safe operation of the vehicle.
- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- · A hoist or equivalent is required to support the motorcycle when servicing the front wheel, fork and steering stem.
- · For hydraulic brake system service (page 16-2).

# SPECIFICATIONS (VT750C2F/C2S)

Unit: mm (in)

<u> </u>	ITEM	STANDARD	SERVICE LIMIT
Minimum tire trea	d depth	_	1.5 (0.06)
Cold tire pres-	Up to 90 kg (200 lbs) load	200 kPa (2.00 kgf/cm², 29 psi)	
sure	Up to maximum weight capacity	200 kPa (2.00 kgf/cm², 29 psi)	_
Axle runout			0.2 (0.01)
Wheel rim	Radial	_	2.0 (0.08)
runout	Axial	-	2.0 (0.08)
Wheel balance w	eight	-	60 g max.
Fork	Spring free length	371.8 (14.64)	364.4 (14.35)
	Tube runout		0.2 (0.01)
	Recommended fork fluid	Pro Honda Suspension Fluid SS-8 (10W)	-
	Fluid level	100 (3.9)	_
	Fluid capacity	478 ± 2.5 cm <sup>3</sup> (16.2 ± 0.08 US oz, 16.8 ± 0.09 lmp oz)	_
Steering head be	aring pre-load	8.5 – 12.7 N (0.9 – 1.3 kgf)	_

# SPECIFICATIONS (VT750C2B)

Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT
Minimum tire trea	ad depth		1.5 (0.06)
Cold tire pres-	Up to 90 kg (200 lbs) load	200 kPa (2.00 kgf/cm², 29 psi)	_
sure	Up to maximum weight capacity	200 kPa (2.00 kgf/cm², 29 psi)	_
Axie runout		_	0.2 (0.01)
Wheel rim	Radial	_	2.0 (0.08)
runout	Axial	_	2.0 (0.08)
Wheel balance w	eight	_	60 g max.
Tub Rec Flui	Spring free length	367.8 (14.48)	360.4 (14.19)
	Tube runout		0.2 (0.01)
	Recommended fork fluid	Pro Honda Suspension Fluid SS-8 (10W)	
	Fluid level	100 (3.9)	_
	Fluid capacity	474 ± 2.5 cm <sup>3</sup> (16.0 ± 0.08 US oz, 16.7 ± 0.09 Imp oz)	_
Steering head bearing pre-load		8.5 – 12.7 N (0.9 – 1.3 kgf)	_

# **TORQUE VALUES**

Handlebar upper holder bolt (VT750C2F/

C2S)

Handlebar lower holder nut Front master cylinder holder bolt

Front brake disc bolt

Spoke

Front axle bolt
Front axle pinch bolt
Fork center socket bolt

Fork cap

Fork top bridge pinch bolt (VT750C2F)
Fork top bridge pinch bolt (VT750C2B/C2S)

Fork bottom bridge pinch bolt Front brake caliper mounting bolt

Steering top thread

Steering top thread lock nut

Steering stem nut Clutch lever pivot bolt Clutch lever pivot nut

Front fork cover bolt, 6 mm (VT750C2B) Front fork cover bolt, 8 mm (VT750C2B) 23 N·m (2.3 kgf·m, 17 lbf-ft)

23 N·m (2.3 kgf·m, 17 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft) 42 N·m (4.3 kgf·m, 31 lbf·ft) 4.2 N·m (0.4 kgf·m, 3.1 lbf·ft)

59 N·m (6.0 kgf·m, 44 lbf·ft) 22 N·m (2.2 kgf·m, 16 lbf·ft) 29.5 N·m (3.0 kgf·m, 22 lbf·ft)

22.1 N·m (2.3 kgf·m, 16 lbf·ft) 22 N·m (2.2 kgf·m, 16 lbf·ft) 27 N·m (2.8 kgf·m, 20 lbf·ft)

49 N·m (5.0 kgf·m, 36 lbf·ft) 30 N·m (3.1 kgf·m, 22 lbf·ft)

See page 14-42 See page 14-43


103 N·m (10.5 kgf·m, 76 lbf·ft) 1 N·m (0.1 kgf·m, 0.7 lbf·ft) 6 N·m (0.6 kgf·m, 4.4 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft)


12 N·m (1.2 kgf·m, 9 lbf·ft) 26 N·m (2.7 kgf·m, 19 lbf·ft) ALOC bolt; replace with a new one

Apply locking agent to the threads

ALOC bolt; replace with a new one

## **TOOLS**

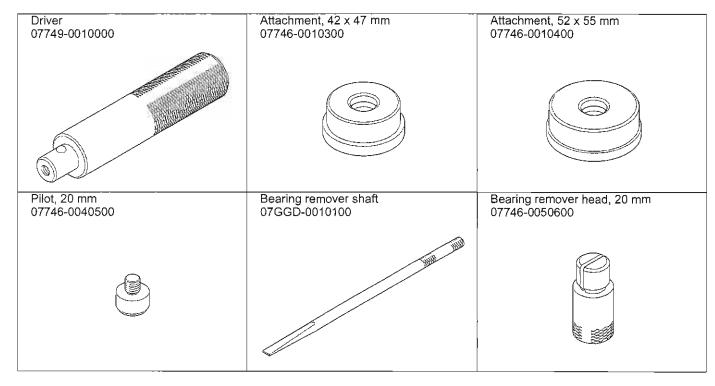

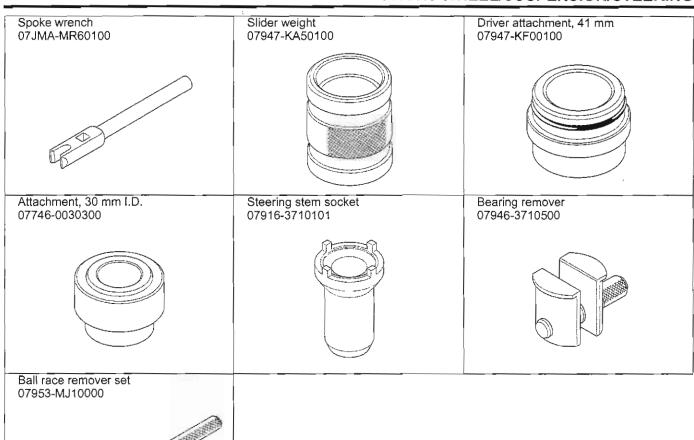

07953-MJ1000B and a commercially

available drift

# **TROUBLESHOOTING**

#### Hard steering

- · Steering top thread too tight
- · Worn or damaged steering head bearings
- · Bent steering stem
- · Insufficient tire pressure
- · Faulty tire

#### Steers to one side or does not track straight

- · Bent fork leg
- · Damaged steering head bearings
- · Loose steering top thread
- · Bent frame
- · Worn wheel bearings
- · Bent front axle
- · Worn swingarm pivot components (page 15-28)

#### Front wheel wobbles

- · Bent rim
- Worn wheel bearings
- · Faulty tire
- · Unbalanced tire and wheel
- · Axle fastener not tightened properly

#### Wheel hard to turn

- · Faulty wheel bearings
- · Bent axle
- Brake drag (page 16-7)

#### Soft suspension

- · Weak fork spring
- · Low fluid level in fork
- · Insufficient fluid weight (low viscosity)
- · Low tire pressure

# Stiff suspension

- · High tire pressure
- Bent fork tube
- Fork slider binds
- · High fluid level in fork leg
- · Incorrect fluid weight (high viscosity)
- · Clogged fork fluid passage

#### Front suspension noise

- · Loose fork fasteners
- · Insufficient fluid weight (low viscosity)


· Worn slider or fork tube bushing

# **HANDLEBAR**

# **REMOVAL**


VT750C2F/C2S; Remove the rearview mirrors.

Release the handlebar switch wires from the wire clips.

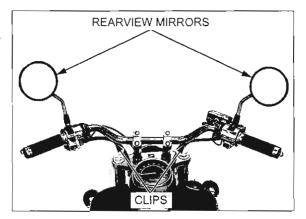


VT750C2B; Remove the rearview mirrors.

Release the handlebar switch wires from the wire clips.

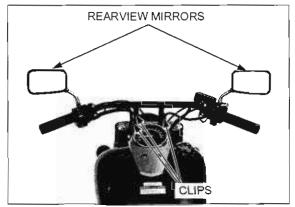


Remove the pivot bolt, nut and clutch lever from the clutch lever bracket.


Disconnect the clutch switch connectors from the clutch switch.

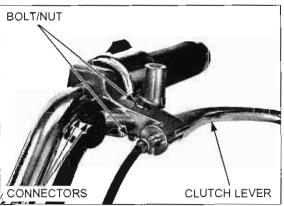


Remove the bolts, holder and clutch lever bracket.

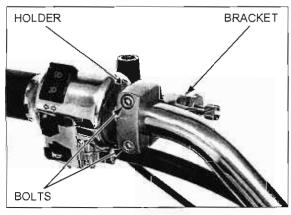

Remove the clutch switch from the clutch lever bracket.

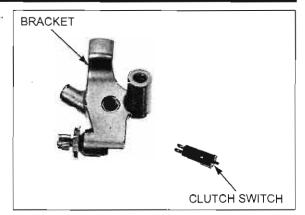


Remove the screws and left handlebar switch housing. Remove the left handlebar grip and housing cap.

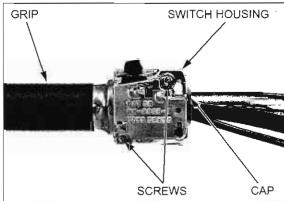


Disconnect the front brake light switch wire connectors from the switch.

Keep the reservoir upright to prevent air from entering the hydraulic system.

Remove the bolts, holder and master cylinder assembly.

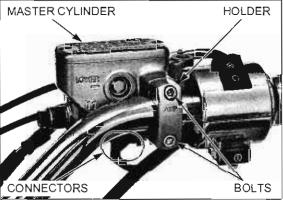


Remove the right handlebar switch/throttle housing screws.

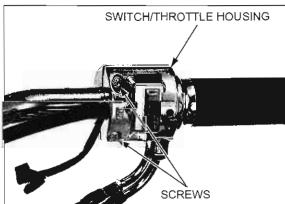


Disconnect the throttle cables from the throttle pipe and remove the throttle grip from the right handlebar.


Remove the right handlebar switch/throttle housing from the handlebar.

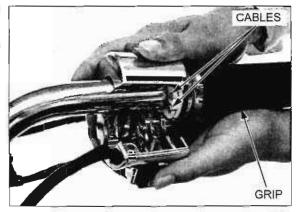


VT750C2F/C2S; Loosen the handlebar lower holder nuts.

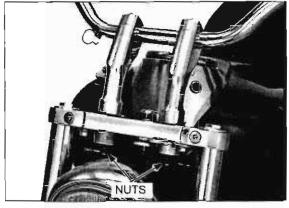


VT750C2F/C2S; Remove the boit caps.

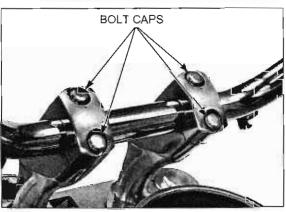


 $\textit{VT750C2F/C2S}; \quad \text{Remove the bolts, upper holders and handlebar}.$ 

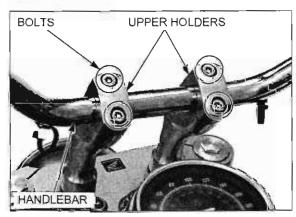

VT750C2F/C2S; Remove the lower holder nuts, washers, setting rubbers and handlebar lower holders.

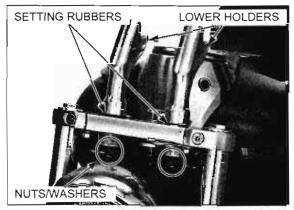

VT750C2B; Remove the lower holder nuts, washers, setting rubbers and handlebar.

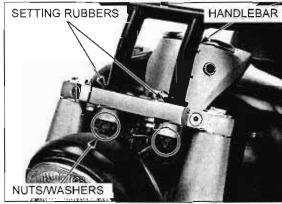


# **INSTALLATION**


#### NOTE:

· Route the cable, hose and wires properly (page 1-26).


Check the bushings for abnormal wear or damage.

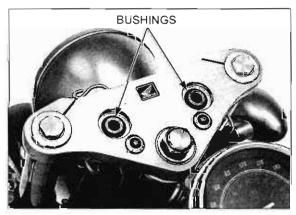

Install the setting rubbers onto the top bridge with its small I.D. side facing up as shown.

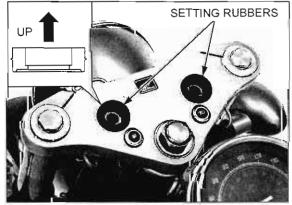

VT750C2F/C2S; Install the handlebar lower holders, washers and nuts onto the top bridge.

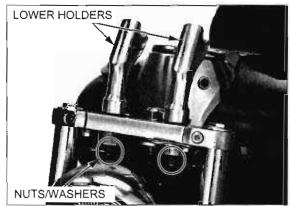


VT750C2F/C2S; Place the handlebar on the lower holders aligning the punch mark on the handlebar with the top surface of the lower holders.

> Install the upper holders with its punch mark facing forward.

> Tighten the front side bolts first, then the rear side bolts to the specified torque.


TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

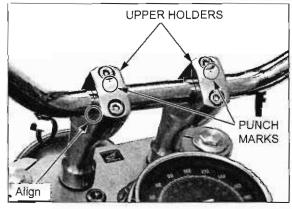

VT750C2F/C2S;

Tighten the handlebar lower holder nuts to the specified


TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

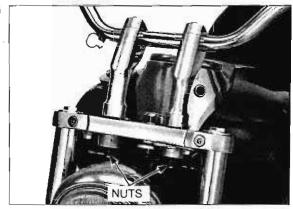

VT750C2B; Install the handlebar, washers and nuts onto the top bridge.


> Tighten the handlebar lower holder nuts to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

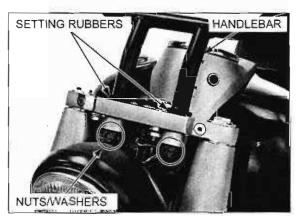

#### INNER WEIGHT REMOVAL/INSTALLATION


Remove the grip or throttle pipe from the handlebar. Straighten the weight retainer tabs by the screwdriver or punch.

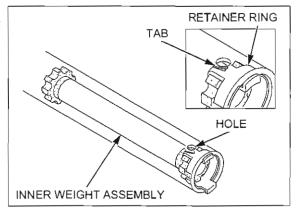


Remove the inner weight assembly from the handlebar. Discard the retainer ring.

Check the rubber cushions for wear or damage.


Install a new retainer ring onto the inner weight.

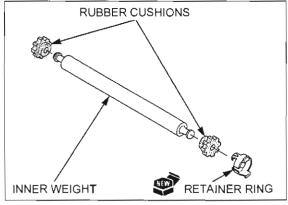

Insert the inner weight assembly into the handlebar by hooking the retainer ring tabs with the holes in the handlebar.

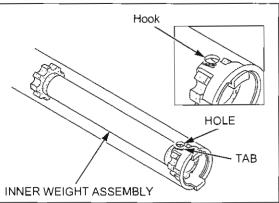


Install the housing cap onto the left side of the handlebar.

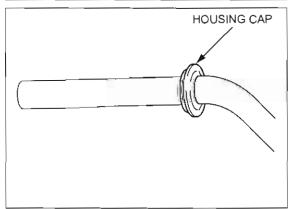

Clean the inside surface of the both handfebar grip and the outside surface of the handlebar and throttle pipe. Apply Honda Bond A or equivalent to the inside surface of the handlebar grip and to the outside surface of the handlebar and throttle pipe. Wait 3 – 5 minutes and install the grip.


Allow the adhesive to dry for 1 hour before using.

Rotate the grip for even application of the adhesive.

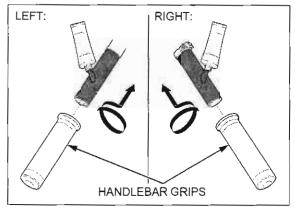


Apply grease  $0.2-0.3\ g$  to the throttle pipe flange groove and sliding surface.

Install the throttle pipe onto the handlebar.

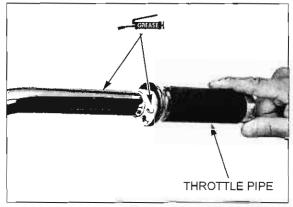


Connect the throttle cables to the throttle pipe flange.

Install the right handlebar switch/throttle housing with the two screws, aligning the locating pin with the hole in the handlebar.

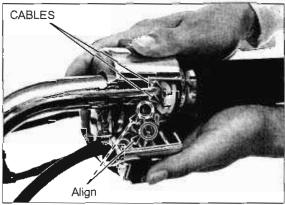


Tighten the front long screw first, then tighten the rear short screw.

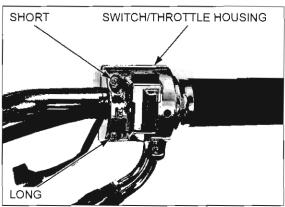

Install the holder Install the master cylinder, holder and bolts. with its "UP" mark Align the edge of the master cylinder with the punch facing up. mark on the handlebar and tighten the upper bolt first, then tighten the lower bolt.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the front brake light switch connectors.

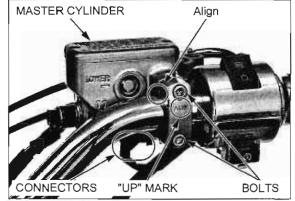


flange into the housing groove.


Set the housing cap Install the left handlebar switch housing and screws, aligning the locating pin with the hole in the handlebar. Tighten the front short screw first, then tighten the rear long screw.

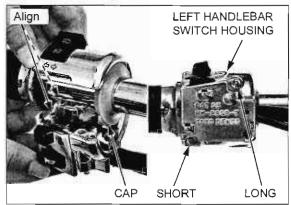

Install the clutch switch into the bracket, aligning the tab of the clutch switch and groove of the bracket.

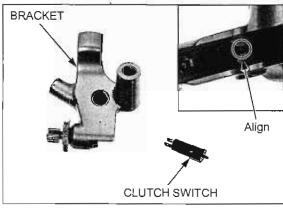

install the holder Install the clutch lever bracket, holder and bolts. with its "UP" mark Align the edge of the bracket with the punch mark on facing up. the handlebar and tighten the upper bolt first, then tighten the lower bolt securely.

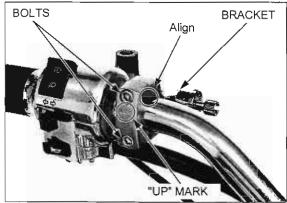

Connect the clutch switch connectors. Connect the clutch cable on the clutch lever.


Apply grease to the clutch lever pivot bolt sliding surface.

Install the clutch lever onto the bracket and tighten the clutch lever pivot bolt to the specified torque.

TORQUE: 1 N·m (0.1 kgf·m, 8.4 lbf·in)

Tighten the nut to the specified torque while holding the pivot bolt.


TORQUE: 6 N·m (0.6 kgf·m, 4.4 lbf·ft)

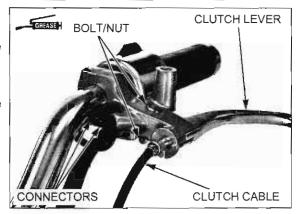

VT750C2F/C2S; Install the wire clips onto the tabs on the handlebar. Secure the switch wires with the wire clips.

Install the rearview mirrors.


Adjust the clutch lever freeplay (page 3-23).

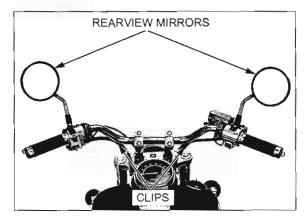

VT750C2B; Install the wire clips onto the tabs on the handlebar. Secure the switch wires with the wire clips.

Install the rearview mirrors.


Adjust the clutch lever freeplay (page 3-23).

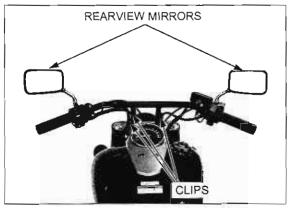

# **FRONT WHEEL**

## **REMOVAL**


Remove the axle bolt and loosen the right axle pinch bolts.

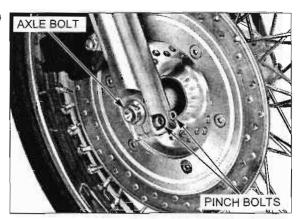


Loosen the left axle pinch bolts.

Support the motorcycle securely and raise the front wheel off the ground.

Do not operate the brake lever/pedal (VT750C2S) after removing the wheel. To do so will cause difficulty in fitting the brake disc between the brake pads. Remove the axle and front wheel.

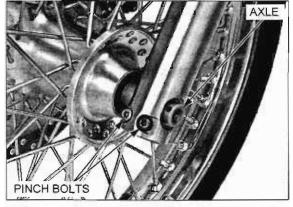

Remove the side collars.

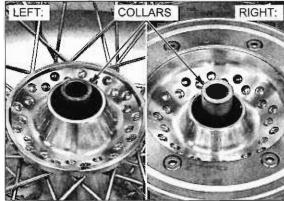

# **INSPECTION**


## **AXLE**

Set the axle in V-blocks.

Turn the axle and measure the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

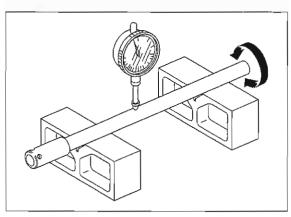

## WHEEL RIM


Check the rim runout by placing the wheel in a trueing stand.

Spin the wheel slowly and read the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

SERVICE LIMITS:

Radial: 2.0 mm (0.08 in) Axial: 2.0 mm (0.08 in)

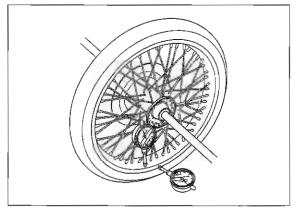


#### WHEEL BEARING

Turn the inner race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the

Replace the wheel bearings in pairs.

Remove and discard the bearings if the races do not turn smoothly and quietly, or if they fit loosely in the hub

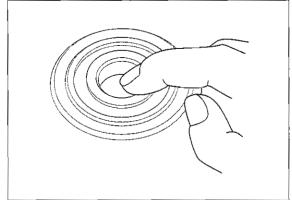


## DISASSEMBLY

VT750C2F/C2B;

Remove the dust seals from both sides of the hub.

bolts.


Do not reuse the Remove the bolts in a crisscross pattern in several steps and remove the brake disc.

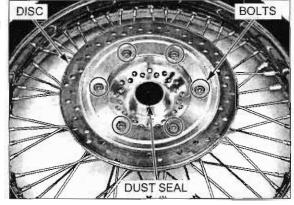

Do not reuse the bolts.

VT750C2S; Remove the bolts in a crisscross pattern in several steps and remove the pulser ring and brake disc.

Remove the dust seals from both sides of the hub.

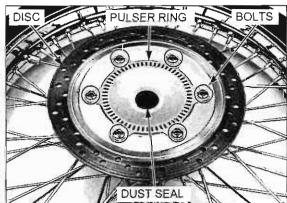


bearing.

Replace the wheel Install the remover head into the bearing. bearings in pairs. From the opposite side of the wheel, install the remover Do not reuse old shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.


TOOLS:

07GGD-0010100 Bearing remover shaft Bearing remover head, 20 mm 07746-0050600

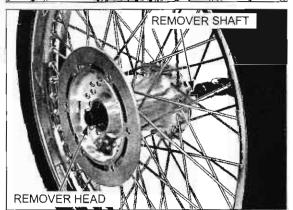


## **ASSEMBLY**

VT750C2F/C2B:

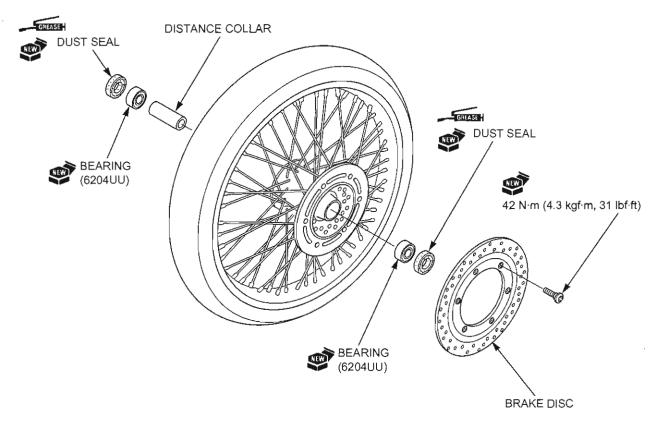



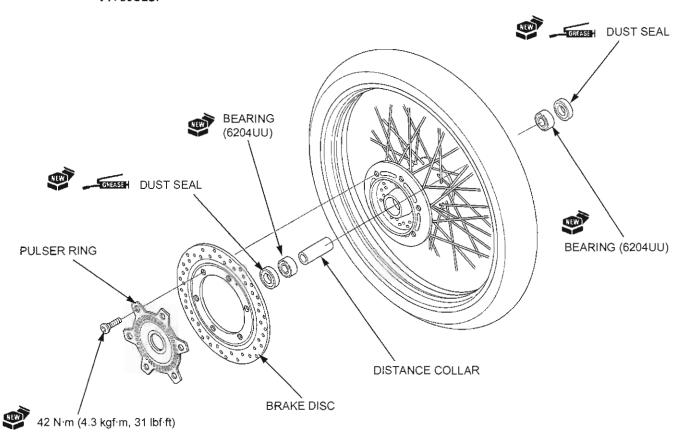

Drive in a new left bearing squarely with the marked side facing up until it is fully seated.

Install the distance collar.


Drive in a new right bearing squarely with the marked side facing up until it is seated on the collar.

TOOLS:

Driver Attachment, 42 x 47 mm Pilot, 20 mm

07749-0010000 07746-0010300

07746-0040500

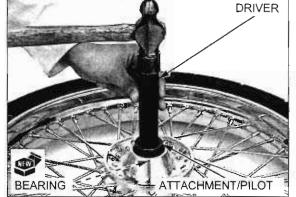

#### WHEEL CENTER ADJUSTMENT

Measure the distance B (rim width) and calculate distance A as follows:

#### A = 79 mm (3.11 in) - B/2


Adjust the nm position and distance A by tightening the spokes to the specified torque in several progressive steps.

TOOL:

Spoke wrench

07JMA-MR60100

TORQUE: 4.2 N·m (0.4 kgf·m, 3.1 lbf·ft)

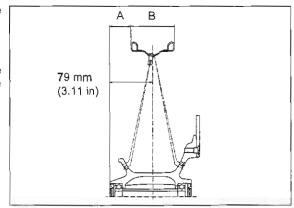


VT750C2F/C2B; Install the brake disc with the marked side facing out.

stopping power will be reduced.

Do not get grease Install new bolts and tighten them in a crisscross on the brake disc or pattern in several steps.

TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)

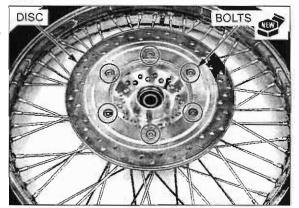


VT750C2S; Apply grease to new dust seal lips and install the dust seals until they are flush with the wheel hub.

> Install the brake disc with the marked side facing out. Install the pulser ring.

on the brake disc or stopping power will be reduced.

Do not get grease Install new bolts and tighten them in a crisscross pattern in several steps.


TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)

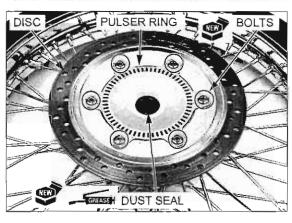

#### WHEEL BALANCE

#### NOTE:


- Carefully check balance before installing the wheel.
- Mount the tire with the arrow mark facing in the direction of rotation.
- The wheel balance must be checked when the tire is remounted.
- For optimum balance, the tire balance mark (light mass point: a paint dot on the side wall) must be located next to the valve stem. Remount the tire if necessary.

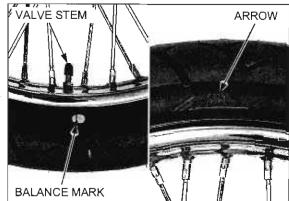

Mount the wheel, tire and brake disc assembly on an inspection stand.

Spin the wheel, allow it to stop, and mark the lowest (heaviest) part of the wheel with chalk.


Do this two or three times to verify the heaviest area. If the wheel is balanced, it will not stop consistently in the same position.

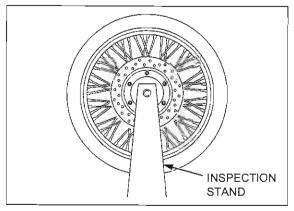


To balance the wheel, install a new balance weight on the lightest side of the spoke, on the side opposite the chalk marks. Add just enough weight so the wheel will no longer stop in the same position when it is spun. Do not add more than 60 g to the front wheel.

#### NOTE

Never reuse the balance weight if once removed from the spoke.

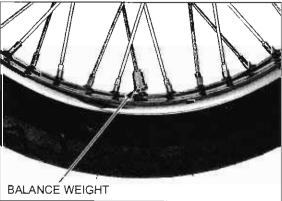


Apply grease to new dust seal lips and install the dust seals until they are flush with the wheel hub.

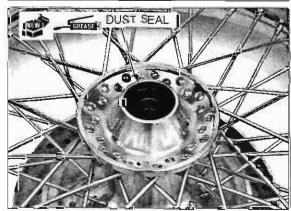

#### **INSTALLATION**

Install the right side (disc side) collar with it flange side facing out.

Install the side collars.

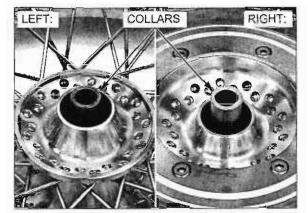

damage the pads.


Be careful not to Place the front wheel between the fork legs so the brake disc is positioned between the brake pads.

> Apply thin coat of grease to the axle sliding surface. Insert the axle from the left side. Tighten the axle bolt to the specified torque.


TORQUE: 59 N·m (6.0 kgf·m, 44 lbf·ft)

Tighten the right axle pinch bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

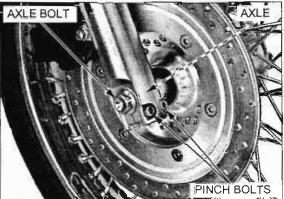


With the front brake applied, pump the forks up and down several times to seat the axle and check brake operation.

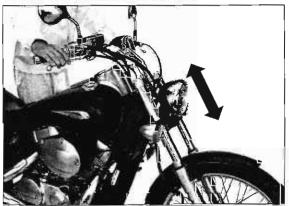

Tighten the left axle pinch bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

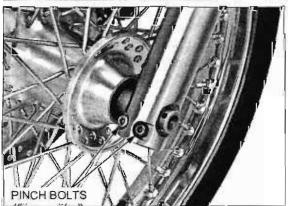

# **FORK**

# REMOVAL (VT750C2F/C2S)

Remove the following:


- Front wheel (page 14-17)
- Front fender (page 2-6)

Right fork only: Do not reuse caliper mounting bolts.

Remove the bolts and brake caliper assembly.

#### NOTE:


Support the brake caliper so it does not hang from the brake hose.

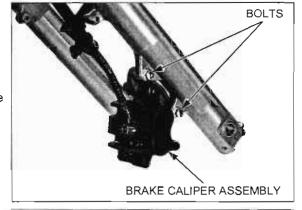


Loosen the top bridge pinch bolt. When the fork will be disassembled. Loosen the fork cap but do not remove yet.



Remove the bolt, collar and turn signal light.

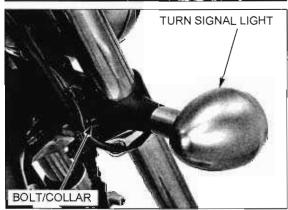

Loosen the bottom bridge pinch bolt, then remove the fork leg.

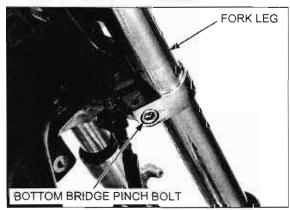

# REMOVAL (VT750C2B)


VT750C2F; Remove the following:

- Front wheel (page 14-17)
- Front fender (page 2-6)
- Handlebar (page 14-9)

Right fork only: Do not reuse caliper mounting bolts.

Remove the bolts and brake caliper assembly.


Support the brake caliper so it does not hang from the brake hose.

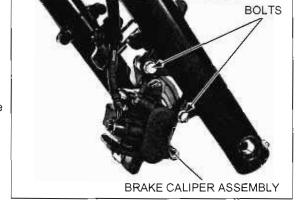


Loosen the top bridge pinch bolt.

When the fork will be disassembled. Loosen the fork cap but do not remove yet.

Remove the steering stem nut, washer and top bridge.

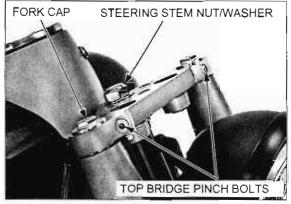


Remove the bolts and upper fork cover, collar and turn signal light. Remove the O-ring.

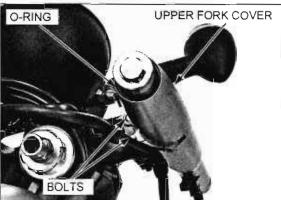

Loosen the bottom bridge pinch bolt, then remove the fork leg.

Remove the lower fork cover.

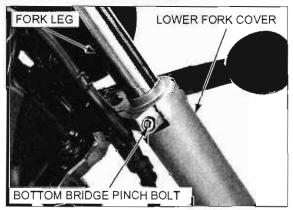

## **DISASSEMBLY**

Remove the dust seal.

Do not scratch the fork tube sliding surface.

Do not scratch the Remove the oil seal stopper ring.


The fork cap is under spring pressure; use care when loosening it.


The fork cap is Remove the fork cap and O-ring.





Remove the fork spring from the fork tube.

Pour out the fork fluid by pumping the fork tube several times.

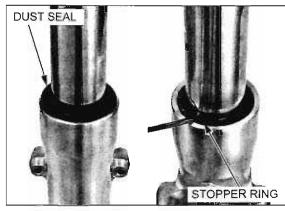

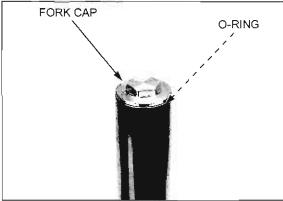

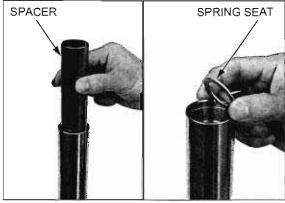

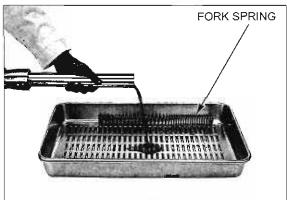

Do not over-tighten the vise on the fork slider.

Hold the fork slider in a vise with soft jaws.

If the fork piston turns with the fork center socket bolt, temporarily install the fork spring,


spring seat, spacer and fork cap.

If the fork piston Remove the fork center socket bolt and sealing washer.




Do not remove the fork piston ring, unless it is necessary to replace with a new one.


Do not remove the Remove the fork piston and rebound spring.

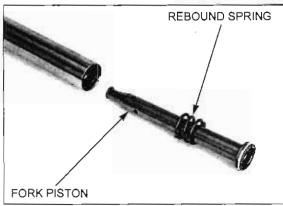

Using quick successive motions, pull the fork tube out of the fork slider.

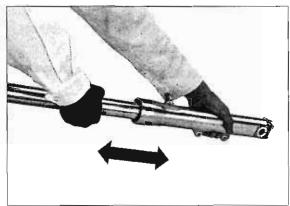

Remove the spring and oil lock piece from the fork slider.

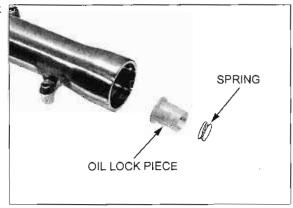


especially the hand. sliding surface. To prevent loss of

necessary.

Do not damage the Carefully remove the slider bushing by prying the slot slider bushing, with a screwdriver until the bushing can be pulled off by

Remove the following:


- tension, do not Guide bushing
- open the bushing Back-up ring
  - more than Oil seal

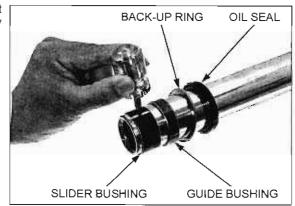

#### INSPECTION

#### OIL LOCK PIECE/SPRING

Check the oil lock piece for wear or damage. Check the spring for fatigue or damage.

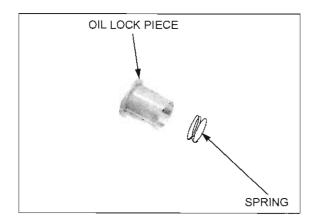


#### **FORK SPRING**

Measure the fork spring free length.

#### SERVICE LIMITS:


VT750C2F/C2S: 364.4 mm (14.35 in) VT750C2B: 360.4 mm (14.19 in)

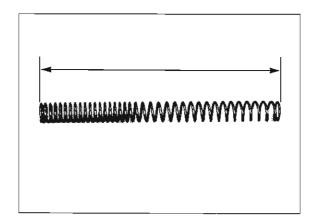

#### FORK TUBE/SLIDER/PISTON

VT750C2F/C2S; Check the fork tube and fork slider for score marks, and excessive or abnormal wear.

Replace any damaged component if necessary.

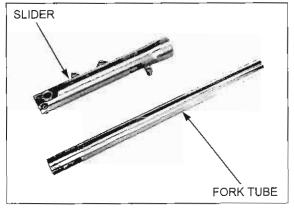


VT750C2B;

Check the fork tube and fork slider for score marks, and excessive or abnormal wear.

Check the wear ring for wear or damage.


Replace any damaged component if necessary.

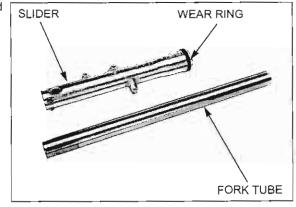

Check the fork piston for score marks, and excessive or abnormal wear.

Check the fork piston ring for wear or damage. Check the rebound spring for fatigue or damage.


Replace any damaged component if necessary.

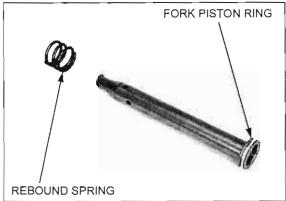

Set the fork tube in V-blocks and measure the fork tube runout with a dial indicator.


Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

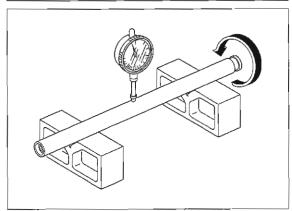

Visually inspect the slider and guide bushings. Replace the bushings if there is excessive scoring or scratching, or if the teflon is worn so the copper surface appears on more than 3/4 of the entire surface.


Check the back-up ring; replace it if there is any distortion at the points shown.

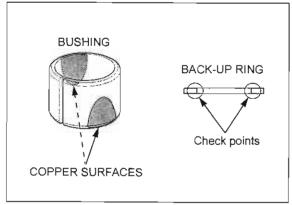


#### **ASSEMBLY**

Before assembly, wash all parts with a high flash point or non-flammable solvent and wipe them off completely.

#### VT750C2F/C2S:

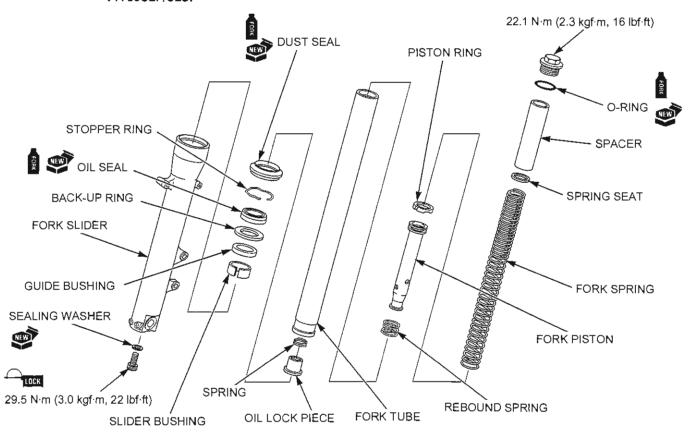

#### VT750C2B:

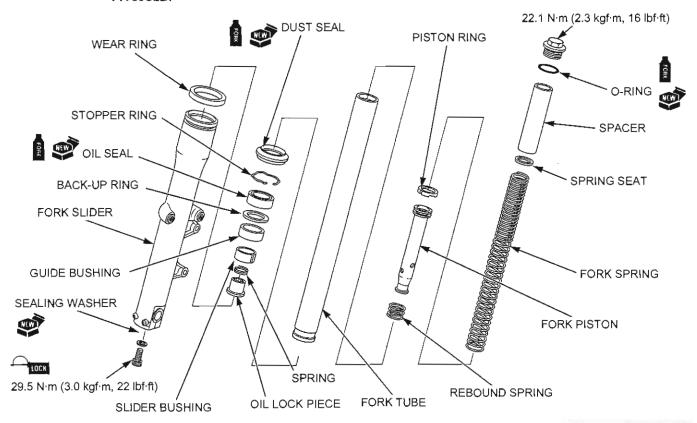


Do not open the bushing slit more than necessary.

Install the slider bushing being careful not to damage the coating of the bushing, if it has been removed.

Remove the burrs from the bushing mating surface, being careful not to peel off the coating.


Install the oil seal with its marked side

Apply fork fluid to the new oil seal lips. Install the guide bushing, back-up ring and new oil seal facing up. onto the fork tube.

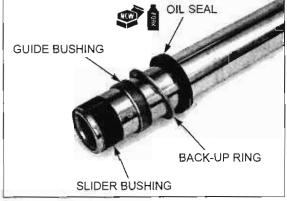


Install the rebound spring to the fork piston, then install them into the fork tube.

If the piston ring is removed, install a new piston ring into the fork piston groove.

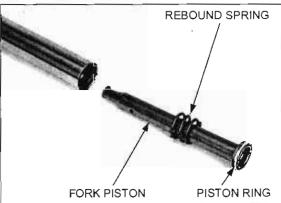

Install the oil lock piece and spring to the fork piston end.

Install the fork tube assembly into the fork slider.

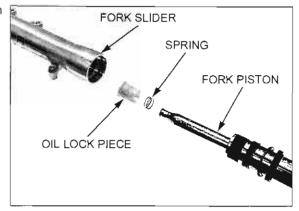


Do not over-tighten the vise on the fork

Do not over-tighten Hold the fork slider in a vise with soft jaws.

Apply locking agent to the fork center socket bolt threads.


Install the socket bolt with a new sealing washer.

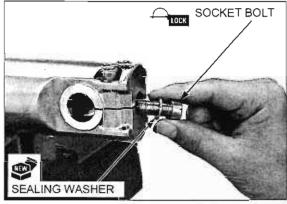

If the fork piston turns with the fork center socket bolt, temporarily install the fork spring, spring seat, spacer and fork cap.

If the fork piston Tighten the fork center socket bolt to the specified arms with the fork torque.


temporarily install TORQUE: 29.5 N·m (3.0 kgf·m, 22 lbf·ft)

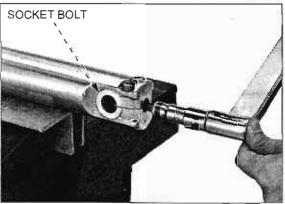

Drive the oil seal until the stopper ring groove is visible using the special tools.

#### TOOLS:

Slider weight Driver attachment, 41 mm 07947-KA50100 07947-KF00100

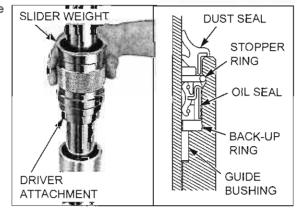

Pour the specified amount of the recommended fork fluid into the fork tube.

### RECOMMENDED FORK FLUID:

Pro Honda Suspension Fluid SS-8 (10W)

## FORK FLUID CAPACITY (VT750C2F/C2S):

 $478 \pm 2.5 \text{ cm}^3 (16.2 \pm 0.08 \text{ US oz}, 16.8 \pm 0.09 \text{ Imp oz})$ 

## FORK FLUID CAPACITY (VT750C2B):


 $474 \pm 2.5 \text{ cm}^3 (16.0 \pm 0.08 \text{ US oz}, 16.7 \pm 0.09 \text{ Imp oz})$ 


Slowly pump the fork tube several times to remove any trapped air from the lower portion of the fork tube.

Compress the fork tube fully. Measure the fluid level from the top of the fork tube.


### FORK FLUID LEVEL:100 mm (3.9 in)

Pull the fork tube up and install the fork spring with the tightly wound coil side facing up.

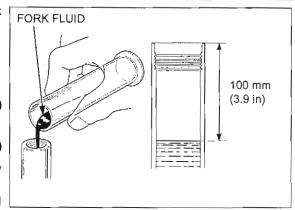

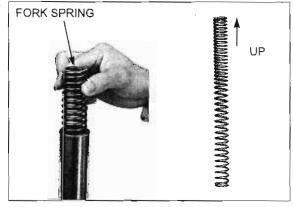


Install the spring seat and spacer.

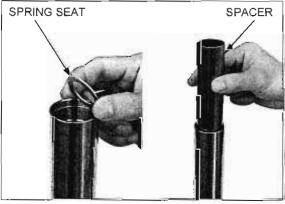

Coat a new O-ring with fork fluid and install it into the fork cap groove.


Be careful not to cross-thread the fork cap. Tighten the fork cap after installing the fork leg into the steering stem and top bridge.

Hold the fork cap securely and install it into the fork tube.

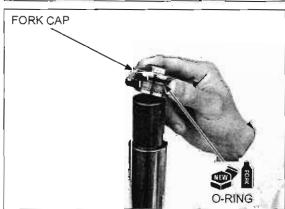


Install the stopper ring into the groove into the fork slider, being careful not to scratch the fork tube sliding surface.

Coat a new dust seal lips with fork fluid and install it.

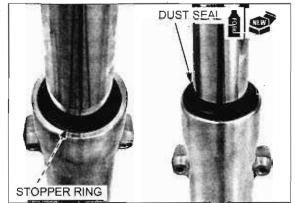


# **INSTALLATION (VT750C2F/C2S)**

Install the fork leg into the steering stem and top bridge. Align the fork tube top end surface with the top bridge as shown.

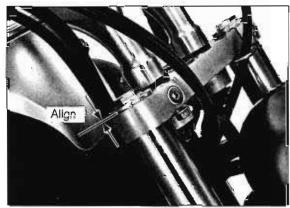


Tighten the bottom bridge pinch bolts to the specified torque.

TORQUE: 49 N·m (5.0 kgf·m, 36 lbf·ft)

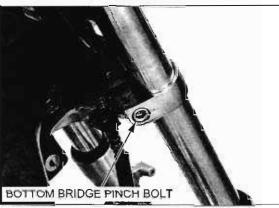

Install the turn signal light, collar and bolt. Tighten the bolt securely.

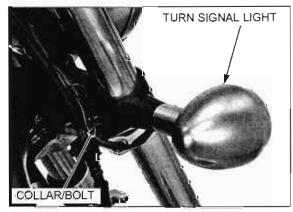


Tighten the top bridge pinch bolt to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

Tighten the fork cap to the specified torque.

TORQUE: 22.1 N·m (2.3 kgf·m, 16 lbf·ft)

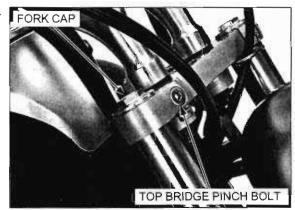


Right fork only:

Install the brake caliper with new mounting bolts and tighten the bolts.

TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

Install the following:


- Front fender (page 2-6)
- Front wheel (page 14-23)

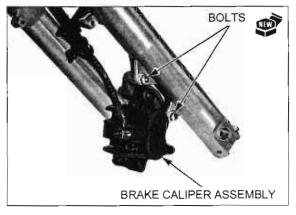

## **INSTALLATION (VT750C2B)**

Install the lower fork cover and fork leg into the steering stem and top bridge.

Loosely tighten the bottom bridge pinch bolt lightly.

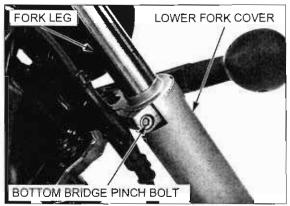


Install the upper fork cover, then tighten the 8 mm and 6 mm bolts to the specified torque.

#### TORQUE:

8 mm bolt: 26 N·m (2.7 kgf·m, 19 lbf·ft) 6 mm bolt: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install a new O-ring.

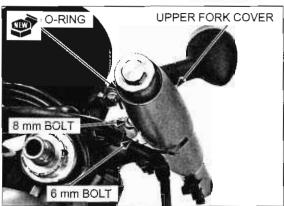


Tighten the steering stem nut after tightening the top and bottom bridge pinch bolts. Install the top bridge, washer and steering stem nut.

Loosen the bottom bridge pinch bolts and align the fork tube top end surface with the top bridge as shown. Tighten the fork bridge pinch bolts to the specified torque.

#### TORQUE:

Top bridge pinch bolt: 27 N·m (2.8 kgf·m, 20 lbf·ft) Bottom bridge pinch49 N·m (5.0 kgf·m, 36 lbf·ft)

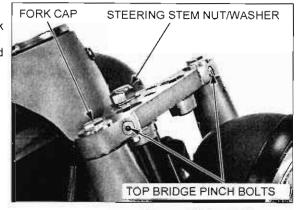


Tighten the steering stem nut to the specified torque.

TORQUE: 103 N·m (10.5 kgf·m, 76 lbf·ft)

Tighten the fork cap to the specified torque.

TORQUE: 22.1 N·m (2.3 kgf·m, 16 lbf·ft)

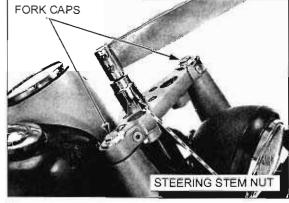


Right fork only: Install the brake caliper with new mounting bolts and tighten the bolts.

TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

Install the following:


- Front fender (page 2-6)
- Front wheel (page 14-23)

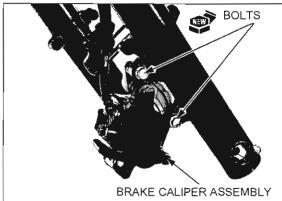


# STEERING STEM

REMOVAL (VT750C2F/C2S)

VT750C2S; Remove the bolt and brake hose clamp.

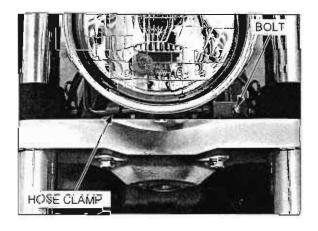


VT750C2S; Remove the brake hose from the clamp.

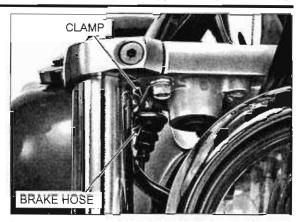


## Remove the following:

- Handlebar (page 14-9)
- Front wheel (page 14-17) Front fender (page 2-6)
- Headlight case (page 21-7)
- Turn signal light (page 21-8)

Remove the indicator light lenses and bulb sockets.

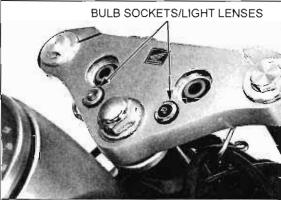


Remove the steering stem nut and washer. Remove the fork legs (page 14-24). Remove the top bridge.

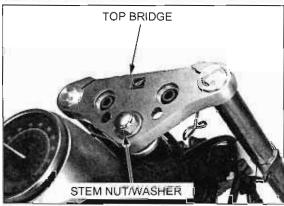


front brake hose mounting bolt.

Do not reuse the Remove the mounting bolt and front brake hose.

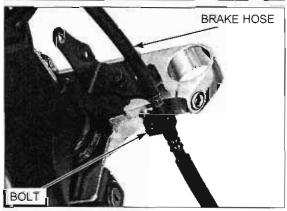


Remove the bolts, nuts, headlight case brackets and steering stem cover.

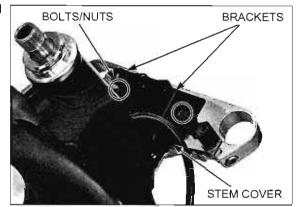

Straighten the lock washer tabs.

Remove the steering top thread lock nut and lock washer.

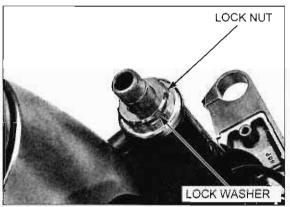


Loosen the steering top thread using the special tool.

#### TOOL:

Steering stem socket


07916-3710101

While holding the steering stem, remove the steering top thread.

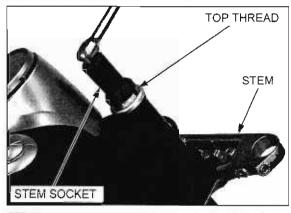

## Remove the following:

- Steering stem
- Dust seal
- Upper inner race
- Upper steering head bearing
- Lower steering head bearing

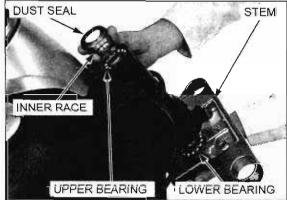


# REMOVAL (VT750C2B)

Remove the following:


- Front fork (page 14-25)
- Headlight case (page 21-7)
- Turn signal light (page 21-9)

Remove the bolts, nuts headlight case bracket and front turn signal light stay.

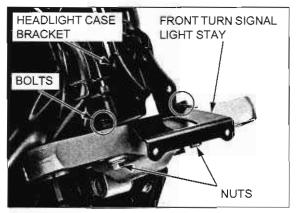


bolts.

Do not reuse the Remove the bolts and steering stem cover.

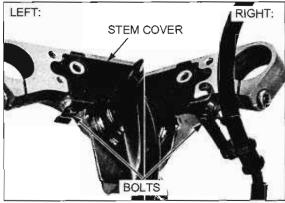

Straighten the lock washer tabs.

Remove the steering top thread lock nut and lock washer.

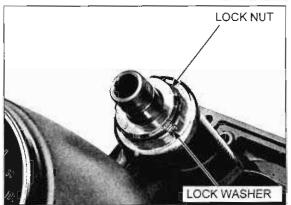


Loosen the steering top thread using the special tool.

TOOL:

Steering stem socket


07916-3710101

While holding the steering stem, remove the steering top thread.

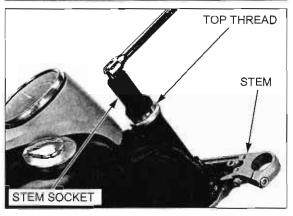

Remove the following:

- Steering stem
- Dust seal
- Upper inner race
- Upper steering head bearing
- Lower steering head bearing

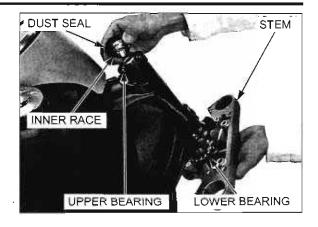

## BEARING REPLACEMENT

Remove the upper bearing outer race using the special tools.

#### TOOLS:


Ball race remover set 07953-MJ10000

- Remover attachment 07953-MJ10100

- Driver shaft 07953-MJ10200

#### U.S.A. TOOLS:

Race remover attachment 07953-MJ1000B and a commercially available drift

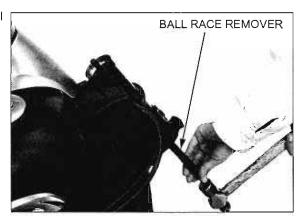

Remove the lower bearing outer race using the special tool and suitable shaft.

#### TOOL:


Bearing remover

07946-3710500



Install the steering stem nut onto the steering stem to prevent the threads from being damaged when removing the lower bearing inner race.

Remove the lower bearing inner race with a chisel or equivalent tool, being careful not to damage the stem. Remove the dust seal.

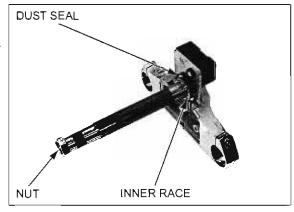


Apply specified grease (page 1-23) to a new dust seal lip and install it onto the steering stem.

Press a new lower bearing inner race using a special tool and hydraulic press.

#### TOOL:

Attachment, 30 mm I.D.

07746-0030300

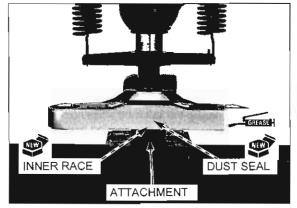

Drive in a new upper bearing outer race into the steering head pipe using the special tools.

#### TOOLS:

Driver

07749-0010000

Attachment, 42 x 47 mm

07746-0010300

Drive in a new lower bearing outer race into steering head pipe using the special tools.


#### TOOLS:

Driver


07749-0010000

Attachment, 52 x 55 mm

07746-0010400

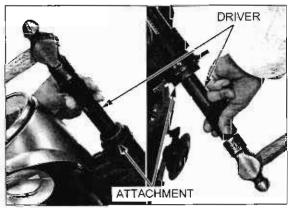

## INSTALLATION (VT750C2F/C2S)

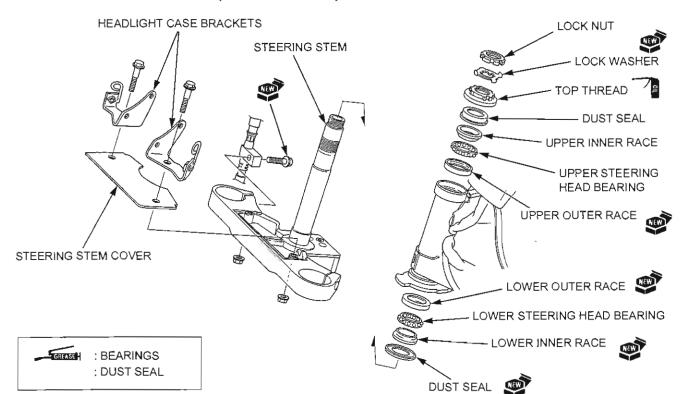

Apply 3-5 g of specified grease (page 1-23) to each new steering head bearing and fill it up. Install the lower steering head bearing onto the stem.

Apply grease to a new upper dust seal lip.

Apply engine oil to the threads of the steering top thread.

Insert the steering stem into the steering head pipe and install the following while holding the stem:

- Upper steering head bearing
- Upper inner race
- Dust seal
- Steering top thread


Tighten the steering top thread to the specified torque.


TOOL:

Steering stem socket

07916-3710101

TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)

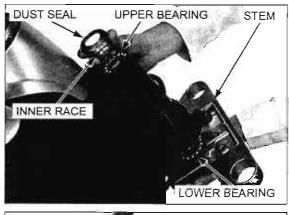

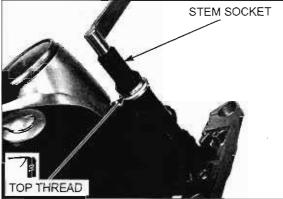


Turn the steering stem left and right, lock-to-lock five times to seat the bearings.



Retighten the steering top thread to the specified torque.

TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)

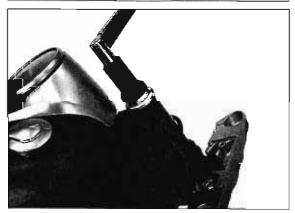


Install a new lock washer, aligning its bent tabs with the grooves in the steering top thread.

Install the lock nut until it contacts with the lock washer.


Further tighten the lock nut, within 90°, to align its grooves with the tabs of the lock washer.

Bend up the lock washer tabs into the grooves of the lock nut.

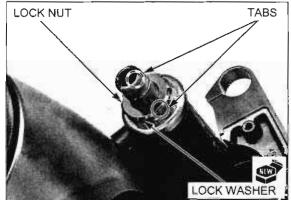


Install the steering stem cover onto the steering stem.

Tighten the nuts securely after installing the headlight case. Temporarily install the headlight case bracket, bolts and nuts

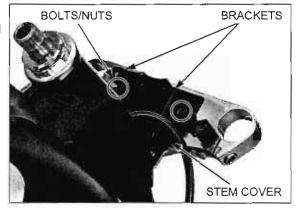

Clean and apply locking agent to the front brake hose bolt threads.

Install the front brake hose with a new mounting bolt. Tighten the mounting bolt securely.

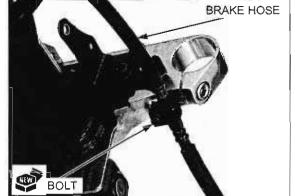


Install the top bridge, washer and stem nut.

Install the fork legs into the steering stem and top bridges (page 14-34).

Tighten the stem nut to the specified torque.

#### TORQUE: 103 N·m (10.5 kgf·m, 76 lbf·ft)


Turn the steering stem left and right, lock-to-lock several times to make sure the steering stem moves smoothly, without play or binding.

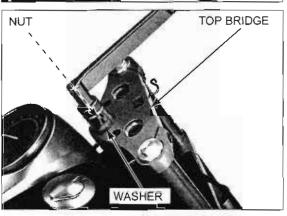


Install the bulb sockets and indicator light lenses (page 21-10).

Route the hose, Install the following: wires and cables into the cable guides properly (page 1-26).


- Front wheel (page 14-23)
- Front fender (page 2-6)
- Handlebar (page 14-12)
- Headlight case (page 21-7)
- Turn signal light (page 21-8)

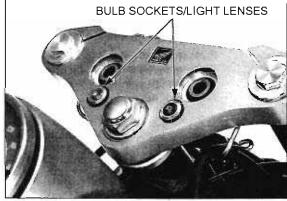


Tighten the headlight case bracket nuts securely.

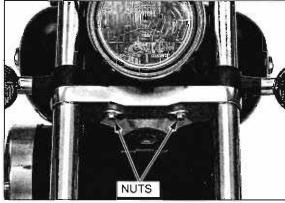

VT750C2S; Install the brake hose to the clamp securely.

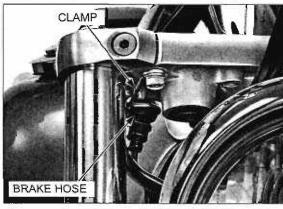

VT750C2S; Install the brake hose clamp and tighten the bolt securely.

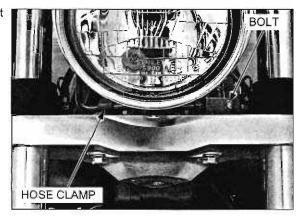

#### STEERING BEARING PRE-LOAD

Support the motorcycle securely and raise the front wheel off the ground.

Position the steering stem straight ahead.

Make sure there is no cable, wire harness or hose interference. Hook a spring scale to the fork tube between the fork top and bottom bridges.


Pull the spring scale keeping it at a right angle to the steering stem.

Read the scale at the point where the steering stem just starts to move.


# STEERING BEARING PRE-LOAD:

8.5 - 12.7 N (0.9 - 1.3 kgf)

If the readings do not fall within the limits, readjust the steering top thread.

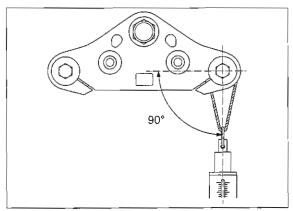

## **INSTALLATION (VT750C2B)**

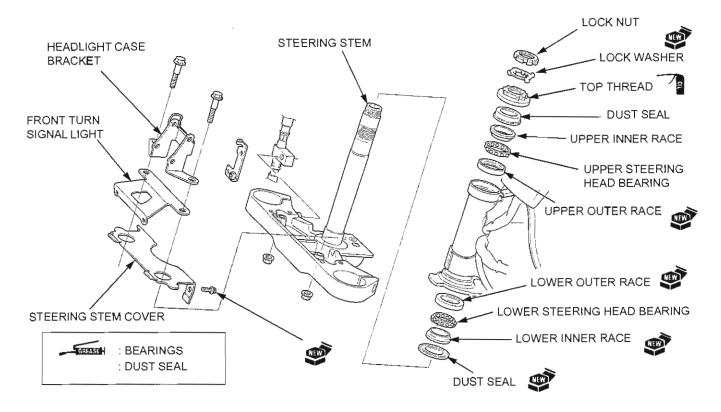


Apply  $3-5\,\mathrm{g}$  of specified grease (page 1-23) to each new steering head bearing and fill it up. Install the lower steering head bearing onto the stem.

Apply grease to a new upper dust seal lip.

Apply engine oil to the threads of the steering top thread.

Insert the steering stem into the steering head pipe and install the following while holding the stem:

- Upper steering head bearing
- Upper inner race
- Dust seal
- Steering top thread

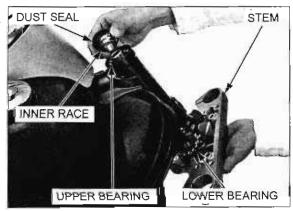


Tighten the steering top thread to the specified torque.

TOOL:

Steering stem socket

07916-3710101

TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)

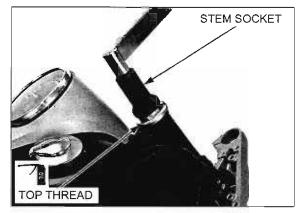

Turn the steering stem left and right, lock-to-lock five times to seat the bearings.



Retighten the steering top thread to the specified torque.

TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)




Install a new lock washer, aligning its bent tabs with the grooves in the steering top thread.

Install the lock nut until it contacts with the lock washer.

Further tighten the lock nut, within 90°, to align its grooves with the tabs of the lock washer.

Bend up the lock washer tabs into the grooves of the lock nut.

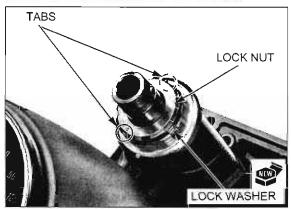


Install the steering stem cover, hose guide and new mounting bolts.

Tighten the mounting bolt securely.

#### NOTE:

When installing the hose guide, align the hose guide tabs with the steering stem cover.

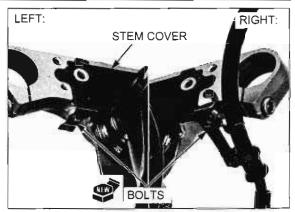

Install the front turn signal light stay, headlight case bracket, bolts and nuts.


Tighten the nuts securely.

Install the fork legs into the bottom bridge (page 14-35).

Turn the steering stem left and right, lock-to-lock several times to make sure the steering stem moves smoothly, without play or binding.

Install the following:

- Headlight case (page 21-7)
- Turn signal light (page 21-9)

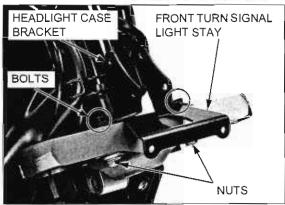

#### STEERING BEARING PRE-LOAD

Support the motorcycle securely and raise the front wheel off the ground.

Position the steering stem straight ahead.

Make sure there is no cable, wire harness or hose interference. Hook a spring scale to the fork tube between the fork top and bottom bridges.


Pull the spring scale keeping it at a right angle to the steering stem.

Read the scale at the point where the steering stem just starts to move.

## STEERING BEARING PRE-LOAD:

8.5 - 12.7 N (0.9 - 1.3 kgf)

If the readings do not fall within the limits, readjust the steering top thread.

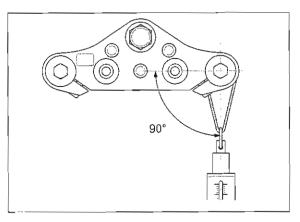

# МЕМО


# 15. REAR WHEEL/BRAKE/SUSPENSION

COMPONENT LOCATION15-2	REAR BRAKE (VT750C2F/C2B)15-20
SERVICE INFORMATION15-4	BRAKE PEDAL (VT750C2F/C2B) 15-24
TROUBLESHOOTING15-6	SHOCK ABSORBER15-27
REAR WHEEL15-7	SWINGARM15-28


15

# **COMPONENT LOCATION**

# VT750C2F/C2B

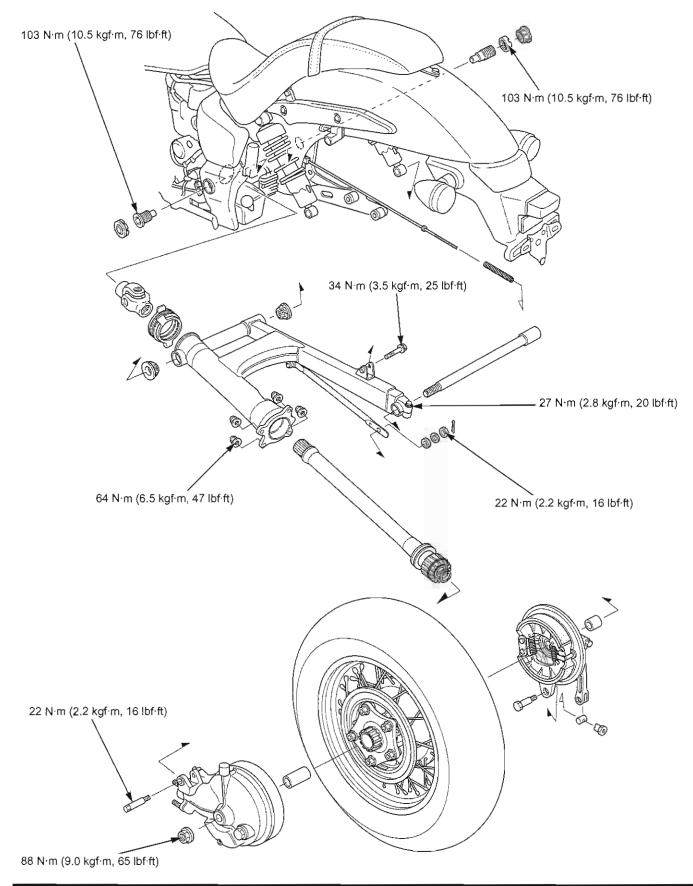

# VT750C2S

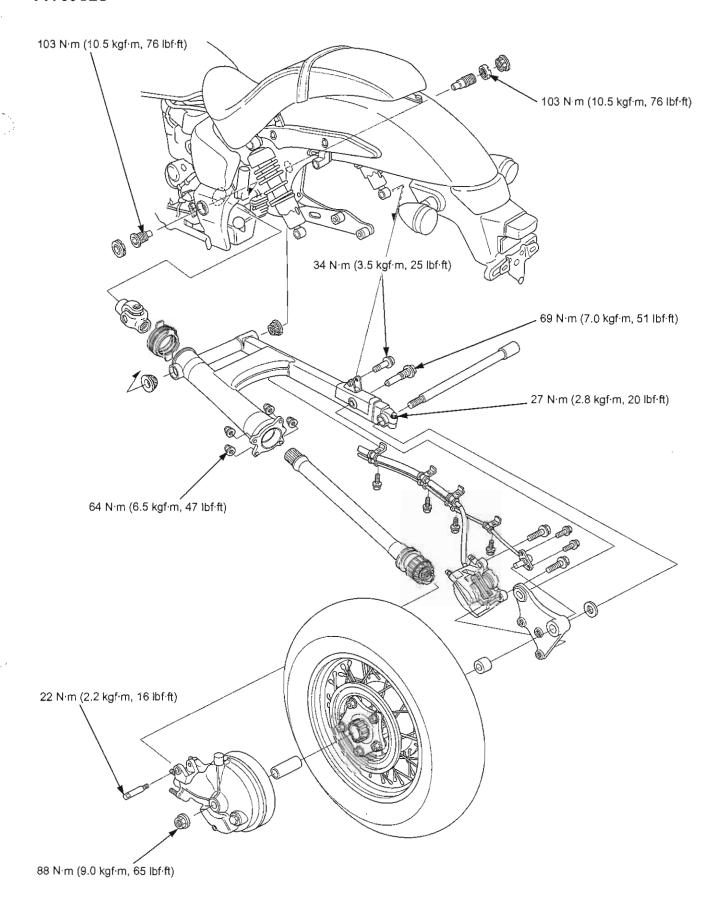

#### REAR WHEEL/BRAKE/SUSPENSION

# SERVICE INFORMATION GENERAL

# **ACAUTION**

Frequent inhalation of brake shoe dust, regardless of material composition could be hazardous to your health.

- · Avoid breathing dust particles.
- · Never use an air hose or brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner.
- · Riding on damaged rims impairs safe operation of the vehicle.
- · A hoist or equivalent is required to support the motorcycle when servicing the rear wheel, shock absorber, or swingarm.
- Use only genuine Honda replacement bolts and nuts for all suspension pivot and mounting points.
- When using the lock nut wrench for the adjusting bolt lock nut, use a deflecting beam type torque wrench 20 inches long. The
  lock nut wrench increases the torque wrench's leverage, so the torque wrench reading will be less than the torque actually
  applied to the swingarm right pivot lock nut. The specification given in the actual torque applied to the swingarm right pivot lock
  nut, not the reading on the torque wrench. Do not overtighten the lock nut. The specification later in the text gives both actual
  and indicated.

## SPECIFICATIONS (VT750C2F/C2B)

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Minimum tire tread depth		_	2.0 (0.08)
Cold tire	Up to 90 kg (200 lbs) load	200 kPa (2.00 kgf/cm², 29 psi)	_
pressure	Up to maximum weight capacity	250 kPa (2.50 kgf/cm², 36 psi)	_
Axle runout		-	0.2 (0.01)
Wheel rim	Radial	_	2.0 (0.08)
runout	Axial	-	2.0 (0.08)
Wheel balance weight			70 g max.
Brake drum I.D		180.0 – 180.3 (7.09 – 7.10)	181 (7.1)
Brake pedal height		75 mm (3.0 in) above the top of the foot- peg	_
Brake pedal fre		20 – 30 (13/16 – 1-3/16)	_
Shock absorber spring pre-load adjuster setting		2nd position	_

# SPECIFICATIONS (VT750C2S)


Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT
Minimum tire tr	read depth		2.0 (0.08)
Cold tire	Up to 90 kg (200 lbs) load	200 kPa (2.00 kgf/cm², 29 psi)	
pressure	Up to maximum weight capacity	250 kPa (2.50 kgf/cm², 36 psi)	_
Axle runout		-	0.2 (0.01)
Wheel rim	Radial	-	2.0 (0.08)
runout	Axial		2.0 (0.08)
Wheel balance	weight	-	70 g max.
Shock absorbe	er spring pre-load adjuster setting	2nd position	_

## **TORQUE VALUES**

Spoke 4.2 N·m (0.4 kgf·m, 3.1 lbf·ft) Rear brake disc bolt 42 N·m (4.3 kgf·m, 31 lbf·ft) ALOC bolt; replace with a new one Rear axle nut 88 N·m (9.0 kgf·m, 65 lbf·ft) Ų-nut Swingarm left pivot bolt 103 N·m (10.5 kgf·m, 76 lbf·ft) Swingarm right pivot bolt See page 15-32 Swingarm right pivot lock nut 103 N·m (10.5 kgf·m, 76 lbf·ft) Stopper plate bolt 20 N·m (2.0 kgf·m, 15 lbf·ft) ALOC bolt; replace with a new one Rear axle pinch bolt 27 N·m (2.8 kgf·m, 20 lbf·ft) Rear brake stopper arm nut 22 N·m (2.2 kgf·m, 16 lbf·ft) (VT750C2F/C2B) Rear brake arm pinch bolt (VT750C2F/C2B) 26 N·m (2.7 kgf·m, 19 lbf·ft) Rear shock absorber upper mounting bolt 26 N·m (2.7 kgf·m, 19 lbf·ft) Rear shock absorber lower mounting bolt 34 N·m (3.5 kgf·m, 25 lbf·ft) (right side) Rear shock absorber lower mounting bolt (left 22 N·m (2.2 kgf·m, 16 lbf·ft) Rear caliper stopper pin bolt (VT750C2S) 69 N·m (7.0 kgf·m, 51 lbf·ft) ALOC bolt; replace with a new one

## **TOOLS**

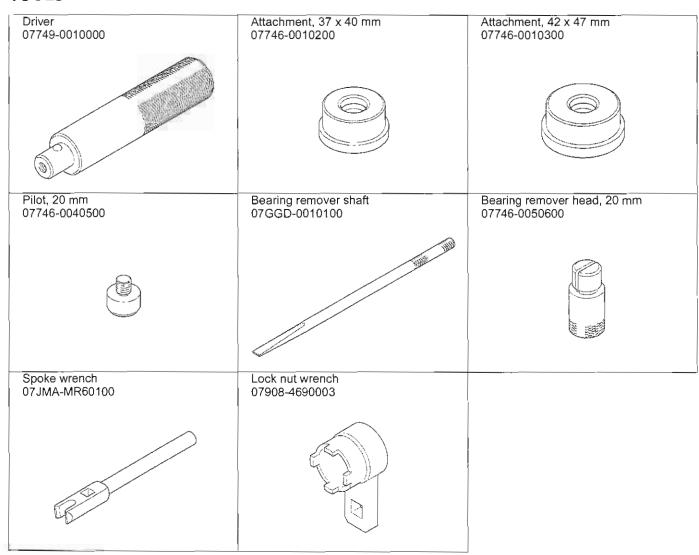

# **TROUBLESHOOTING**

#### Soft suspension

- · Incorrect suspension adjustment
- · Weak shock absorber spring
- · Oil leakage from damper unit
- · Low tire pressure

#### Stiff suspension

- · Incorrect suspension adjustment
- · Bent damper rod
- · Damaged shock absorber rubber mounts
- Damaged swingarm pivot bearings
- High tire pressure

#### Rear suspension noise

- · Loose suspension fasteners
- · Binding shock absorber case
- · Worn shock absorber rubber mounts
- Faulty rear shock absorber

#### Rear wheel wobbles

- · Bent rim Unbalanced rear tire and wheel
- · Insufficient tire pressure
- · Faulty swingarm pivot bearings
- · Axle fastener not tightened properly
- · Faulty tire

#### Rear wheel turns hard

- · Faulty wheel bearings
- · Bent axle
- · Brake drag
- · Final gear bearings damaged (page 13-8)

## Poor brake performance (VT750C2F/C2B)

- · Improper brake adjustment
- · Worn brake shoes
- · Brake linings oily, greasy or dirty
- · Worn brake cam
- · Worn brake drum
- · Brake arm serrations improperly engaged
- · Brake shoes worn at cam contact area


# **REAR WHEEL**

# REMOVAL (VT750C2F/C2B)

Remove the exhaust system (page 2-9).


Remove the axle nut.

Support the motorcycle securely and raise the rear wheel off the ground.

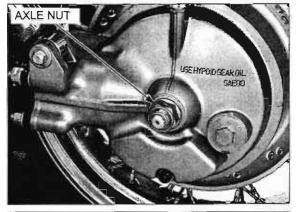


Remove the adjusting nut, joint pin and spring.

Remove the cotter pin, nut, washer, rubber washer and bolt.

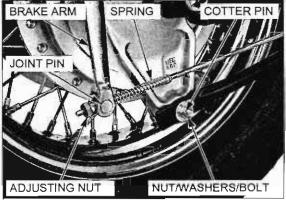


Loosen the pinch bolt and remove the axle and right side collar.

Move the rear wheel to the right to separate it from the final drive gear case and carefully remove the rear wheel out of the frame.

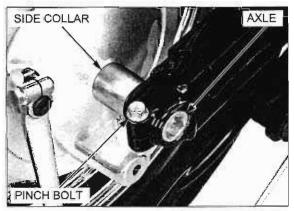

Remove the left side collar from the ring gear.

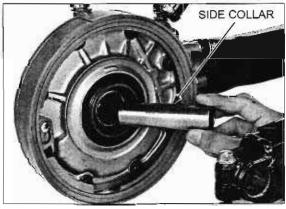


# REMOVAL (VT750C2S)

Remove the exhaust system (page 2-9).


Remove the axle nut.

Support the motorcycle securely and raise the rear wheel off the ground.

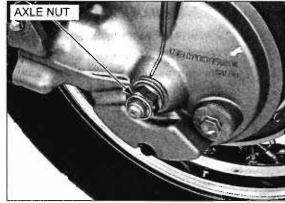

Remove the rear caliper stopper pin bolt.

Remove the bolt, clamp and rear wheel speed sensor wire.

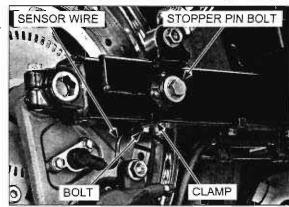


Loosen the pinch bolt. Remove the thrust washer and axle.


Do not operate the brake lever/pedal after removing the wheel. To do so will cause difficulty in fitting the brake disc between the brake pads.

Remove the rear brake caliper/bracket from the rear brake disc.


Move the rear wheel to the right to separate it from the final drive gear case and carefully remove the rear wheel out of the frame.

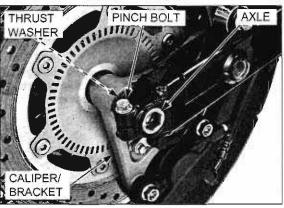

Remove the left side collar from the ring gear.

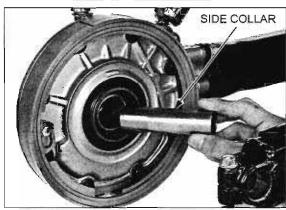

Remove the right side collar from the right side of the hub.

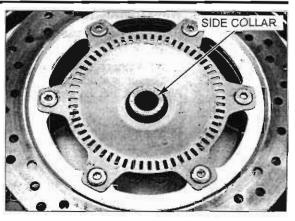

## INSPECTION


#### **AXLE**

Set the axle in V-blocks.

Turn the axle and measure the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

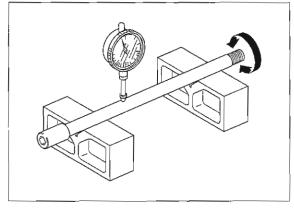

#### WHEEL RIM


Check the rim runout by placing the wheel in a truing stand.

Spin the wheel slowly and read the runout using a dial indicator

Actual runout is 1/2 the total indicator reading.

#### SERVICE LIMITS:

Radial: 2.0 mm (0.08 in) Axial: 2.0 mm (0.08 in)

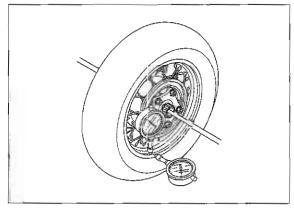


# FINAL DRIVEN FLANGE

Check the driven flange splines for wear or damage. If damaged, check the splines of the ring gear also.

### WHEEL BALANCE

For wheel balance (page 14-22). Do not add balance weight more than 70 g to the rear wheel.

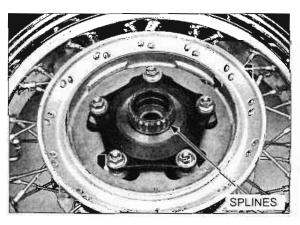


#### WHEEL BEARING

Remove the brake panel and driven flange (page 15-10).

Turn the inner race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the


Replace the wheel bearings in pairs. Remove and discard the bearings if the races do not turn smoothly and quietly, or if they fit loosely in the

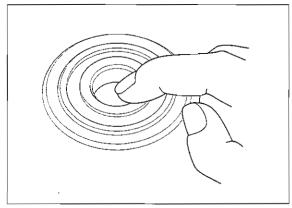

#### DISASSEMBLY

VT750C2F/C2B;

Remove the brake panel assembly from the right wheel

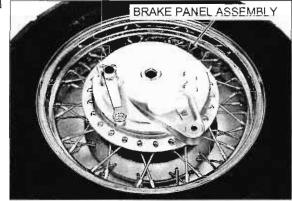


VT750C2S; Remove the bolts in a crisscross pattern in several steps and remove the pulser ring and brake disc.


NOTE:

Do not reuse the bolts.

Remove the rear brake disc spacer.

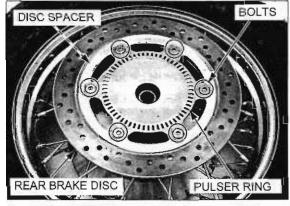


VT750C2S; Remove the dust seal from right side of the hub.

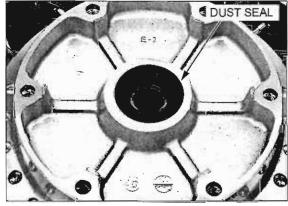


Remove the O-ring.

Remove the final driven flange from the left wheel hub.

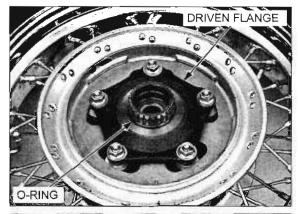


Remove the thrust washer.

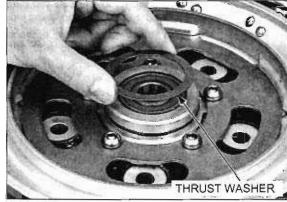


bolts.

Do not reuse the Remove the bolts in a crisscross pattern in several steps.

Remove the O-ring.

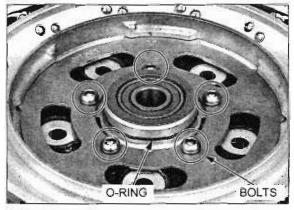


Align the arrow on the stopper plate between the projections on the wheel hub by turning the stopper plate and remove the stopper plate.

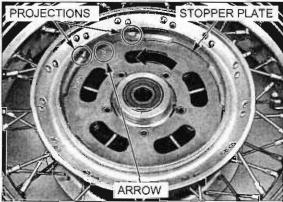

Remove the rubber dampers.

dampers as a set.

Replace the rubber Check the rubber dampers for deterioration or damage.

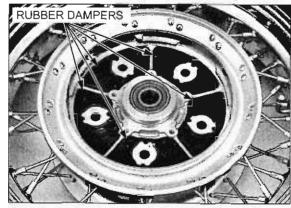

bearing.


Replace the wheel Install the remover head into the bearing.

bearings in pairs. From the opposite side of the wheel, install the remover Do not reuse old shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

#### TOOLS:


Bearing remover shaft Bearing remover head, 20 mm

07GGD-0010100 07746-0050600

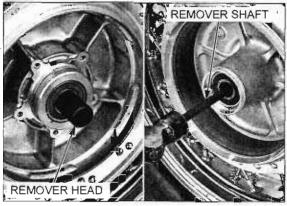


# **ASSEMBLY**

VT750C2F/C2B

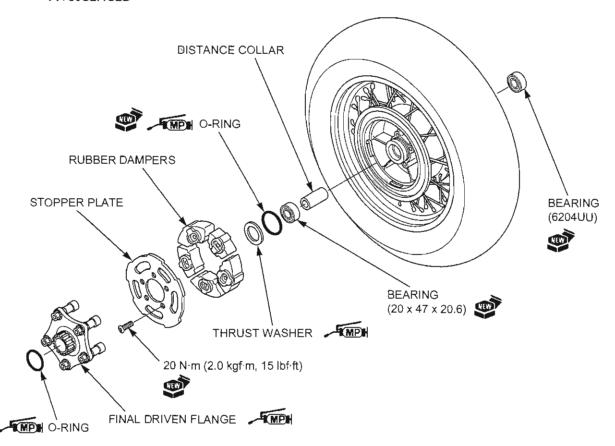

#### VT750C2S

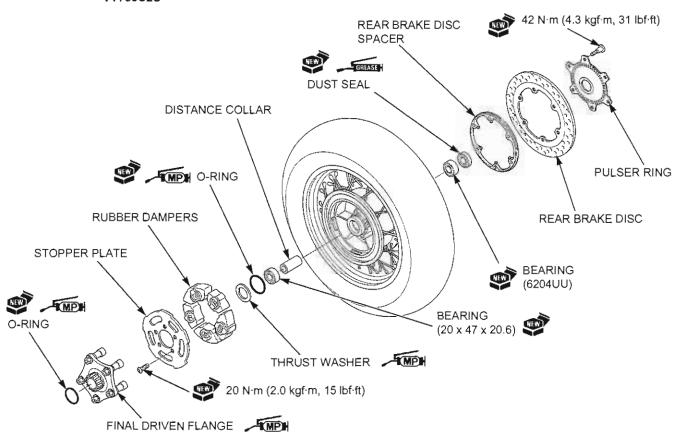

Drive in a new right bearing squarely with the marked2 side facing up until it is fully seated.

Install the distance collar.


Drive in a new left bearing squarely with the marked side facing up until it is fully seated.

#### TOOLS:

 Driver
 07749-0010000

 Attachment, 42 x 47 mm
 07746-0010300

 Pilot, 20 mm
 07746-0040500

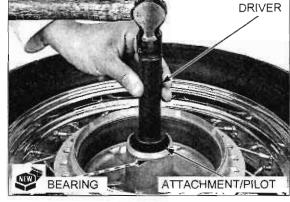

#### WHEEL CENTER ADJUSTMENT

VT750C2F/C2B:

Measure the distance B (rim width) and calculate distance A as follows:

#### A = 70.5 mm (2.78 in) - B/2


Adjust the rim position and distance A by tightening the spokes to the specified torque in several progressive steps.

TOOL:

Spoke wrench

07JMA-MR60100

TORQUE: 4.2 N·m (0.4 kgf·m, 3.1 lbf·ft)

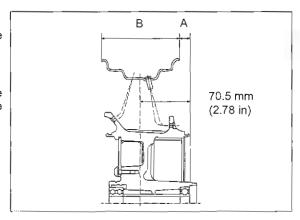

VT750C2S:

Measure the distance B (rim width) and calculate distance A as follows:

A = 88.2 mm (3.47 in) - B/2

Adjust the rim position and distance A by tightening the spokes to the specified torque in several progressive steps.


TOOL:


Spoke wrench

07JMA-MR60100

TORQUE: 4.2 N·m (0.4 kgf·m, 3.1 lbf·ft)

Install the rubber dampers with its "OUT SIDE" mark facing out.

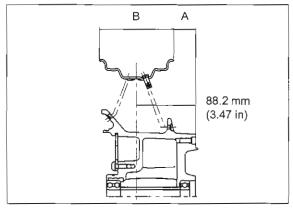


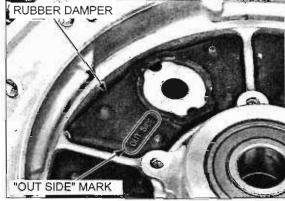

Install the stopper plate with the "OUT SIDE" mark facing

Install the stopper Install the stopper plate, aligning the arrow between the late with the "OUT" projections on the wheel hub.

Align the bolt holes by turning the stopper ring.

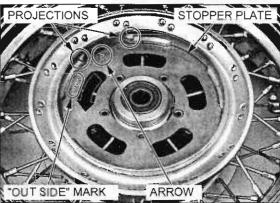


Pack molybdenum disulfide paste into the O-ring groove in the wheel hub.


Coat a new O-ring with molybdenum disulfide paste and install it into the left wheel hub groove.

Install and tighten new bolts to the specified torque.


TORQUE: 20 N·m (2.0 kgf·m, 15 lbf·ft)

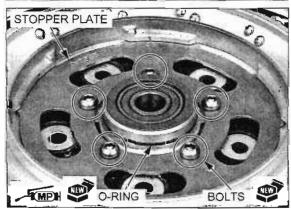

Apply 2-3 g of molybdenum disulfide paste to the mating surface of the thrust washer and rear wheel hub end (driven flange side).

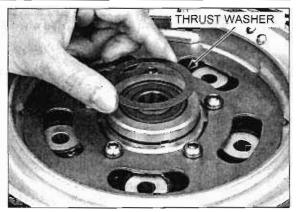


Apply  $0.5-1.0~{\rm g}$  of molybdenum disulfide paste to the rear wheel hub mating surface of the final driven flange.

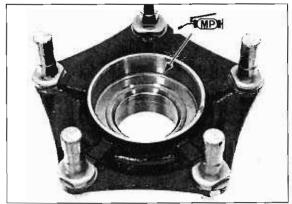


Coat a new O-ring with molybdenum disulfide paste and install it into the driven flange groove.


Install the driven flange into the left wheel hub.

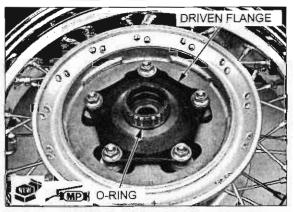

VT750C2F/C2B; Install the brake panel assembly into the right wheel hub.

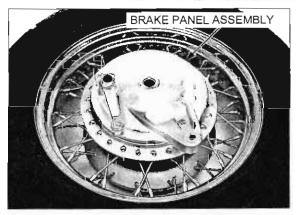

VT750C2S; Apply grease to new dust seal lips and install the dust seal until it is flush with the wheel hub.

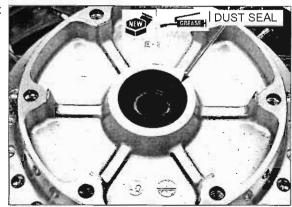

VT750C2S; Install the rear brake disc spacer to the right side of the hub.


Install the brake disc with the marked side facing out.

Install the pulser ring.

Do not get grease on the brake disc or stopping power will be reduced.


Install new bolts and tighten them in a crisscross pattern in several steps.

TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)

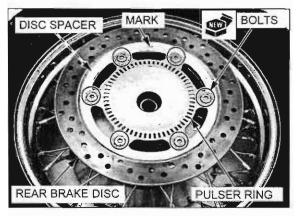

# INSTALLATION (VT750C2F/C2B)


Install the left side collar into the ring gear.

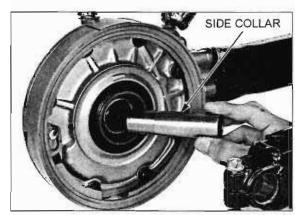


Apply 4 – 5 g of molybdenum disulfide paste to the joint surface of the final gear case O-ring guide and driven flange.

Hold the wheel securely and be careful not to damage the gear case.

Place the rear wheel into the swingarm and engage the driven flange spline with the ring gear spline.

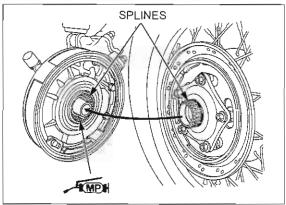


Install the right side collar and rear axle.

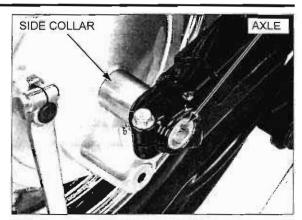

Install and tighten the axle nut to the specified torque while holding the axle.

TORQUE: 88 N·m (9.0 kgf·m, 65 lbf·ft)

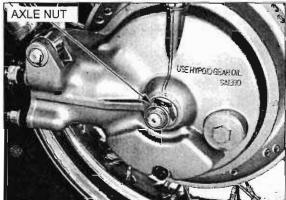


With the rear brake applied, pump the swingarm up and down several times to seat the axle.



Tighten the pinch bolt to the specified torque.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)

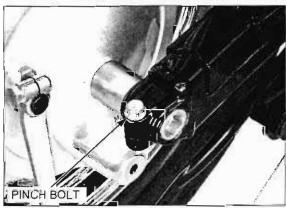


Connect the stopper arm to the brake panel with bolt, rubber washer, washer and nut.

Tighten the nut to the specified torque.

#### TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)


Install a new cotter pin. Install the spring, joint pin and adjusting nut. Install the exhaust system (page 2-12).

Adjust the brake pedal freeplay (page 3-21).

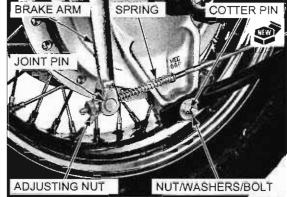


# **INSTALLATION (VT750C2S)**

Install the right side collar.

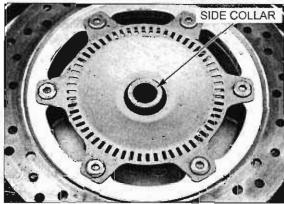


Install the left side collar into the ring gear.

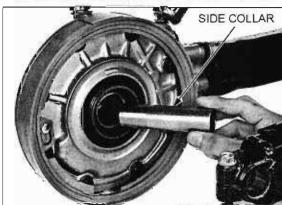


Apply 4-5 g of molybdenum disulfide paste to the joint surface of the final gear case O-ring guide and driven flange.

Hold the wheel securely and be careful not to damage the gear case.

Hold the wheel Place the rear wheel into the swingarm and engage the securely and be driven flange spline with the ring gear spline.

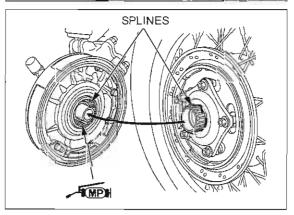


Install the rear brake caliper/bracket and thrust washer in position, and insert the rear axle through the swingarm, washer, caliper bracket, side collar, hub and final gear case.

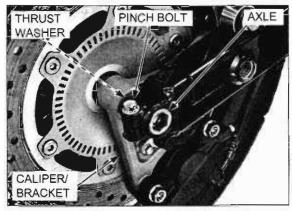

Install new caliper stopper pin bolt.
Tighten the rear caliper pin bolt to the specified torque.


TORQUE: 69 N·m (7.0 kgf·m, 51 lbf·ft)

Install the rear wheel speed sensor wire and clamp. Install and tighten the bolt securely.

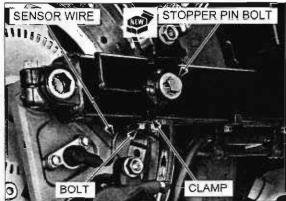


Install and tighten the axle nut to the specified torque while holding the axle.

TORQUE: 88 N·m (9.0 kgf·m, 65 lbf·ft)

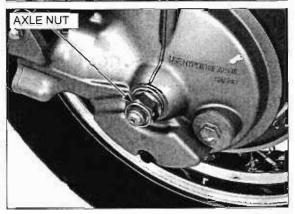


With the rear brake applied, pump the swingarm up and down several times to seat the axle.

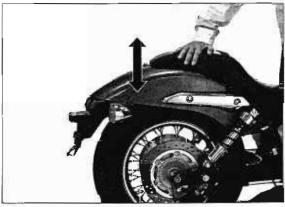

Tighten the pinch bolt to the specified torque.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)


Install the exhaust system (page 2-12).

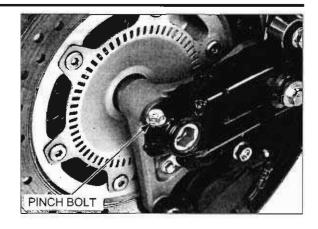

# REAR BRAKE (VT750C2F/C2B)

# **REMOVAL**


Remove the rear wheel (page 15-7). Remove the brake panel from the rear wheel.

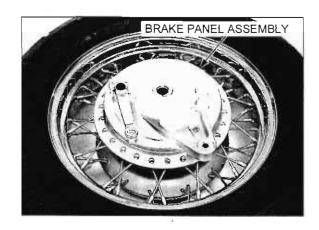

## **INSPECTION**

Measure the brake drum I.D.

SERVICE LIMIT: 181 mm (7.1 in)

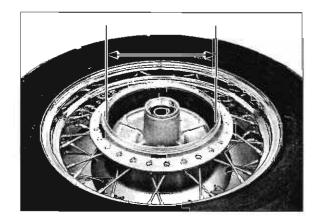


# **DISASSEMBLY**


Remove the cotter pins and setting plate.

#### NOTE:


- · Always replace the brake shoes as a set.
- When the brake shoes are reused, mark all parts before disassembly so they can be installed in their original locations.

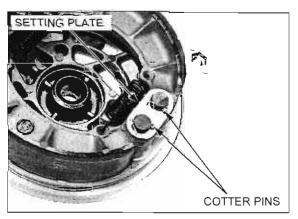


Remove the brake shoes and springs.

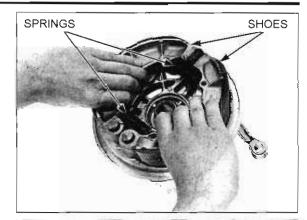


Remove the bolt and brake arm.

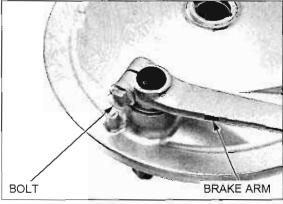

Remove the indicator plate, brake cam and felt seal.

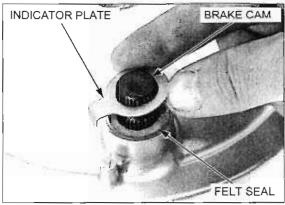


# **ASSEMBLY**

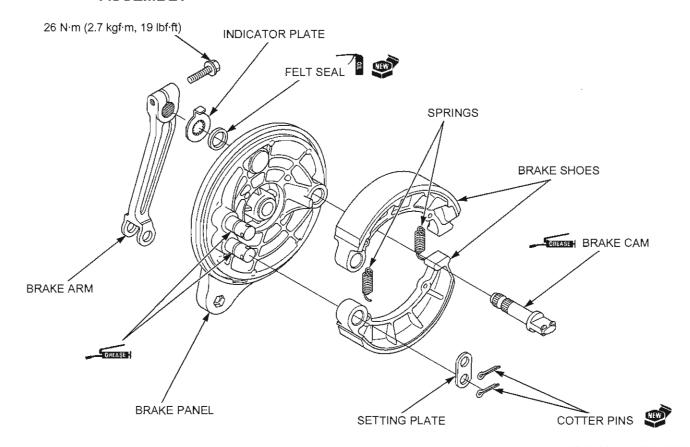


Apply  $0.2-0.3~\mathrm{g}$  of grease to the brake cam sliding surface.

Install the brake cam into the brake panel.

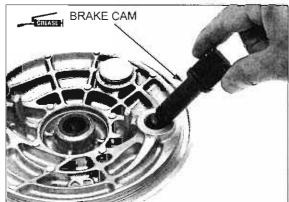

Apply engine oil to a new felt seal and install it onto the brake panel.


Install the wear indicator plate on the brake cam aligning its wide tooth with the wide groove on the brake cam.

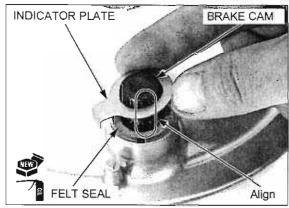

Install the brake arm aligning the punch marks of the arm and the brake cam.

Install and tighten the brake arm pinch bolt to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

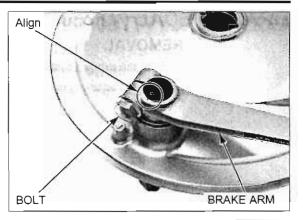


Apply  $0.5-1.0~{\rm g}$  of grease to the brake shoe-to-anchor pin sliding surface.


Install the brake shoes and springs.

#### NOTE:

- If the brake shoes are reused, the shoes and springs must be placed back in their original locations.
- · Install the springs with their ends facing up.

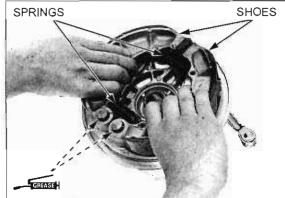


Install the setting plate and new cotter pins as shown.

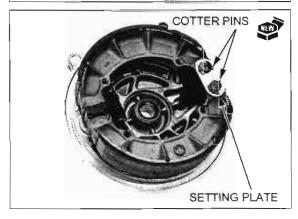

# INSTALLATION


Install the brake panel into the wheel hub. Install the rear wheel (page 15-16).

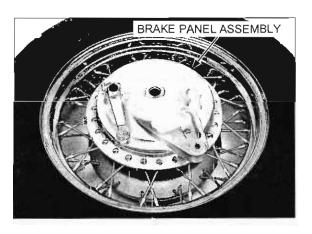

# BRAKE PEDAL (VT750C2F/C2B)


# **REMOVAL**

Remove the exhaust system (page 2-9). Remove the adjusting nut, joint pin and spring.

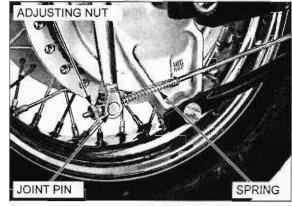


Do not reuse the middle rob joint pivot bolt.

Do not reuse the Remove the pivot bolt and middle rod joint.

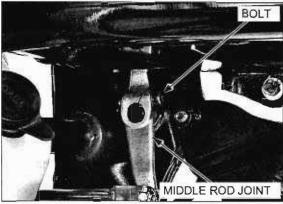


Remove the middle rod joint pivot and dust seals.

Check the dust seals for wear or damage.

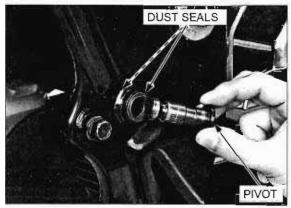

Unhook the brake pedal and rear brake light switch return springs.


Remove the snap ring, washer and brake pedal assembly.

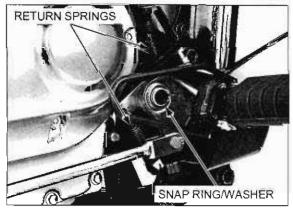

Remove the dust seals.

Check the dust seals for wear or damage.

Remove the cotter pin and joint pin.

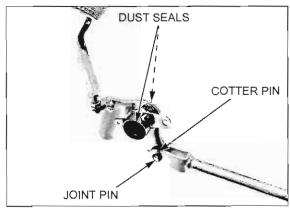


Remove the cotter pins and joint pins.


Check the brake pedal, rods, middle rod joint and pivot for wear or damage.

Check the joint pins for wear or damage.


Replace these parts if necessary.

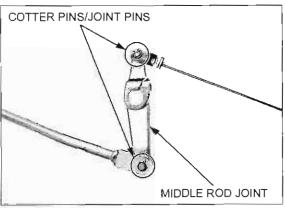


# **INSTALLATION**

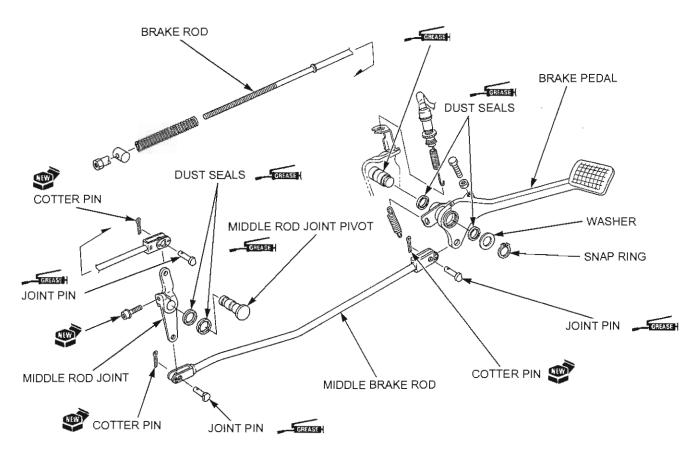

Apply grease to the joint pins. Install the brake rods, joint pins and new cotter pins to the middle rod joint.

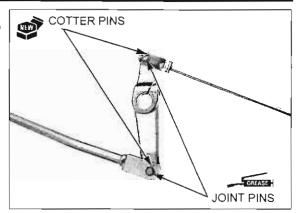

Apply grease to the joint pin.
Install the middle brake rod, joint pin and new cotter.
Apply grease to the dust seal lips.
Install the dust seals into the brake pedal.

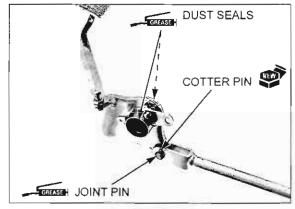

Apply grease to the brake pedal pivot sliding surface. Install the brake pedal assembly to the bracket properly.

Install the washer and snap ring.


#### NOTE:

- Install the washers and snap rings with the chamfered edges facing the thrust load side.
- Do not reuse worn snap ring which could easily spin in the groove.
- · Check that the snap ring is seated in the grooves.

Hook the brake pedal and rear brake light switch return springs to the pedal.


Apply grease to the dust seal lips and middle rod joint pivot sliding surface.

Install the dust seals and middle rod joint pivot.

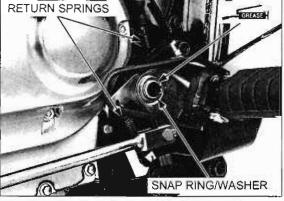




Install the middle rod joint with a new pivot bolt. Tighten the pivot bolt securely.

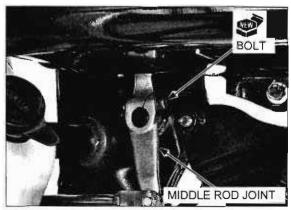

Install the spring, joint pin and adjusting nut. Install the exhaust system (page 2-12). Adjust the following:


- Brake pedal freeplay (page 3-21)
- Brake pedal height (page 3-20)
- Rear brake light switch (page 3-22)

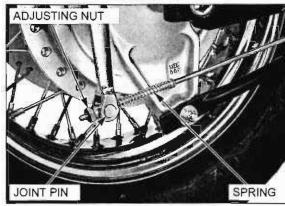

# SHOCK ABSORBER

Support the frame and swingarm securely using a hoist or equivalent.

Remove the mounting bolts, washers, and the shock absorber.

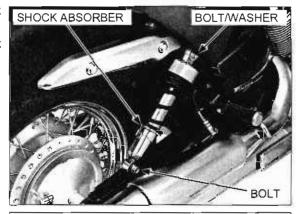

Replace the shock absorber as an assembly.

Replace the shock Check for deformation or oil leakage.


Check the rubber mounts and collars for wear or damage, replace them if necessary.

Apply grease to the shock absorber mount inner surface.

Install the shock absorber in the reverse order of removal.

#### TORQUE:

Upper mounting bolt: 26 N·m (2.7 kgf·m, 19 lbf·ft) Lower mounting bolt (right side): 34 N·m (3.5 kgf·m, 25 lbf·ft) Lower mounting bolt (left side): 22 N·m (2.2 kgf·m, 16 lbf·ft)

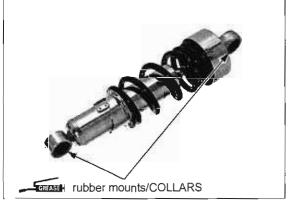

# **SWINGARM**

## **REMOVAL**

Remove the following (VT750C2F/C2B):


- Left crankcase rear cover (page 2-4)
- Rear wheel (page 15-7)
- Final drive gear case (page 13-7)


Remove the following (VT750C2S):

- Left crankcase rear cover (page 2-4)
- Rear wheel (page 15-8)
- Final drive gear case (page 13-7)
- Rear wheel speed sensor (page 17-25)

Remove the right shock absorber lower mounting bolt.

Remove the both pivot bolt caps.

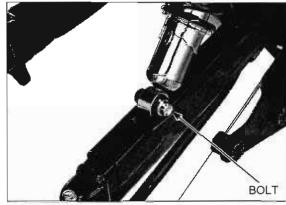

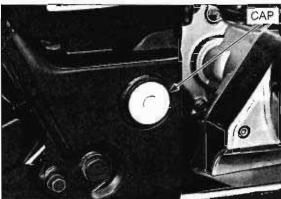


Loosen the right pivot lock nut using a special tool and remove it.

#### TOOL:

Lock nut wrench


07908-4690003

Loosen the right pivot bolt, but do not remove it yet.

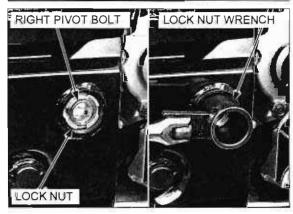


Loosen the left pivot bolt, but do not remove it yet.

Release the joint boot from the output gear case. Remove the left and right pivot bolts, and swingarm from the frame.

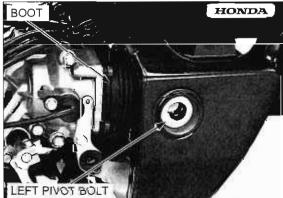


Remove the universal joint from the output shaft.

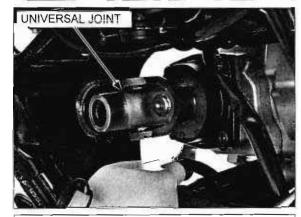


VT750C2F/C2B; Remove the following:

- Cotter pinNut
- Washer
- Spring washer
- Bolt
- Stopper arm

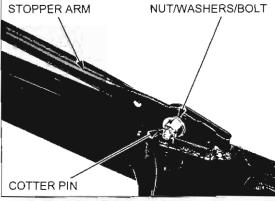


Remove the pivot bearings and joint boot.

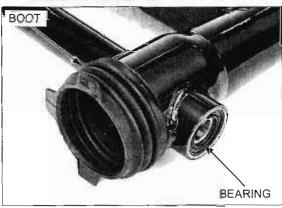

# **INSPECTION**


Check the boot for cuts or other damage.

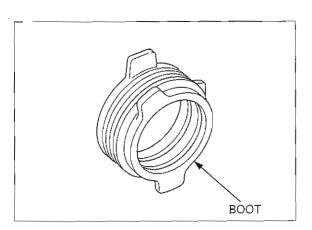

Check that the universal joint moves smoothly without binding or noise.

Check the splines for wear or damage.


If damaged, check the splines of the output driven gear shaft and drive shaft also.

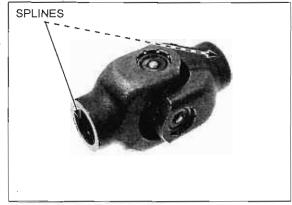

Both bearings, outer races and grease holders must be replaced as a set if any part is damaged or worn.

Both bearings, Check the bearings and dust seals for wear or damage. outer races and Check the outer races for wear or damage.

grease holders Check the grease holders for damage or deformation.

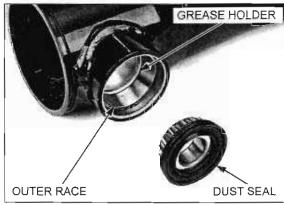


# PIVOT BEARING OUTER RACE REPLACEMENT

Punch or drill an appropriate hole into the grease holder.

Insert a suitable driver through the swingarm and drive the other outer race and grease holder out of the swingarm.


Drive the punched or drilled side outer race and grease holder out of the swingarm.

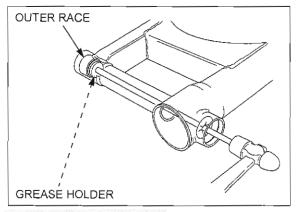


Install a new grease holder into the pivot. Drive in a new outer race squarely until it is fully seated.

TOOLS:


Driver Attachment, 37 x 40 mm 07749-0010000 07746-0010200

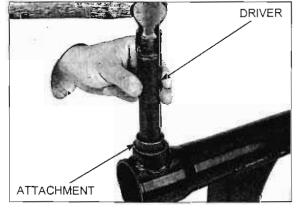


# **INSTALLATION**

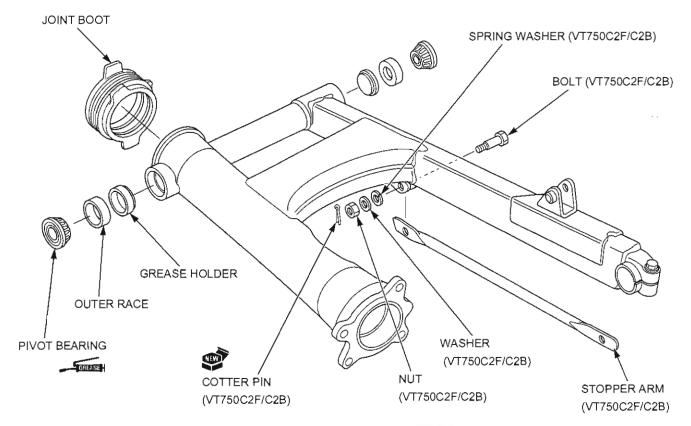

Apply  $1.0-1.5~\rm g$  of specified grease (page 1-23) to the needle rollers and dust seal lips of each bearing. Install the pivot bearings into the swingarm pivots.

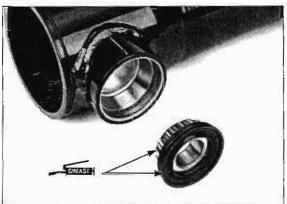


Install the joint boot into the swingarm groove properly with the "UP" mark facing up.

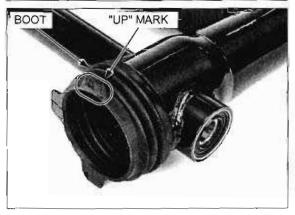

VT750C2F/C2B; Install the following:


- Stopper arm
- Bolt
- Spring washer
- Washer
- Nut

Tighten the nut and install a new cotter pin.

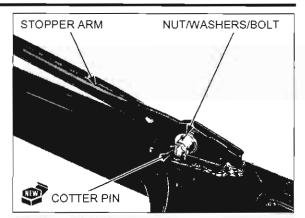

Apply 1 g of molybdenum disulfide grease to the output shaft splines.

Install the universal joint onto the output shaft.

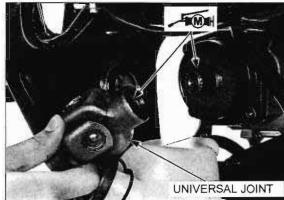


Set the swingarm into the frame and hold it. Install the joint boot over the output gear case.

Carefully align the swingarm pivots with the pivot bolts.

Install the left and right pivot bolts.

Tighten the left pivot bolt to the specified torque.

TORQUE: 103 N·m (10.5 kgf·m, 76 lbf·ft)

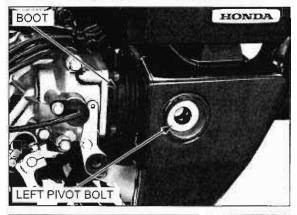


Temporarily tighten the right pivot bolt to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m, 15 lbf·ft)

Move the swingarm up and down several times to seat the pivot bearings.

Loosen the right pivot bolt counterclockwise 1/4 turn (90°) and tighten it to the specified torque.

TORQUE: 15 N·m (1.5 kgf·m, 11 lbf·ft)

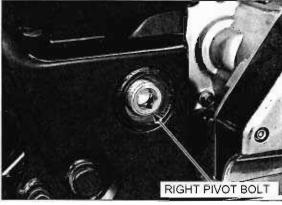

Install the right pivot lock nut.

Tighten the lock nut using the special tool while holding the pivot bolt.

TOOL:


Lock nut wrench


07908-4690003

Refer to torque wrench reading information on page 15-4 "Service Information". TORQUE:

Actual: 103 N·m (10.5 kgf·m, 76 lbf·ft) Indicated: 93 N·m (9.5 kgf·m, 69 lbf·ft)

Install the both pivot bolt caps.

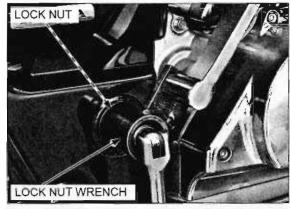

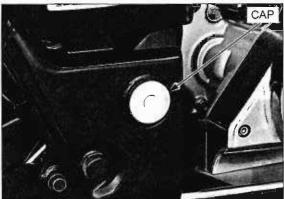

Install and tighten the right shock absorber lower mounting bolt to the specified torque.


#### TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Install the following (VT750C2F/C2B):

- Final drive gear case (page 13-22)
- Rear wheel (page 15-16)
- Left crankcase rear cover (page 2-4)

Install the following (VT750C2S):

- Final drive gear case (page 13-22)
- Rear wheel (page 15-18)
- Left crankcase rear cover (page 2-4)
- Rear wheel speed sensor (page 17-25)

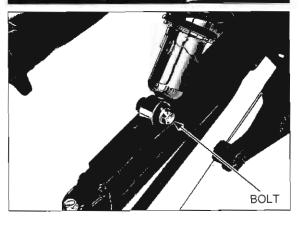

# мемо


# **16. HYDRAULIC BRAKE**

COMPONENT LOCATION16-2	FRONT MASTER CYLINDER 16-21
SERVICE INFORMATION16-5	FRONT BRAKE CALIPER (VT750C2F/C2B)16-25
TROUBLESHOOTING16-7	FRONT BRAKE CALIPER (VT750C2S)···16-30
BRAKE FLUID REPLACEMENT/	
AIR BLEEDING (VT750C2F/C2B) ······16-8	REAR MASTER CYLINDER (VT750C2S)······16-34
BRAKE FLUID REPLACEMENT/ AIR BLEEDING (VT750C2S) ······16-10	REAR BRAKE CALIPER (VT750C2S) ····· 16-38
BRAKE PAD/DISC16-16	BRAKE PEDAL (VT750C2S)16-40


16


# **COMPONENT LOCATION**

FRONT (VT750C2F/C2B):

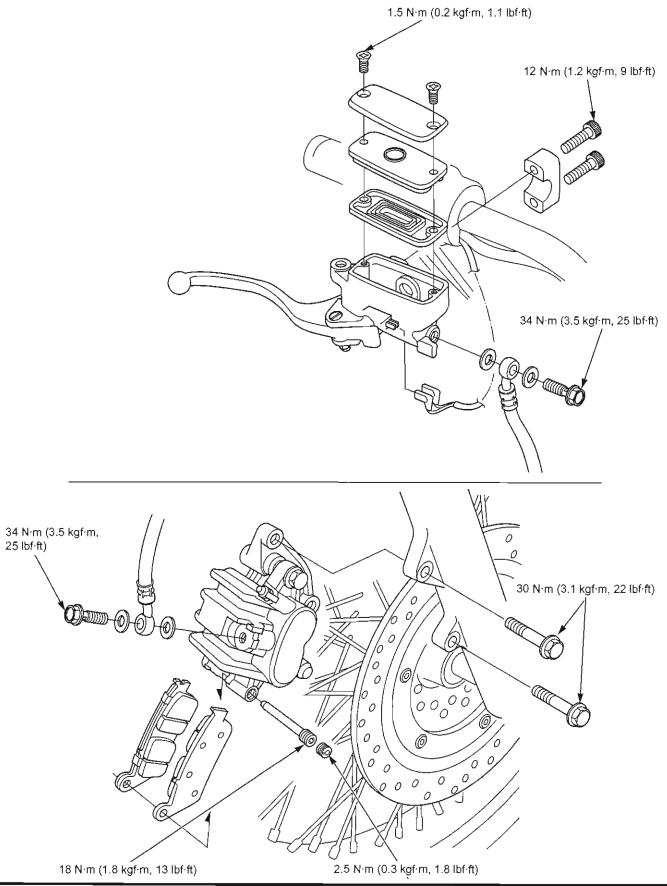



# FRONT (VT750C2S):

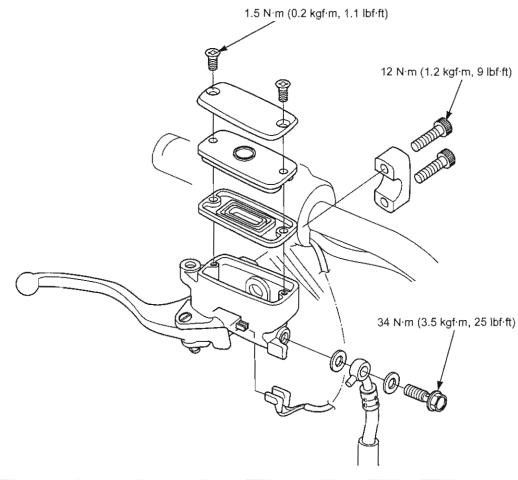

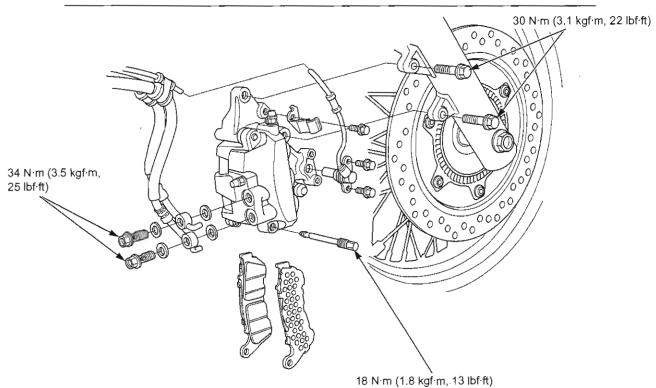

# REAR (VT750C2S):

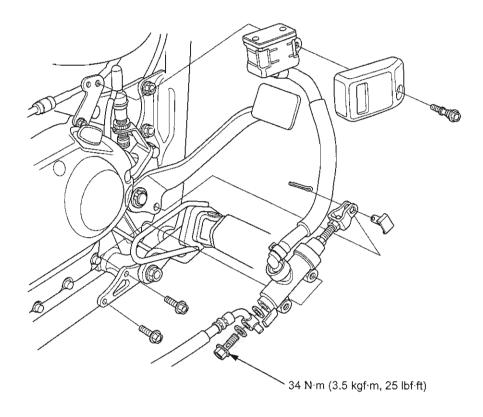

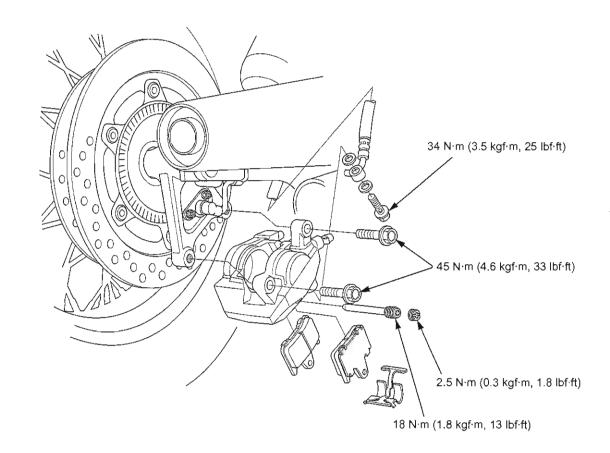

# SERVICE INFORMATION GENERAL

# **ACAUTION**

Frequent inhalation of brake pad dust, regardless of material composition could be hazardous to your health.

- · Avoid breathing dust particles.
- Never use an air hose or brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner.

# NOTICE

Spilled brake fluid will severely damage instrument lenses and painted surfaces. It is also harmful to some rubber parts. Be careful whenever you remove the reservoir cap; make sure the front reservoir is horizontal first.

- This section covers service of the conventional brake components of the brake system. For Anti-lock Brake System (ABS) service, see page 17-7.
- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Never allow contaminants (e.g., dirt, water) to enter an open reservoir.
- · Once the hydraulic system has been opened, or if the brake feels spongy, the system must be bled.
- Always use fresh DOT 4 brake fluid from a sealed container when servicing the system. Do not mix different types of fluid as
  they may not be compatible.
- · Always check brake operation before riding the motorcycle.

# SPECIFICATIONS (VT750C2F)

Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT
Recommend	ded brake fluid	DOT 4	_
Front	Brake disc thickness	5.8 - 6.2 (0.23 - 0.24)	5.0 (0.20)
	Brake disc warpage	-	0.30 (0.012)
	Master cylinder I.D.	11.000 - 11.043 (0.4331 - 0.4348)	11.05 (0.435)
	Master piston O.D.	10.957 - 10.984 (0.4314 - 0.4324)	10.945 (0.4309)
	Caliper cylinder I.D.	27.000 – 27.050 (1.0630 – 1.0650)	27.060 (1.0654)
	Caliper piston O.D.	26.935 - 26.968 (1.0604 - 1.0617)	26.930 (1.0602)

# SPECIFICATIONS (VT750C2B)

Unit: mm (in)

	ITEM	STANDARD	SERVICE LIMIT
Recommended b	rake fluid	DOT 4	_
Front	Brake disc thickness	5.8 - 6.2 (0.23 - 0.24)	5.0 (0.20)
	Brake disc warpage	_	0.30 (0.012)
	Master cylinder I.D.	11.000 - 11.043 (0.4331 - 0.4348)	11.05 (0.435)
	Master piston O.D.	10.957 - 10.984 (0.4314 - 0.4324)	10.945 (0.4309)
	Caliper cylinder I.D.	25.400 - 25.450 (1.0000 - 1.0020)	25.460 (1.0024)
	Caliper piston O.D.	25.335 - 25.368 (0.9974 - 0.9987)	25.320 (0.9968)

# SPECIFICATIONS (VT750C2S)

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Recommended brake fluid		DOT 4	_	
Front	Brake disc thickness		4.8 – 5.2 (0.19 – 0.20)	4.0 (0.16)
	Brake disc warpage		-	0.30 (0.012)
	Master cylinder I.D.		11.000 - 11.043 (0.4331 - 0.4348)	11.05 (0.435)
	Master piston O.D.		10.957 - 10.984 (0.4314 - 0.4324)	10.945 (0.4309)
	Caliper cylinder I.D.	Upper	27.000 - 27.050 (1.0630 - 1.0650)	27.060 (1.0654)
		Middle	22.654 - 22.700 (0.8917 - 0.8934)	22.712 (0.8942)
		Lower	25.400 - 25.450 (1.0000 - 1.0012)	25.460 (1.0024)
	Caliper piston O.D.	Upper	26.935 - 26.968 (1.0604 - 1.0617)	26.930 (1.0602)
		Middle	22.585 - 22.618 (0.8892 - 0.8905)	22.573 (0.8887)
		Lower	25.318 - 25.368 (0.9968 - 0.9988)	25.310 (0.9965)
Rear	Push rod length		83 (3.3)	_
	Brake disc thickness		5.8 - 6.2 (0.23 - 0.24)	5.0 (0.20)
	Brake disc warpage		_	0.30 (0.012)
	Master cylinder I.D.		14.000 - 14.043 (0.5512 - 0.5529)	14.055 (0.5533)
	Master piston O.D.		13.957 - 13.984 (0.5495 - 0.5506)	13.945 (0.5490)
	Caliper cylinder I.D.		38.180 - 38.230 (1.5031 - 1.5051)	38.24 (1.506)
	Caliper piston O.D.		38.098 - 38.148 (1.4999 - 1.5019)	38.09 (1.499)

# **TORQUE VALUES (VT750C2F/C2B)**

Brake caliper bleed valve

Front master cylinder reservoir cap screw

Brake pad pin Brake pad pin plug Brake hose oil bolt Brake lever pivot bolt

Brake lever pivot nut
Front brake light switch screw
Front master cylinder holder bolt
Front brake caliper bracket pin

Front brake caliper pin

Front brake caliper mounting bolt

5.5 N·m (0.6 kgf·m, 4.1 lbf·ft) 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft

18 N·m (1.8 kgf·m, 13 lbf·ft) 2.5 N·m (0.3 kgf·m, 1.8 lbf·ft)

34 N·m (3.5 kgf·m, 25 lbf·ft)

1 N·m (0.1 kgf·m, 0.7 lbf·ft) 6 N·m (0.6 kgf·m, 4.4 lbf·ft)

1.2 N·m (0.1 kgf·m, 0.9 lbf·ft)

12 N·m (1.2 kgf·m, 9 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft)

27 N·m (2.8 kgf·m, 20 lbf·ft)

30 N·m (3.1 kgf·m, 22 lbf·ft)

Apply locking agent to the threads Apply locking agent to the threads ALOC bolt; replace with a new one

# TORQUE VALUES (VT750C2S)

Front brake caliper bleed valve

Front master cylinder reservoir cap screw

Front brake pad pin Brake hose oil bolt Brake lever pivot bolt

Brake lever pivot nut Front brake light switch screw Front master cylinder holder bolt

Front brake caliper bracket pin Front brake caliper pin

Front brake caliper mounting bolt

Rear caliper stopper pin bolt

Rear caliper pin bolt

Rear caliper assembly bolt

Rear brake caliper bleed valve

Rear brake pad pin

Rear brake pad pin plug

Rear master cylinder reservoir cap screw Rear master cylinder push rod lock nut 5.5 N·m (0.6 kgf·m, 4.1 lbf·ft)

1.5 N·m (0.2 kgf·m, 1.1 lbf·ft) 18 N·m (1.8 kgf·m, 13 lbf·ft)

34 N·m (3.5 kgf·m, 25 lbf·ft)

1 N·m (0.1 kgf·m, 8.4 lbf·in)

6 N·m (0.6 kgf·m, 4.4 lbf·ft) 1.2 N·m (0.1 kgf·m, 10.8 lbf·in)

12 N·m (1.2 kgf·m, 9 lbf·ft)

12 N·m (1.2 kgf·m, 9 lbf·ft) 27 N·m (2.8 kgf·m, 20 lbf·ft)

27 N·m (2.8 kgf·m, 20 lbf·ft) 30 N·m (3.1 kgf·m, 22 lbf·ft)

69 N·m (7.0 kgf·m, 51 lbf·ft)

45 N·m (4.6 kgf·m, 33 lbf·ft)

37 N·m (3.8 kgf·m, 27 lbf·ft)

5.5 N·m (0.6 kgf·m, 4.1 lbf·ft) 18 N·m (1.8 kgf·m, 13 lbf·ft)

2.5 N·m (0.3 kgf·m, 1.8 lbf·ft) 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)


18 N·m (1.8 kgf·m, 13 lbf·ft)

Apply locking agent to the threads Apply locking agent to the threads ALOC bolt; replace with a new one

ALOC bolt; replace with a new one

Apply locking agent to the threads

# TOOL

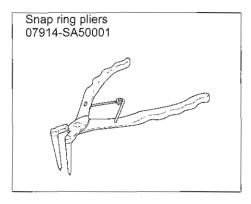

# TROUBLESHOOTING

#### Brake lever soft or spongy

- · Air in hydraulic system
- · Leaking hydraulic system
- · Contaminated brake pads/disc
- · Worn caliper piston seals
- · Worn master cylinder piston cups
- Worn brake pads/disc
- Contaminated caliper
- · Contaminated master cylinder
- Caliper not sliding properly
- Low brake fluid level
- Clogged fluid passage
- Warped/deformed brake disc
- · Sticking/worn caliper pistons
- · Sticking/worn master piston
- Bent brake lever (VT750C2F/C2B)
- Bent brake lever/pedal (VT750C2S)

#### Brake lever hard

- Clogged/restricted hydraulic system
- · Sticking/worn caliper pistons
- Sticking/worn master piston
- · Caliper not sliding properly
- Bent brake lever (VT750C2F/C2B)
- Bent brake lever/pedal (VT750C2S)

#### Brake drag

- · Contaminated brake pads/disc
- Misaligned wheel
- Badly worn brake pads/disc
- Warped/deformed brake disc
- Caliper not sliding properly
- Clogged/restricted fluid passage
- Sticking caliper pistons

# BRAKE FLUID REPLACEMENT/AIR BLEEDING (VT750C2F/C2B)

#### NOTE:


- Do not allow foreign material to enter the system when filling the reservoir.
- When using a commercially available brake bleeder, follow the manufacturer's operating instructions.

#### **BRAKE FLUID DRAINING**


Turn the handlebar to the left until the front master cylinder reservoir is level before removing the reservoir cap.

Remove the following:

- Screws
- Reservoir cap
- Set plate
- Diaphragm

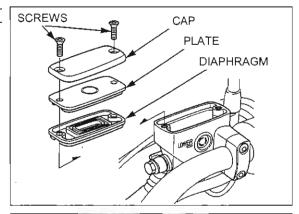

Connect a bleed hose to the bleed valve. Loosen the bleed valve and pump the brake lever until no more fluid flows out of the bleed valve. Tighten the bleed valve.

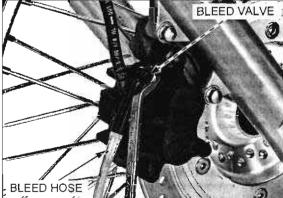

#### BRAKE FLUID FILLING/BLEEDING


Fill the reservoir with DOT 4 brake fluid from a sealed container.

Connect a commercially available brake bleeder to the bleed valve.

Operate the brake bleeder and loosen the bleed valve. If an automatic refill system is not used, add brake fluid when the fluid level in the reservoir is low.

#### NOTE:

- Check the fluid level often while bleeding to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacturer's operating instructions.

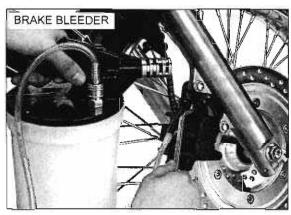


Perform the bleeding procedure until the system is completely flushed/bled.

#### NOTE:

 If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape.

Close the bleed valve and operate the brake lever. If it is still spongy, bleed the system again.

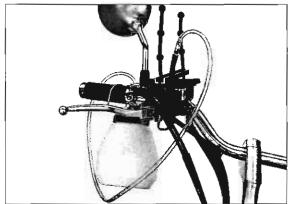

If a brake bleeder is not available, use the following procedure:

Fill the reservoir with DOT 4 brake fluid from a sealed container.

Connect a bleed hose to the bleed valve.

Pressurize the system with the brake lever until lever resistance is felt.

 Squeeze the brake lever, open the bleed valve 1/4 turn and then close it.


#### NOTE:

- Do not release the lever until the bleed valve has been closed.
- Release the brake lever slowly and wait several seconds after it reaches the end of its travel.

Repeat steps 1 and 2 until air bubbles do not appear in the bleed hose.


After bleeding the air completely, tighten the bleed valve to the specified torque.

TORQUE: 5.5 N·m (0.6 kgf·m, 4.1 lbf·ft)

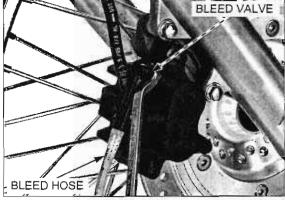



Fill the reservoir to the casting ledge with DOT 4 brake fluid.

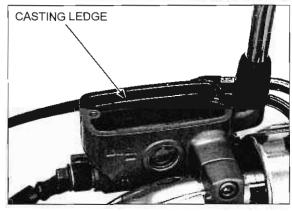


Install the following:

- Diaphragm
- Set plate
- Reservoir cap
- Screws

Tighten the screws to the specified torque.

TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

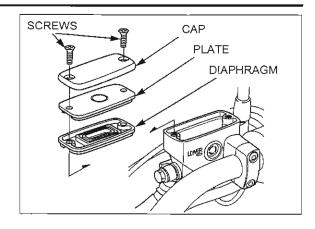

# BRAKE FLUID REPLACEMENT/AIR BLEEDING (VT750C2S)

### NOTE:

- Do not allow foreign material to enter the system when filling the reservoir.
- When using a commercially available brake bleeder, follow the manufacturer's operating instructions.


### **BRAKE FLUID DRAINING**

### FRONT:

Turn the handlebar to the left until the front master cylinder reservoir is level before removing the reservoir cap.


Remove the following:

- Screws
- Reservoir cap
- Set plate
- Diaphragm

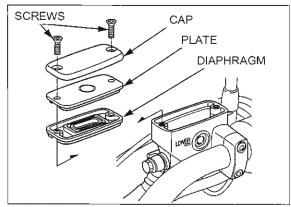

Connect a bleed hose to the front caliper upper bleed valve.

Loosen the upper bleed valve and pump the brake lever until no more fluid flows out of the upper bleed valve. Tighten the upper bleed valve.

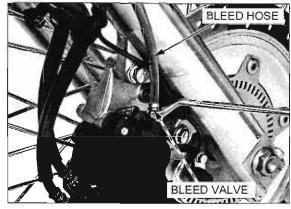


### REAR (COMBINED)

Support the motorcycle upright on a level surface.

Remove the following:


- Socket bolt
- Reservoir cover
- Screws
- Reservoir cap
- Set plate
- Diaphragm

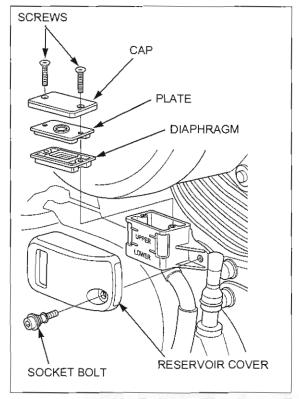

Connect a bleed hose to the front caliper lower bleed valve.

Loosen the lower bleed valve and pump the brake pedal until no more fluid flows out of the lower bleed valve.

Tighten the lower bleed valve.

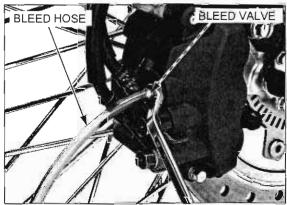


Connect a bleed hose to the rear caliper left bleed valve.

Loosen the left bleed valve and pump the brake pedal until no more fluid flows out of the left bleed valve. Tighten the left bleed valve.

Connect a bleed hose to the rear caliper right bleed valve.

Loosen the right bleed valve and pump the brake pedal until no more fluid flows out of the right bleed valve. Tighten the right bleed valve.

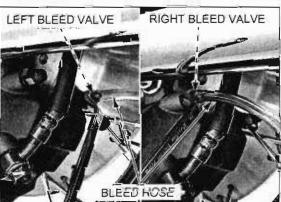

### BRAKE FLUID FILLING/BLEEDING

### FRONT: FLUID FEEDING/AIR BLEEDING

Do not mix different types of fluid since they are not compatible.

Do not mix different Fill the reservoir with DOT 4 brake fluid from a sealed types of fluid since container.

Connect a commercially available brake bleeder to the front caliper upper bleed valve.

Operate the brake bleeder and loosen the upper bleed valve.

If an automatic refill system is not used, add brake fluid when the fluid level in the reservoir is low.

#### NOTE:

- Check the fluid level often while bleeding to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacture's operating instructions.

Perform the bleeding procedure until the system is completely flushed/bled


### NOTE:

If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape.

Close the bleed valve and operate the brake lever. If it is still spongy, bleed the system again.

After bleeding the air completely, tighten the bleed valve to the specified torque.

TORQUE: 5.5 N·m (0.6 kgf·m, 4.1 lbf·ft)

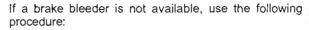

Fill the reservoir with DOT 4 brake fluid from a sealed container.

Connect a bleed hose to the upper bleed valve.


Pressurize the system with the brake lever until lever resistance is felt.


Do not release the brake lever until the bleed valve has been closed.


- Squeeze the brake lever, open the front brake caliper upper bleed valve 1/4 turn and then close it.
- Release the brake lever slowly until the upper bleed valve has been closed.
- Repeat steps 1 and 2 until air bubbles do not appear in the bleed hose.

After bleeding the air completely, tighten the bleed valve to the specified torque.


TORQUE: 5.5 N·m (0.6 kgf·m, 4.1 lbf·ft)

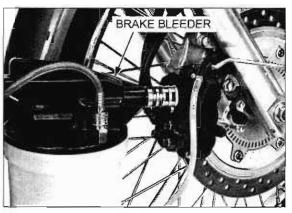

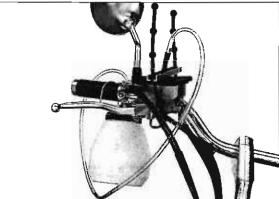

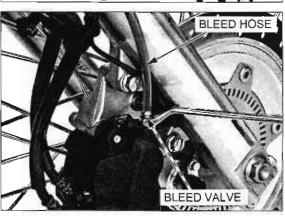

Fill the reservoir to the casting ledge with DOT 4 brake fluid.

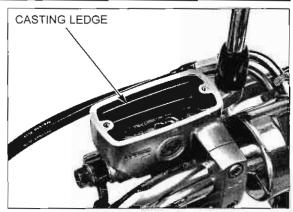


Install the following:

- Diaphragm
- Set plate
- Reservoir cap
- Screws

Tighten the screws to the specified torque.

TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

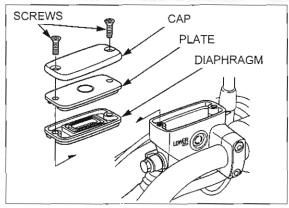

### REAR (COMBINED): FLUID FEEDING

Fill with the fluid and bleed air from the brake pedal line in the sequence as follow:

- 1. Front brake caliper lower bleed valve
- 2. Rear brake caliper left bleed valve
- 3. Rear brake caliper right bleed valve

Do not mix different types of fluid since they are not compatible. Fill the reservoir with DOT 4 brake fluid from a sealed container.

Connect a commercially available brake bleeder to the front caliper lower bleed valve.

Operate the brake bleeder and loosen the lower bleed valve

If an automatic refill system is not used, add brake fluid when the fluid level in the reservoir is low.

### NOTE:

- Check the fluid level often while bleeding to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacture's operating instructions.

Perform the bleeding procedure until the system is completely flushed/bled

### NOTE:


If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape.


Close the bleed valve and operate the brake pedal. If it is still spongy, bleed the system again.

After bleeding the air completely, tighten the rear brake caliper left bleed valve to the specified torque.

### TORQUE: 5.5 N·m (0.6 kgf·m, 4.1 lbf·ft)

Repeat the fluid feeding procedure about 2 - 3 times at rear brake caliper right bleed valve.

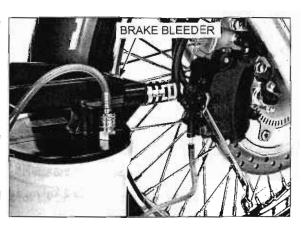


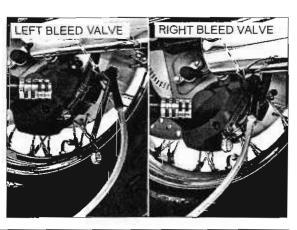

If a brake bleeder is not available, use the following procedure:

Fill the reservoir with DOT 4 brake fluid from a sealed container.

Connect a bleed hose to the lower bleed valve.

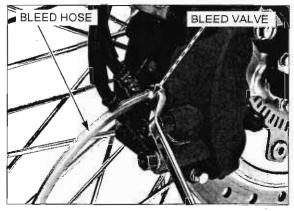

Pressurize the system with the brake pedal until pedal resistance is felt.

Do not release the brake pedal until the bleed valve has been closed.

- 1. Pump the brake pedal, open the rear brake caliper left bleed valve 1/4 turn and then close it.
- Release the brake pedal slowly until the rear brake caliper left bleed valve has been closed.
- Repeat steps 1 and 2 until air bubbles do not appear in the bleed hose.
- Repeat the fluid feeding procedure at rear brake caliper right bleed valve.

After bleeding the sir completely, tighten the bleed valve to the specified torque.

### TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

Fill the reservoir to the casting ledge with DOT 4 brake fluid.

Install the following:


- Diaphragm
- Set plate
- Reservoir cap
- Screws


Tighten the screws to the specified torque.

### TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

Install the reservoir cover.

Install and tighten the socket bolt securely.

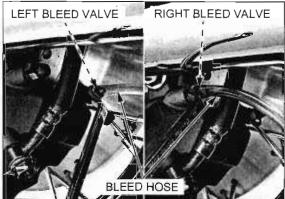

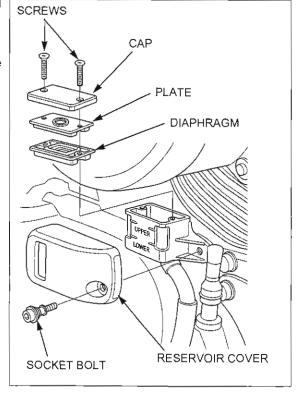

### REAR (COMBINED): AIR BLEEDING

Fill the reservoir with DOT 4 brake fluid from a sealed container.

Connect a commercially available brake bleeder to the front brake caliper lower bleed valve.

Operate the brake bleeder and loosen the lower bleed valve.

If an automatic refill system is not used, add brake fluid when the fluid level in the reservoir is low.

#### NOTE

- Check the fluid level often while bleeding to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacturer's operating instructions.

Perform the bleeding procedure until the system is completely flushed/bled

#### NOTE:

If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape.

Close the bleed valve and operate the brake pedal. If it is still spongy, bleed the system again.

After bleeding the air completely, tighten the rear brake caliper left bleed valve to the specified torque.


### TORQUE: 5.5 N·m (0.6 kgf·m, 4.1 lbf·ft)


Repeat the fluid feeding procedure about 2 - 3 times at rear brake caliper right bleed valve.


If a brake bleeder is not available, use the following procedure:


Fill the reservoir with DOT 4 brake fluid from a sealed container.

Connect a bleed hose to the lower bleed valve.

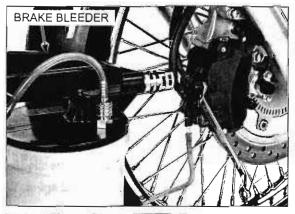

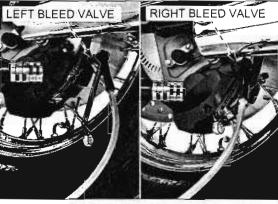

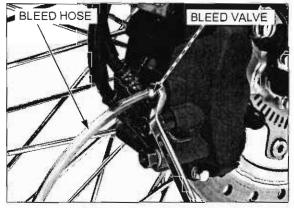

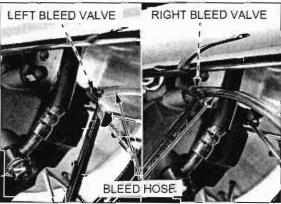

Pressurize the system with the brake pedal until strong pedal resistance is felt.

- Pump the brake pedal, open the rear brake caliper left bleed valve 1/4 turn and then close it.
- Release the brake pedal slowly until the rear brake caliper left bleed valve has been closed.
- Repeat steps 1 and 2 until air bubbles do not appear in the bleed hose.
- Repeat the fluid feeding procedure at rear brake caliper right bleed valve.

Do not release the

been closed.

brake pedal until the bleed valve has

After bleeding the sir completely, tighten the bleed valve to the specified torque.

### TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

Fill the reservoir to the casting ledge with DOT 4 brake fluid.

Install the following:


- Diaphragm
- Set plate
- Reservoir cap
- Screws

Tighten the screws to the specified torque.

### TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

Install the reservoir cover.

Install and tighten the socket bolt securely.

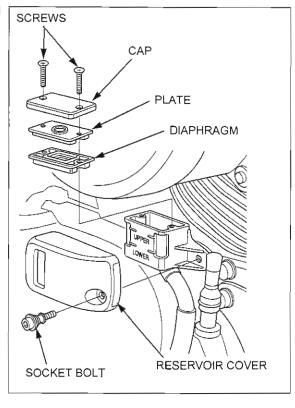


### **BRAKE PAD/DISC**

## BRAKE PAD REPLACEMENT (VT750C2F/C2B)


fluid level in the reservoir as this operation causes the level to rise.

Check the brake Push the caliper piston all the way in to allow fluid level in the installation of new brake pads.

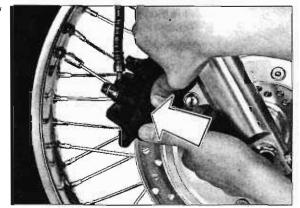


Remove the pad pin plug and loosen the pad pin.

Pull the pad pin out of the caliper body while pushing in the pads against the pad spring.

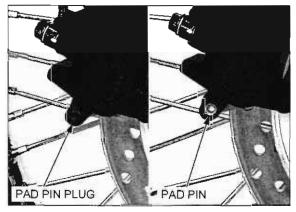

Remove the brake pads.

Make sure the pad spring is installed correctly. Always replace the brake pads in pairs to ensure even disc pressure. Install new brake pads into the caliper so their ends rest into the pad retainer on the bracket properly.

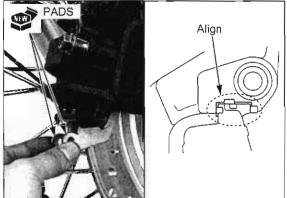

Install the pad pin by pushing in the pads against the pad spring to align the pad pin holes in the pads with the caliper body.


Tighten the pad pin to the specified torque.

### TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

Install the pad pin plug and tighten it to the specified torque.

### TORQUE: 2.5 N·m (0.3 kgf·m, 1.8 lbf·ft)

Operate the brake lever to seat the caliper piston against the pads.

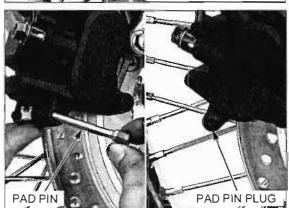


## BRAKE PAD REPLACEMENT (VT750C2S)

### FRONT:


Check the brake fluid level in the reservoir as this operation causes the level to rise.

Push the caliper piston all the way in to allow installation of new brake pads.

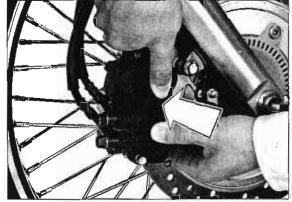


Loosen the pad pin.


Pull the pad pin out of the caliper body while pushing in the pads against the pad spring.

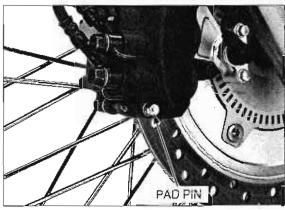

Remove the brake pads.

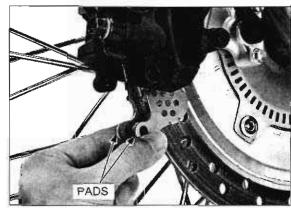

Make sure the pad spring is installed correctly. Always replace the brake pads in pairs to ensure even disc pressure. Install new brake pads into the caliper so their ends rest into the pad retainer on the bracket properly.

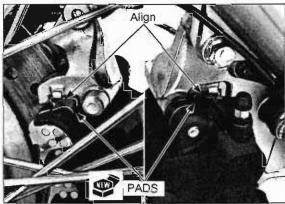


Apply silicone grease to the stopper ring on the pad pin. Install the pad pin by pushing in the pads against the

pad spring to align the pad pin holes in the pads with the caliper body.

Tighten the pad pin to the specified torque.


TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

Operate the brake lever to seat the caliper piston against the pads.

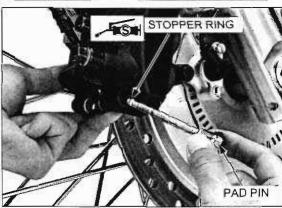


### REAR:

Remove the pad pin plug and loosen the pad pin.

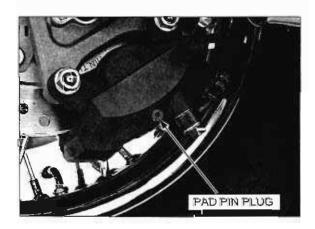


Loosen the pad pin.

Remove the rear caliper pin bolts and rear brake caliper.

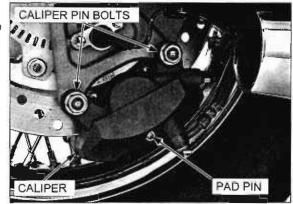

Remove the pad pin and pad spring.

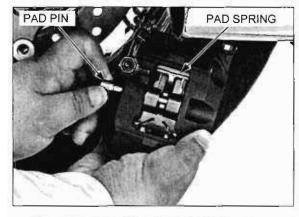


Check the brake fluid level in the reservoir as this operation causes the level to rise.

Check the brake Push the caliper piston all the way in to allow fluid level in the installation of new brake pads.

Remove the brake pads.


Clean the inside of the caliper especially around the caliper pistons.

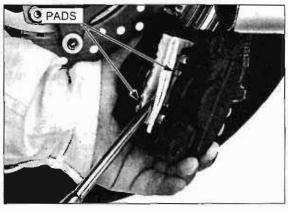

Make sure the pad spring is installed correctly. Always replace the brake pads in pairs to ensure even disc pressure.

Make sure the pad Install new brake pads into the caliper.

Install the pad pin by pushing in the pads against the pad spring to align the pad pin holes in the pads with the caliper body.

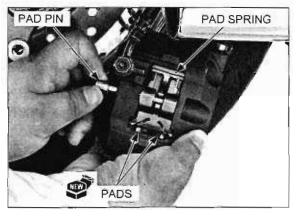


### HYDRAULIC BRAKE

Install and tighten the new rear brake caliper pin bolts to the specified torque.

TORQUE: 45 N·m (4.6 kgf·m, 33 lbf·ft)

Tighten the pad pin to the specified torque.


TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

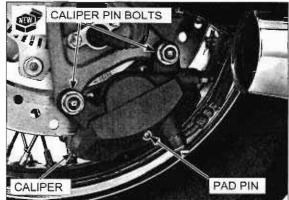

Install the pad pin plug and tighten it to the specified torque.

TORQUE: 2.5 N·m (0.3 kgf·m, 1.8 lbf·ft)

Operate the brake pedal to seat the caliper piston against the pads.

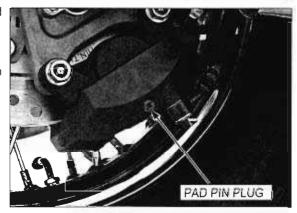

### **BRAKE DISC INSPECTION**

Visually inspect the disc for damage or cracks.

Measure the brake disc thickness at several points.


VT750C2F/C2B:

SERVICE LIMIT: 5.0 mm (0.20 in)

VT750C2S:

SERVICE LIMITS:

FRONT: 4.0 mm (0.16 in) REAR: 5.0 mm (0.20 in)

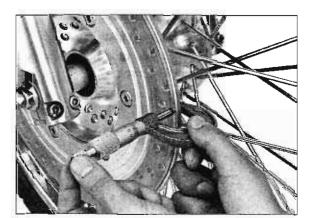


Measure the brake disc warpage with a dial indicator.

SERVICE LIMIT: 0.30 mm (0.012 in)

Check the bearing for excessive play, if the warpage exceeds the service limit.

Replace the brake disc if the bearings are normal.

For brake disc replacement (page 14-19).

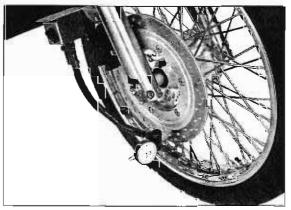

### FRONT MASTER CYLINDER

### **DISASSEMBLY**


Drain the brake fluid from the hydraulic system (page 16-8).

Remove the rearview mirror.


When removing the oil bolt, cover the end of the hose to prevent contamination.

When removing the oil bolt and sealing washers.


oil bolt, cover the Disconnect the front brake light switch connectors.

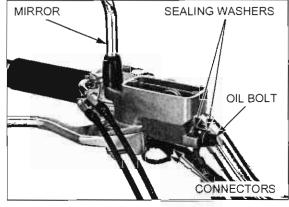


Remove the bolts, holder and master cylinder.

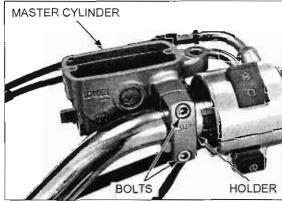


Remove the nut, pivot bolt and brake lever.

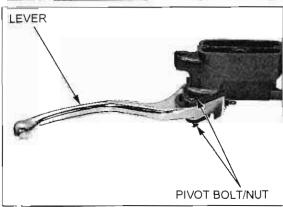

Remove the screw and front brake light switch.

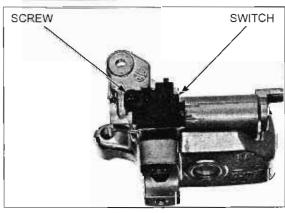

Remove the boot.

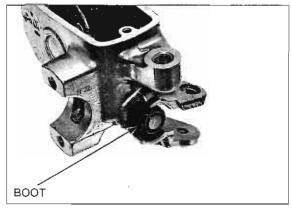


Remove the snap ring using a special tool.

TOOL:


Snap ring pliers

07914-SA50001

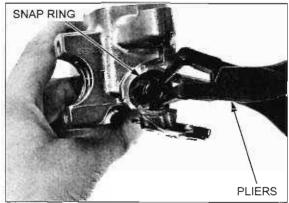

Remove the washer, master piston and spring.

Clean the master cylinder, reservoir and master piston in clean brake fluid.

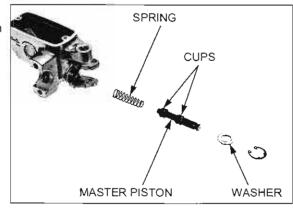


### **INSPECTION**

Check the master cylinder for abnormal scratches or damage.

Measure the master cylinder I.D.

SERVICE LIMIT: 11.05 mm (0.435 in)

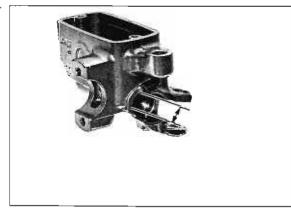


Check the piston cups and boot for wear, deterioration or damage.


Check the master piston for abnormal scratches or damage.

Measure the master piston O.D.


SERVICE LIMIT: 10.945 mm (0.4309 in)

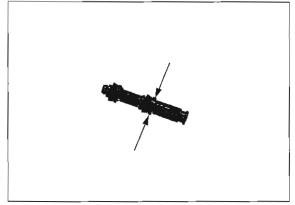

Check the spring for fatigue or damage.

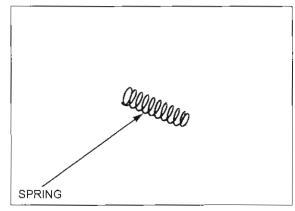

### **ASSEMBLY**

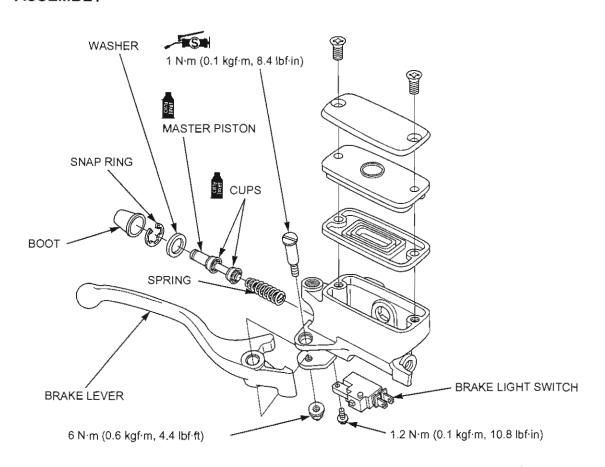

NOTE:


Replace the piston, spring, cups, washer and snap ring as a set.

Coat the master piston and piston cups with clean brake fluid.

Install the spring onto the piston end.

piston cup lips to turn inside out.

Do not allow the Install the master piston/spring into the master cylinder. Install the washer on the piston.

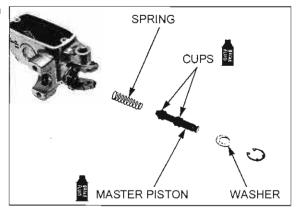

Install the snap ring into the groove in the master cylinder using a special tool.

### TOOL:

### Snap ring pliers

### 07914-SA50001

- · Install the snap ring and washer with the chamfered edges facing the thrust load side.
- Do not reuse worn snap ring which could easily spin in the groove.
- · Check that the snap ring is seated in the grooves.


Install the boot into the master cylinder and piston groove.


contacting area of the piston.

Install the brake light switch, aligning its boss with the groove of the master cylinder.

Install and tighten the screw to the specified torque.

TORQUE: 1.2 N·m (0.1 kgf·m, 10.8 lbf·in)

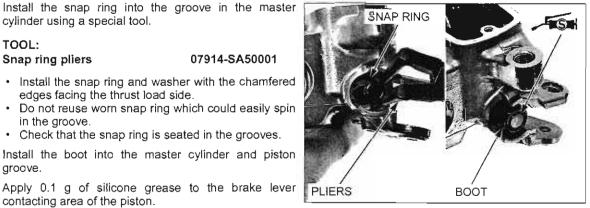

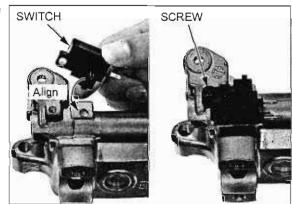


Apply 0.1 g of silicone grease to the brake lever pivot sliding surface.

Install the brake lever and pivot bolt, and tighten it to the specified torque.

TORQUE: 1 N·m (0.1 kgf·m, 8.4 lbf·in)

Tighten the nut to the specified torque while holding the pivot bolt.


TORQUE: 6 N·m (0.6 kgf·m, 4.4 lbf·ft)

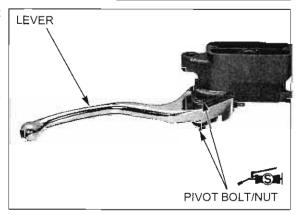

Install the holder with its "UP" mark facing up.

Install the master cylinder with the holder and two bolts. Align the edge of the master cylinder with the punch mark on the handlebar and tighten the upper bolt first, then tighten the lower bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

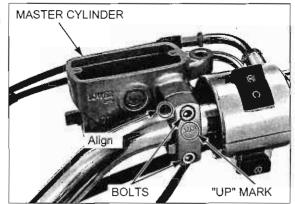

Connect the brake hose to the master cylinder with the oil bolt and new sealing washers.

Be sure to rest the hose joint against the stopper.


Tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Install the rearview mirror.

Connect the brake light switch connectors.

Fill and bleed the hydraulic system (page 16-8).

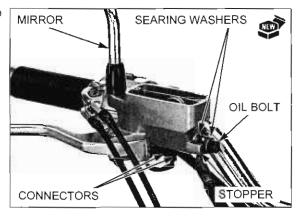

VT750C2B/C2S;

Connect the brake hose to the master cylinder with the oil bolt and new sealing washers.

### NOTE:

Be sure to rest the hose joint stopper against the stopper on the master cylinder.


Tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Install the rearview mirror.

Connect the brake light switch connectors.

Fill and bleed the hydraulic system (page 16-8).

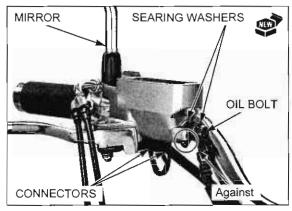

### FRONT BRAKE CALIPER (VT750C2F/ C2B)

### DISASSEMBLY

Drain the brake fluid from the hydraulic system (page

Remove the brake pads (page 16-16).

When removing the oil bolt, cover the end of hose to prevent contamination.


Remove the oil bolt and sealing washers.




### **HYDRAULIC BRAKE**

caliper mounting assembly. bolts.


Do not reuse the Remove the mounting bolts and brake caliper

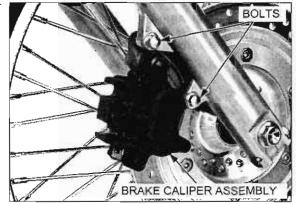

Remove the bracket from the caliper body.

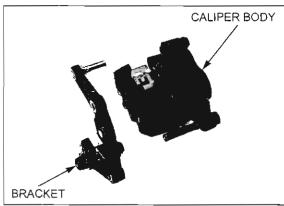


Remove the bracket pin boot and pad spring from the caliper body.

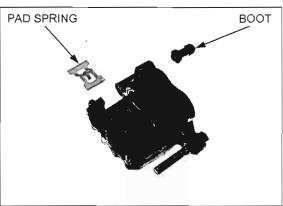

Remove the caliper pin boot and pad retainer from the

Clean the retainer and bracket mating surfaces.

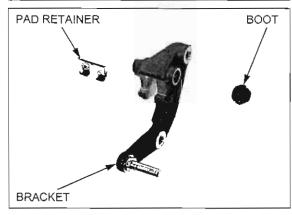

Do not use high Place a shop towel over the pistons.


pressure air or Position the caliper body with the piston facing down bring the nozzle too and apply small squirts of air pressure to the fluid inlet close the inlet. to remove the pistons.



Be careful not to damage the piston sliding surface.

Push the dust and piston seals in and lift them out.

Clean the seal grooves, caliper cylinders and pistons with clean brake fluid.

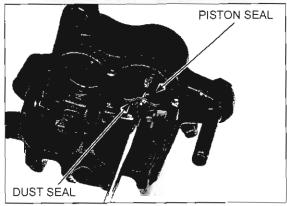

### INSPECTION

Check the caliper cylinders for scoring, scratches or damage.


Measure the caliper cylinder I.D.

VT750C2F:

SERVICE LIMIT: 27,060 mm (1.0654 in)

VT750C2B:

SERVICE LIMIT: 25.460 mm (1.0024 in)

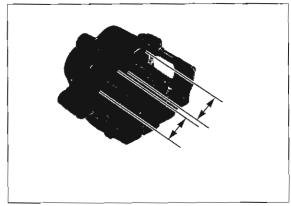

Check the caliper pistons for scoring, scratches or damage.


Measure the caliper piston O.D.

VT750C2F:


SERVICE LIMIT: 26.930 mm (1.0602 in)

VT750C2B:

SERVICE LIMIT: 25.320 mm (0.9968 in)

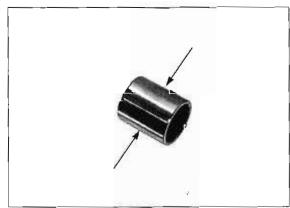


### **ASSEMBLY**

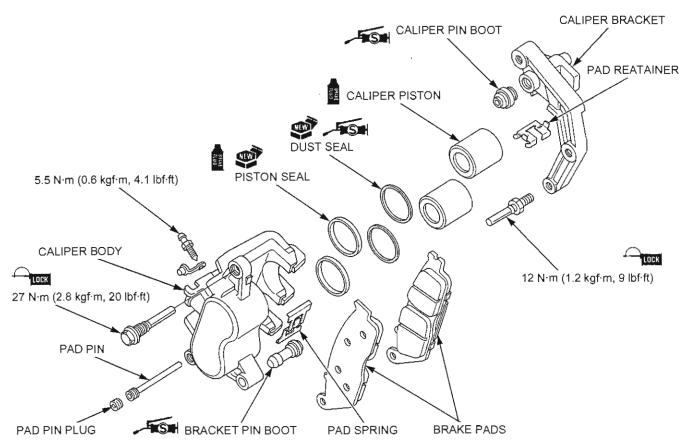

Coat new piston seals with clean brake fluid, new dust seals with silicone grease and install them into the seal grooves in the caliper.

Coat the caliper pistons with clean brake fluid and install them into the caliper cylinders with the opening toward the pads.

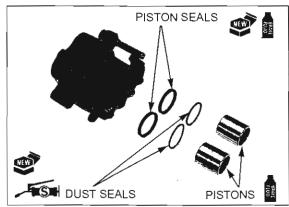

Check the caliper pin boot and replace it if it is hard, deteriorated or damaged.

Apply 0.4 g of silicone grease to the inside of the caliper pin boot.


Install the caliper pin boot in the bracket.

Apply Honda Bond A or equivalent to the pad retainer mating surface.

Install the retainer onto the bracket.

If the bracket pin is removed, apply locking agent to the threads and tighten it.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

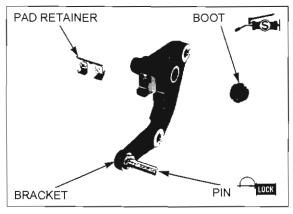

Check the bracket pin boot and replace it if it is hard, deteriorated or damaged.


Apply 0.4 g of silicone grease to the inside of the bracket pin boot.


Install the bracket pin boot and pad spring in the caliper.

If the caliper pin is removed, apply locking agent to the threads and tighten it.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)

Install the caliper bracket to the caliper body.

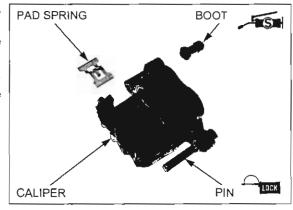


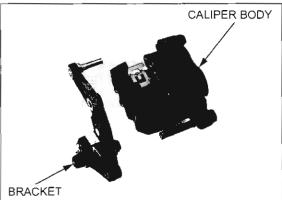

Install the brake caliper assembly so the disc is positioned between the pads, being careful not to damage the pads.

Install new caliper mounting bolts and tighten them to the specified torque.

TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

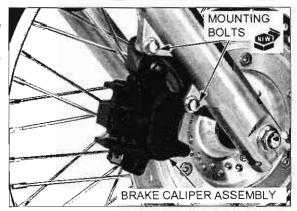


Connect the brake hose to the caliper body with the oil bolt and new sealing washers, and tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Instail the brake pads (page 16-16).

Fill and bleed the hydraulic system (page 16-8).

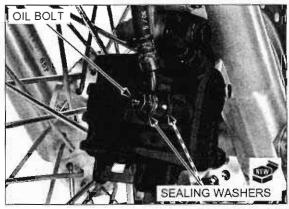

### FRONT BRAKE CALIPER (VT750C2S)

### DISASSEMBLY


Drain the brake fluid from the hydraulic system (page 16-8).

Remove the brake pads (page 16-16). Remove the front wheel speed sensor (page 17-24).


When removing the oil bolts, cover the end of hoses to prevent contamination.

Remove the oil bolts and sealing washers.


Remove the mounting bolts and brake caliper assembly.

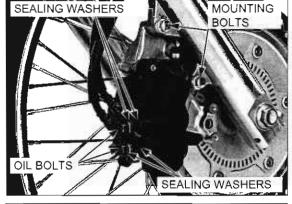

Remove the bracket from the caliper body.

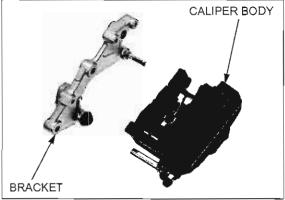


Remove the bracket pin boot and pad spring from the caliper body.

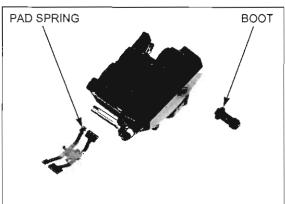

Remove the caliper pin boot and pad retainer from the bracket.

Clean the retainer and bracket mating surfaces.

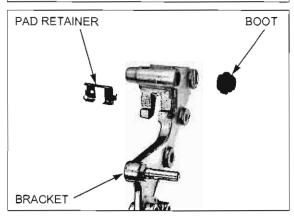


pressure air or

Do not use high Place a shop towel over the pistons.

Position the caliper body with the piston facing down bring the nozzle too and apply small squirts of air pressure to the fluid inlet close the inlet. to remove the pistons.

NOTE:


Mark the pistons to ensure correct reassembly.

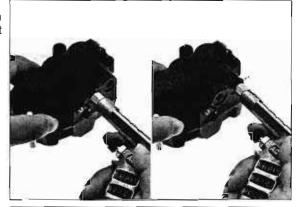

damage the piston sliding surface.

Be careful not to Push the dust and piston seals in and lift them out.

Clean the seal grooves, caliper cylinders and pistons with clean brake fluid.

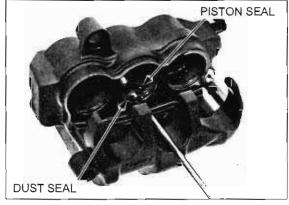


### INSPECTION

Check the caliper cylinders for scoring, scratches or damage.

Measure the caliper cylinder I.D.

SERVICE LIMITS:

Upper: 27.060 mm (1.0654 in) Middle: 22.712 mm (0.8942 in) Lower: 25.460 mm (1.0024 in)

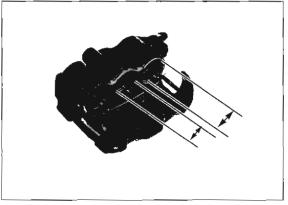


Check the caliper pistons for scoring, scratches or damage.


Measure the caliper piston O.D.

SERVICE LIMITS:

Upper: 26.930 mm (1.0602 in) Middle: 22.573 mm (0.8887 in) Lower: 25.310 mm (0.9965 in)

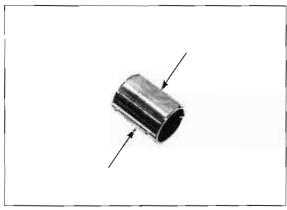


### **ASSEMBLY**

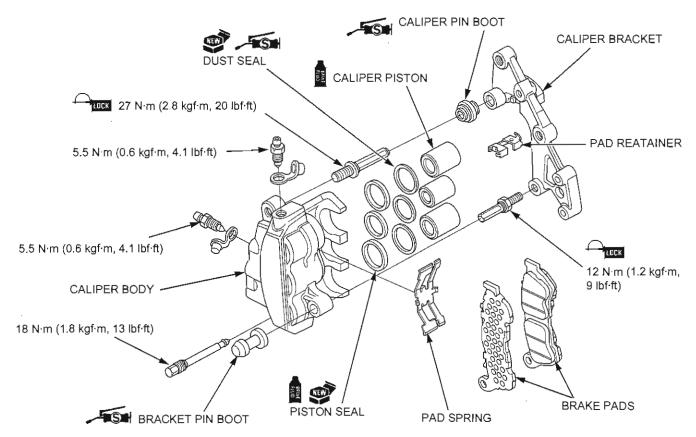

Coat new piston seals with clean brake fluid, new dust seals with silicone grease and install them into the seal grooves in the caliper.

Coat the caliper pistons with clean brake fluid and install them into the caliper cylinders with the opening toward the pads.

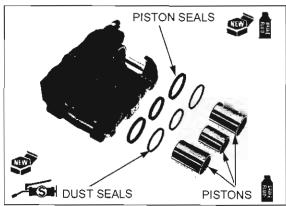

Check the caliper pin boot and replace it if it is hard, deteriorated or damaged.

Apply 0.4 g of silicone grease to the inside of the caliper pin boot.


Install the caliper pin boot in the bracket.

Apply Honda Bond A or equivalent to the pad retainer mating surface.

Install the retainer onto the bracket.

If the bracket pin is removed, apply locking agent to the threads and tighten it.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

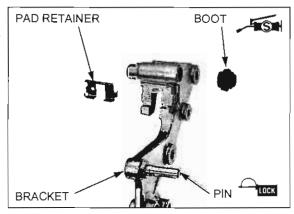


Check the bracket pin boot and replace it if it is hard, deteriorated or damaged.


Apply 0.4 g of silicone grease to the inside of the bracket pin boot.

Install the bracket pin boot and pad spring in the caliper. If the caliper pin is removed, apply locking agent to the threads and tighten it.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)

Install the caliper bracket to the caliper body.

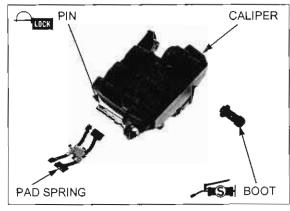

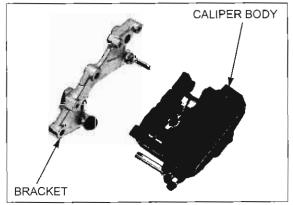

Install the brake caliper assembly so the disc is positioned between the pads, being careful not to damage the pads.

Install new caliper mounting bolts and tighten them to the specified torque.

### TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

Connect the brake hoses to the caliper body with the oil bolts and new sealing washers.

#### NOTE:


Be sure to rest the hose joint stopper against the stopper on the master cylinder.

Tighten the oil bolts to the specified torque.

### TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Install the front wheel speed sensor (page 17-24). Install the brake pads (page 16-16).

Fill and bleed the hydraulic system (page 16-12).

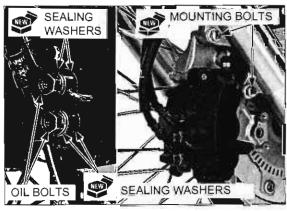


### **REAR MASTER CYLINDER (VT750C2S)**

### **DISASSEMBLY**

Drain the brake fluid from the hydraulic system (page 16-10).


Remove the push rod from the brake pedal by removing the cotter pin and joint pin.

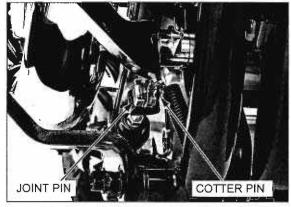

When removing the oil bolt, cover the end of the hose to prevent contamination.

Remove the oil bolt and sealing washers.

Remove the mounting bolts and rear master cylinder.

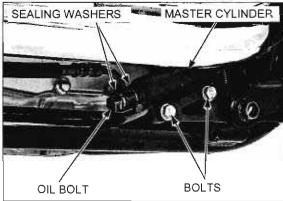


Remove the snap ring using a special tool.

### TOOL:

Snap ring pliers

07914-SA50001

Remove the reservoir hose joint and O-ring from the rear master cylinder.

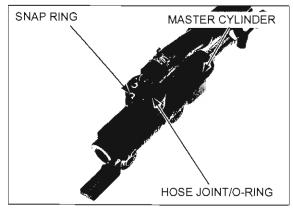

Remove the boot from the push rod groove and rear master cylinder.


Remove the snap ring using a special tool.

#### TOOL:

Snap ring pliers

07914-SA50001


Remove the push rod.

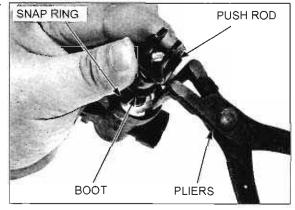

Remove the master piston, piston cup and spring.

Clean the master cylinder, reservoir and master piston in clean brake fluid.

Check the spring for fatigue or damage.

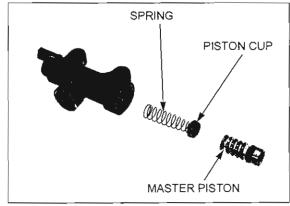


### **INSPECTION**

Check the master cylinder for abnormal scratches or damage.

Measure the master cylinder I.D.

SERVICE LIMIT: 14.055 mm (0.5533 in)

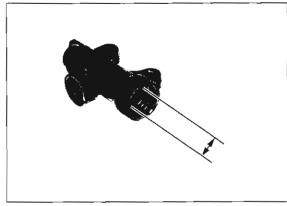


Check the piston cups and boot for wear, deterioration or damage.


Check the master piston for abnormal scratches or damage.

Measure the master piston O.D.

SERVICE LIMIT: 13.945 mm (0.5490 in)

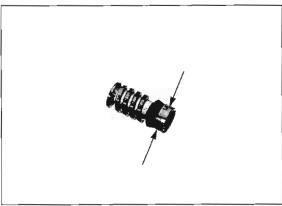

### **ASSEMBLY**

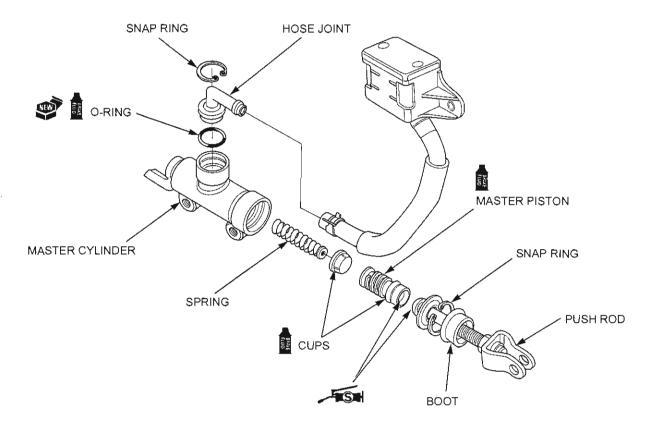

#### NOTE:

Replace the piston, spring, cups, washer and snap ring as a set.

Coat the master piston and piston cups with clean brake fluid.


Install the piston cup onto the spring.

Do not allow the piston cup lips to turn inside out. Install the spring/piston cup into the master cylinder.

Install the master piston/spring into the master cylinder.

Apply silicone grease to the piston contacting surface of the push rod.

Install the push rod into the master cylinder.

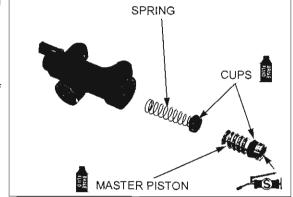

Install the snap ring into the groove in the master cylinder using a special tool.


### TOOL:

### Snap ring pliers

### 07914-SA50001

- Install the snap ring with the chamfered edges facing the thrust load side.
- Do not reuse worn snap ring which could easily spin in the groove.
- · Check that the snap ring is seated in the grooves.


Apply 1 g of silicone grease to the boot groove in the push rod and install the piston boot into the master cylinder and the groove in the push rod.

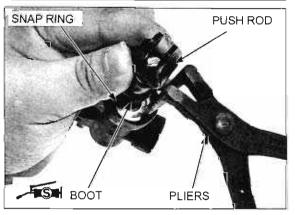

If the push rod is disassembled, adjust the push rod length as shown.


After adjustment, tighten the lock nut to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

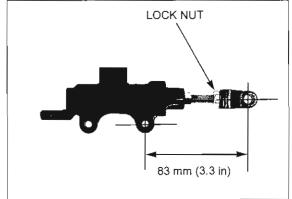

Apply clean brake fluid to a new O-ring and install it to the reservoir hose joint.

Install the reservoir hose joint into the master cylinder.

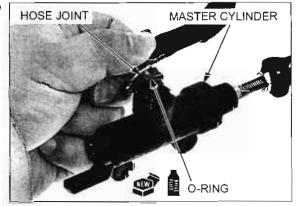


Install the snap ring into the master cylinder groove using a special tool.

TOOL:

Snap ring pliers

07914-SA50001

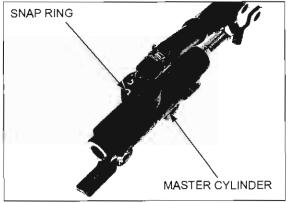


Install the master cylinder onto the frame and tighten the bolts securely.

Be sure to rest the hose joint stopper against the stopper on the master cylinder. Connect the brake hose to the master cylinder with the oil bolt and new seating washers.


Tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

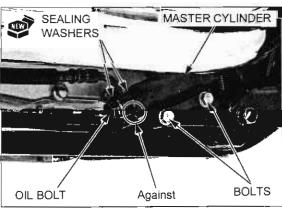

Install the push rod to the brake pedal with the joint pin and secure the joint pin with a new cotter pin.

Fill and bleed the hydraulic system (page 16-12).

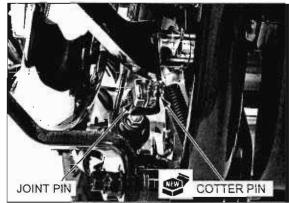

### **REAR BRAKE CALIPER (VT750C2S)**

### **DISASSEMBLY**

Drain the brake fluid from the hydraulic system (page 16-8).

When removing the oil bolt, cover the end of hose to prevent contamination. Remove the oil bolt and sealing washers.


Remove the brake pads (page 16-16).



Place a shop towel between the pistons.

Do not use high pressure air or bring the nozzle too close the inlet.


Do not use high Apply small squirts of air pressure to the fluid inlet to ssure air or bring remove the piston.

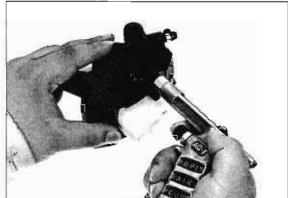

Be careful not to damage the piston sliding surface.

Be careful not to Push the dust and piston seals in and lift them out.

Clean the seal grooves, caliper cylinder and piston with clean brake fluid.

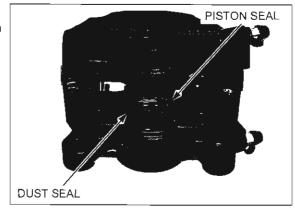


### **INSPECTION**

Check the caliper cylinders for scoring, scratches or damage.

Measure the caliper cylinder I.D.


SERVICE LIMIT: 38.24 mm (1.506 in)

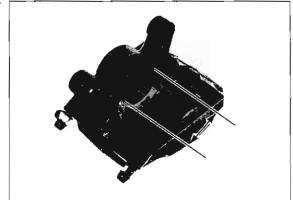


Check the caliper pistons for scoring, scratches or damage.

Measure the caliper piston O.D.

SERVICE LIMIT: 38.09 mm (1.499 in)

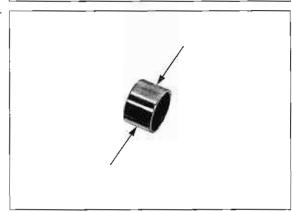


### **ASSEMBLY**

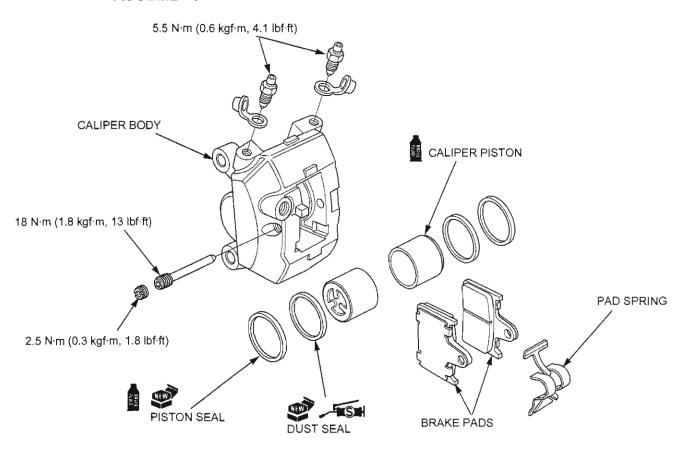

### HYDRAULIC BRAKE

Coat new piston seals with clean brake fluid, new dust seals with silicone grease and install them into the seal grooves in the caliper.

Coat the caliper pistons with clean brake fluid and install them into the caliper cylinders with the opening toward the pads.

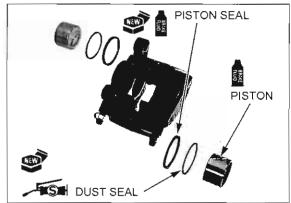

Install the brake pads (page 16-17).

Install the rear brake caliper onto the bracket.


Install and tighten the caliper pin bolts to the specified torque.

### TORQUE: 45 N·m (4.6 kgf·m, 33 lbf·ft)

Connect the brake hose to the caliper body with the oil bolt and new sealing washers, and tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Fill and bleed the hydraulic system (page 16-12).

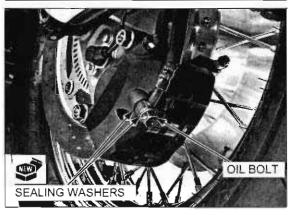


### **BRAKE PEDAL (VT750C2S)**


### **REMOVAL**

Remove the exhaust system (page 2-9).

Remove the push rod from the brake pedal by removing the cotter pin and joint pin.

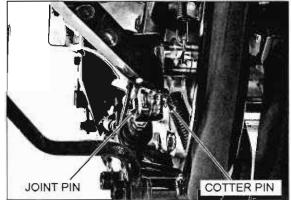

Unhook the brake pedal and rear brake light switch return springs.

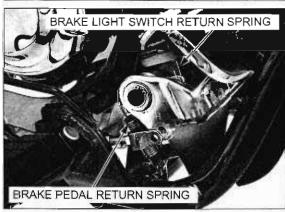


Remove the snap ring, washer and brake pedal assembly.


TOOL:

Snap ring pliers


07914-SA50001

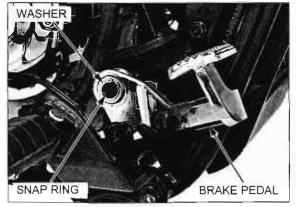

Remove the dust seals from the brake pedal.

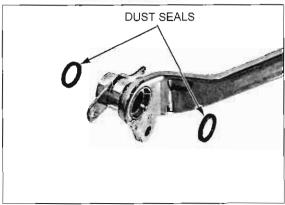


### **INSTALLATION**

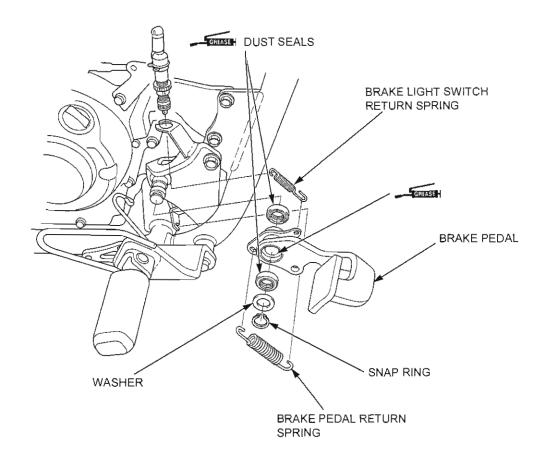

Apply grease to the dust seal lips. Install the dust seals to the brake pedal pivot.

Apply grease to the brake pedal pivot sliding surface.

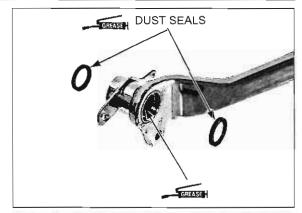

Install the brake pedal assembly to the bracket properly.


Install the washer and snap ring.

### TOOL:


### Snap ring pliers

07914-SA50001

- Install the snap ring with the chamfered edges facing the thrust load side.
- Do not reuse worn snap ring which could easily spin in the groove.
- · Check that the snap ring is seated in the grooves.

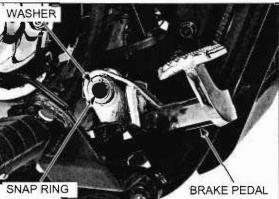


Hook the brake pedal and rear brake light switch return springs to the brake pedal.

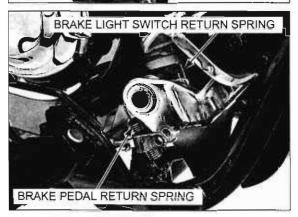

Install the push rod to the brake pedal with the joint pin and secure the joint pin with a new cotter pin.

Install the exhaust system (page 2-12).

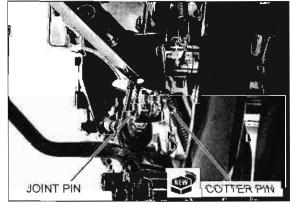


# 17. ANTI-LOCK BRAKE SYSTEM (ABS; VT750C2S)


ABS SYSTEM LOCATION17-2
ABS SYSTEM DIAGRAM17-3
SERVICE INFORMATION17-4
ABS CONNECTOR LOCATIONS17-5
ABS TROUBLESHOOTING INFORMATION17-7
ABS PROBLEM CODE INDEX17-10


ABS TROUBLESHOOTING17-11
ABS INDICATOR CIRCUIT TROUBLESHOOTING17-21
WHEEL SPEED SENSOR ······17-23
ABS MODULATOR/PCV17-26
PCV17-28

### **ABS SYSTEM LOCATION**

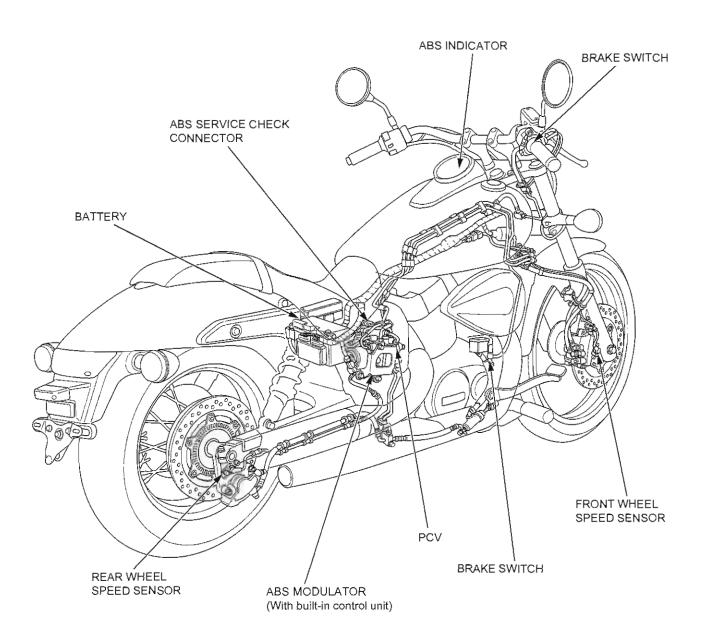

### **ABS SYSTEM DIAGRAM**

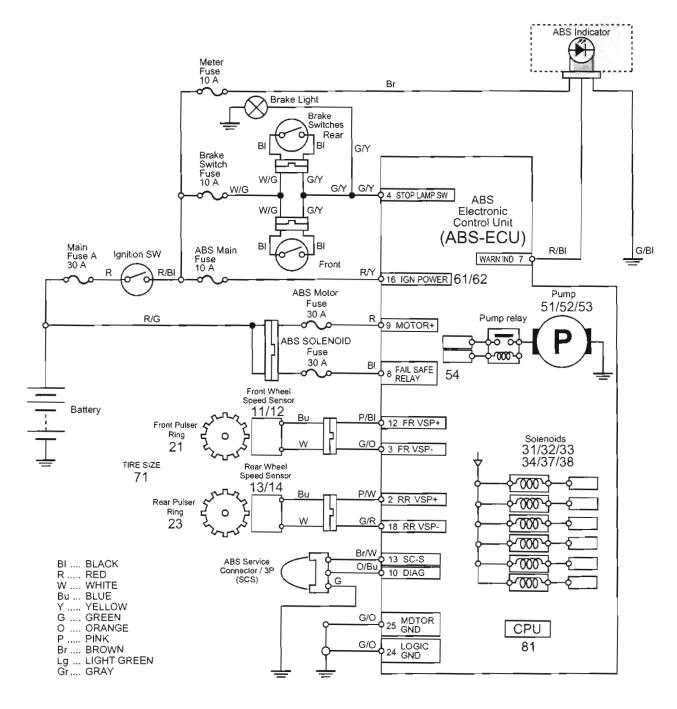

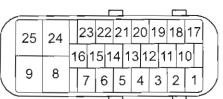

ABS MODULATOR 25P CONNECTOR (Modulator side/male terminals)

### SERVICE INFORMATION

### **GENERAL**

- · This section covers service of the Anti-lock Brake System (ABS). For conventional brake service, see (page 16-5).
- When the ABS control unit detects a problem, it stops the ABS function and switches back to the conventional brake operation, and the ABS indicator blinks or stays on. Take care during the test ride.
- Troubles not resulting from a faulty ABS (e.g. brake disc squeak, unevenly worn brake pad) cannot be recognized by the ABS diagnosis system.
- Read "ABS Troubleshooting information" carefully, inspect and troubleshoot the ABS system according to the Diagnostic Troubleshooting. Observe each step of the procedures one by one. Write down the problem code and probable faulty part before starting diagnosis and troubleshooting.
- After troubleshooting, erase the problem code and perform the pre-start self-diagnosis to be sure that the ABS indicator is
  operating normally.
- · When the wheel speed sensor and/or pulser ring is replaced, check the clearance (air gap) between both components.
- The ABS control unit (ECU) is mounted on the modulator (the modulator with the built-in ECU). Do not disassemble the ABS modulator. Replace the ABS modulator as an assembly when the it is faulty.
- The ABS modulator may be damaged if dropped. Also if a connector is disconnected when current is flowing, the excessive
  voltage may damage the control unit. Always turn off the ignition switch before servicing.
- · Be careful not to damage the wheel speed sensor and pulser ring when removing and installing the wheel.
- · The following color codes are used throughout this section.

Bu = Blue	G = Green	Lg = Light Green	R = Red
Bl = Black	Gr = Gray	O = Orange	W = White
Br = Brown	Lb = Light Blue	P = Pink	Y = Yellow


### **TORQUE VALUES**

Brake pipe joint nut 14 N·m (1.4 kgf·m, 10 lbf·ft) Apply brake fluid to the threads.


# **ABS CONNECTOR LOCATIONS**

NOTE 1: Remove the fuel tank (page 5-48).


FRONT WHEEL SPEED SENSOR 2P (Green) CONNECTOR (NOTE 1)

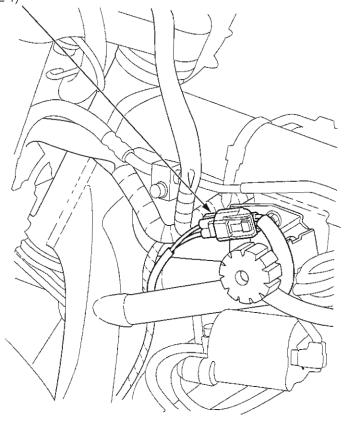

NOTE 2: Remove the seat (page 2-3).

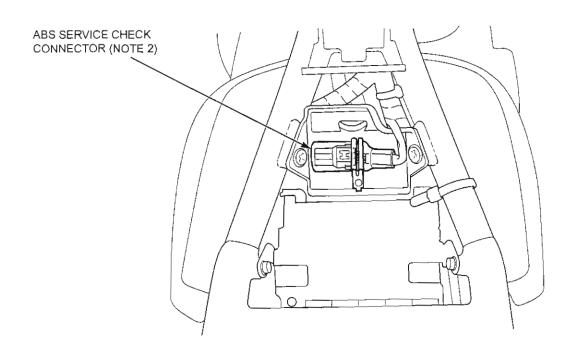


NOTE 3: Remove the right side cover (page 2-3).

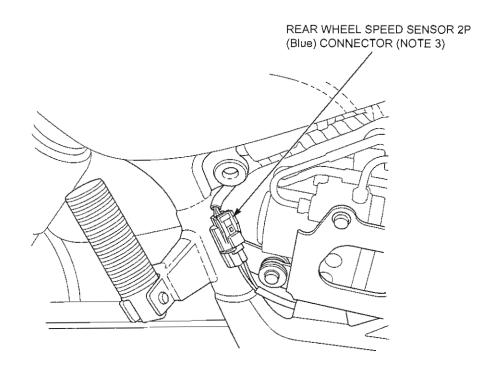

NOTE 4: Remove the right side cover and two bolts (page 2-3).

ABS MODULATOR 25P CONNECTOR (NOTE 4)

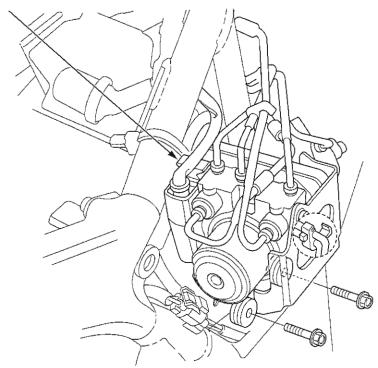

### ABS TROUBLESHOOTING INFORMATION

### SYSTEM DESCRIPTION

### ABS PRE-START SELF-DIAGNOSIS SYSTEM


The ABS pre-start self-diagnosis system diagnoses the electrical system as well as the operating status of the modulator. When there is any abnormality, the problem and the problematic part can be detected by outputting the problem code.

When the vehicle speed is approximately 10 km/h (6 mph) or more, the wheel speed sensor signal is sent to the ABS control unit, then the pre-start self-diagnosis system operates the pump motor (inside the modulator) and detects whether the hydraulic operation is normal, and it completes the pre-start self-diagnosis.

When the ABS is normal, the ABS indicator goes off just after a road speed of 10 km/h (6 mph) indicating that the diagnosis is completed.


If a problem is detected, the ABS indicator blinks or comes on and stays on to notify the rider of the problem. The self-diagnosis is also made while the motorcycle is running, and the indicator blinks when a problem is detected

When the indicator blinks, the cause of the problem can be identified by retrieving the problem code following the specified retrieval procedure (page 17-8).

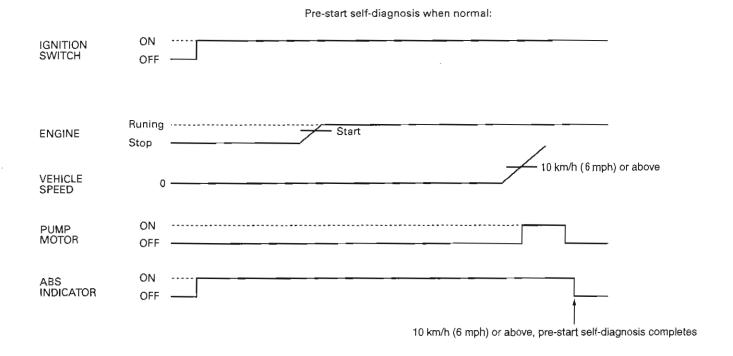


PRE-START SELF-DIAGNOSIS PROCEDURE (Daily check)

- 1. Turn the ignition switch to "ON".
- 2. Make sure the ABS indicator comes on.
- 3. Start the engine.
- Ride the motorcycle and increase the vehicle speed to approximately 10 km/h (6 mph).
- 5. The ABS is normal if the ABS indicator goes off.

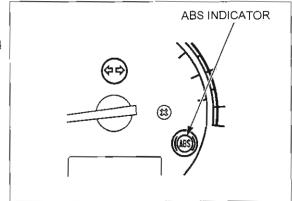


### PROBLEM CODE INDICATION PATTERN

- The ABS indicator indicates the problem code by blinking a specified number of times.
   The indicator has two types of blinks, a long blink and short blink. The long blink lasts for 1.3 seconds, the short blink lasts for 0.3 seconds. When a long blink occur, and two short blinks, that problem code is 12.
   Then, go to the troubleshooting and see problem code 12.
- When the ABS control unit stores some problem codes, the ABS indicator shows the problem codes in the
  order from the lowest number to highest number. For example, when the indicator indicates code 12, then
  indicates code 23, two failures have occurred.

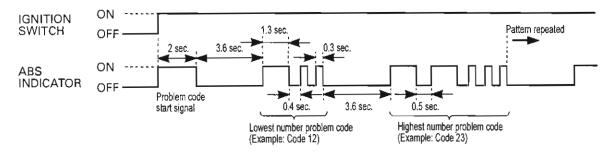

When the problem code is not stored:

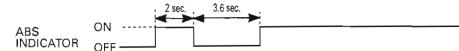

### PROBLEM CODE READOUT


### NOTE:

- The problem code is not erased by turning the ignition switch to "OFF" while the problem code is being
  output. Note that turning the ignition switch to "ON" again does not indicate the problem code. To show the
  problem code again, repeat the problem code retrieval procedures from the beginning.
- After diagnostic troubleshooting, erase the problem code(s) and perform the pre-start self-diagnosis to be sure that there is no problem in the ABS indicator (indicator is operating normally).
- 1. Remove the seat (page 2-3).

Remove the dummy connector from the ABS service check 3P (Natural) connector.

Short the wire terminals of the service check connector with a jumper wire with the ignition switch turned to "OFF".


CONNECTION: Brown/white - Green

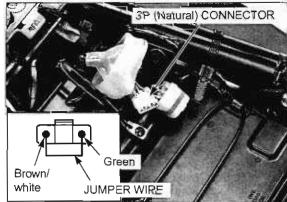

Do not apply the front or rear brake during retrieval. Turn the ignition switch to "ON". The ABS indicator should come on 2 seconds (start signal) (then goes off 3.6 seconds) and starts problem code indication.

The problem code is indicated by the number of the times of the indicator blinking.


If the problem code is not stored, the ABS indicator stays on.

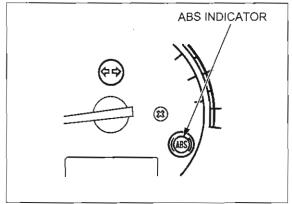

Turn the ignition switch to "OFF" and remove the jumper wire.

Connect the 3P (Natural) connector to the dummy connector.

Install the seat (page 2-3).

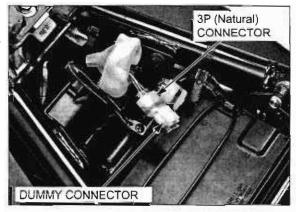


### CLEARING PROBLEM CODE

1. Remove the seat (page 2-3).

Short the wire terminals of the service check connector with a jumper wire with the ignition switch turned to "OFF" in the same way as retrieval.

CONNECTION: Green/red - Green

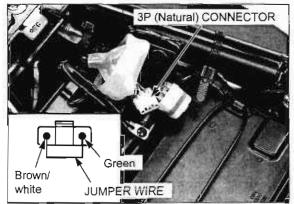


- Turn the ignition switch to "ON" while squeezing the brake lever. The ABS indicator should come on 2 seconds and go off.
- Release the brake lever immediately after the ABS indicator is off. The ABS indicator should come on.
- Squeeze the brake lever immediately after the ABS indicator is on. The ABS indicator should go off.
- Release the brake lever immediately after the ABS indicator is off.

When code erasure is complete, the ABS indicator blinks 2 times and stays on.

6. Turn the ignition switch to "OFF".

Connect the 3P (Natural) connector to the dummy connector.

Instail the seat (page 2-3).

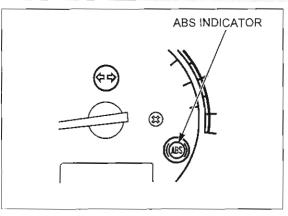

### ANTI-LOCK BRAKE SYSTEM (ABS; VT750C2S)

### **ABS PROBLEM CODE INDEX**

### NOTE:

- · The ABS indicator might blink in the following cases. Correct the faulty part.
  - Incorrect tire pressure.
  - Tires not recommended for the motorcycle were installed (incorrect tire size).
  - Deformation of the wheel or tire.
- The ABS indicator might blink while riding under the following conditions. This is temporary failure. Erase the problem code and
  perform the pre-start self-diagnosis. The ABS is normal if the indicator goes off. Ask the rider for the riding conditions in detail
  when the motorcycle is brought in for inspection.
  - The motorcycle has continuously run bumpy roads.
  - The front wheel leaves the ground for a long time when riding (wheelie).
  - Only either the front or rear wheel rotates.
  - The ABS operates continuously.
  - The ABS control unit has been disrupted by an extremely powerful radio wave (electromagnetic interference).

Problem	Function failure		ction	Symptom/Fail-safe function	Refer
Code		Α	В		to
_	ABS indicator circuit malfunction Indicator related wires			ABS indicator never comes     ON at all	17-21
				<ul> <li>ABS indicator stays ON at all</li> </ul>	17-21
11	Front wheel speed sensor circuit malfunction  • Wheel speed sensor or related wires	0	0	Stops ABS operation	17-11
12	Front wheel speed sensor malfunction  Wheel speed sensor or related wires  Electrical noise/intermittent interruption		0	Stops ABS operation	17-11
13	Rear wheel speed sensor circuit malfunction  • Wheel speed sensor or related wires	0	0	Stops ABS operation	17-13
14	Rear wheel speed sensor malfunction  Wheel speed sensor or related wires  Electrical noise/intermittent interruption		0	Stops ABS operation	17-13
21	Front wheel speed sensor pulse  • Pulser ring or wheel speed sensor		0	Stops ABS operation	17-11
23	Rear wheel speed sensor pulse  • Pulser ring or wheel speed sensor		0	Stops ABS operation	17-13
31	Solenoid valve malfunction			Stops ABS operation	
32					1
33		0	0		17-15
34					17-10
37					
38					
41	Front wheel lock			Stops ABS operation	
42	Riding condition (wheelie)     Wheel speed sensor or related wires		0		17-11
43	Rear wheel lock     Riding condition     Wheel speed sensor or related wires	}	0	Stops ABS operation	17-13
51	Motor lock	0	0	Stops ABS operation	
52	Motor stuck OFF	0	0	Stops ABS operation	17-15
53	Motor stuck ON	0	0	Stops ABS operation	]
54	Fail-safe relay circuit malfunction	0	0	Stops ABS operation	17-17
61	Power supply voltage low	O Stope ABS operation		17-19	
62	Power supply voltage high	0	O	Stops ABS operation	
71	Incorrect tire size		0	Stops ABS operation	17-20
81	CPU (ABS control unit) malfunction	0	0	Stops ABS operation	17-20

<sup>(</sup>A) Pre-start self-diagnosis (page 17-7)

(B) Ordinary self-diagnosis: diagnoses while the motorcycle is running (after pre-start self-diagnosis)

## **ABS TROUBLESHOOTING**

### NOTE:

- Perform inspection with the ignition switch turned to "OFF", unless otherwise specified.
- Refer to the ABS Connector Locations (page 17-5).
   All connector diagrams in the troubleshooting are viewed from the terminal side.
- Use a fully charged battery. Do not diagnose with a charger connected to the battery.
- When the ABS modulator assembly is detected to be faulty, recheck the wire harness and connector connections closely before replacing it.
- After troubleshooting, erase the problem code (page 17-9)

Test ride the motorcycle above 30 km/h (19 mph) and check the other problem code by retrieving the self-diagnosis system (page 17-8).

# PROBLEM CODE 11, 12, 21, 41 or 42 (Front Wheel Speed Sensor)

### NOTE

- The ABS indicator might blink under unusual riding or conditions (page 17-10). This is temporary failure.
   Erase the problem code and perform the pre-start self-diagnosis before troubleshooting. The ABS is normal if the indicator goes off.
- If the problem code 41 is indicated, check the front brake for drag.


### 1. Speed Sensor Air Gap Inspection

Measure the air gap between the wheel speed sensor and pulser ring (page 17-23).

### Is the air gap correct?

YES - GO TO STEP 2.

 Check each part for deformation and looseness and correct accordingly. Recheck the air gap.

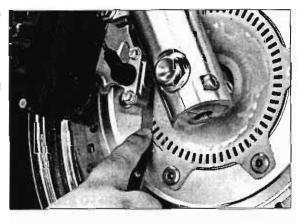

### 2. Speed Sensor Condition Inspection

Inspect the area around the speed sensor:

Check that there is iron or other magnetic deposits between the pulser ring and wheel speed sensor, and the pulser ring slots for obstructions.


Check installation condition of the pulser ring or wheel speed sensor for looseness.

Check the pulser ring and sensor tip for deformation or damage (e.g., chipped pulser ring teeth).

Are the sensor and pulser ring in good condition?

YES - GO TO STEP 3.

 NO – Remove any deposits. Install properly or replace faulty part.

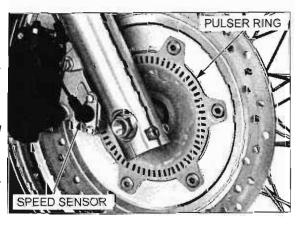

# Speed Sensor Line Short Circuit Inspection (at control unit side)

Remove the seat (page 2-3).

Disconnect the ABS modulator 25P connector and the speed sensor 2P (Green) connector.

Check for continuity between the Green/orange wire terminal of the connector and ground, and between the Pink/black wire terminal of the connector and ground.

CONNECTION: Green/orange – Ground Pink/black – Ground

### Is there continuity?

YES - Short circuit in wire between the ABS modulator and speed sensor.

NO - GO TO STEP 4.

### 4. Speed Sensor Line Open Circuit Inspection

Remove the fuel tank (page 5-48).

Short the Pink/black and Green/orange wire terminals of the ABS modulator 25P connector with a jumper wire.

Check for continuity between the terminals of the wire harness side sensor 2P (Green) connector.

### CONNECTION: Green/orange - Pink/black

### Is there continuity?

YES - GO TO STEP 5.

NO - Open circuit in wire between the ABS modulator and speed sensor.

# 2P (Green) CONNECTOR (Wire side/female terminals) Green/orange Pink/black MODULATOR 25P CONNECTOR (Wire side/female terminals)

MODULATOR 25P CONNECTOR

Green/orange

Plnk/black

(Wire side/female terminals)

### Speed Sensor Line Short Circuit Inspection (at sensor side)


Check for continuity between each terminal (Blue and White) of the sensor side 2P (Green) connector and ground in the same way as the previous step.

CONNECTION: Blue – Ground White – Ground

### Is there continuity?

YES - Faulty front wheel speed sensor.

NO - GO TO STEP 6.

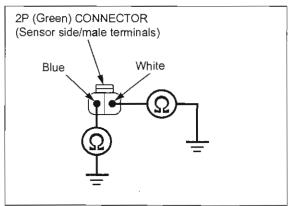

### 6. Failure Reproduction with a New Speed Sensor

Replace the front wheel speed sensor with a new one (page 17-24).


Connect the ABS modulator 25P connector. Erase the problem code (page 17-9).

Test ride the motorcycle above 30 km/h (19 mph). Retrieve the problem code (page 17-8).

### Does the indicator blink?

YES - Faulty ABS modulator.

NO – Faulty removed wheel speed sensor.

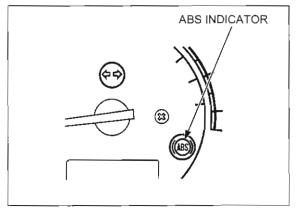

# PROBLEM CODE 13, 14, 23 or 43 (Rear Wheel Speed Sensor)

### NOTE:

- The ABS indicator might blink under unusual riding or conditions (page 17-10). This is temporary failure.
   Erase the problem code and perform the pre-start self-diagnosis before troubleshooting. The ABS is normal if the indicator goes off.
- If the problem code 43 is indicated, check the rear brake for drag.

### 1. Speed Sensor Air Gap Inspection


Measure the air gap between the speed sensor and pulser ring (page 17-23).

### Is the air gap correct?

YES - GO TO STEP 2.

 NO – Check each part for deformation and looseness and correct accordingly.

Recheck the air gap.

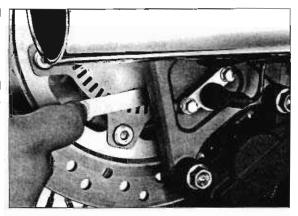

### 2. Speed Sensor Condition Inspection

Inspect the area around the speed sensor: Check that there is iron or other magnetic deposits between the pulser ring and wheel speed sensor, and the pulser ring slots for obstructions.


Check installation condition of the pulser ring or wheel speed sensor for looseness.

Check the pulser ring and sensor tip for deformation or damage (e.g., chipped pulser ring teeth).

# Are the sensor and pulser ring in good condition?

YES - GO TO STEP 3.

 NO – Remove any deposits. Install properly or replace faulty part.

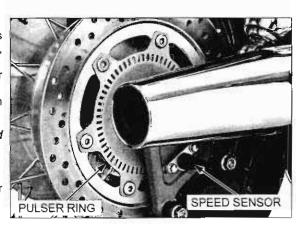

# Speed Sensor Line Short Circuit Inspection (at control unit side)

Remove the following:

- Seat (page 2-3)
- Left side cover (page 2-3)

Disconnect the ABS modulator 25P connector and the speed sensor 2P (Blue) connector.

Check for continuity between the Pink/white wire terminal of the connector and ground, and between the Green/red wire terminal of the connector and ground.

CONNECTION: Pink/white – Ground Green/red – Ground

### Is there continuity?

YES - Short circuit in wire between the ABS modulator and speed sensor.

NO - GO TO STEP 4.

### 4. Speed Sensor Line Open Circuit Inspection

Short the Pink/white and Green/red wire terminals of the ABS modulator 25P connector with a jumper wire.

Check for continuity between the terminals of the wire harness side sensor 2P (Blue) connector.

### CONNECTION: Pink/white - Green/red

### Is there continuity?

YES - GO TO STEP 5.

NO – Open circuit in wire between the ABS modulator and speed sensor.

# MODULATOR 25P CONNECTOR (Wire side/female terminals)

2P (Blue) CONNECTOR

Pink/white

(Wire side/female terminals)

Green/red

# Speed Sensor Line Short Circuit Inspection (at sensor side)


Check for continuity between each terminal (Blue and White) of the sensor side 2P (Blue) connector and ground in the same way as the previous step.

CONNECTION: Blue – Ground White – Ground

### Is there continuity?


YES - Faulty rear wheel speed sensor.

NO - GO TO STEP 6.

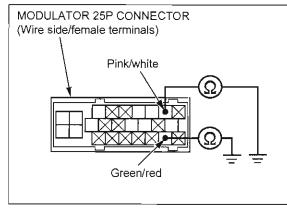

Pink/white

Green/red

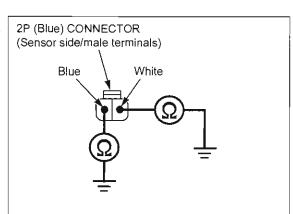

### 6. Failure Reproduction with a New Speed Sensor

Replace the rear wheel speed sensor with new one (page 17-25).


Connect the ABS modulator 25P connector. Erase the problem code (page 17-9).

Test ride the motorcycle above 30 km/h (19 mph). Retrieve the problem code (page 17-8).

### Does the indicator blink?

YES - Faulty ABS modulator.

NO – Faulty removed wheel speed sensor.

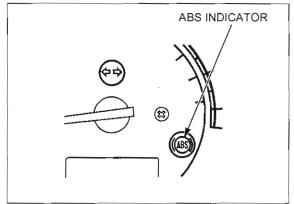

# PROBLEM CODE 31, 32, 33, 34, 37 or 38 (Solenoid Valve)


### 1. Failure Reproduction

Erase the problem code (page 17-9). Test ride the motorcycle above 30 km/h (19 mph). Retrieve the problem code (page 17-8).

Does the indicator indicate the code "31, 32, 33, 34, 37 or 38"?

YES - Faulty ABS modulator.

NO - Normal (problem code is not stored; temporary failure).

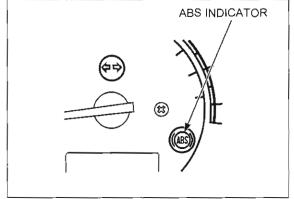

# PROBLEM CODE 51, 52 or 53 (Pump Motor)

### 1. Fuse Inspection


Remove the left side cover (page 2-3).

Check the "ABS MOTOR" fuse (30A) in the ABS fuse box for blown.

### Is the fuse blown?

YES - GO TO STEP 2.

NO - GO TO STEP 3.

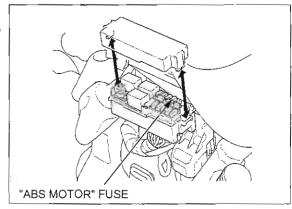


### 2. Motor Power Input Line Short Circuit Inspection

Disconnect the ABS modulator 25P connector. Check for continuity between the Red wire terminal of the 25P connector and ground with "ABS MOTOR" fuse removed.

CONNECTION: Red - Ground

### Is there continuity?

- YES Short circuit in Red wire between the fuse box and ABS modulator.
- NO Temporary failure (install a spare fuse and recheck from the first step).

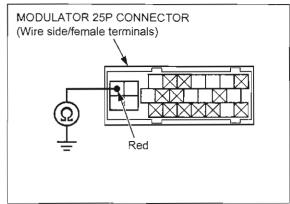


# 3. Motor Power Input Line Open Circuit Inspection (at control unit side)

Install the "ABS MOTOR" fuse.
Disconnect the ABS modulator 25P connector.
Measure the voltage between Red wire terminal (+) of the 25P connector and ground (-). There should be battery voltage at all times.

CONNECTION: Red (+) - Ground (-)

### Is there battery voltage?

**YES** - GO TO STEP 5. **NO** - GO TO STEP 4.

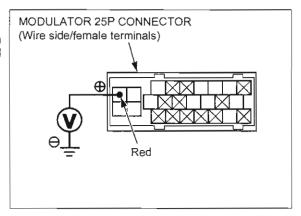


# 4. Motor Power Input Line Open Circuit Inspection (at battery side)

Disconnect the ABS battery 2P (White) connector. Measure the voltage between Red/green wire terminal (+) of the battery side 2P (White) connector and ground (–). There should be battery voltage at all times.

CONNECTION: Red/green (+) - Ground (-)

### Is there battery voltage?

- YES Open circuit in Red/green wire between the fuse box 2P (White) connector and control unit.
- NO Open circuit in Red/green wire between the battery and ABS battery 2P (White) connector.

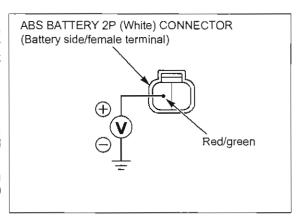


### 5. Failure Reproduction

Connect the ABS modulator 25P connector. Erase the problem code (page 17-9). Test ride the motorcycle above 30 km/h (19 mph). Retrieve the problem code (page 17-8).

Does the indicator indicate the code "51, 52, or 53"?

YES - Faulty ABS modulator.

NO - Normal (problem code is not stored; temporary failure).

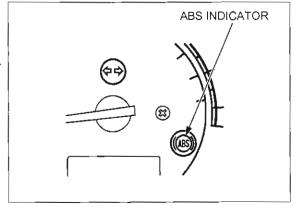

### PROBLEM CODE 54 (Fail-safe Relay)

### 1. Fuse Inspection


Remove the left side cover (page 2-3).

Check the "ABS FAIL-SAFE RELAY" fuse (20A) in the ABS fuse box for blown.

### Is the fuse blown?

YES - GO TO STEP 2.

NO - GO TO STEP 3.

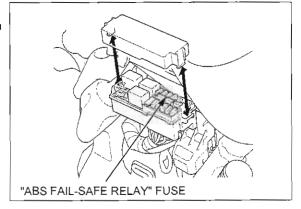

### 2. Relay Power Input Line Short Circuit Inspection


Disconnect the ABS modulator 25P connector. Check for continuity between the Black wire terminal of the 25P connector and ground with "ABS FAIL-SAFE RELAY" fuse removed.

### CONNECTION: Black - Ground

### Is there continuity?

YES - Short circuit in Black wire between the fuse box and ABS modulator.

NO - Temporary failure (install a spare fuse and recheck from the first step).

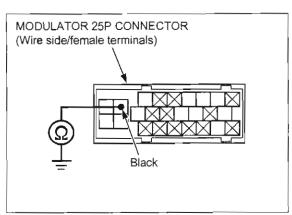

### ANTI-LOCK BRAKE SYSTEM (ABS; VT750C2S)


# 3. Relay Power Input Line Open Circuit Inspection (at control unit side)

Install the "ABS FAIL-SAFE RELAY" fuse. Disconnect the ABS modulator 25P connector. Measure the voltage between Red wire terminal (+) of the 25P connector and ground (–). There should be battery voltage at all times.

CONNECTION: Black (+) - Ground (-)

### Is there battery voltage?

**YES** - GO TO STEP 5. **NO** - GO TO STEP 4.

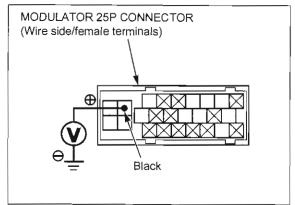


### Relay Power Input Line Open Circuit Inspection (at fuse box side)

Disconnect the ABS battery 2P (White) connector. Measure the voltage between Red/green wire terminal (+) of the battery side 2P (White) connector and ground (–). There should be battery voltage at all times.

CONNECTION: Red/green (+) - Ground (-)

### Is there battery voltage?

- YES Open circuit in Red/green wire between the ABS battery 2P (White) connector and control unit.
- NO Open circuit in Red/green wire between the battery and ABS battery 2P (White) connector.

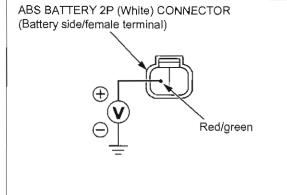


### 5. Failure Reproduction

Connect the ABS modulator 25P connector. Erase the problem code (page 17-9). Test ride the motorcycle above 30 km/h (19 mph). Retrieve the problem code (page 17-8).

### Does the indicator indicate the code "54"?

YES - Faulty ABS modulator.

NO - Normal (problem code is not stored; temporary failure).

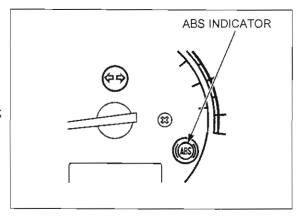

# PROBLEM CODE 61 or 62 (Power Circuit)

### 1. Fuse Inspection


Remove the left side cover (page 2-3).

Check the "ABS MAIN" fuse (10A) in the ABS main fuse box for blown.

### Is the fuse blown?

YES - GO TO STEP 2.

NO - GO TO STEP 3.

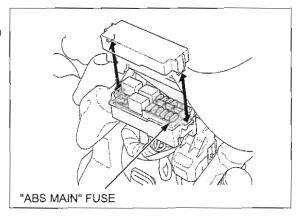

### 2. Power Input Line Short Circuit Inspection


Disconnect the ABS modulator 25P connector. Check for continuity between the Red/yellow wire terminal of the 25P connector and ground with "ABS MAIN" fuse removed.

### CONNECTION: Red/yellow - Ground

### Is there continuity?

YES - Short circuit in Red/yellow wire between the fuse box and ABS modulator.

NO – Temporary failure (install a spare fuse and recheck from the first step).

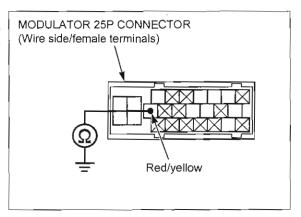

### 3. Power Input Line Open Circuit Inspection

Install the "ABS MAIN" fuse.

Measure the voltage between the Red/yellow wire terminal of the ABS modulator 25P connector and ground.

There should be battery voltage with the ignition switch turned to "ON".


### CONNECTION: Red/yellow (+) - Ground (-)

### Is there battery voltage?

YES - GO TO STEP 4.

NO

- Open circuit in Black or Red/yellow wire between the ignition switch and ABS modulator.
  - If the wire is OK, check the charging system.

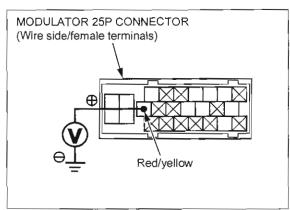


### 4. Failure Reproduction

Connect the ABS modulator 25P connector. Erase the problem code (page 17-9). Test ride the motorcycle above 30 km/h (19 mph). Retrieve the problem code (page 17-8).

### Does the indicator indicate the code "61 or 62"?

YES - Faulty ABS modulator.

NO – Normal (problem code is not stored; temporary failure).

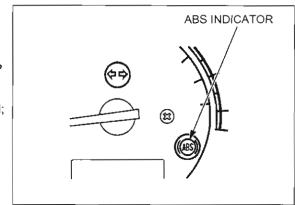

### PROBLEM CODE 71 (Tire Size)

### NOTE

- · Check the following and correct the faulty part.
  - ~ Incorrect tire pressure.
  - Tires not recommended for the motorcycle were installed (incorrect tire size).
  - Deformation of the wheel or tire.

### 1. Failure Reproduction

If the above items are normal, recheck the problem code indication:


Erase the problem code (page 17-9).

Test ride the motorcycle above 30 km/h (19 mph). Retrieve the problem code (page 17-8).

### Does the indicator indicate the code "71"?

YES - Faulty ABS modulator.

NO – Normal (problem code is not stored; temporary failure).

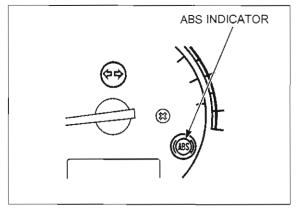

# PROBLEM CODE 81 (CPU; ABS Control Unit)


### 1. Failure Reproduction

Erase the problem code (page 17-9). Test ride the motorcycle above 30 km/h (19 mph). Retrieve the problem code (page 17-8).

### Does the indicator indicate the code "81"?

YES - Faulty ABS modulator.

NO – Normal (problem code is not stored; temporary failure).

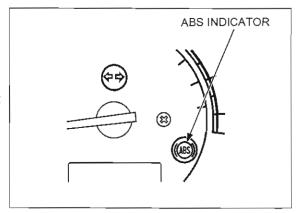

# ABS INDICATOR CIRCUIT TROUBLESHOOTING

ABS INDICATOR DOES NOT COME ON (when the ignition switch turned to "ON")

# 1. Combination Meter Power/Ground Line Inspection

Check the speedometer power and ground lines (page 21-13).

### Are the wires normal?

YES - GO TO STEP 2.

NO - Open circuit in related wires.

### 2. Indicator Operation Inspection

Remove the left side cover (page 2-3).


Pull the lock lever up and disconnect the ABS modulator 25P connector.

Turn the ignition switch to "ON" and check the ABS indicator.

### Does the indicator come on?

YES - Faulty ABS modulator.

NO - GO TO STEP 3.

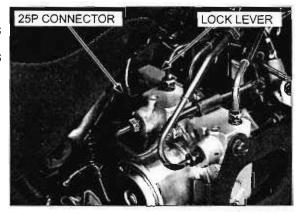

### 3. Indicator Signal Line Short Circuit Inspection

Remove the speedometer (page 21-15).

Remove the combination meter 16P connector dust cover.


With the 16P connector connected, check for continuity between the Red/black wire terminal of the harness side connector and ground.

### CONNECTION: Red/black - Ground

### Is there continuity?

YES – Short circuit in Red/black wire between the combination meter and ABS modulator.

NO - Faulty combination meter.

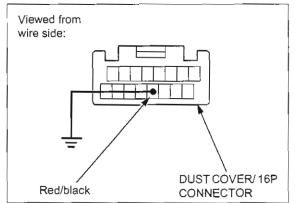

# ABS INDICATOR STAYS ON (Indicator does not go off when the motorcycle is running, and Problem Code is not indicated by the retrieval procedure)

### 1. Fuse Inspection


Remove the left side cover (page 2-3).

Check the "ABS MAIN" fuse (10A) in the ABS main fuse box for blown.

### Is the fuse blown?

YES - GO TO STEP 2.

NO – GO TO STEP 3.

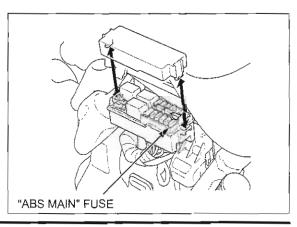

### 2. Power Input Line Short Circuit Inspection


Disconnect the ABS modulator 25P connector. Check for continuity between the Red/yellow wire terminal of the 25P connector and ground with "ABS MAIN" fuse removed.

### CONNECTION: Red/yellow - Ground

### Is there continuity?

YES - Short circuit in Red/yellow wire between the fuse box and ABS modulator.

NO – Temporary failure (install a spare fuse and recheck from the first step).

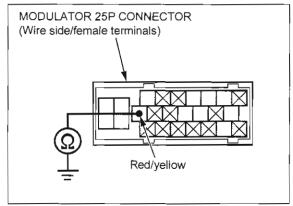

### 3. Power Input Line Open Circuit Inspection

Install the "ABS MAIN" fuse.

Measure the voltage between the Red/blue wire terminal of the ABS modulator 25P connector and ground.

There should be battery voltage with the ignition switch turned to "ON".


### CONNECTION: Red/yellow (+) - Ground (-)

### Is there battery voltage?

YES - GO TO STEP 4.

NO - Open circuit in Red/yellow wire between the ABS main fuse box and ABS modulator.

 If the wire is OK, check the charging system.

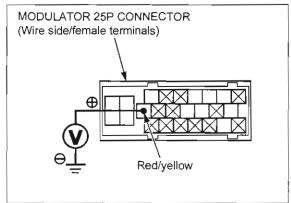

### 4. Service Check Line Short Circuit Inspection


Check for continuity between the Brown/white wire terminal of the ABS modulator 25P connector and ground.

### CONNECTION: Brown/white - Ground

### Is there continuity?

YES - Short circuit in Brown/white wire between the service check connector and ABS modulator.

NO - GO TO STEP 5.

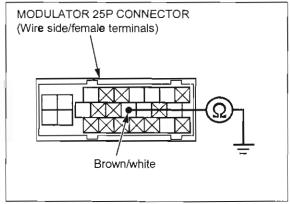

### 5. Indicator Operation Inspection

Remove the speedometer (page 21-15).

Remove the combination meter 16P connector dust cover.


With the 16P connector connected, short the Red/ black wire terminal of the 16P connector and ground with a jumper wire.

Check the ABS indicator with the ignition switch turned to "ON".

### Does it go off?

YES - GO TO STEP 6.

NO - Faulty combination meter.

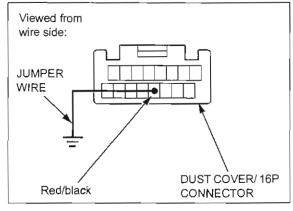

### 6. Indicator Signal Line Open Circuit Inspection

Remove the jumper wire from the combination meter 16P connector.

Short the Red/black wire terminal of the ABS modulator 25P connector and ground with a jumper wire.

Check the ABS indicator with the ignition switch turned to "ON".

### Does it go off?

YES - GO TO STEP 7.

 Open circuit in White/black wire between the combination meter and ABS modulator.

# MODULATOR 25P CONNECTOR (Wire side/female terminals) JUMPER WIRE Red/black

### 7. Logic Ground Line Open Circuit Inspection


Remove a jumper wire from the ABS modulator 25P connector.

Check for continuity between the Green/orange wire terminal of the ABS modulator 25P connector and ground.

### Is there continuity?

YES - Faulty ABS modulator.

 NO - Open circuit in Green/orange wire between the ABS modulator and ground.

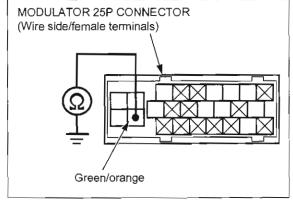

### WHEEL SPEED SENSOR

### AIR GAP INSPECTION


Support the motorcycle securely using a hoist or equivalent and raise the wheel off the ground.

Measure the clearance (air gap) between the sensor and pulser ring at several points by turning the wheel slowly.

It must be within specification.

### STANDARD: 0.4 - 1.2 mm (0.01 - 0.05 in)

The sensor air gap cannot be adjusted. If it is not within specification, check each installation part for deformation, looseness and damage.

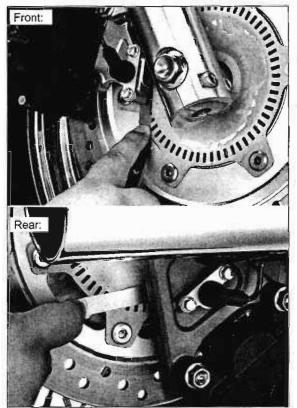


### ANTI-LOCK BRAKE SYSTEM (ABS; VT750C2S)

### **REPLACEMENT**


### FRONT WHEEL SPEED SENSOR

Remove the fuel tank (page 5-48).

Disconnect the front wheel speed sensor 2P (Green) connector.

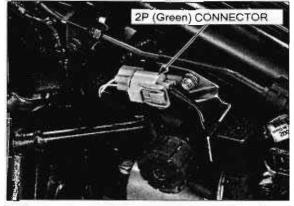


Release the sensor wire clip from the radiator. Release the sensor wire from the wire clamps.

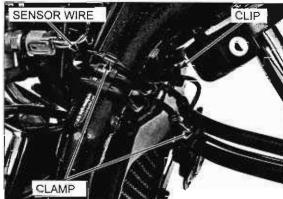


Remove the bolt and release the sensor wire from the brake hose clamp.

Release the sensor wire from the wire clamp.

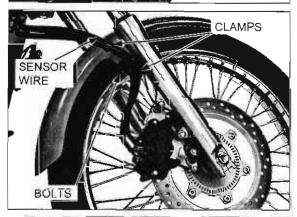

Remove the bolt and wire clamp.

Remove the wheel speed sensor mounting bolts and guide.

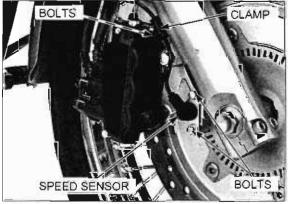


Remove the wheel speed sensor from the caliper bracket.

Clean around the mounting area of the caliper bracket thoroughly, and be sure that no foreign material is allowed to enter the mounting hole.

Route the sensor wire properly (page 1-43). Install a new speed sensor in the reverse order of removal.

After installation, check the air gap (page 17-23).

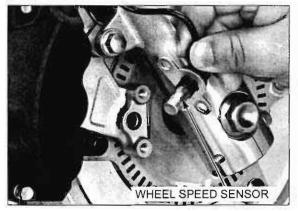


### **REAR WHEEL SPEED SENSOR**


Remove the right side cover (page 2-3).

Disconnect the rear wheel speed sensor 2P (Blue) connector.


Release the sensor wire from the frame clamp and remove the wire clip from the brake pipe stay.

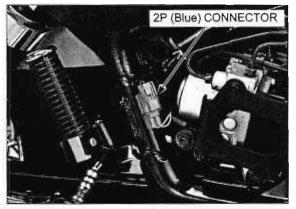

Remove the mounting bolts and rear wheel speed sensor.

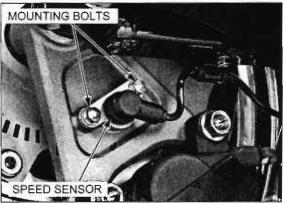

Remove the bolts, sensor wire and clamps.

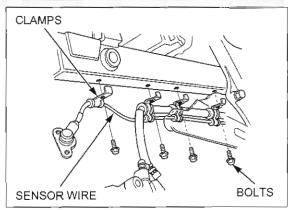


### ANTI-LOCK BRAKE SYSTEM (ABS; VT750C2S)

Clean around the mounting area of the caliper bracket thoroughly, and be sure that no foreign material is allowed to enter the mounting hole.

Route the sensor wire properly (page 1-43).

Install a new speed sensor in the reverse order of removal.

After installation, check the air gap (page 17-23).

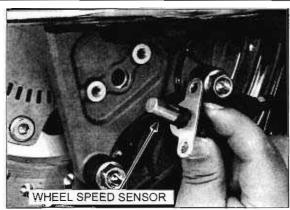


### **ABS MODULATOR/PCV**

### **REMOVAL**


Drain the brake fluid from the front and rear hydraulic systems.

Remove the side cover (page 2-3).

Remove the ABS modulator/PCV stay mounting bolts/washers.

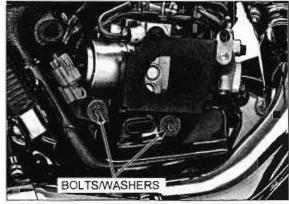


Pull the lock lever up and disconnect the ABS modulator 25P connector.

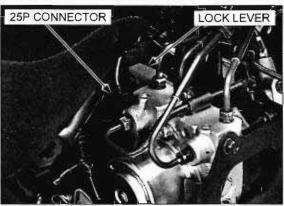


When loosening the joint nuts, cover the end of the brake pipes to prevent contamination.

When loosening the Loosen the brake pipe joint nuts and disconnect the loint nuts, cover the brake pipes.

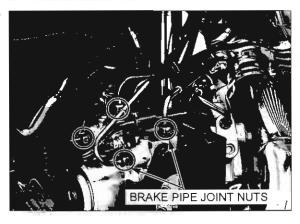


Be careful not to bend or damage the brake pipes during removal.


Be careful not to Loosen the PCV connecting pipe joint nuts and remove bend or damage the rear brake pipe B.

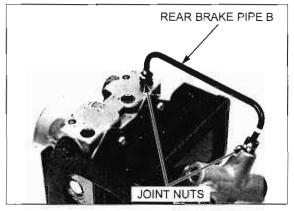


Remove the modulator mounting bolts and ABS modulator from the stay.

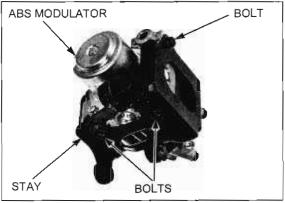

### INSTALLATION

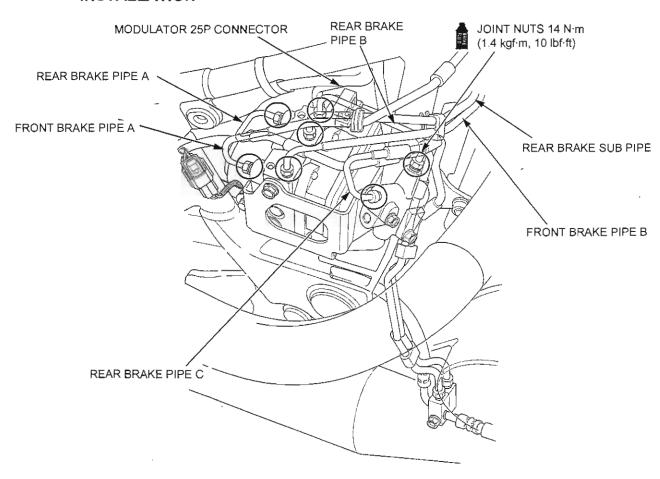

Tighten the modulator mounting bolt and side mounting bolt securely.

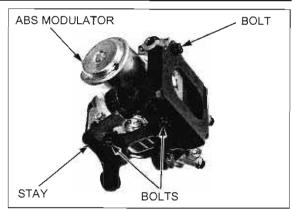

Installation is in the reverse order of removal by loosely tightening all the fasteners.

### NOTE:

 Apply brake fluid to the PCV connecting pipe joint nut and brake pipe joint nut threads.

Tighten the PCV connecting pipe joint nuts to the specified torque.

### TORQUE: 14 N·m (1.4 kgf·m, 10 lbf·ft)

Tighten the modulator mounting bolt and side mounting bolt securely.

Tighten the brake pipe joint nuts to the specified torque.


### TORQUE: 14 N·m (1.4 kgf·m, 10 lbf·ft)


Connect the ABS modulator 25P connector.

Install and tighten the ABS modulator/PCV stay mounting bolts/washers securely.

Fill and bleed the hydraulic systems (page 16-12).

Install the right side cover (page 2-3).

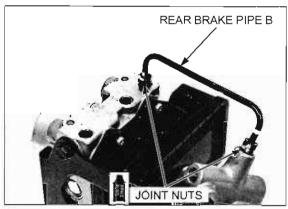

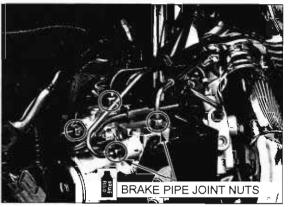

### **PCV**

### **REMOVAL/INSTALLATION**

Remove the right side cover (page 2-3).

Drain the brake fluid from the front and rear hydraulic systems (page 16-10).

Remove the brake pipe joint nuts.

Remove the mounting bolts and the PCV.

Installation is in the reverse order of removal.


### NOTE:

Apply brake fluid to the brake pipe joint nut threads.

### TORQUE:

Brake pipe joint nut:

14 N·m (1.4 kgf·m, 10 lbf·ft)

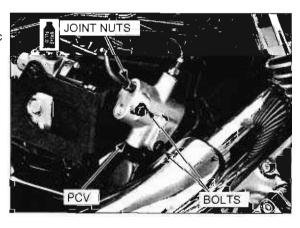


# 18. BATTERY/CHARGING SYSTEM

SYSTEM LOCATION18-2	BATTERY18-7
SYSTEM DIAGRAM18-3	CHARGING SYSTEM INSPECTION 18-8
SERVICE INFORMATION18-4	REGULATOR/RECTIFIER ······ 18-9
TROUBLESHOOTING18-6	ALTERNATOR CHARGING COIL 18-10


18

# SYSTEM LOCATION


### VT750C2F/C2B

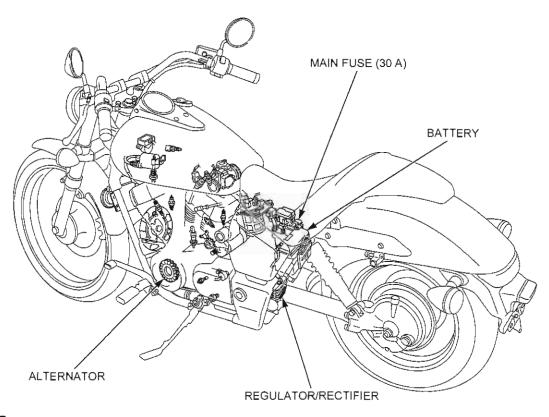

### VT750C2S

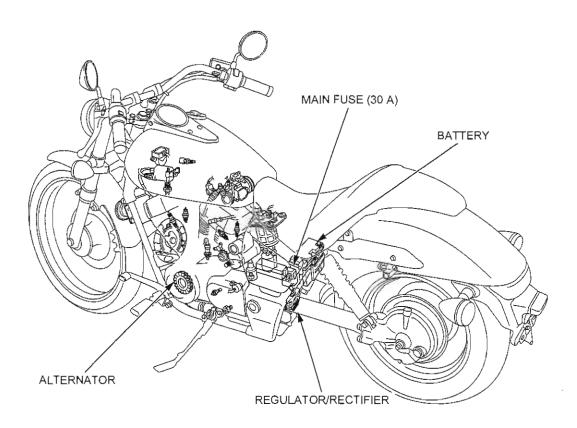

# SYSTEM DIAGRAM

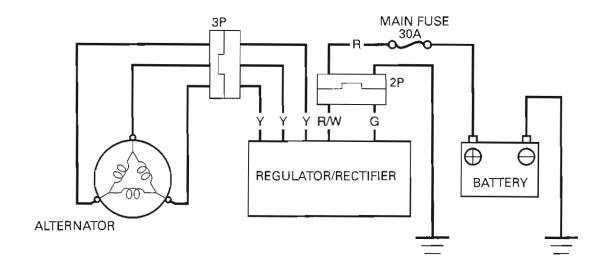

Y: Yellow G: Green

R: Red W: White

### SERVICE INFORMATION

### **GENERAL**

### **AWARNING**

- The battery gives off explosive gases; keep sparks, flames and cigarettes away. Provide adequate ventilation when charging.
- The battery contains sulfuric acid (electrolyte). Contact with skin or eyes may cause severe burns. Wear protective clothing and a face shield.
  - If electrolyte gets on your skin, flush with water.
  - If electrolyte gets in your eyes, flush with water for at least 15 minutes and call a physician immediately.
- Electrolyte is poisonous.
  - If swallowed, drink large quantities of water or milk and call your local Poison Control Center or a call a physician immediately.

### NOTICE

- Always turn off the ignition switch before disconnecting any electrical component.
- Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch
  is turned to "ON" and current is present.
- · For extended storage, remove the battery, give it a full charge, and store it in a cool, dry space.
- · For a battery remaining in a stored motorcycle, disconnect the negative battery cable from the battery terminal.
- . The maintenance free (MF) battery must be replaced when it reaches the end of its service life.
- The battery can be damaged if overcharged or undercharged, or if left to discharge for long period. These same conditions contribute to shortening the "life span" of the battery. Even under normal use, the performance of the battery deteriorates after 2 -- 3 years.
- Battery voltage may recover after battery charging, but under heavy load, the battery voltage will drop quickly and eventually die
  out. For this reason, the charging system is often suspected as the problem. Battery overcharge often results from problems in
  the battery itself, which may appear to be an overcharging symptom. If one of the battery cells is shorted and battery voltage
  does not increase, the regulator/rectifier supplies excess voltage to the battery. Under these conditions, the electrolyte level
  goes down quickly.
- Before troubleshooting the charging system, check for proper use and maintenance of the battery. Check if the battery is frequently under heavy load, such as having the headlight and taillight ON for long periods of time without riding the motorcycle.
- The battery will self-discharge when the motorcycle is not in use. For this reason, charge the battery every 2 weeks to prevent sulfation from occurring.
- · When servicing the charging system, always follow the steps in the troubleshooting flow chart (page 18-6).
- · For alternator service (page 11-4).

### **BATTERY CHARGING**

- · Turn power ON/OFF at the charger, not at the battery terminal.
- For battery charging, do not exceed the charging current and time specified on the battery. Using excessive current or extending
  the charging time may damage the battery.
- · Quick charging should only be done in an emergency; slow charging is preferred.

### **BATTERY TESTING**

Refer to the battery tester's Operation Manual for the recommended battery tester for details about battery testing.

The recommended battery tester puts a "load" on the battery so the actual battery condition of the load can be measured.

Recommended Battery Tester: Micro404XL (U.S.A. only), BM-210 or equivalent

### **SPECIFICATIONS**


ITEM			SPECIFICATIONS	
Battery Capacity			12 V – 11.2 Ah	
Current leakage			1 mA max.	
	Voltage	Fully charged	13.0 – 13.2 V	
	(20°C/68°F)	Needs charging	Below 12.4 V	
	Charging current	Normal	1.1 A/5 – 10 h	
		Quick	5.5 A/1.0 h	
Alternator	Capacity		0.39 kW/5,000 rpm	
	Charging coil resista	nce (20°C/68°F)	0.1 – 1.0 Ω	

### **TORQUE VALUE**

Battery case cover screw

1 N·m (0.1 kgf·m, 0.7 lbf·ft)

### **TOOLS**

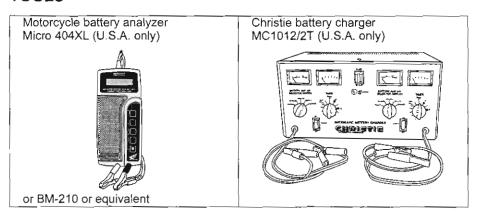

### TROUBLESHOOTING

### BATTERY IS DAMAGED OR WEAK

### 1. BATTERY TEST

Remove the battery (page 18-7).

Check the battery condition using the recommended battery tester.

RECOMMENDED BATTERY TESTER: Micro 404XL (U.S.A. only), BM-210 or equivalent

### is the battery good condition?

NO - Faulty battery

YES - GO TO STEP 2.

### 2. CURRENT LEAKAGE TEST

Install the battery (page 18-7).

Check the battery current leakage test (Leak test; page 18-8).

### Is the current leakage below 1 mA?

YES - GO TO STEP 4.

NO - GO TO STEP 3.

### 3. CURRENT LEAKAGE TEST WITHOUT REGURETOR/RECTIFIRE CONNECTOR

Disconnect the regulator/rectifier connector and recheck the battery current leakage.

### Is the current leakage below 1 mA?

YES - Faulty regulator/rectifier

NO - · Shorted wire harness

· Faulty ignition switch

### 4. ALTERNATOR CHARGING COIL INSPECTION

Check the alternator charging coil (page 18-10).

### Is the alternator charging coil resistance within 0.1 – 1.0 Ω (20°C/68°F)?

NO - Faulty charging coil

YES - GO TO STEP 5.

### 5. CHARGING VOLTAGE INSPECTION

Measure and record the battery voltage using a digital multimeter (page 18-8).

Start the engine.

Measure the charging voltage (page 18-9).

Compare the measurements to result of the following calculation.

STANDARD: Measured BV < Measured CV < 15.5 V

•BV = Battery Voltage (page 18-8)

•CV = Charging Voltage

### Is the measured charging voltage within the standard voltage?

YES - Faulty battery

NO - GO TO STEP 6.

### 6. REGULATOR/RECTIFIER SYSTEM INSPECTION

Check the voltage and resistance at the regulator/rectifier connector (page 18-9).

### Are the results of checked voltage and resistance correct?

YES - Faulty regulator/rectifier

NO - Open circuit in related wire

· Loose or poor contacts of related terminal

· Shorted wire harness

### **BATTERY**

# REMOVAL/INSTALLATION (VT750C2F/C2B)

Remove the seat (page 2-3).

Remove the screw.

Remove the battery case cover by unhooking the battery case hooks.

With the ignition switch turned to "OFF", disconnect the battery negative (–) cable first, then disconnect the battery positive (+) cable.

Remove the battery from the battery case.


Install the battery in the reverse order of removal.

### NOTE:

- Connect the positive (+) cable first, then connect the negative (-) cable.
- After connecting the battery cables, coat the terminals with grease.

### TORQUE:

Battery case cover screw: 1 N·m (0.1 kgf·m, 0.7 lbf·ft)

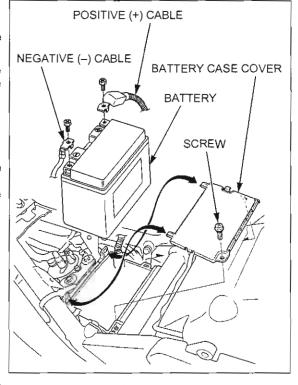

### REMOVAL/INSTALLATION (VT750C2S)

Remove the seat (page 2-3).

Remove the screw.

Remove the battery case cover by unhooking the battery case hooks.

With the ignition switch turned to "OFF", disconnect the battery negative (-) cable first, then disconnect the battery positive (+) cable.

Remove the battery from the battery case.

Install the battery in the reverse order of removal.


### NOTE:

- Connect the positive (+) cable first, then connect the negative (-) cable.
- After connecting the battery cables, coat the terminals with grease.

### TORQUE:

Battery case cover screw:

1 N·m (0.1 kgf·m, 0.7 lbf·ft)

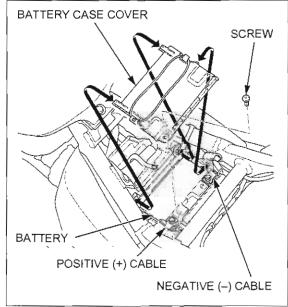

### **VOLTAGE INSPECTION**

Remove the battery case cover (page 18-7).

Measure the battery voltage using a commercially available digital multimeter.


VOLTAGE (20°C/68°F):

Fully charged: 13.0 – 13.2 V Needs charging: Below 12.4 V

TOOL:

Digital multimeter

Commercially available

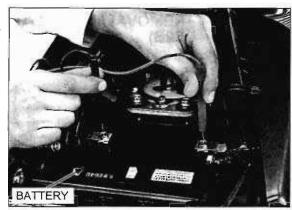

### CHARGING SYSTEM INSPECTION

### **CURRENT LEAKAGE TEST**

Remove the battery case cover (page 18-7).

With the ignition switch turned to "OFF", disconnect the negative (–) cable from the battery.

Connect the ammeter (+) probe to the negative (-) cable and the ammeter (-) probe to the battery (-) terminal

With the ignition switch turned to "OFF", check for current leakage.


### NOTE:

- When measuring current using a tester, set it to a high range, and then bring the range down to an appropriate level. Current flow higher than the range selected may blow the fuse in the tester.
- While measuring current, do not turn the ignition switch to "ON". A sudden surge of current may blow the fuse in the tester.

# SPECIFIED CURRENT LEAK-1 mA maximum AGE:

If current leakage exceeds the specified value, a shorted circuit is the probable cause.

Locate the short by disconnecting connections one by one and measuring the current.

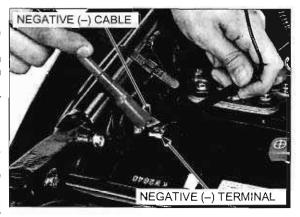

### CHARGING VOLTAGE INSPECTION

### NOTE:

Make sure the battery is in good condition before performing this test.

Connect a tachometer.

Start the engine and warm it up to the operating temperature; then stop the engine.

Remove the battery case cover (page 18-7).

Connect the multimeter between the positive and negative terminals of the battery.

### NOTE:

Do not disconnect the battery or any

charging system without first

switching off the

Failure to follow this

damage the tester

ignition switch.

precaution can

or electrical components.

cable in the


To prevent a short, make absolutely certain which are the positive and negative terminals or cable.

With the headlight on high beam, restart the engine. Measure the voltage on the multimeter when the engine runs at 5,000 rpm.

### STANDARD:

Measured BV < Measured CV < 15.5 V

- BV = Battery Voltage (page 18-8)
- CV = Charging Voltage

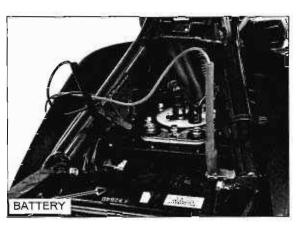


### REGULATOR/RECTIFIER

### WIRE HARNESS INSPECTION


### **BATTERY CHARGING LINE**

Remove the left side cover (page 2-3).

With the ignition switch turned to "OFF", disconnect the regulator/rectifier 2P (White) connector.

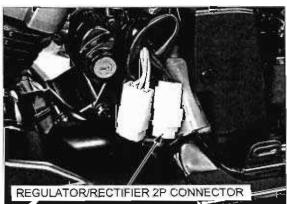


Measure the voltage between the Red wire terminal (+) of the wire side 2P (White) connector and ground (–). There should be battery voltage at all times.

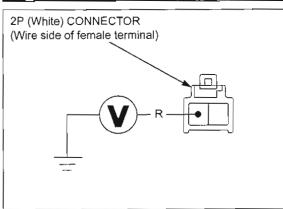

### **GROUND LINE**

Check for continuity between the Green wire terminal of the wire side 2P (White) connector and ground. There should be continuity at all times.

If all components of the charging system are normal and there are no loose connection at the regulator/rectifier connector, replace the regulator/rectifier.

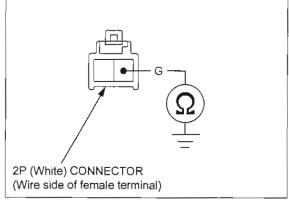


### **REMOVAL/INSTALLATION**

Remove the following:

- Left side cover (page 2-3)
- Left crankcase rear cover (page 2-4)


Release the wires from the wire bands.

With the ignition switch turned to "OFF", disconnect the regulator/rectifier 2P (White) connector and alternator 3P (White) connector.

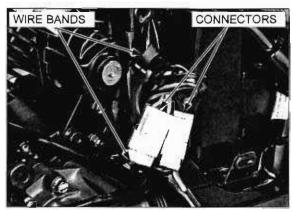

Remove the bolts and regulator/rectifier.

Install the regulator/rectifier in the reverse order of removal.

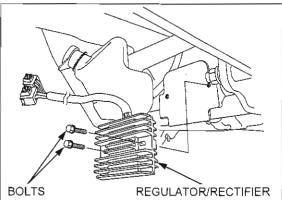


### **ALTERNATOR CHARGING COIL**

### INSPECTION

Remove the left side cover (page 2-3).

With the ignition switch turned to "OFF", disconnect the alternator 3P (White) connector.

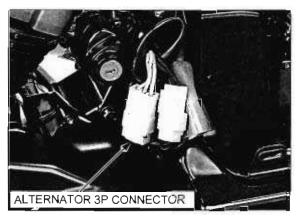


Measure the resistance between the Yellow wire terminals of alternator/stator side connector.

#### STANDARD: 0.1 - 1.0 Ω at 20°C (68°F)

Check for continuity between each wire terminals of the alternator/stator side connector and ground. There should be no continuity.

Replace the stator if the resistance is out of specification, or if any wire has continuity to ground.

For alternator/starter replacement (page 11-4).

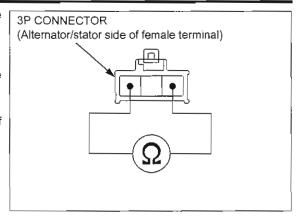

## MEMO


# 19. IGNITION SYSTEM

SYSTEM LOCATION19-2	IGNITION SYSTEM INSPECTION19-6
SYSTEM DIAGRAM ······19-3	IGNITION COIL ·····19-8
SERVICE INFORMATION19-4	IGNITION TIMING19-10
TROUBLESHOOTING19-5	


10

## SYSTEM LOCATION


## VT750C2F/C2B

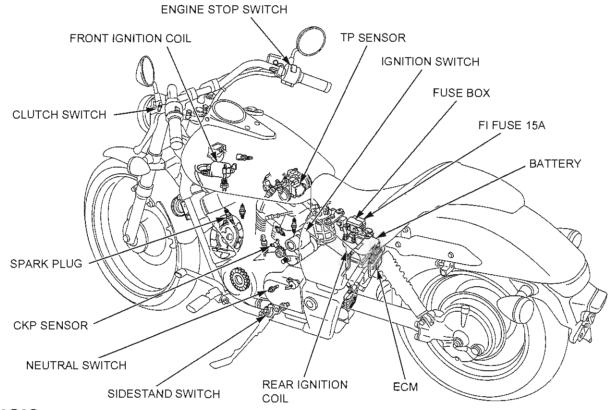

## VT750C2S

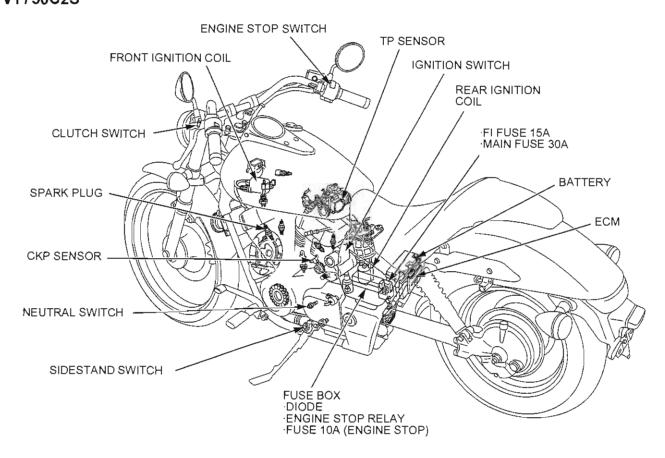

## SYSTEM DIAGRAM

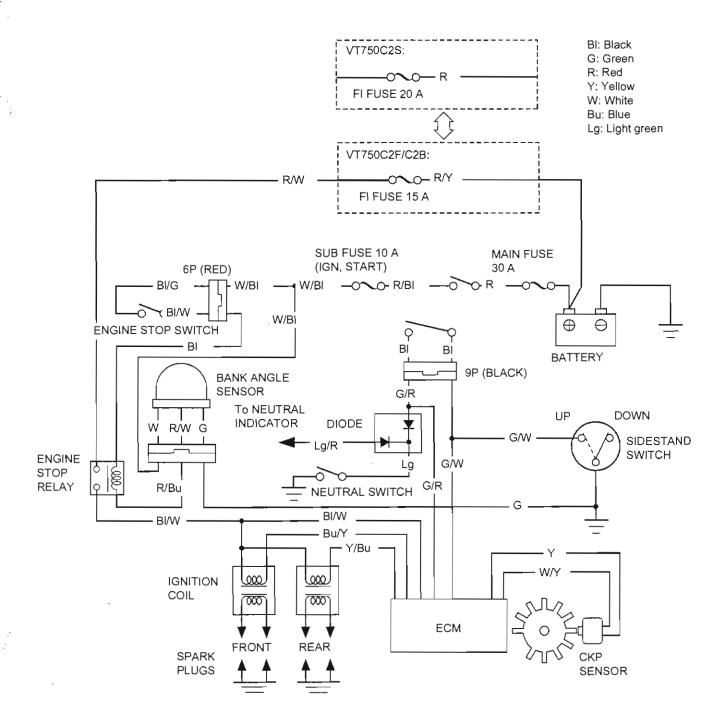

## SERVICE INFORMATION

#### **GENERAL**

## NOTICE

- The ECM may be damaged if dropped. Also, if the connector is disconnected when current is flowing, the excessive voltage may
  damage the module. Always turn the ignition switch to "OFF" before servicing.
- Use spark plugs with the correct heat range. Using spark plugs with an incorrect heat range can damage the engine.
- Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch
  is turned to "ON" and current is present.
- · When servicing the ignition system, always follow the steps in the troubleshooting table on page 19-5.
- . The ignition timing cannot be adjusted since the ECM is factory preset.
- A faulty ignition system is often related to poor connections. Check those connections before proceeding.
- Make sure the battery is adequately charged. Using the starter motor with a weak battery results in a slower engine cranking speed as well as no spark at the spark plugs.
- · For spark plug inspection (page 3-7).
- · Refer to the following components informations:
  - Ignition switch (page 21-21)
  - Engine stop switch (page 21-23)
  - Neutral switch (page 21-26)
  - Sidestand switch (page 21-26)
  - Diode (page 20-19)
  - ECM (page 5-66)
  - Bank angle sensor (page 5-63)
  - Engine stop relay (page 5-65)
  - Clutch switch (page 21-25)

#### SPECIFICATIONS


ITEM		SPECIFICATIONS
Spark plug	Standard	DPR7EA-9 (NGK), X22EPR-U9 (DENSO)
	For extended high speed riding	DPR8EA-9 (NGK), X24EPR-U9 (DENSO)
Spark plug gap		0.8 – 0.9 mm (0.03 – 0.04 in)
Ignition coil primary peak voltage		100 V minimum
Ignition timing ("F"mark)		8° BTDC at idle
CKP sensor peak voltage (at 20°C/68°F)		0.7 V minimum

#### **TORQUE VALUES**

Alternator cover socket bolt Timing hole cap 10 N·m (1.0 kgf·m, 7 lbf·ft) 10 N·m (1.0 kgf·m, 7 lbf·ft)

Apply grease to the threads

## TOOLS

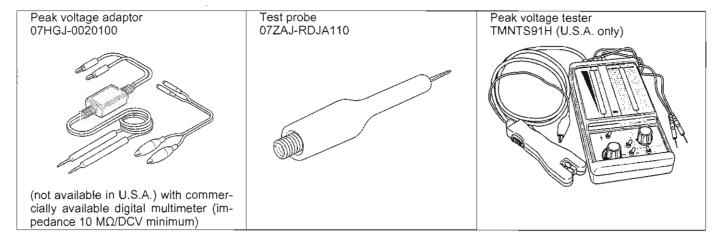

## **TROUBLESHOOTING**

- · Inspect the following before diagnosing the system.
  - Faulty spark plug
  - Loose spark plug cap or spark plug wire connection
  - Water in the spark plug cap (Leaking the ignition coil secondary voltage)
- . If there is no spark at either cylinder, temporarily exchange the ignition coil with a known-good one and perform the spark test. If there is spark, the original ignition coil is faulty.

  "Initial voltage" of the ignition primary coil is the battery voltage with the ignition switch turned to "ON" and the engine stop switch
- at "O" (The engine is not cranked by the starter motor).

#### No spark at spark plugs

	NUSUAL CONDITION	PROBABLE CAUSE (Check in numerical order)
gnition coil pri- mary voltage	No initial voltage with the ignition switch turned to "ON" and the engine stop switch at "O" (Other electrical components are normal).  Initial voltage is normal, but it drops by 2 – 4 V while cranking the engine.	<ol> <li>Faulty engine stop relay.</li> <li>An open circuit in Black/white wire between the ignition co and engine stop relay.</li> <li>Loose or poor connection of the primary terminal, or an open circuit in the primary coil.</li> <li>Faulty ECM (in case when the initial voltage is normal with the ECM connector disconnected).</li> <li>Incorrect peak voltage adaptor connections (System is normal if measured voltage is over the specifications with reverse connections).</li> <li>Battery is undercharged (Voltage drops largely when the engine is started).</li> <li>No voltage between the Black/white (+) and body ground (– at the ECM connector or loosen ECM connection.</li> <li>An open circuit or loose connection in Green wire at the ECM blue wires between the ignition coils and ECM.</li> </ol>
	Initial voltage is normal but there is	<ol> <li>Faulty sidestand switch, clutch switch or neutral switch.</li> <li>Loose or poor connection or an open circuit in No. 6 related wires.         <ul> <li>Sidestand switch line: Green/white wire</li> <li>Neutral switch line: Light green wire</li> <li>Clutch switch line: Green/white wire</li> </ul> </li> <li>Faulty CKP sensor (Measure peak voltage).</li> <li>Faulty ECM (in case when above No. 1 through 8 are normal)</li> <li>Incorrect peak voltage adaptor connections (System is normal)</li> </ol>
	no peak voltage while cranking the engine.	<ul> <li>if measured voltage is over the specifications with revers connections).</li> <li>2. Faulty peak voltage adaptor.</li> <li>3. Faulty CKP sensor (Measure peak voltage).</li> <li>4. Faulty ECM (in case when above No. 1 and 2 are normal).</li> </ul>
	Initial voltage is normal but peak volt- age is lower than the standard value.	<ol> <li>The multimeter impedance is too low; below 10 MΩ/DCV.</li> <li>Cranking speed is too slow (Battery is undercharged).</li> <li>The sampling timing of the tester and measured pulse wer not synchronized (System is normal if measured voltage is over the standard voltage at least once).</li> <li>Faulty ECM (in case when above No. 1 through 3 are normal</li> </ol>
	Initial and peak voltages are normal but no spark jumps.	<ol> <li>Faulty spark plug or leaking ignition coil secondary currer ampere.</li> <li>Faulty ignition coil(s).</li> </ol>
CKP sensor  Peak voltage is dard value.  No peak voltage	Peak voltage is lower than the stan- dard value.	<ol> <li>The multimeter impedance is too low; below 10 MΩ/DCV.</li> <li>Cranking speed is too slow (Battery is undercharged).</li> <li>The sampling timing of the tester and measured pulse wernot synchronized (System is normal if measured voltage in over the standard voltage at least once).</li> <li>Faulty CKP sensor (in case when above No. 1 through 3 are normal).</li> </ol>
		Faulty peak voltage adaptor.

## **IGNITION SYSTEM INSPECTION**

#### NOTE:

- If no spark jumps at the plug, check all connections for loose or poor contact before measuring the peak voltage.
- Use recommended digital multimeter or commercially available digital multimeter with an impedance of 10 MΩ/DCV minimum.
- The display value differs depending upon the internal impedance of the multimeter.

Connect the peak voltage adaptor to the digital multimeter or use the peak voltage tester.

#### TOOL:


Peak voltage tester

TMNTS91H (U.S.A. only) or 07HGJ-0020100 (not available in

Peak voltage adaptor

Ù.S.A.)

with commercially available digital multimeter (impedance 10  $M\Omega/DCV$  minimum)

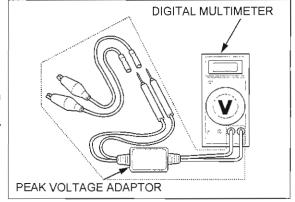


## IGNITION COIL PRIMARY PEAK VOLTAGE

#### NOTE:


- Check all system connections before performing this inspection. Loose connectors can cause incorrect readings.
- Check that the cylinder compression is normal for each cylinder and the spark plugs are installed correctly in each cylinder head.

Remove the seat (page 2-3).

Disconnect the sub fuel tank/fuel pump 2P (Black) connector.

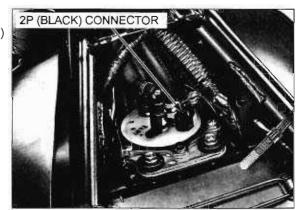

Disconnect all spark plug caps from the spark plugs. Connect the known-good spark plugs to all spark plug caps and ground them to the cylinder heads as done in a spark test.

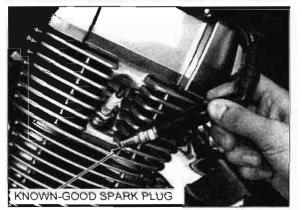

FRONT: Remove the fuel tank (page 5-48).

REAR (VT750C2F/ Remove the following:

C2B):

Turn signal relay (page 21-28)

Fuse box (page 19-9)

REAR (VT750C2S): Remove the fuse box (page 19-9)

With the ignition coil primary wires connected, connect the peak voltage tester or adaptor probes to the ignition coil primary terminal and ground.

Peak voltage tester

TMNTS91H (U.S.A. only) or 07HGJ-0020100 (not available in

Peak voltage adaptor

Ù.S.A.) with commercially available digital multimeter (impedance 10 MΩ/DCV minimum)

CONNECTIONS:

FRONT:Blue/yellow (+) - Ground (-) REAR: Yellow/blue (+) - Ground (-)

Turn the ignition switch to "ON" with the engine stop switch at "O".

Check the initial voltage at this time.

The battery voltage should be measured.

If the initial voltage cannot be measured, follow the checks in the troubleshooting table (page 19-5).

Shift the transmission into neutral.

Crank the engine with the starter motor and measure the ignition coil primary peak voltage.

#### PEAK VOLTAGE: 100 V minimum

#### NOTE:

Although measured values are different for each ignition coil, they are normal as long as voltage is higher than the specified value.


If the peak voltage is lower than the standard value, follow the checks in the troubleshooting table (page 19-5).


Install the removed parts in the reverse order of removal.


## **CKP SENSOR PEAK VOLTAGE**


Check that the cylinder compression is normal for each cylinder and the spark plug is installed correctly in the cylinder head.

Remove the ECM (page 5-66) and disconnect the ECM 33P (Gray) connector.

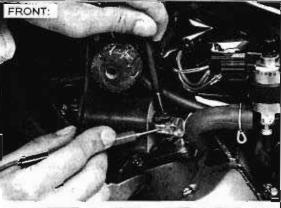

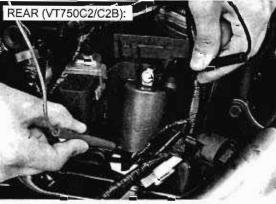

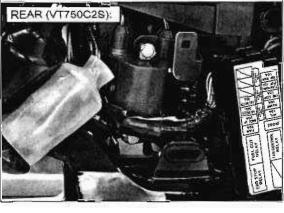

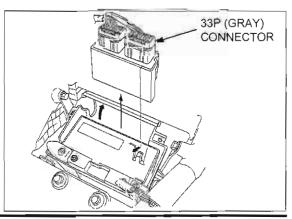

Connect the peak voltage adaptor probes to the wire side ECM connector terminal.

TOOL:

Peak voltage tester

Peak voltage adaptor

TMNTS91H (U.S.A. only) or 07HGJ-0020100 (not available in

U.S.A.)

with commercially available digital multimeter (impedance 10 MΩ/DCV minimum)

#### CONNECTION: Yellow (+) - Body ground (-)

Turn the ignition switch to "ON" with the engine stop switch at "O".

Shift the transmission into neutral.

Crank the engine with the starter motor and measure the CKP sensor peak voltage.

#### PEAK VOLTAGE: 0.7 V minimum

If the voltage measured at the ECM connector is abnormal, measure the peak voltage at the CKP sensor connector.

Remove the steering side covers (page 2-4).

Turn the ignition switch to "OFF".


Disconnect the CKP sensor 2P (Red) connector and connect the peak voltage tester or adaptor probes to the connector terminals of the CKP sensor side.

In the same manner as at the ECM connector, measure the peak voltage and compare it to the voltage measured at the ECM connector.

- · If the peak voltage measured at the ECM is abnormal and the one measured at the CKP sensor is normal, the wire harness has an open or short circuit, or loose connection.
- · If the peak voltage is lower than standard value, follow the checks in the troubleshooting table (page

Install the removed parts in the reverse order of removal.

# PEAK VOLTAGE ADAPTOR B22 33P (GRAY) CONNECTOR (Wire side of female terminals)

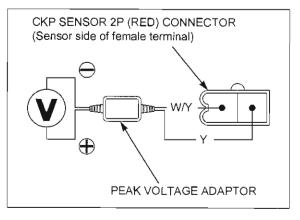

## **IGNITION COIL**

#### FRONT IGNITION COIL


#### **REMOVAL/INSTALLATION**

Remove the fuel tank (page 5-48). Disconnect the spark plug caps (page 3-7).

Disconnect the ignition coil primary wire connectors. Remove the bolts, spacers and front ignition coil from the frame.

plug wires properly (page 1-26).

Route the spark Install the front ignition coil in the reverse order of removal.

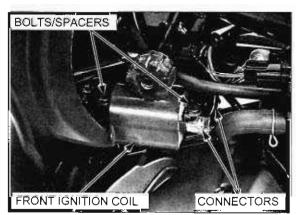


#### **REAR IGNITION COIL**


#### REMOVAL/INSTALLATION (VT750C2F/C2B)

Remove the turn signal relay (page 21-28). Disconnect the spark plug caps (page 3-7).

Release the spark plug wires from the wire band.

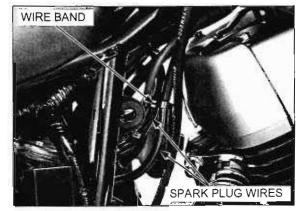


Remove the fuse box from the battery box stay by releasing their tabs.

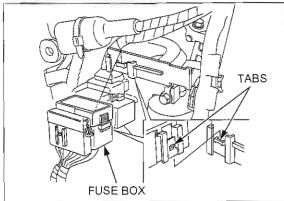

Disconnect the ignition coil primary wire connectors. Remove the bolts, spacers and rear ignition coil.

plug wires properly (page 1-26).


Route the spark Install the rear ignition coil in the reverse order of removal.

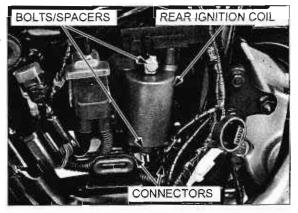

#### REMOVAL/INSTALLATION (VT750C2S)


Remove the right side cover (page 2-3). Disconnect the spark plug caps (page 3-7).

Release the spark plug wires from the wire band.

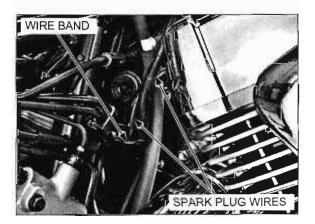

## **IGNITION SYSTEM**


Remove the fuse box from the battery box stay by releasing their tabs.

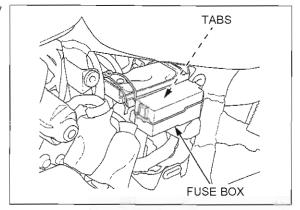

Disconnect the ignition coil primary wire connectors. Remove the bolts, spacers and rear ignition coil.

Route the spark plug wires properly (page 1-26).


Route the spark Install the rear ignition coil in the reverse order of ag wires properly removal.

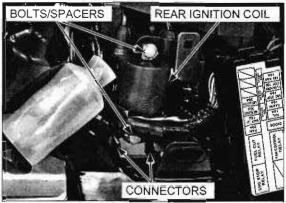


## **IGNITION TIMING**

Start the engine, warm it up to normal operating temperature and then stop it.

Remove the socket bolts and alternator cover.

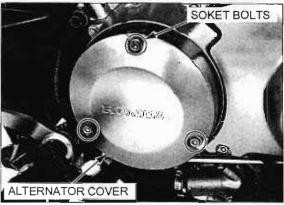

Remove the timing hole cap.

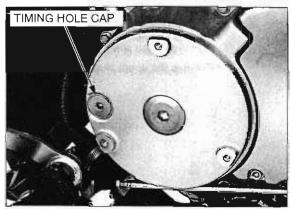


Connect a tachometer.


Read the manufacturer's instructions for timing light operation. Connect the timing light to the front spark plug wire.

Start the engine, let it idle and check the ignition timing.

timing light | IDLE SPEED:1,200 ± 100 rpm

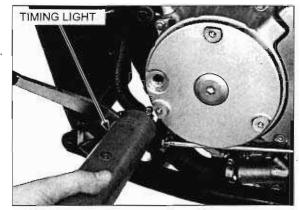


The timing is correct if the "F" mark on the flywheel aligns with the index notch on the left crankcase cover.

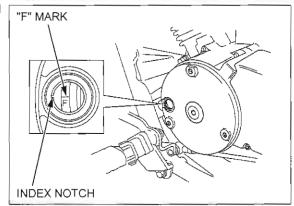

Coat a new O-ring with engine oil and install it into the timing hole cap groove.


Apply grease to the threads of the timing hole cap. Install the timing hole cap and tighten it to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

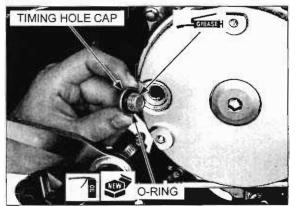

Install the alternator cover and tighten the socket bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

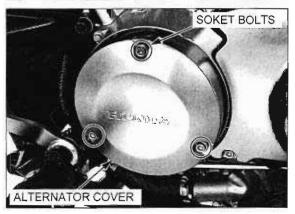

## МЕМО


# **20. ELECTRIC STARTER**

SYSTEM LOCATION20-2	STARTER MOTOR20-7
SYSTEM DIAGRAM20-3	STARTER RELAY SWITCH (VT750C2F/C2B)·······20-16
SERVICE INFORMATION20-4	STARTER RELAY SWITCH
TROUBLESHOOTING20-5	(VT750C2S)20-17
	DIODE20-19


20

## SYSTEM LOCATION


#### VT750C2F/C2B

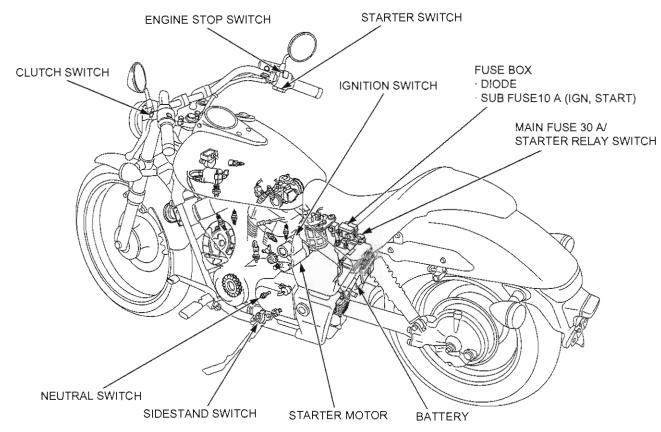

#### VT750C2S

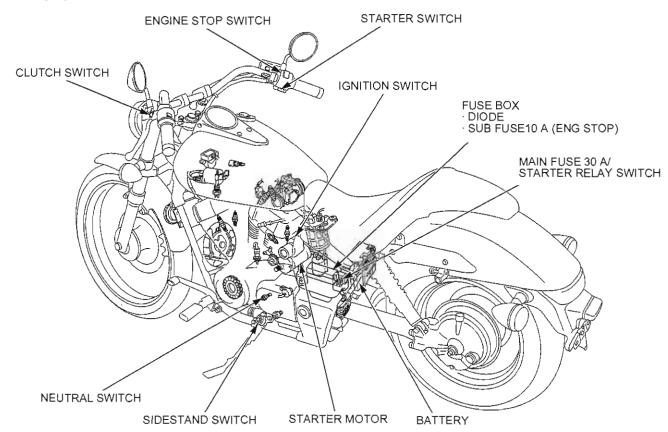

## SYSTEM DIAGRAM

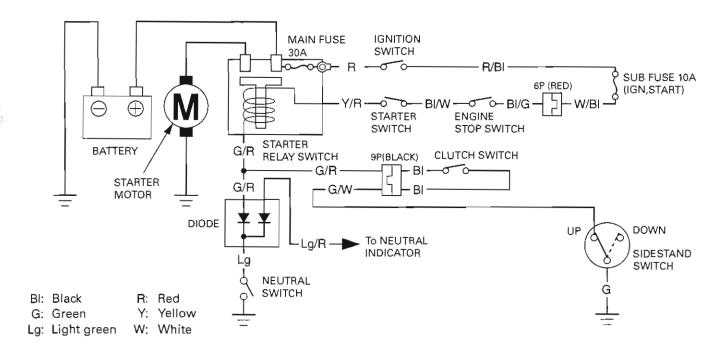

#### **ELECTRIC STARTER**

## SERVICE INFORMATION

#### **GENERAL**

## NOTICE

- If the current is kept flowing through the starter motor to turn it while the engine is not cranking over, the starter motor may be damaged.
- Always turn the ignition switch to "OFF" before servicing the starter motor. The motor could suddenly start, causing serious
  injury.
- The starter motor can be serviced with the engine in the frame.
- When checking the starter system, always follow the steps in the troubleshooting flow chart (page 20-5).
- · A weak battery may be unable to turn the starter motor quickly enough, or supply adequate ignition current.
- · Refer to the following components information:
  - Ignition switch (page 21-21)
  - Engine stop switch (page 21-23)
  - Starter switch (page 21-23)
  - Neutral switch (page 21-26)
  - Sidestand switch (page 21-26)
  - Clutch switch (page 21-25)

#### **SPECIFICATION**

Unit: mm (in)

ITEM	STANDARD	SERVICE LIMIT
Starter motor brush length	12.5 (0.49)	6.5 (0.26)

### **TORQUE VALUES**

Starter motor cable terminal nut Starter motor assembly bolt Negative brush screw 10 N·m (1.0 kgf·m, 7 lbf·ft) 4.9 N·m (0.5 kgf·m, 3.6 lbf·ft) 3.7 N·m (0.4 kgf·m, 2.7 lbf·ft)

20-/

## **TROUBLESHOOTING**

#### Starter motor does not turn

#### 1. Fuse Inspection

Check for blown main fuse 30 A or sub fuse 10 A (IGN, START).

#### Is the fuse blown?

YES - Replace the fuse

NO - GO TO STEP 2.

#### 2. Battery Inspection

Make sure the battery is fully charged and in good condition (page 18-8).

#### Is the battery in good condition?

YES - GO TO STEP 3.

NO – Charge or replace the battery

#### 3. Starter Relay Switch Operation

Check the starter relay switch operation.

You should hear the relay "CLICK" when the starter switch button is depressed.

#### Is there a "CLICK"?

YES - GO TO STEP 4.

NO - GO TO STEP 5.

#### 4. Starter Motor Inspection

Apply battery voltage directly to the starter motor and check the operation.

#### Does the starter motor turn?

YES - · Poorly connected starter motor cable

Faulty starter relay switch (page 20-16)

NO - Faulty starter motor (page 20-7)

#### 5. Relay Coil Ground Lines Inspection

Disconnect the starter relay switch connector, and check the relay coil ground lines as below for continuity:

- Green/red terminal diode neutral switch line (with the transmission in neutral and clutch lever released).
- Green/red terminal clutch switch sidestand switch line (in any gear except neutral, and with the clutch lever pulled in and the sidestand up.

#### Is there continuity?

NO – • Faulty neutral switch (page 21-26)

- Faulty diode (page 20-19)
- · Faulty clutch switch (page 21-25)
- Faulty sidestand switch (page 21-26)
- · Loose or poor contact connector
- · Open circuit in wire harness

YES - GO TO STEP 6.

#### 6. Starter Relay Voltage Inspection

Connect the starter relay switch connector.

With the ignition switch to "ON" and engine stop switch button "O" and the starter switch button pushed, measure the voltage at the starter relay switch connector (between Yellow/red (+) and body ground (-)).

### Is there battery voltage?

NO - • Faulty ignition switch (page 21-21)

- Faulty starter switch (page 21-23)
- Faulty engine stop switch (page 21-23)
- · Loose or poor contact connector
- · Open circuit in wire harness

YES - GO TO STEP 7.

#### 7. Starter Relay Switch Continuity Inspection

Remove the starter relay switch.

Connect the fully charged 12 V battery positive wire to the starter relay switch Yellow/red wire terminal and negative wire to the Green/red wire terminal.

Check for continuity between the starter relay switch large terminals while the battery connected.

#### Is there continuity?

NO - Faulty starter relay switch

YES - Loose or poor contact starter relay switch connector

The starter motor turns when the transmission is in neutral, but does not turn with the transmission in any position except neutral, with the sidestand up and the clutch lever pulled in.

#### 1. Clutch Switch Inspection

Check the clutch switch operation (page 21-25).

#### Is the clutch switch operation normal?

NO - Faulty clutch switch

YES - GO TO STEP 2.

#### 2. Sidestand Switch Inspection

Check the sidestand switch operation (page 21-26).

#### Is the sidestand switch operation normal?

NO - Faulty sidestand switch (page 21-26)

YES - · Open circuit in wire harness

· Loose or poor contact connector

#### Starter motor turns slowly

- · Low battery voltage
- Poorly connected battery terminal cable
- Poorly connected starter motor cable
- Faulty starter motor
- Poorly connected battery ground cable

#### Starter motor turns, but engine does not turn

- Starter motor is running backwards
  - Case assembled improperly
  - Terminals connected improperly
- Faulty starter clutch
- Damaged or faulty starter idle gear and/or reduction gear

#### Starter relay switch "Clicks", but engine does not turn over


· Crankshaft does not turn due to engine problems

## STARTER MOTOR

## **REMOVAL**


Disconnect the battery negative (-) cable (page 18-7).

Open the terminal cover and remove the terminal nut. Disconnect the starter motor cable.

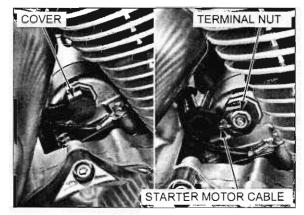


Remove the bolts and ground cable.

Remove the starter motor from the crankcase.

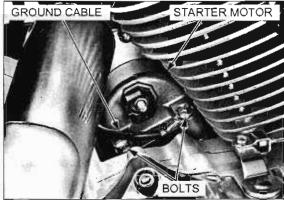


Remove the O-ring from the starter motor.

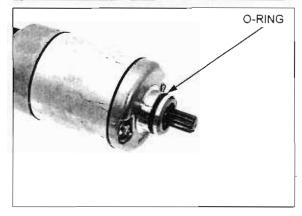


## **DISASSEMBLY/INSPECTION**

Remove the assembly bolts and O-rings.

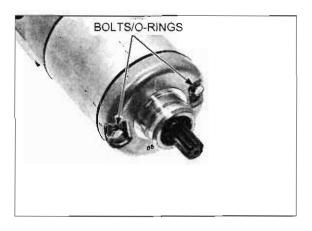


## **ELECTRIC STARTER**


Remove the front cover and O-ring.

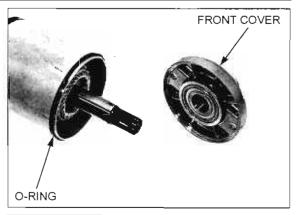

Remove the starter motor case and O-ring. Remove the armature from the rear cover.

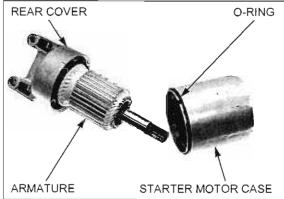


Remove the brushes and springs from the brush holder. Remove the stopper from the rear cover.

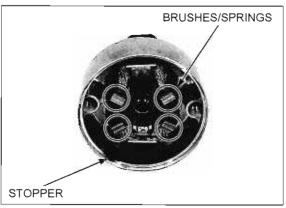

Check for continuity between starter motor cable terminal and positive brushes.

There should be continuity.

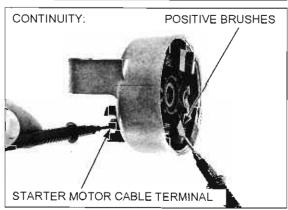

Check for continuity between positive brushes and rear cover.

There should be no continuity.


Check for continuity between negative brushes and rear cover.


There should be continuity.

Check for continuity between positive and negative brushes


There should be no continuity.

Remove the screw and negative brushes.

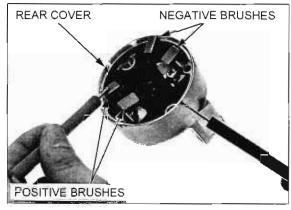


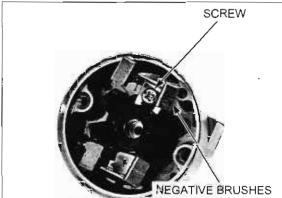

Remove the terminal nut.

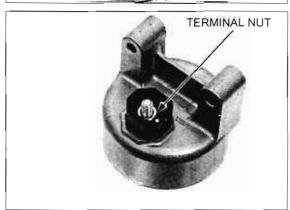


Remove the washer, insulator, terminal stopper and Oring.

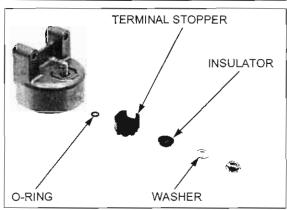

## **ELECTRIC STARTER**

Remove the terminal bolt, positive brushes and brush holder.


Check the brush holder for crack or damage.

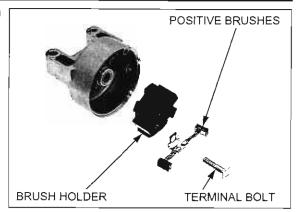

### **INSPECTION**

Measure each brush length.

SERVICE LIMIT: 6.5 mm (0.26 in)

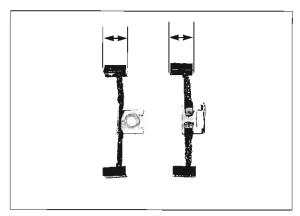


Check the commutator for damage or abnormal wear.

Do not use emery or sand paper on the commutator.


Check the commutator bar for discoloration.

Clean the metallic debris off between commutator bars.

Replace the armature with a new one if necessary.

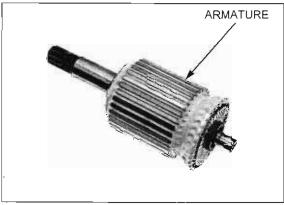


Check for continuity between pairs of commutator bars. There should be continuity.

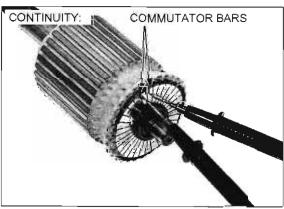


Check for continuity between each individual commutator bar and the armature shaft.

There should be no continuity.

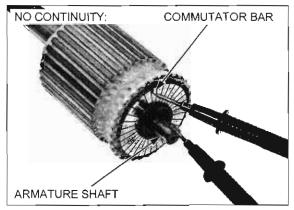


Check the dust seal and ball bearing for wear or damage.


Check the ball bearing rotates smoothly.

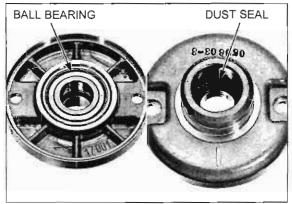


Check the bushing of the rear cover for wear or damage.

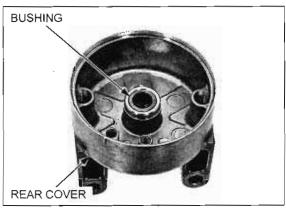


## **ASSEMBLY**

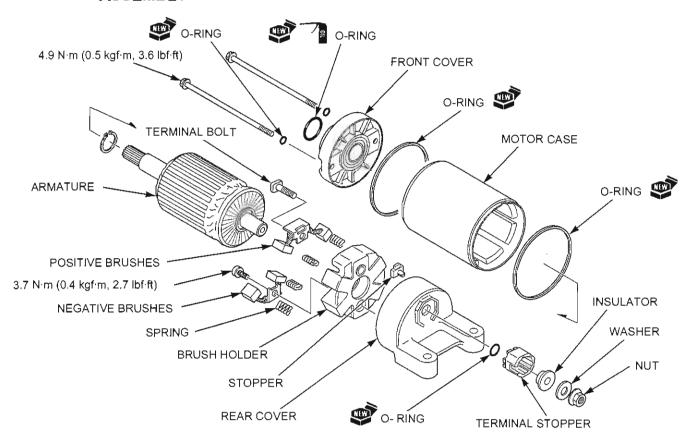


Install the brush holder, positive brushes and terminal bolt.

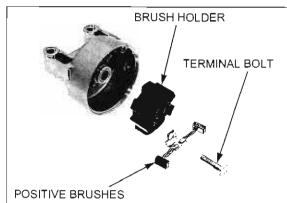

Install a new O-ring, terminal stopper, insulator and washer.

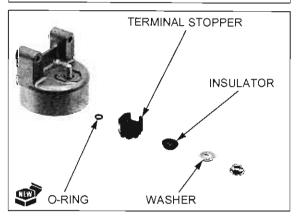


Install and tighten the terminal nut securely.

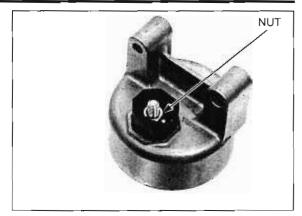


Install the negative brushes and tighten the screw to the specified torque.


TORQUE: 3.7 N·m (0.4 kgf·m, 2.7 lbf·ft)

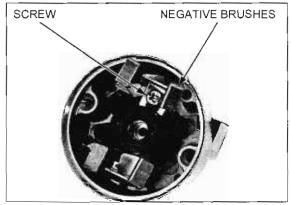


Install the brush springs to the brush holder grooves. Install the stopper to the rear cover.

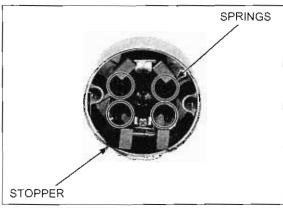

Install the brushes to the brush holder.

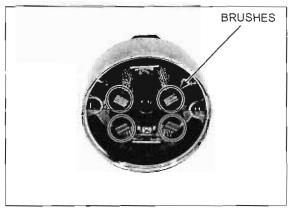


Install the armature to the rear cover assembly.

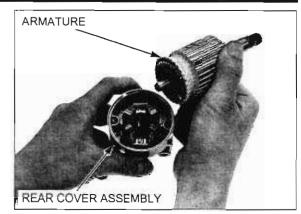


Install a new O-ring to the starter motor case. Install the starter motor case with its groove with the stopper on the rear cover assembly.

## NOTICE


The coil may be damaged if the magnet pulls the armature against the case.

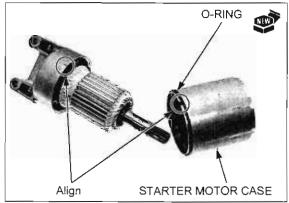

Install a new O-ring to the starter motor case. Install the front cover to the starter motor case.

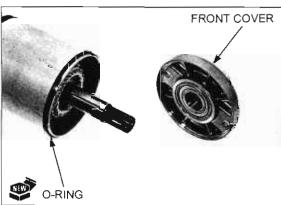


Align the index marks on the front cover, starter motor case and rear cover.

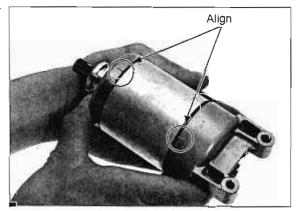


Install new O-rings to the assembly bolts. Install and tighten the assembly bolts to the specified torque.

TORQUE: 4.9 N·m (0.5 kgf·m, 3.6 lbf·ft)

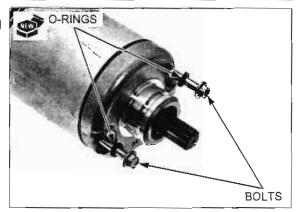

#### INSTALLATION

Apply engine oil to a new O-ring and install it to the starter motor groove.

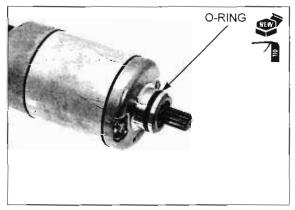


Install the starter motor onto the crankcase from the right side.

Route the cable properly (page 1-26).

Connect the ground cable.

Install and tighten the bolts securely.

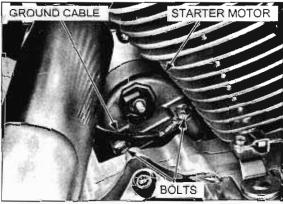

Route the cable properly (page 1-26).


Connect the starter motor cable.

Install and tighten the terminal nut to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Close the terminal cover.

Connect the battery negative (-) cable (page 18-7).

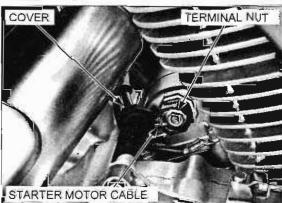

# STARTER RELAY SWITCH (VT750C2F/C2B)

## **INSPECTION**

Remove the right side cover (page 2-3).


Shift the transmission into neutral.

Turn the ignition switch to "ON" with the engine stop switch at "O".

Push the starter switch button.

The coil is normal if the starter relay switch clicks.

If you do not hear the switch "CLICK", inspect the relay switch using the procedure below.

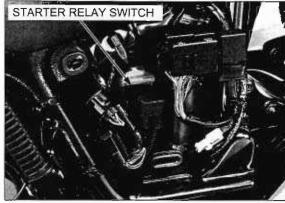


#### STARTER RELAY VOLTAGE

Pull out the starter relay switch from the battery box with the starter relay switch 4P connector connected. Shift the transmission into neutral.

Turn the ignition switch to "ON" with the engine stop switch at "O".

Measure the voltage between the yellow/red wire terminal (+) and ground (-).


If the battery voltage appears when the starter switch button is pushed, the power supply circuit of the relay coil is normal.

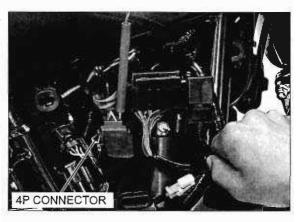

#### **GROUND LINE**

Disconnect the starter relay switch 4P connector. Check for continuity between the Green/red wire (ground line) terminal and ground.

If there is continuity when the transmission is in neutral or when the clutch is disengaged and the sidestand is retracted, the ground circuit of the relay coil is normal. (In neutral, there is a slight resistance due to the diode.)

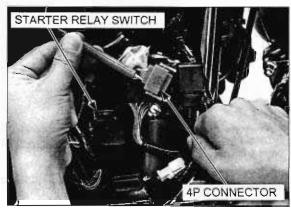


#### **OPERATION CHECK**

Remove the starter relay switch (page 20-17).

Connect an ohmmeter to the starter relay switch large terminals

Connect a fully charged 12 V battery positive (+) wire to the starter relay switch Yellow/red terminal and negative (-) wire to the Green/red terminal.


There should be continuity between the cable terminals while the battery is connected, and no continuity when the battery is disconnected.

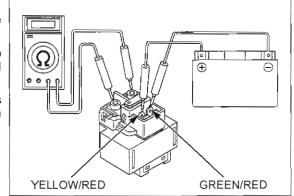

#### REMOVAL/INSTALLATION


Remove the right side cover (page 2-3).

Turn the ignition switch to "OFF". Disconnect the battery negative (–) cable (page 18-7). Pull out the starter relay switch from the battery box.

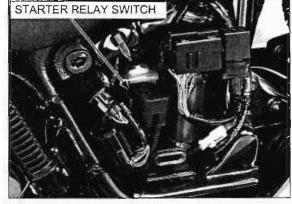

Disconnect the starter relay switch 4Pconnector. Remove the socket bolts and cables.

Installation is in the reverse order of removal.

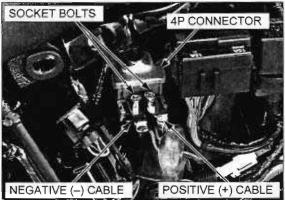

## STARTER RELAY SWITCH (VT750C2S)

#### INSPECTION

Remove the left side cover (page 2-3).


Shift the transmission into neutral.

Turn the ignition switch to "ON" with the engine stop switch at " $\bigcirc$ ".

Push the starter switch button.

The coil is normal if the starter relay switch clicks.

If you do not hear the switch "CLICK", inspect the relay switch using the procedure below.

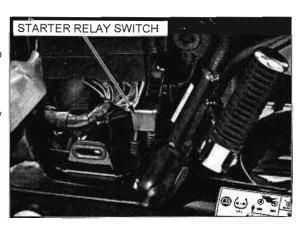


#### **GROUND LINE**

Remove the starter relay switch cover.

Disconnect the starter relay switch 4P (Black) connector.

Check for continuity between the Green/red wire (ground line) terminal and ground.


If there is continuity when the transmission is in neutral or when the clutch is disengaged and the sidestand is retracted, the ground circuit of the relay coil is normal. (In neutral, there is a slight resistance due to the diode.)

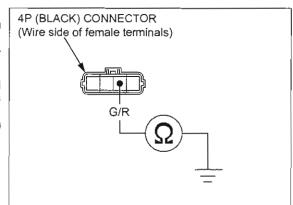

#### INPUT LINE INSPECTION

Check for continuity between the Red terminal and Yellow/red terminal.

If there is no continuity when the ignition switch to "ON" and starter switch pushed, the input line is normal.

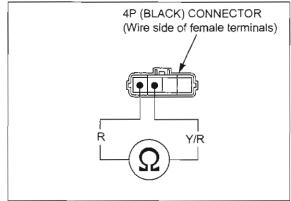


#### **OPERATION CHECK**

Remove the starter relay switch (page 20-18).

Connect an ohmmeter to the starter relay switch large terminals.

Connect a fully charged 12 V battery positive (+) wire to the starter relay switch Yellow/red terminal and negative (-) wire to the Green/red terminal.

There should be continuity between the cable terminals while the battery is connected, and no continuity when the battery is disconnected.

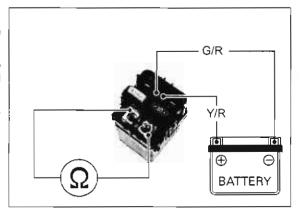


#### **REMOVAL/INSTALLATION**

Remove the left side cover (page 2-3). Remove the fuse box (page 19-9).

Turn the ignition switch to "OFF".

Remove the starter relay switch cover.

Disconnect the battery negative (-) cable (page 18-7).

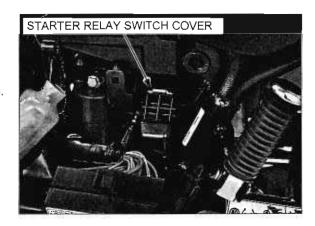


Disconnect the starter relay switch 4P (Black) connector.

Remove the socket bolts and cables.

Pull out the starter relay switch from the battery box.

Installation is in the reverse order of removal.

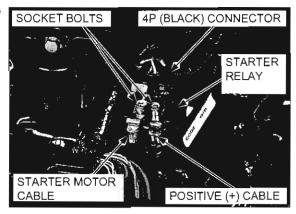


## DIODE

#### **INSPECTION**


VT750C2F/C2B; Remove the right side cover (page 2-3).

Open the fuse box cover and remove the diode.

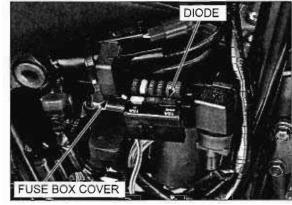


VT750C2S; Remove the left side cover (page 2-3).

Open the fuse box cover and remove the diode.

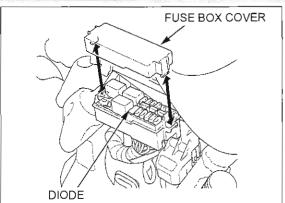

Check for continuity between the diode terminals. When there is continuity, a small resistance value will register.

If there is continuity in one direction, the diode is normal.

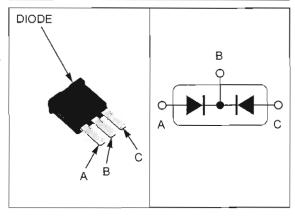


## MEMO


# 21. LIGHTS/METERS/SWITCHES

SYSTEM LOCATION21-2	FUEL RESERVE SENSOR ······ 21-18
SERVICE INFORMATION21-4	OIL PRESSURE INDICATOR 21-20
HEADLIGHT21-7	IGNITION SWITCH21-21
TURN SIGNAL/POSITION LIGHT······21-8	HANDLEBAR SWITCH21-22
HIGH BEAM/FUEL RESERVE INDICATOR (VT750C2F/C2S) ····································	BRAKE LIGHT SWITCH21-24
`	CLUTCH SWITCH21-25
HIGH BEAM/FUEL RESERVE/TURN SIGNAL INDICATOR (VT750C2B)21-11	NEUTRAL SWITCH21-26
BRAKE/TAIL LIGHT······21-11	SIDESTAND SWITCH21-26
LICENSE LIGHT21-12	HORN21-28
SPEEDOMETER/VS SENSOR21-12	TURN SIGNAL RELAY (VT750C2F/C2B)21-28
COOLANT TEMPERATURE INDICATOR/	(V173002F/02B)21-20
ECT SENSOR21-17	TURN SIGNAL RELAY (VT750C2S) ······· 21-29

## SYSTEM LOCATION

VT750C2F/C2B

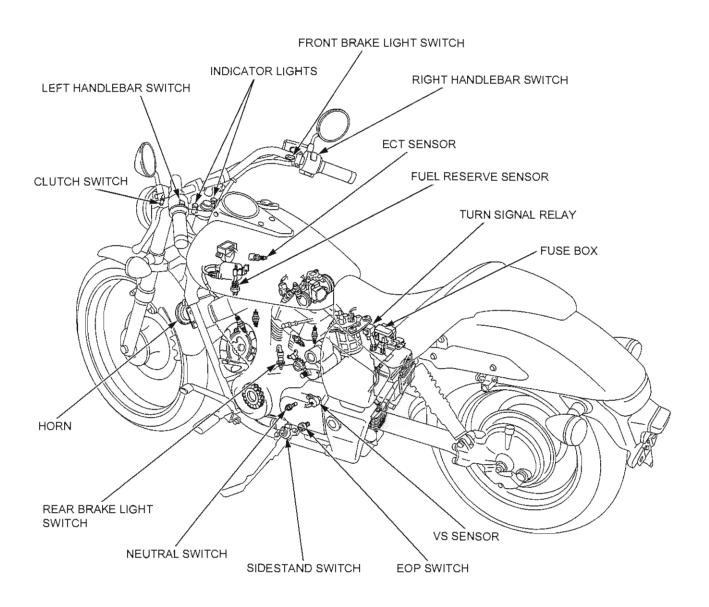

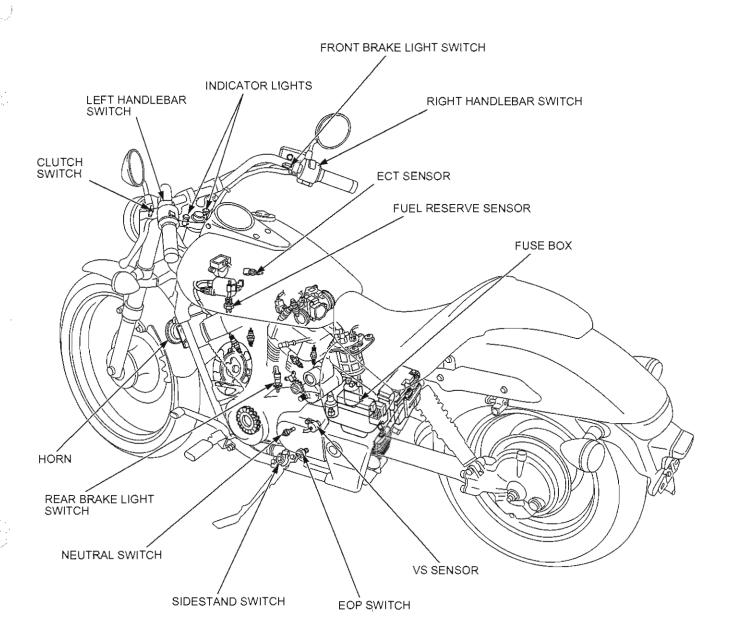

#### LIGHTS/METERS/SWITCHES

## SERVICE INFORMATION

#### **GENERAL**

#### NOTICE

- Note the following when replacing the halogen headlight bulb.
  - Wear clean gloves while replacing the bulb. Do not put fingerprints on the headlight bulb, as they may create hot spots on the bulb and cause it to fail.
  - If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.
- · Be sure to install the dust cover after replacing the bulb.
- A halogen headlight bulb becomes very hot while the headlight is on, and remains hot for a while after it is turned off. Be sure to
  let it cool down before servicing.
- · Check the battery condition before performing any inspection that requires proper battery voltage.
- · A continuity test can be made with the switches installed on the motorcycle.
- · The following color codes used are indicated throughout this section.

Bu = Blue

G = Green

Lg = Light Green

R = Red

BI = Black

Gr ≃ Gray

O = Orange

W = White

Br = Brown

Lb = Light Blue

Y = Yellow

#### SPECIFICATIONS (VT750C2F)

	ITEM	SPECIFICATIONS
Bulbs	Headlight	12 V – 60/55 W
	Brake/tail light	12 V – 21/5 W
	License light	12 V – 5 W
	Front turn signal/position light	12 V – 21/5 W x 2
	Rear turn signal light	12 V – 21 W x 2
	Instrument light	LED x 4
	Turn signal indicator	LED
	High beam indicator	12 V – 3.4 W
	Fuel reserve indicator	12 V – 3.4 W
	Neutral indicator	LED
	Oil pressure indicator	LED
	Coolant temperature indicator	LED
	MIL	LED
Fuse	Main fuse	30 A
	FI fuse	15 A
	Sub fuse	10 A x 5, 20 A x 1
ECT sensor	50°C (122°F)	6.8 – 7.4 kΩ
resistance	80°C (176°F)	2.1 – 2.6 kΩ
	120°C (248°F)	0.6 – 0.7 kΩ

# SPECIFICATIONS (VT750C2B)

ITEM		SPECIFICATIONS
Bulbs	Headlight	12 V – 60/55 W
	Brake/tail light	12 V – 21/5 W
	License light	12 V – 5 W
	Front turn signal/position light	12 V – 21/5 W x 2
	Rear turn signal light	12 V – 21 W x 2
	Instrument light	LED x 6
	Turn signal indicator	12 V – 3.4 W
	High beam indicator	12 V – 3.4 W
	Fuel reserve indicator	12 V – 3.4 W
	Neutral indicator	LED
	Oil pressure indicator	LED
	Coolant temperature indicator	LED
	MIL	LED
	HISS indicator	LED
Fuse	Main fuse	30 A
	FI fuse	15 A
	Sub fuse	10 A x 5, 20 A x 1
ECT sensor	50°C (122°F)	6.8 – 7.4 kΩ
resistance	80°C (176°F)	2.1 – 2.6 kΩ
	120°C (248°F)	0.6 – 0.7 kΩ

# **SPECIFICATIONS (VT750C2S)**

ITEM		SPECIFICATIONS
Bulbs	Headlight	12 V – 60/55 W
	Brake/tail light	12 V – 21/5 W
	License light	12 V – 5 W
	Front turn signal/position light	12 V – 21 W x 2
	Rear turn signal light	12 V – 21 W x 2
	Instrument light	LED x 6
	Turn signal indicator	LED
	High beam indicator	12 V – 3.4 W
	Fuel reserve indicator	12 V – 3.4 W
	Neutral indicator	LED
	Oil pressure indicator	LED
	Coolant temperature indicator	LED
	MIL	LED
	HISS indicator	LED
	ABS	LED
Fuse	Main fuse	30 A
	FI fuse	20 A
	Sub fuse	10 A x 6, 20 A x 1, 30 A x 1
ECT sensor	50°C (122°F)	6.8 – 7.4 kΩ
resistance	80°C (176°F)	2.1 – 2.6 kΩ
	120°C (248°F)	0.6 – 0.7 kΩ

#### LIGHTS/METERS/SWITCHES


## **TORQUE VALUES**

Ignition switch mounting bolt
Ignition switch cover screw
Neutral switch
Sidestand switch bolt
Horn mounting bolt
Speedometer mounting socket bolt
EOP switch terminal screw
Headlight unit mounting bolt
Brake/tail light mounting nut
VS sensor mounting bolt
Fuel reserve sensor

12 N·m (1.2 kgf·m, 9 lbf·ft)
1 N·m (0.1 kgf·m, 0.7 lbf·ft)
12 N·m (1.2 kgf·m, 9 lbf·ft)
10 N·m (1.0 kgf·m, 7 lbf·ft)
11 N·m (2.1 kgf·m, 15 lbf·ft)
12 N·m (2.1 kgf·m, 15 lbf·ft)
13 N·m (1.0 kgf·m, 7 lbf·ft)
14.1 N·m (0.2 kgf·m, 1.4 lbf·ft)
15.3 N·m (0.6 kgf·m, 3.0 lbf·ft)
16.3 N·m (0.6 kgf·m, 4.6 lbf·ft)
17.5 N·m (1.0 kgf·m, 7.2 lbf·ft)
18.5 N·m (2.3 kgf·m, 17 lbf·ft)

ALOC bolt; replace with a new one

#### TOOL

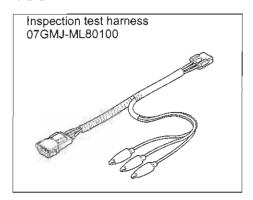


# **HEADLIGHT**

#### **BULB REPLACEMENT**

VT750C2B; Remove the front turn signal light bolt (page 21-9).

Remove the bolts, collars and headlight unit from the headlight case.

Disconnect the headlight 3P (White) connector.

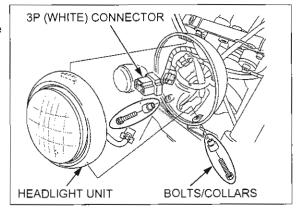

Remove the dust cover.

Unhook the retainer and remove the bulb.

#### NOTICE

Avoid touching the halogen headlight bulb. Finger prints can create hot spots that cause a bulb to break.

Install a new bulb, aligning its tabs with the grooves in the headlight unit.

Hook the retainer.

Install the dust cover with its "TOP" mark facing up.


Connect the headlight 3P (White) connector.


Install the headlight unit into the headlight case by aligning the headlight unit hook with the headlight case tab.

Install the collars and bolts.

Tighten the bolts to the specified torque.

TORQUE: 4.1 N·m (0.4 kgf·m, 3.0 lbf·ft)

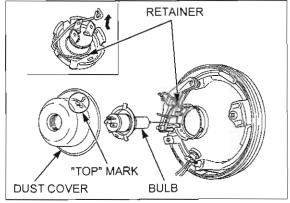

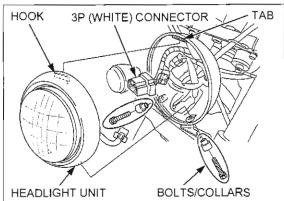


#### **HEADLIGHT CASE REMOVAL/** INSTALLATION

Remove the headlight unit (page 21-7).


VT750C2F/C2S;

Release the wire harnesses from the clamps. Remove the wire harnesses from the headlight case.

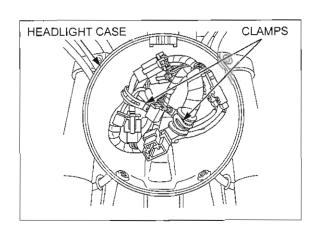

#### LIGHTS/METERS/SWITCHES

VT750C2B; Release the wire harnesses from the clamps. Remove the wire harnesses from the headlight case.

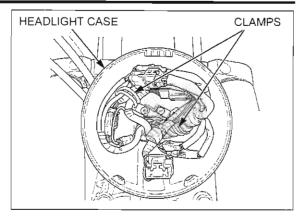


Remove the nuts, bolts and headlight case from the brackets.

Route the wire harnesses properly (page 1-26).

Install the headlight case in the reverse order of removal.

Adjust the headlight aim (page 3-23).

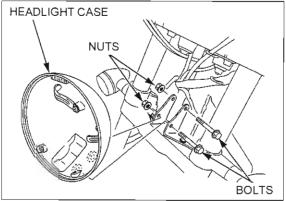


# **TURN SIGNAL/POSITION LIGHT**

#### **BULB REPLACEMENT**

Remove the screw and turn signal light lens. While pushing the bulb in, turn it counterclockwise to remove it, and replace it with a new one.

Make sure the lens gasket is installed in position and is in good condition, and replace it with a new one if necessary.

Install the lens, aligning its slot with the tab of the turn signal light, and tighten the screw.

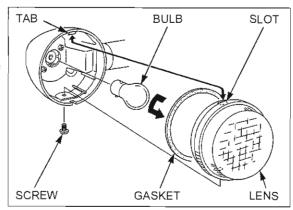


#### REMOVAL/INSTALLATION

#### FRONT (VT750C2F/C2S)

Remove the headlight unit (page 21-7).


Disconnect the turn signal 3P connectors.

- · Light blue: Right turn signal connector
- · Orange: Left turn signal connector

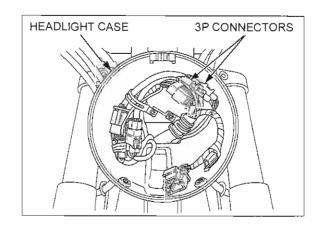

Remove the bolt, collar and turn signal light.

Route the turn signal wire properly (page 1-26). Installation is in the reverse order of removal.

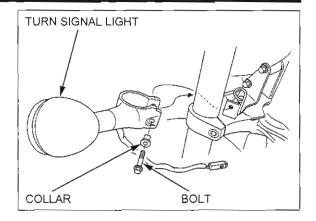


# FRONT (VT750C2B)

Remove the bolts and front turn signal light/cover.



Remove the headlight unit (page 21-7). Disconnect the turn signal 3P connectors.

- · Light blue: Right turn signal connector
- · Orange: Left turn signal connector

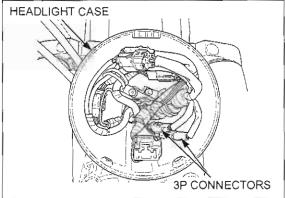


#### Remove the following:

- Screws
- Bolt
- Coliar
- Stay B
- Cover
- Front turn signal light

Route the turn signal wire properly (page 1-26).

Route the turn Installation is in the reverse order of removal.

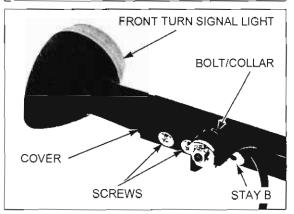

#### REAR


Remove the rear frame/rear fender A (page 2-8).

Release the turn signal light wire from the clamps of the rear frame.

Remove the bolt and turn signal light from the rear frame.

Route the turn signal light wire properly (page 1-26). Install the turn signal light, aligning its tab with the rear frame slot and tighten the bolt.

Install the rear frame/rear fender A (page 2-8).

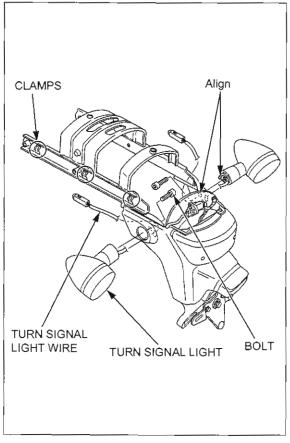

# HIGH BEAM/FUEL RESERVE INDICATOR (VT750C2F/C2S)


#### **BULB REPLACEMENT**

Remove the indicator light lens.
Pull down the bulb socket and remove it.
Remove the bulb and replace it with a new one.

Install the removed parts in the reverse order of removal.

#### NOTE:

Install the bulb socket with its tab facing rearward.

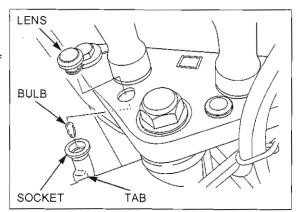

# HIGH BEAM/FUEL RESERVE/TURN SIGNAL INDICATOR (VT750C2B)


#### **BULB REPLACEMENT**

Remove the indicator light lens.
Pull down the bulb socket and remove it.
Remove the bulb and replace it with a new one.

Install the removed parts in the reverse order of removal.

#### NOTE:

· Install the bulb socket with its tab facing rearward.

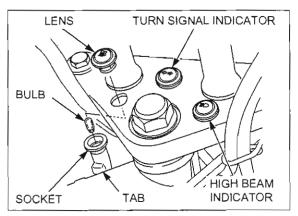

## **BRAKE/TAIL LIGHT**

#### **BULB REPLACEMENT**


Remove the screws.

Remove the brake/tail light lens while pushing it down and release its tabs from the rear fender A.

While pushing in the bulb, turn it counterclockwise to remove it, and replace it with a new one.

Make sure that the lens gasket is installed in position and is in good condition, and replace it with a new one if necessary.

Install the removed parts in the reverse order of removal.

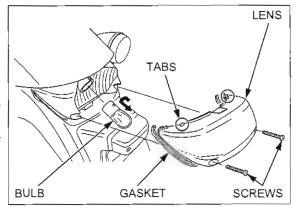

#### **REMOVAL/INSTALLATION**

Remove the rear frame/rear fender A (page 2-8).

Release the brake/tail/license light wire from the clamps of the rear frame.

Disconnect the license light 2P connector and remove it from the rear fender A.


Remove the nuts, collars and brake/tail light.

Route the wires properly (page 1-26).

Installation is in the reverse order of removal.

#### TORQUE:

Brake/tail light mounting nut: 6.3 N·m (0.6 kgf·m, 4.6 lbf·ft)

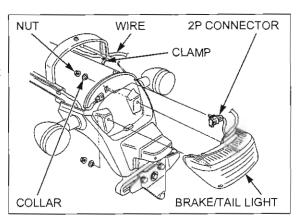


## LICENSE LIGHT

#### **BULB REPLACEMENT**

Remove the screws and license light cover.

Remove the bulb and replace it with a new one. Make sure that the lens gasket is installed in position and is in good condition, and replace it with a new one if necessary.

Install the removed parts in the reverse order of removal.

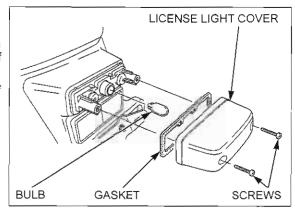

## SPEEDOMETER/VS SENSOR

# POWER/GROUND LINE INSPECTION (VT750C2F/C2B)


Remove the speedometer assembly (page 21-15).

#### POWER INPUT LINE

Measure the voltage between the Brown wire terminal (+) of the speedometer 12P connector and ground (-). There should be battery voltage with the ignition switch turned to "ON".

If there is no voltage, check the following:

- Open circuit in the Brown wire
- Blown sub fuse 10 A (METER)

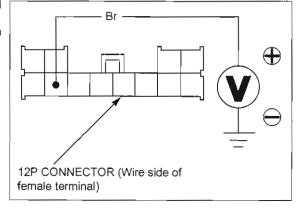


#### **GROUND LINE**

Check for continuity between the Green/black wire terminal and ground.

There should be continuity at all times.

If there is no continuity, check for an open circuit in the Green/black wire.

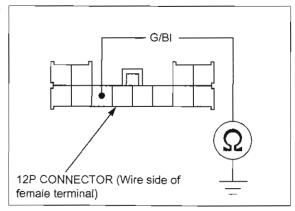

#### **BACK-UP VOLTAGE LINE**


Check this line if the odometer/trip meter does not function.

Measure the voltage between the Pink wire terminal (+) and ground (-).

There should be battery voltage at all times.

If there is no voltage, check the following:

- Open circuit in the Pink wire
- Blown sub fuse 10 A (ODOMETER)
- Open circuit in the Red wire between the fuse box and battery

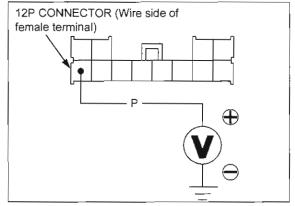

# POWER/GROUND LINE INSPECTION (VT750C2S)


Remove the speedometer assembly (page 21-12).

#### POWER INPUT LINE

Measure the voltage between the Brown wire terminal (+) of the speedometer 16P connector and ground (–). There should be battery voltage with the ignition switch turned to "ON".

If there is no voltage, check the following:

- Open circuit in the Brown wire
- Blown sub fuse 10 A (METER)

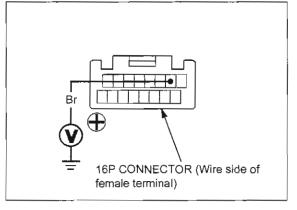


#### **GROUND LINE**

Check for continuity between the Green/black wire terminal and ground.

There should be continuity at all times.

If there is no continuity, check for an open circuit in the Green/black wire.

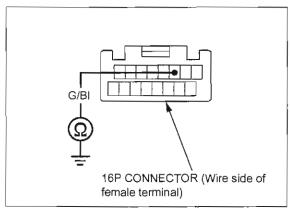

#### **BACK-UP VOLTAGE LINE**


Check this line if the odometer/trip meter does not function.

Measure the voltage between the Pink wire terminal (+) and ground (–).

There should be battery voltage at all times.

If there is no voltage, check the following:

- Open circuit in the Pink wire
- Blown sub fuse 10 A (ODOMETER)
- Open circuit in the Red wire between the fuse box and battery

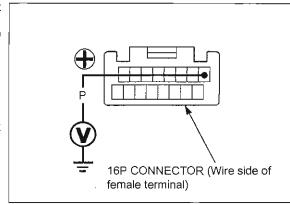

# SPEEDOMETER INSPECTION (VT750C2F/C2B)

#### Speedometer does not operate

Check that the indicators function properly.

If they do not function, check the power/ground line (page 21-12).

Remove the speedometer assembly (page 21-15).

Support the motorcycle securely and raise the rear wheel off the ground.

Shift the transmission into neutral and turn the ignition switch to "ON".

Measure the voltage between the Pink/green (+) and Green/black (-) wire terminals of the speedometer connector.

Slowly turn the rear wheel by hand.

There should be 0 V to 5 V pulse voltage.

- · If pulse voltage appears, replace the speedometer.
- If pulse voltage does not appear, check the following:
  - Pink/green wire for an open or short circuit.
  - Green/black wire for an open circuit.
     If the wires are OK, check the VS sensor (page 21-16).

# SPEEDOMETER INSPECTION (VT750C2S)

#### Speedometer does not operate

Check that the indicators function properly.

If they do not function, check the power/ground line (page 21-13).

Remove the speedometer assembly (page 21-15).

Support the motorcycle securely and raise the rear wheel off the ground.


Shift the transmission into neutral and turn the ignition switch to "ON".


Measure the voltage between the Pink/green (+) and Green/black (-) wire terminals of the speedometer connector.

Slowly turn the rear wheel by hand.

There should be 0 V to 5 V pulse voltage.

- · If pulse voltage appears, replace the speedometer.
- If pulse voltage does not appear, check the following:
  - Pink/green wire for an open or short circuit.
  - Green/black wire for an open circuit.
     If the wires are OK, check the VS sensor (page 21-16).

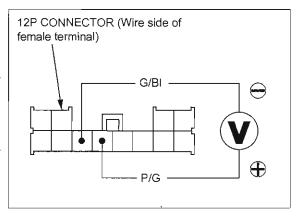

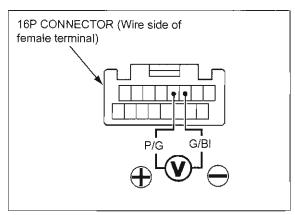


#### SPEEDOMETER REMOVAL/ INSTALLATION


Remove the bolts and speedometer assembly from the fuel tank.

Slide the dust cover and disconnect the speedometer 12P connector (VT750C2F/C2B).


Slide the dust cover and disconnect the speedometer 16P connector (VT750C2S).

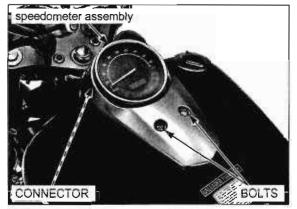

Remove the screws, switch cover and trip meter reset switch.

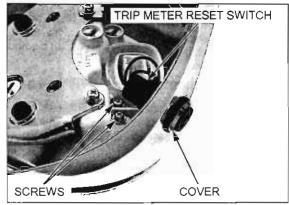


Remove the screws, clamp, speedometer and O-ring. Check the O-ring is in good condition, replace it if necessary.

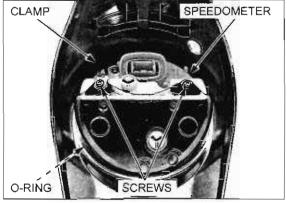

Install the removed parts into the speedometer cover in the reverse order of removal.

#### NOTE:

Install the reset switch with its boss facing down.

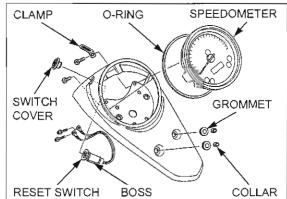


Connect the speedometer 12P connector and install the dust cover (VT750C2F/C2B).

Connect the speedometer 16P connector and install the dust cover (VT750C2S).

Install the speedometer assembly on the fuel tank, aligning the fuel tank tab with the meter slot.

Install and tighten the bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

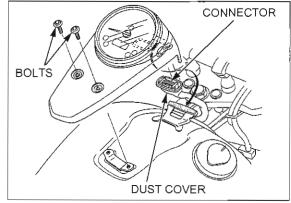

#### VS SENSOR INSPECTION

Remove the left side cover (page 2-3).

Disconnect the VS sensor 3P (White) connector.

Turn the ignition switch to "ON" and measure the voltage at the 3P (White) connector of the wire harness side

#### CONNECTION: Brown (+) - Green/black (-)

There should be battery voltage.

If there is no voltage, check for an open circuit in the Brown and Green/black wires.

Support the motorcycle securely and raise the rear wheel off the ground.

Connect the test harness between the VS sensor 3P (White) connector.

#### TOOL:

Inspection test harness

07GMJ-ML80100

Measure the voltage between the Red clip (+) and White clip (-).

CONNECTION: Red clip (+) - White clip (-)


STANDARD: Repeat 0 to 5 V

Shift the transmission into neutral and turn the ignition switch to "ON".

Slowly turn the rear wheel by hand.

If pulse voltage does not appear, replace the VS sensor.

# 3P CONNECTOR (Wire side of male terminal) Br G/BI

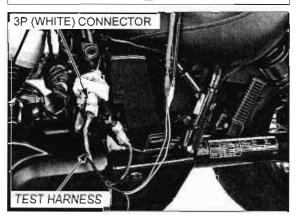


#### VS SENSOR REPLACEMENT

Remove the following:


- Left side cover (page 2-3)
- Left crankcase rear cover (page 2-4)

Release the wire band and disconnect the VS sensor 3P (White) connector.

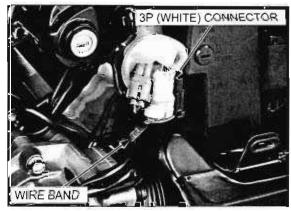

Release the VS sensor wire from the clamps and wire hand

Remove the bolt and VS sensor from the crankcase.

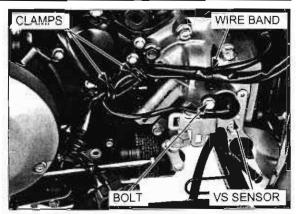

Coat a new O-ring with engine oil and install it into the VS sensor groove.


Route the VS sensor wire properly (page 1-26).

Route the VS Install the VS sensor and mounting bolt.

Tighten the mounting bolt to the specified torque.

TORQUE: 9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)

Install the removed parts in the reverse order of removal.

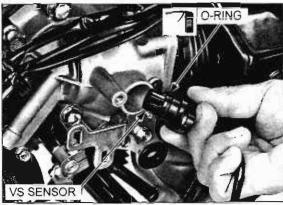


# COOLANT TEMPERATURE INDICATOR/ECT SENSOR

#### INSPECTION

The coolant temperature is too high, but the indicator does not come on

Check that the neutral and oil pressure indicators function properly.

If they do not function, check the power input line of the speedometer (page 21-12).

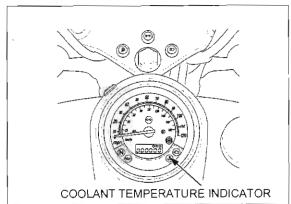


Remove the steering side covers (page 2-4).

Disconnect the ECT sensor 3P connector.

Ground the Green/blue wire of the ECT sensor 3P connector with a jumper wire.

Turn the ignition switch to "ON" and check the coolant temperature indicator.

- If the indicator comes on, inspect the ECT sensor (page 5-62).
- If the indicator does not come on, check for an open circuit in the Green/blue wire. If the wire is OK, replace the speedometer (page 21-15).

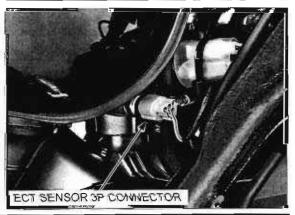

The coolant temperature is low but the indicator comes on.

Disconnect the ECT sensor 3P connector.

Turn the ignition switch to "ON" and check the coolant temperature indicator.

- If the indicator does not come on, inspect the ECT sensor (page 21-18).
- If the indicator comes on, check for a short circuit in the Green/blue wire. If the wire is OK, replace the speedometer (page 21-15).

#### **ECT SENSOR INSPECTION**

Drain the coolant from the cooling system (page 6-7). Remove the ECT sensor (page 5-62).

Wear insulated gloves and adequate eye protection.
Keep flammable materials away from the burner.

Heat the coolant (1 : 1 mixture) with an electric heating element.

Suspend the ECT sensor in heated coolant and check the continuity through the sensor as the coolant heats up.

#### NOTE:


- Soak the ECT sensor in coolant up to its threads with at least 40 mm (1.6 in) from the bottom of the pan to the bottom of the sensor.
- Keep temperature constant for 3 minutes before testing. A sudden change of temperature will result in incorrect readings. Do not let the thermometer or ECT sensor touch the pan.

#### CONNECTION: Green/blue - Body ground

Temperature	50°C	80°C	120°C
	(122°F)	(176°F)	(248°F)
Resistance	$6.8 - 7.4 \text{ k}\Omega$	$2.1 - 2.6 \text{ k}\Omega$	$0.6 - 0.7 \text{ k}\Omega$

Replace the ECT sensor if it is out of specifications.

Install the ECT sensor (page 5-62).

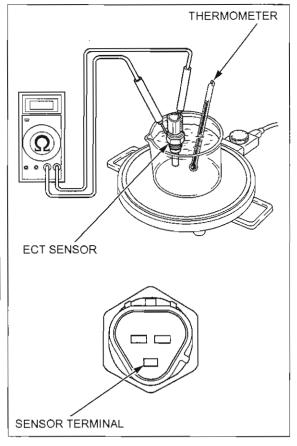

# **FUEL RESERVE SENSOR**


#### INSPECTION

Fuel tank is empty, but the indicator does not come on

Disconnect the fuel reserve sensor connectors. Jump the Black/light green and Green wire terminals of the wire harness side using a jumper wire.

Turn the ignition switch to "ON" and check the fuel reserve indicator.

- If the indicator comes on, replace the fuel reserve sensor (page 21-19).
- If the indicator does not comes on, check the voltage at the fuel reserve/high beam indicator 4P connector as follows.

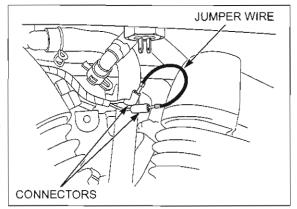

Remove the headlight case (page 21-7).

Connect the fuel reserve sensor connectors.

Turn the ignition switch to "OFF".

Disconnect the fuel reserve/high beam indicator 4P (White) connector.

Turn the ignition switch to "ON", measure the voltage between the Brown (+) and Black/light green (-) wire terminals of the sensor side connector.

- If there is battery voltage, check for open circuit in Black/brown or Light green/red wire between the fuel reserve/high beam indicator 4P connector and fuel reserve indicator light. If the wire is OK, replace the fuel reserve indicator bulb (page 21-10).
- If there is no battery voltage, check for open circuit in Brown or Black/light green wire.


# Fuel left enough in the fuel tank, but the indicator stays on


Turn the ignition switch to "OFF".

Disconnect the fuel reserve sensor connectors.

Check for continuity between the Black/light green wire and body ground.

- If there is continuity, check for short circuit in Black/ light green wire.
- If there is no continuity, replace the fuel reserve sensor (page 21-19).

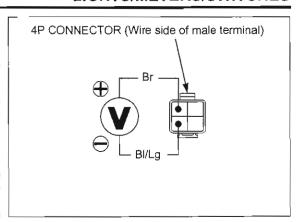


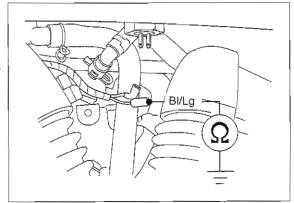

#### REMOVAL/INSTALLATION

Remove the fuel tank (page 5-48).

Drain the fuel into an approved fuel container. Remove the fuel reserve sensor and O-ring.

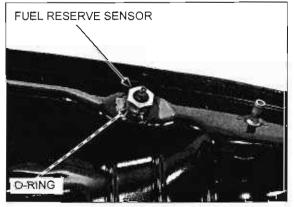


Install a new O-ring onto the fuel reserve sensor. Install and tighten the fuel reserve sensor to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Install the fuel tank (page 5-48).

NOTE

After installing the fuel tank, check that there is no fuel leak.

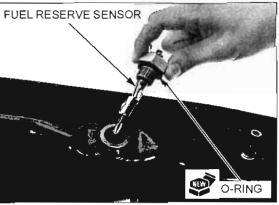


#### OIL PRESSURE INDICATOR

#### **INSPECTION**

Indicator does not come on with the ignition switch turned to "ON"

Check that the neutral and coolant temperature indicators function properly.


If they do not function properly, check the power input line of the speedometer (page 21-12).

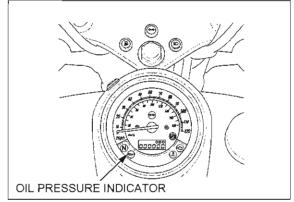

Remove the left crankcase rear cover (page 2-4). Remove the rubber cap, and disconnect the EOP switch wire by removing the terminal screw. Ground the wire terminal.

Turn the ignition switch to "ON" and check the oil pressure indicator.

- · If the indicator comes on, replace the EOP switch.
- If the indicator does not come on, check for an open circuit in the Blue/red wire. If the wire is OK, replace the speedometer (page 21-15).

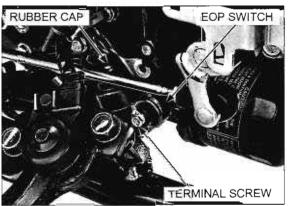

#### Indicator stays on while the engine is running

Remove the rubber cap, and disconnect the EOP switch wire by removing the terminal screw. Check for continuity between the wire terminal and ground.

- If there is, check for a short circuit in the Blue/red wire.
- If there is no continuity, check the oil pressure (page 4-5).

If the oil pressure is normal, replace the EOP switch.

After inspection, connect the EOP switch wire and tighten the terminal screw.

#### TORQUE: 1.9 N·m (0.2 kgf·m, 1.4 lbf·ft)

Install the rubber cap properly. Install the left crankcase rear cover (page 2-4).

# **IGNITION SWITCH**

## INSPECTION (VT750C2F/C2B)


Remove the left side cover (page 2-3).

Disconnect the ignition switch 2P (White) connector.

Check for continuity between the switch side connector terminals in each switch position.

Continuity should exist between the color coded wires as shown in the chart.

	IG	BAT1
ON	0	-0
OFF		
COLOR	R/BI	R

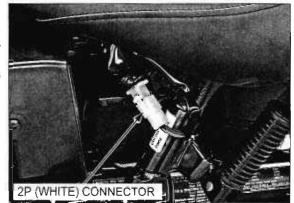

#### **INSPECTION (VT750C2S)**


Remove the left crankcase rear cover (page 2-4).

Disconnect the ignition switch 2P (White) connector.

Check for continuity between the switch side connector terminals in each switch position.


Continuity should exist between the color coded wires as shown in the chart.

	IG	BAT1
ON	d	9
OFF		
COLOR	R/BI	R

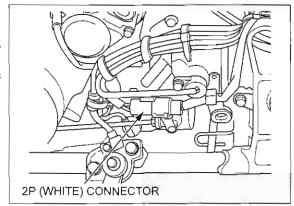


#### **REMOVAL/INSTALLATION**


VT750C2F/C2B; Disconnect the ignition switch 2P (White) connector.

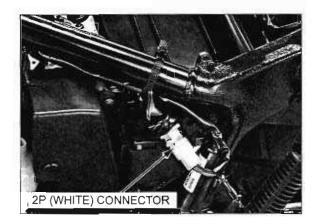


VT750C2S; Disconnect the ignition switch 2P (White) connector.

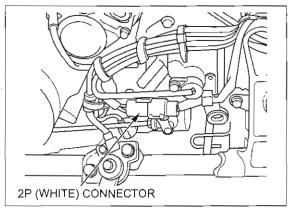

Remove the screw and ignition switch cover.

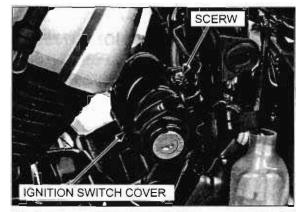

Remove the bolts and ignition switch assembly. Remove the bolts, ignition switch, collar and switch base from the stay.

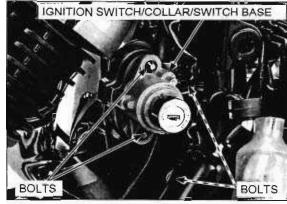

The ignition switch mounting bolt heads are broken by tighten them to the specified torque.

Install the switch base, ignition switch and collar to the stay.

Tighten new bolts to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the ignition switch assembly to the frame. Install the ignition switch cover and tighten the screw.

TORQUE: 1 N·m (0.1 kgf·m, 0.7 lbf·ft)

Route the ignition switch wire properly (page 1-26). Connect the ignition switch 2P (White) connector.

Installation is in the reverse order of removal.

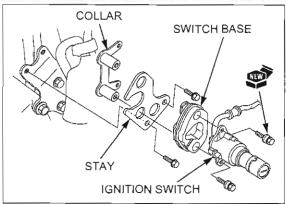

# HANDLEBAR SWITCH


VT750C2F/C2S; Remove the headlight unit (page 21-7).

Disconnect the following connectors:

- Left handlebar switch 6P (Black)
- Left handlebar switch 6P (Blue)
- Right handlebar switch 6P (Red)
- Dimmer switch 2P (Black)

Check for continuity between the connector terminals in each switch position.

Continuity should exist between the color coded wires as shown in the charts.

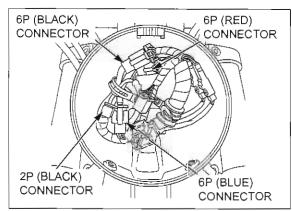


VT750C2B; Remove the headlight unit (page 21-7).

Disconnect the following connectors:

- Left handlebar switch 6P (Black)
- Left handlebar switch 6P (Blue)
- Right handlebar switch 6P (Red)
- Left handlebar switch 2P (Black)

Check for continuity between the connector terminals in each switch position.

Continuity should exist between the color coded wires as shown in the charts.

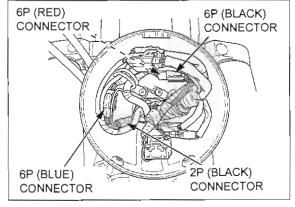

#### RIGHT HANDLEBAR SWITCH

#### **ENGINE STOP SWITCH**

	IG	ВАТ2
<b>⊗</b>		
(3)	0	0
COLOR	BI/W	BI/G

#### STARTER SWITCH

	ST	IG	BAT1	HL
FREE			$\Diamond$	9
PUSH	0			
COLOR	Y/R	BI/W	BI/R	Bu∕W

# ENGINE STOP SWITCH STARTER SWITCH

#### LEFT HANDLEBAR SWITCH

#### **TURN SIGNAL SWITCH**


	W	R	L
R	b	9	
N			
L	ò		9
COLOR	Gr	Lb	0

#### HORN SWITCH

	Но	ватз
FREE		
PUSH	9	9
COLOR	Lg	W/G

#### **DIMMER SWITCH**

	HL	Lo	Hi
Lo	b	9	
(N)	9	$\phi$	9
Hì	9		9
COLOR	Bu/W	W	Bu

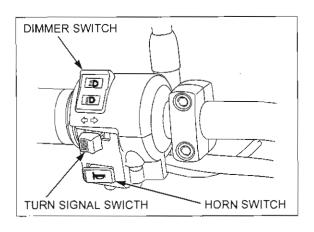


# **BRAKE LIGHT SWITCH**

#### **FRONT**

Disconnect the brake light switch connectors and check for continuity between the switch terminals.

There should be continuity with the brake lever squeezed and no continuity with the lever released.

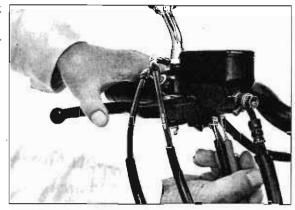

#### **REAR**


Remove the steering side covers (page 2-4).

Disconnect the rear brake light switch 3P (Light gray) connector.



Check for continuity between the switch side connector terminals.


There should be continuity with the brake pedal depressed and no continuity with the pedal released.

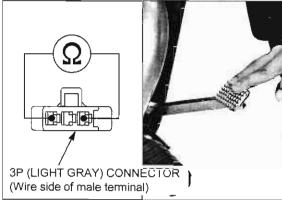

# REAR BRAKE LIGHT SWITCH REMOVAL/INSTALLATION

Remove the steering side covers (page 2-4).


Remove the wire band and disconnect the rear brake light switch 3P (Light gray) connector.

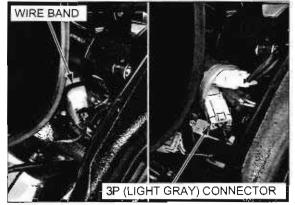

Unhook the return spring and remove the rear brake light switch.

Route the wire properly (page 1-26).


Installation is in the reverse order of removal. Adjust the rear brake light switch (page 3-22).

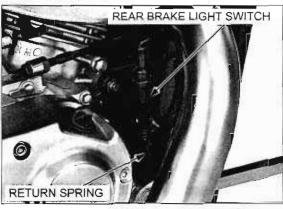

# **CLUTCH SWITCH**

Disconnect the clutch switch wire connectors and check for continuity between the switch terminals.

There should be continuity with the clutch lever squeezed and no continuity with the lever released.

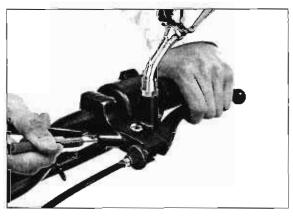

## **NEUTRAL SWITCH**


Remove the left crankcase rear cover (page 2-4).

#### INSPECTION

Disconnect the neutral switch connector.

Check for continuity between the switch terminal and engine ground.

There should be continuity when the transmission is in neutral, and no continuity when the transmission is in gear except neutral.

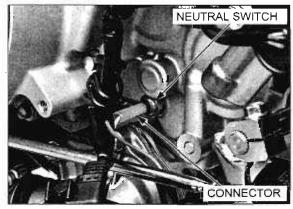

#### REPLACEMENT

Disconnect the neutral switch connector.


Remove the neutral switch with the sealing washer from the crankcase.

Install the neutral switch with a new sealing washer and tighten it.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the neutral switch connector.

Install the left crankcase rear cover (page 2-4).

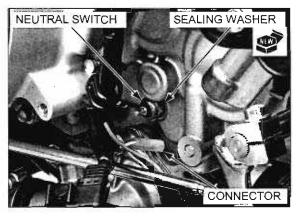


## SIDESTAND SWITCH

#### **INSPECTION**

Remove the left side cover (page 2-3).

Disconnect the sidestand switch 2P (Green) connector. Check for continuity between the switch side connector terminals.

There should be continuity with the sidestand retracted and no continuity with the sidestand lowered.

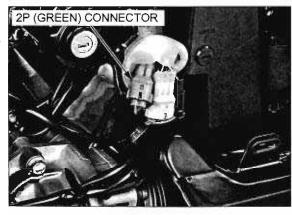


#### **REMOVAL/INSTALLATION**

Remove the following:


- Left side cover (page 2-3)
- Left crankcase rear cover (page 2-4)

Support the motorcycle securely.

Release the wire band and disconnect the sidestand switch 2P (Green) connector.

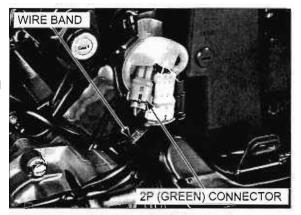


Release the sidestand switch wire from the wire band and clamps.

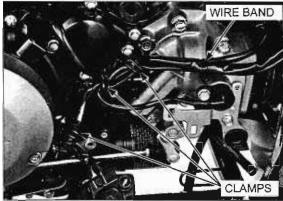


Do not reuse the sidestand switch bolt.

Do not reuse the Remove the bolt and sidestand switch.

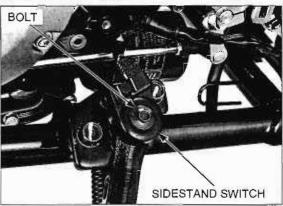

Install the sidestand switch by aligning its pin with the sidestand hole and switch groove with the bracket pin.

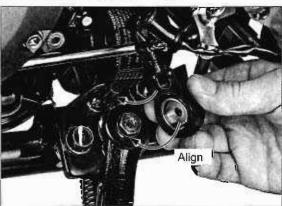


Install a new sidestand switch bolt. Tighten the bolt to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

switch wire properly removal. (page 1-26).

Route the sidestand Install the removed parts in the reverse order of

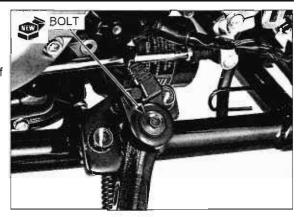


#### HORN

#### INSPECTION

Disconnect the connectors from the horn. Connect a 12 V battery to the horn terminals.

The horn is normal if it sounds when the 12 V battery is connected across the horn terminals.

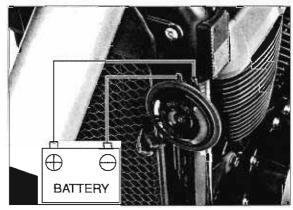

#### **REMOVAL/INSTALLATION**

Disconnect the connectors from the horn.


Remove the bolt and horn.

Install the horn to the frame, aligning its flat with the horn stay.

Install and tighten the bolt to the specified torque.

TORQUE: 21 N·m (2.1 kgf·m, 15 lbf·ft)

Connect the connectors.

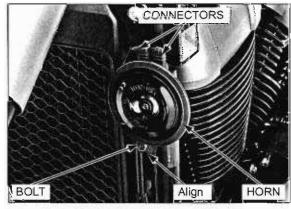

# TURN SIGNAL RELAY (VT750C2F/C2B)

#### Turn signal light does not blink


Remove the right side cover (page 2-3).

Remove the turn signal relay from the stay. Slide the rubber cap and disconnect the connector. Connect the White/green and Gray wire terminals of the wire side connector with a jumper wire.

Turn the ignition switch to "ON" and check the turn signal lights by operating the turn signal switch.

- If the light does not come on, check for an open circuit in the White/green and Gray wires.
- If the light comes on, check the connector terminals for loose or poor contact.

If the connector terminals are OK, replace the turn signal relay.

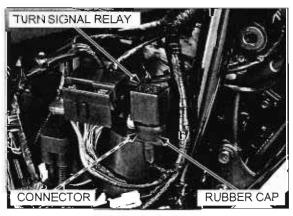

# **TURN SIGNAL RELAY (VT750C2S)**

#### Turn signal light does not blink


Remove the fuel tank (page 5-48).

Remove the turn signal relay from the stay. Slide the rubber cap and disconnect the connector. Connect the White/green and Gray wire terminals of the wire side connector with a jumper wire.

Turn the ignition switch to "ON" and check the turn signal lights by operating the turn signal switch.

- · If the light does not come on, check for an open circuit in the White/green and Gray wires.
- If the light comes on, check the connector terminals for loose or poor contact. If the connector terminals are OK, replace the turn

signal relay.

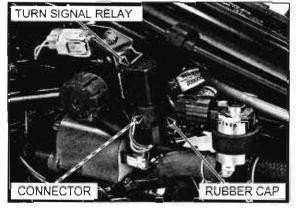

# MEMO


# **22. WIRING DIAGRAMS**


VT750C2F22-3	VT750C2S22-5
VT750C2B22-4	

22


# MEMO


# VT750C2F

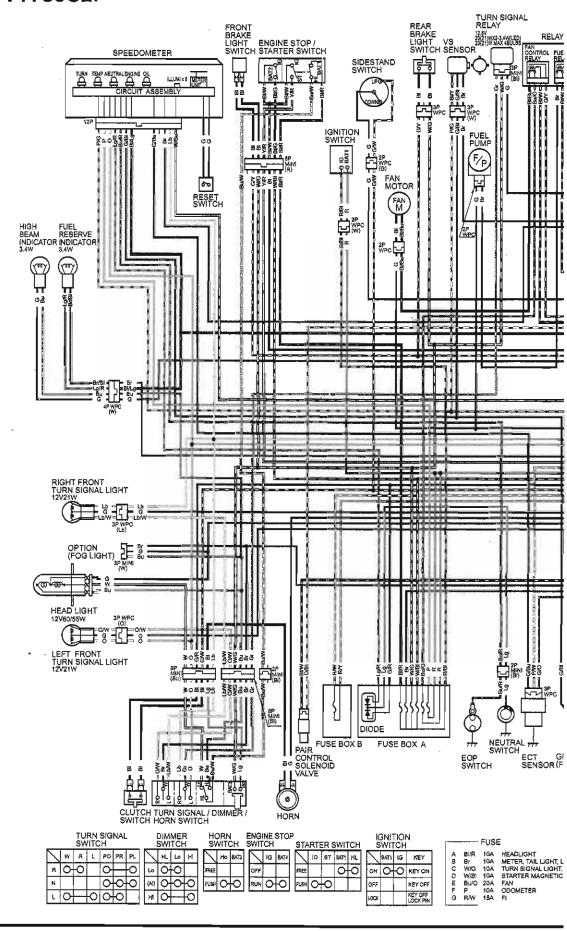

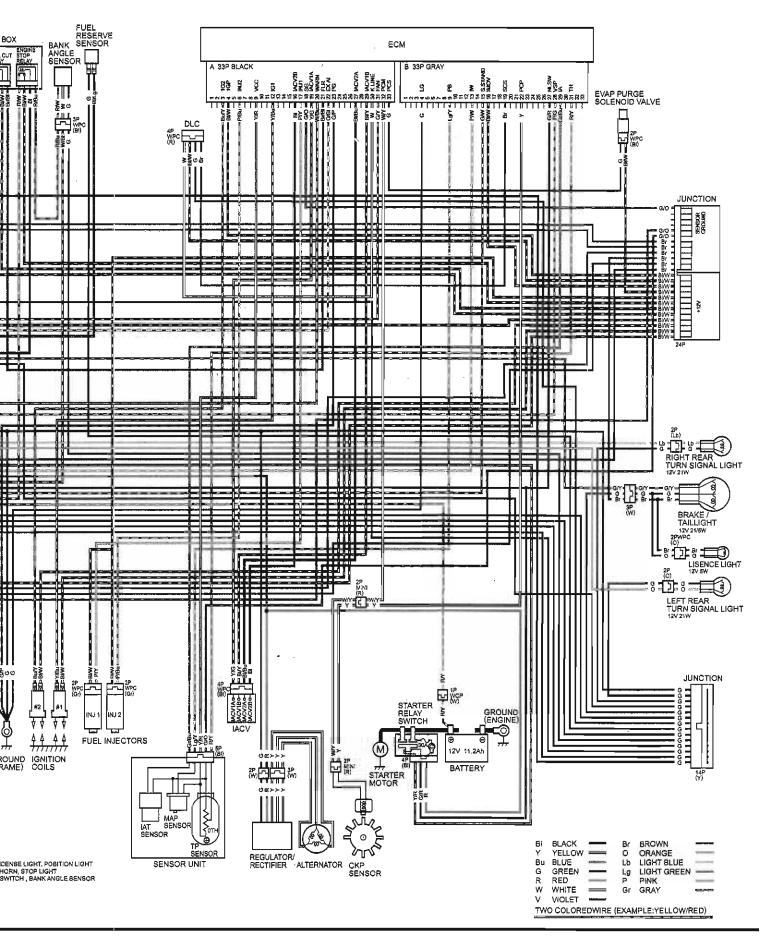



# VT750C2B

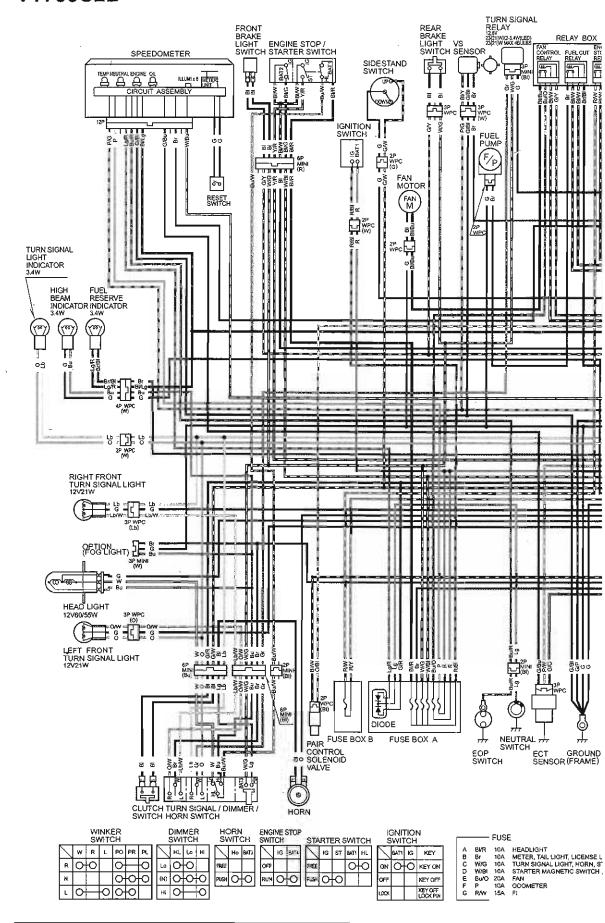

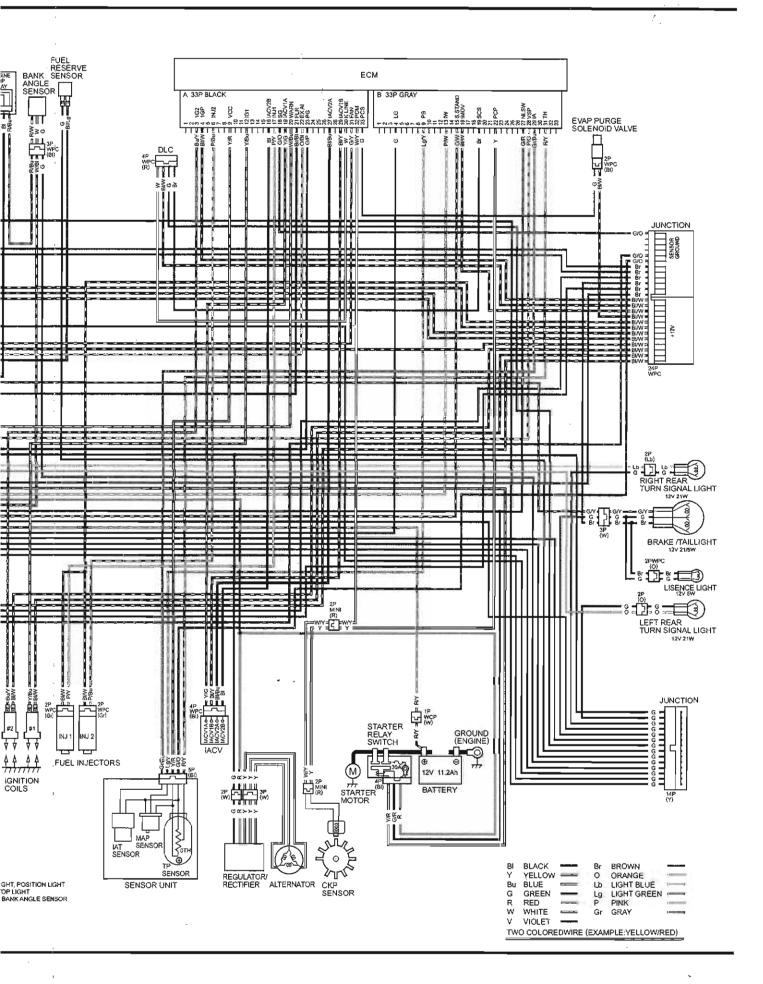

# VT750C2S

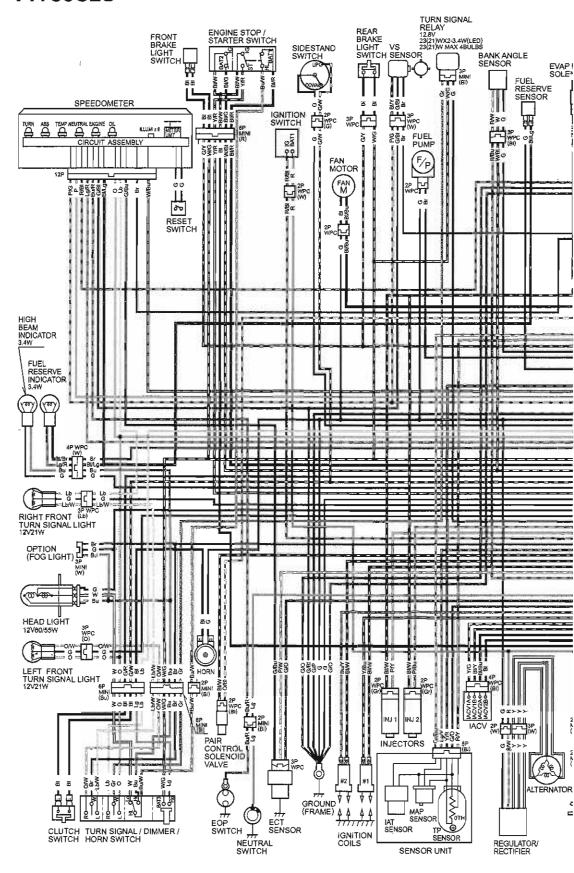

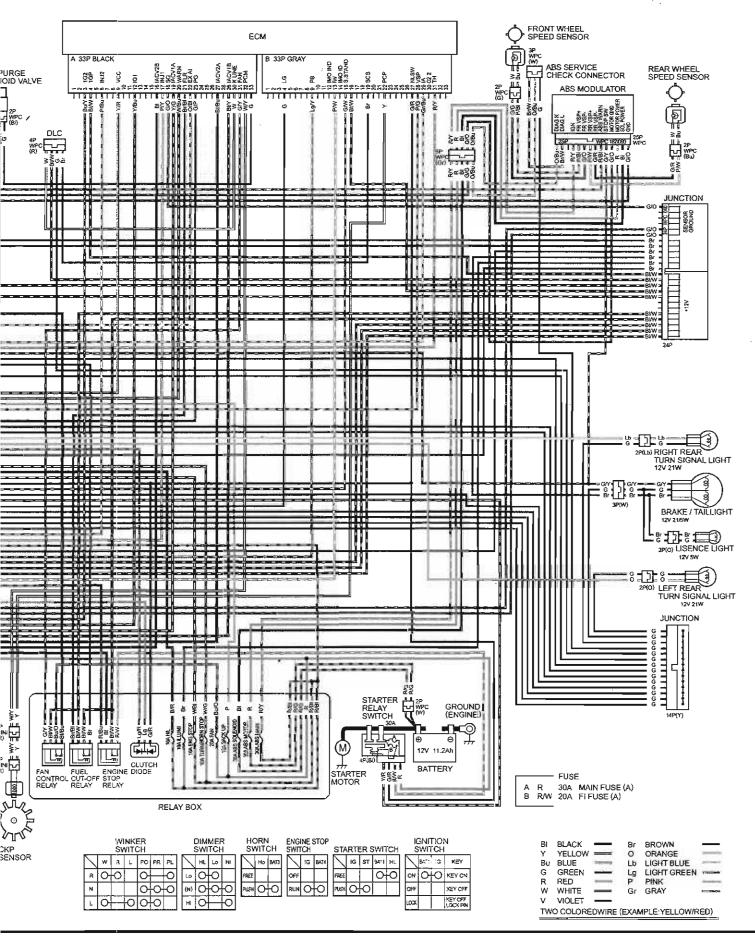

# 23. TROUBLESHOOTING

ENGINE DOES NOT START OR IS HARD TO START23-2	POOR PERFORMANCE AT HIGH SPEED23-5
ENGINE LACKS POWER ······23-3	POOR HANDLING23-6
POOR PERFORMANCE AT LOW AND IDLE SPEED23-5	

#### ENGINE DOES NOT START OR IS HARD TO START

#### 1. Spark Plug Inspection

Remove and inspect spark plugs.

#### Is the spark plug in good condition?

- YES · Incorrect spark plug heat range
  - · Incorrect spark plug gap
  - · Dirty air cleaner

NO - GO TO STEP 2.

#### 2. Spark Test

Perform spark test.

#### Is there weak or no spark?

YES - • Faulty spark plug

- · Fouled spark plug
- · Loose or disconnected ignition system wires
- Faulty CKP sensor
- · Faulty ignition coil
- Faulty ECM
- · Faulty engine stop switch

NO - GO TO STEP 3.

#### 3. Fuel Pump Inspection

Check for operation of the fuel pump and inspect the fuel flow.

#### Is the fuel pump unit normal?

NO - Faulty fuel pump unit

YES - GO TO STEP 4.

#### 4. PGM-FI System Inspection

Check the PGM-FI system.

#### Is the PGM-FI system normal?

NO - Faulty PGM-FI system

YES - GO TO STEP 5.

#### 5. Cylinder Compression

Test cylinder compression.

#### Is the compression low?

YES - · Valve stuck open

- · Worn cylinder and piston rings
- · Damaged cylinder head gasket
- Seized valve
- · Improper valve timing

NO - GO TO STEP 6.

#### 6. Engine Starting Condition

Start engine by following normal procedure.

#### Does the engine start then stops?

YES - · Leaking insulator or intake manifold

- Improper ignition timing (Faulty ECM or CKP sensor)
- Contaminated fuel
- Faulty IACV

## **ENGINE LACKS POWER**

#### 1. Drive Train Inspection

Raise wheel off the ground and spin it by hand.

#### Does the wheel spin freely?

- NO • Brake dragging
  - · Worn or damaged wheel bearings
  - · Final gear bearing damaged

YES - GO TO STEP 2.

#### 2. Tire Pressure Inspection

Check tire pressure.

#### Are the tire pressures low?

YES - · Faulty tire valve

Punctured tire

NO - GO TO STEP 3.

#### 3. Clutch Inspection

Accelerate rapidly from low to second.

#### Does the engine speed change accordingly when the clutch is engaged?

NO - · Clutch slipping

- Worn clutch discs/plates
- · Warped clutch discs/plates
- · Weak clutch spring
- Additive in engine oil

YES - GO TO STEP 4.

#### 4. Engine Performance Inspection

Accelerate lightly.

#### Does the engine speed increase?

- NO · Dirty air cleaner
  - · Restricted fuel flow
  - · Clogged muffler

YES - GO TO STEP 5.

#### 5. Spark Plug Inspection

Remove and inspect spark plugs.

#### Is the spark plug fouled or discolored?

- YES • Plugs not serviced frequently enough
  - · Incorrect spark plug heat range
  - · Incorrect spark plug gap

NO - GO TO STEP 6.

#### 6. Engine Oil Inspection

Check oil level and condition.

#### Is there correct level and good condition?

NO - Oil level too high

- Oil level too low
- · Contaminated oil

YES - GO TO STEP 7.

#### 7. Ignition Timing Inspection

Check ignition timing.

#### Is the ignition timing correct?

NO - • Faulty ECM

· Faulty CKP sensor

YE\$ - GO TO STEP 8.

#### 8. Cylinder Compression Inspection

Test cylinder compression.

#### Is the compression low?

YES - · Valve clearance too small

- · Valve stuck open
- · Worn cylinder and piston rings
- Damaged cylinder head gasket
- Improper valve timing

NO - GO TO STEP 9.

#### 9. Fuel pump Inspection

Inspect the fuel flow.

#### Is the fuel pump unit normal?

NO - Faulty fuel pump unit

YES - GO TO STEP 10.

#### 10. PGM-FI System Inspection

Check the PGM-FI system.

#### Is the PGM-FI System normal?

NO - Faulty PGM-FI system

YES - GO TO STEP 11.

#### 11. Lubrication Inspection

Remove cylinder head cover and inspect lubrication.

#### Is the valve train lubricated properly?

NO - · Clogged oil passage

- Clogged oil filter
- Faulty oil pump or oil pressure relief valve

YES - GO TO STEP 12.

#### 12. Over Heating Inspection

Check for engine over heating.

#### Is the engine over heating?

YES - · Coolant level too low

- Fan motor not working
- · Thermostat stuck closed
- · Excessive carbon build-up in combustion chamber
- · Wrong type of fuel
- · Clutch slipping

NO - GO TO STEP 13.

#### 13. Engine Knocking Inspection

Accelerate or run at high speed.

#### Is there knocking?

YES - · Worn piston and cylinder

- · Wrong type of fuel
- · Excessive carbon build-up in combustion chamber
- Ignition timing too advance (Faulty ECM)
- Lean fuel mixture
- Faulty CKP sensor

NO - Engine does not knock

## POOR PERFORMANCE AT LOW AND IDLE SPEED

1. Intake Air Leak Inspection

Check the intake manifold gasket or insulator for leaks.

#### Are these leaks?

YES - · Loose insulator bands

- · Loose intake manifold mounting bolts
- · Damaged insulator
- Faulty O-rings

NO - GO TO STEP 2.

#### 2. Spark Test

Perform spark test.

#### Is there weak or intermittent spark?

- YES · Faulty spark plug
  - · Fouled spark plug
  - · Loose or disconnected ignition system wires
  - · Faulty CKP sensor
  - · Faulty ignition coil
  - Faulty engine stop switch
  - Faulty ECM

NO - GO TO STEP 3.

#### 3. Fuel Pump Inspection

Inspect the fuel flow.

#### Is the fuel pump unit normal?

NO - Faulty fuel pump unit

YES - GO TO STEP 4.

#### 4. Ignition Timing Inspection

Check ignition timing.

#### Is the ignition timing correct?

- · Faulty ECM

· Faulty CKP sensor

YES - GO TO STEP 5.

#### 5. PGM-FI System Inspection

Check the PGM-FI system

Is the PGM-FI system normal?

NO - Faulty PGM-FI system

#### POOR PERFORMANCE AT HIGH SPEED

#### 1. Fuel Pump Inspection

Inspect the fuel flow.

#### Is the fuel pump unit normal?

- Faulty fuel pump unit

YES - GO TO STEP 2.

#### 2. PGM-FI System Inspection

Check the PGM-FI system.

#### Is the PGM-FI system normal?

- Faulty PGM-FI system

YES - GO TO STEP 3.

#### 3. Ignition Timing Inspection

Check ignition timing.

#### Is the ignition timing correct?

NO - • Faulty ECM

Faulty CKP sensor

YES - GO TO STEP 4.

#### 4. Valve Timing Inspection

Check valve timing.

#### Is the valve timing correct?

NO - Cam sprockets not installed properly

YES - GO TO STEP 5.

#### 5. Valve Spring Inspection

Check valve springs.

#### Is the valve spring free length within specification?

NO – Faulty valve spring

YES - GO TO STEP 6.

#### 6. Camshaft Inspection

Remove and inspect the camshaft.

#### Is the cam lobe height within specification?

NO - Faulty camshaft

YES - Camshaft is OK

#### **POOR HANDLING**

#### Steering is heavy

- · Steering top thread too tight
- · Damaged steering head bearings
- · Low tire pressure

#### Either wheel is wobbling

- · Excessive wheel bearing play
- · Bent rim
- · Improperly installed wheel hub
- Excessively worn swingarm pivot bearings
- Bent frame

#### Motorcycle pulls to one side

- · Front and rear wheels not aligned
- Bent fork
- · Bent swingarm
- Bent axle
- · Bent frame

# **INDEX**

ABS CONNECTOR LOCATIONS17-5	CRANKSHAFT/CONNECTING ROD	······ 12-10
ABS INDICATOR CIRCUIT TROUBLESHOOTING ··· 17-21	CRANKSHAFT/TRANSMISSION	
ABS MODULATOR/PCV17-26	SPECIFICATIONS	
ABS PROBLEM CODE INDEX17-10	CYLINDER COMPRESSION	····· 8 <b>-</b> 6
ABS SYSTEM DIAGRAM ····································	CYLINDER HEAD ASSEMBLY	
ABS SYSTEM LOCATION17-2	CYLINDER HEAD COVER INSTALLATION	
ABS TROUBLESHOOTING17-11	CYLINDER HEAD COVER REMOVAL	
ABS TROUBLESHOOTING INFORMATION 17-7	CYLINDER HEAD DISASSEMBLY	
AIR CLEANER3-6	CYLINDER HEAD INSTALLATION	
AIR CLEANER HOUSING5-49	CYLINDER HEAD REMOVAL	
ALTERNATOR CHARGING COIL18-10	CYLINDER HEAD/VALVE SPECIFICATIONS	1-10
ALTERNATOR/STARTER CLUTCH	CYLINDER/PISTON INSTALLATION	
SPECIFICATIONS1-11	CYLINDER/PISTON REMOVAL	9-4
BANK ANGLE SENSOR ······5-63	CYLINDER/PISTON SPECIFICATIONS	1-10
BATTERY18-7	DIODE ·····	
BATTERY/CHARGING SYSTEM	DTC INDEX ······	5-20
SPECIFICATIONS1-15	DTC TROUBLESHOOTING	5-21
BRAKE FLUID	ECM	5-66
VT750C2F/C2B3-16	ECT SENSOR ······	······ 5-62
VT750C2S3-17	ELECTRIC STARTER SPECIFICATIONS	
BRAKE FLUID REPLACEMENT/AIR BLEEDING	EMISSION CONTROL SYSTEMS	
VT750C2F/C2B ······16-8	ENGINE & FRAME TORQUE VALUES	
VT750C2S16-10	ENGINE IDLE SPEED	5-68
BRAKE LIGHT SWITCH	ENGINE INSTALLATION	······ 7 <b>-</b> 8
LIGHTS/METERS/SWITCHES21-24	ENGINE OIL	
MAINTENANCE3-22	ENGINE OIL FILTER	
BRAKE PAD/DISC 16-16	ENGINE REMOVAL	
BRAKE PADS WEAR (VT750C2S)3-19	ENGINE STOP RELAY	
BRAKE PEDAL	EVAP CONTROL SYSTEM (California tupe only)	
VT750C2F/C2B15-24	EVAPORATIVE EMISSION CONTROL SYSTEM	
VT750C2S16-40	EXHAUST SYSTEM	
BRAKE SHOES/PADS WEAR (VT750C2F/C2B)·······3-19	FAN CONTROL RELAY	
BRAKE SYSTEM	FINAL DRIVE ASSEMBLY	
VT750C2F/C2B3-20	FINAL DRIVE DISASSEMBLY/INSPECTION	13-8
VT750C2S3-21	FINAL DRIVE INSTALLATION	13-22
BRAKE/TAIL LIGHT21-11	FINAL DRIVE OIL	
CABLE & HARNESS ROUTING1-27	FINAL DRIVE REMOVAL	
CAMSHAFT INSTALLATION8-25	FINAL DRIVE SPECIFICATIONS	
CAMSHAFT REMOVAL 8-7	FLYWHEEL/STARTER CLUTCH	11-5
CHARGING SYSTEM INSPECTION18-8	FORK	14-24
CLUTCH INSTALLATION10-18	FRONT BRAKE CALIPER	17-27
CLUTCH REMOVAL10-7	VT750C2F/C2B	16-25
CLUTCH SWITCH 21-25	VT750C2S	10-23
CLUTCH SYSTEM 3-23	FRONT FENDER	10-30
CLUTCH/GEARSHIFT LINKAGE	VT750C2B	2_6
SPECIFICATIONS1-11	VT750C2F/C2S······	
COMPONENT LOCATION	FRONT MASTER CYLINDER	
ALTERNATOR/STARTER CLUTCH11-2	FRONT WHEEL	
CLUTCH/GEARSHIFT LINKAGE10-2	FRONT WHEEL/SUSPENSION/STEERING	14-17
CRANKSHAFT/TRANSMISSION12-2	SPECIFICATIONS	
CYLINDER HEAD/VALVE8-2	VT750C2B	1.13
CYLINDER/PISTON 9-2	VT750C2F/C2S	
ENGINE REMOVAL/INSTALLATION7-2	FUEL CUT OFF RELAY	
FINAL DRIVE13-2	FUEL LINE	5=40
FRONT WHEEL/SUSPENSION/STEERING14-2	FUEL LINE INSPECTION	5 25
FUEL SYSTEM (PGM-FI)·······5-2	FUEL RESERVE SENSOR ····································	21 19
HYDRAULIC BRAKE		
REAR WHEEL/BRAKE/SUSPENSION15-2	FUEL SYSTEM (PGM-FI) SPECIFICATIONS FUEL TANK	
CONNECTOR LOCATION5-9	GEARSHIFT LINKAGE	
COOLANT REPLACEMENT	GENERAL SPECIFICATIONS	10-14
	HANDLEBAR	
COOLANT TEMPERATURE INDICATOR/ ECT SENSOR21-17	HANDLEBAR SWITCH	
COOLING SYSTEM SPECIFICATIONS 4.0	HEADLIGHT	
COOLING SYSTEM SPECIFICATIONS1-9	HEADLIGHT AIM	3-23
CRANKCASE ASSEMBLY12-49	HIGH BEAM/FUEL RESERVE INDICATOR	04.40
CRANKCASE BEARING REPLACEMENT 12-47	(VT750C2F/C2S)	21-10
CRANKCASE BREATHER3-6	HIGH BEAM/FUEL RESERVE/TURN SIGNAL	04.44
CRANKCASE SEPARATION 12-9	INDICATOR (VT750C2B)·····	21-31
CRANKPIN BEARING12-13	HORN	····· 21-28

# INDEX

HYDRAULIC BRAKE SPECIFICATIONS	FRAME/BODY PANELS/EXHAUST SYSTEM	
VT750C2B1-14	FRONT WHEEL/SUSPENSION/STEERING	14-5
VT750C2F	FUEL SYSTEM (PGM-FI) ·····	
VT750C2S 1-14	HYDRAULIC BRAKE	
IACV 5-68	IGNITION SYSTEM	19-4
IGNITION COIL	LIGHTS/METERS/SWITCHES ·····	
IGNITION SWITCH 21-21	LUBRICATION SYSTEM	
IGNITION SYSTEM INSPECTION	MAINTENANCE	
IGNITION SYSTEM SPECIFICATIONS 1-15	REAR WHEEL/BRAKE/SUSPENSION	15-4
IGNITION TIMING 19-10	SERVICE RULES	
INJECTOR5-58	SHOCK ABSORBER ·····	
INTAKE MANIFOLD 5-56	SIDE COVER	
LEFT CRANKCASE REAR COVER 2-4	SIDESTAND	
LICENSE LIGHT 21-12	SIDESTAND SWITCH	
LIGHTS/METERS/SWITCHES SPECIFICATIONS	SPARK PLUG	
VT750C2B 1-16	SPEEDOMETER/VS SENSOR ······	21-12
VT750C2F1-15	STANDARD TORQUE VALUES	
VT750C2S 1-16	STARTER MOTOR	20-7
LUBRICATION & SEAL POINTS 1-24	STARTER RELAY SWITCH	00.40
LUBRICATION SYSTEM DIAGRAM	VT750C2F/C2B	20-16
LUBRICATION SYSTEM SPECIFICATIONS	VT750C2S	
MAIN JOURNAL BEARING 12-16	STATOR INSTALLATION	
MAINTENANCE SCHEDULE 3-4	STATOR REMOVAL	
MIL CIRCUIT INSPECTION 5-34	STEERING HEAD BEARINGS	
MODEL IDENTIFICATION 1-4	STEERING SIDE COVER	2-4
NEUTRAL SWITCH21-26	STEERING STEM	
NUTS, BOLTS, FASTENERS	SUB FUEL TANK/FUEL PUMP	
OIL PRESSURE INDICATOR 21-20	SUSPENSIONSWINGARM	
OIL PRESSURE INSPECTION 4-5 OIL PUMP 4-6	SYSTEM DIAGRAM	[5-26
OUTPUT GEAR12-28	BATTERY/CHARGING SYSTEM	10.3
OVER HEAD COVER2-4	ELECTRIC STARTER	20-3
PCV	IGNITION SYSTEM	19-3
PGM-FI SYMPTOM TROUBLESHOOTING 5-5	SYSTEM FLOW PATTERN	
PGM-FI SYSTEM DIAGRAM 5-8	SYSTEM LOCATION	•
PGM-FI SYSTEM LOCATION 5-6	BATTERY/CHARGING SYSTEM	18-2
PGM-FI TROUBLESHOOTING INFORMATION 5-15	ELECTRIC STARTER	
PRIMARY DRIVE GEAR 10-12	IGNITION SYSTEM	
RADIATOR COOLANT 3-13	LIGHTS/METERS/SWITCHES ·····	····· 21-2
RADIATOR RESERVE TANK 6-17	SYSTEM TESTING	6-5
RADIATOR/COOLING FAN 6-11	THERMOSTAT	6-8
REAR BRAKE (VT750C2/C2B)15-20	THERMOSTAT HOUSING	6-9
REAR BRAKE CALIPER (VT750C2S)······ 16-38	THROTTLE BODY	
REAR FENDER 2-7	THROTTLE OPERATION	
REAR MASTER CYLINDER (VT750C2S) ················ 16-34	TRANSMISSION	···· 12-20
REAR WHEEL	TROUBLESHOOTING	
REAR WHEEL/BRAKE/SUSPENSION	ALTERNATOR/STARTER CLUTCH	
SPECIFICATIONS 4.40	BATTERY/CHARGING SYSTEM	
VT750C2F/C2B	CLUTCH/GEARSHIFT LINKAGE	
VT750C2S 1-14 REGULATOR/RECTIFIER 18-9	COOLING SYSTEM	
RIGHT CRANKCASE COVER INSTALLATION 10-9	CRANKSHAFT/TRANSMISSION	
RIGHT CRANKCASE COVER INSTALLATION 10-21 RIGHT CRANKCASE COVER REMOVAL 10-5	CYLINDER HEAD/VALVECYLINDER/PISTON	
SEAT 2-3	ELECTRIC STARTER	
SECONDARY AIR SUPPLY SYSTEM	ENGINE DOES NOT START OR IS HARD TO	20-5
FUEL SYSTEM 5-70	START	22.2
MAINTENANCE 3-74	ENGINE LACKS POWER ·····	
SERVICE INFORMATION	FINAL DRIVE	13.6
ALTERNATOR/STARTER CLUTCH 11-3	FRAME/BODY PANELS/EXHAUST SYSTEM	
ANTI-LOCK BRAKE SYSTEM (ABS) 17-4	FRONT WHEEL/SUSPENSION/STEERING	
BATTERY/CHARGING SYSTEM 18-4	HYDRAULIC BRAKE	16-7
CLUTCH/GEARSHIFT LINKAGE 10-3	IGNITION SYSTEM	
COOLING SYSTEM 6-3	LUBRICATION SYSTEM	4-4
CRANKSHAFT/TRANSMISSION 12-3	POOR HANDLING	
CYLINDER HEAD/VALVE 8-3	POOR PERFORMANCE AT HIGH SPEED	
CYLINDER/PISTON 9-3	POOR PERFORMANCE AT LOW AND IDLE	
ELECTRIC STARTER 20-4	SPEED	23-5
ENGINE REMOVAL/INSTALLATION 7-3	REAR WHEEL/BRAKE/SUSPENSION	15-6
FINAL DRIVE 13-3	TURN SIGNAL RELAY	

VT750C2F/C2B21-28	WHEEL SPEED SENSOR 17-23
VT750C2S21-29	WHEELS/TIRES 3-25
TURN SIGNAL/POSITION LIGHT ······21-8	WIRING DIAGRAMS
VALVE CLEARANCE3-8	VT750C2B22-3
VALVE GUIDE REPLACEMENT ·························8-17	VT750C2F 22-2
VALVE SEAT INSPECTION/REFACING8-18	VT750C2S22-4
MATER DI IMP	

# MEMO