

Assembly Manual

www.trimyxs.com



f facebook.com/trimyxs



Table of Contents

Safety Instructions	3
What's In The Box	4
Tools Needed	5
Hardware	6
Mower Type "C" Installation	9
Installing the Wire Harness	14
Changing the Trimmer Spool	.15
Advancing the String Trimmer Line	.16

Safety Instructions


General Safety

Before operating this string trimmer, read and observe all warnings, cautions, and instructions on the string trimmer and in this Owner's Manual.


NOTE: The following safety information is not meant to cover all possible conditions and situations that may occur. Read the entire Owner's Manual for safety and operating instructions. Failure to follow instructions and safety information could result in serious injury or death.

This safety alert symbol is used to identify safety information about hazards that can result in personal injury.

What's In The Box

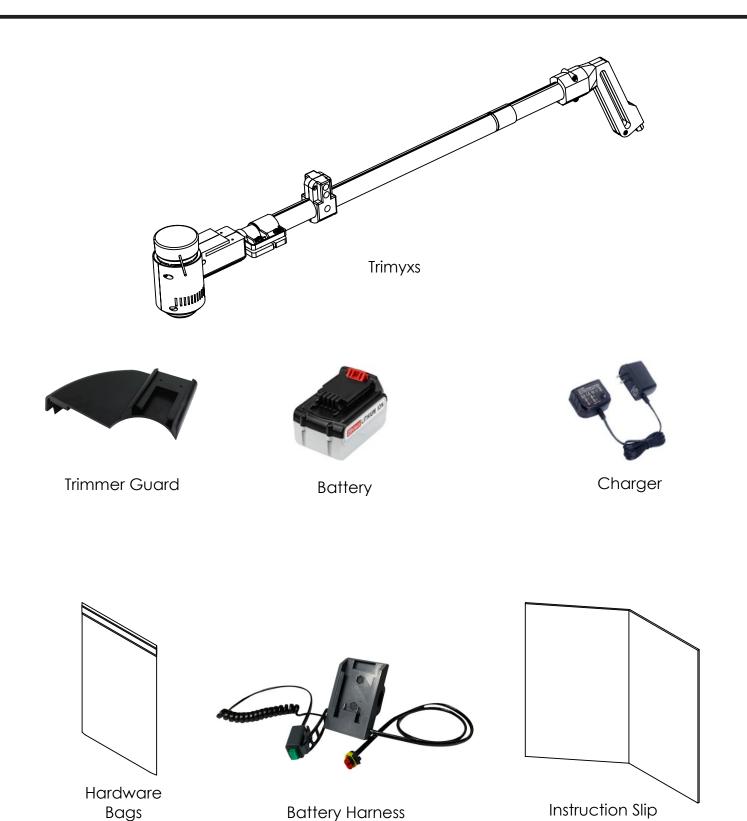



Tools Needed

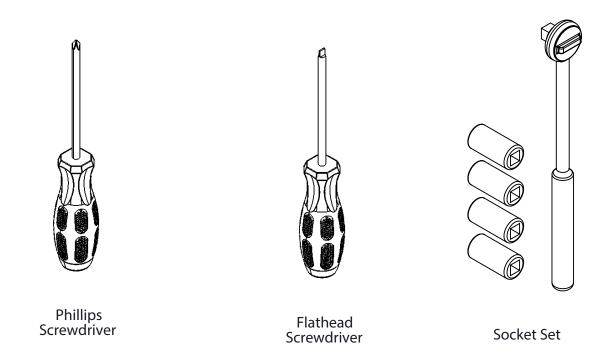



Hardware

Bag	1	A	В	C	D	E	F	G
Mower Type	General hardware for all systems	Ariens DeWalt Craftsman Cub Cadet Husqvarna Hyper Tough Poulan Pro Powersmart Pulsar Remington Troy-bilt Yard Machines Yardmax	Atlas Ego Greenworks Kobalt Makita Milwaukee STIHL	Toro	Honda	Honda HRX217	Ryobi Milwaukee	Murray Senix

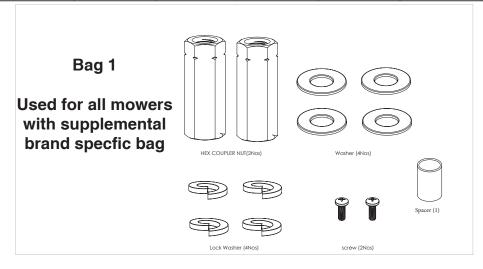


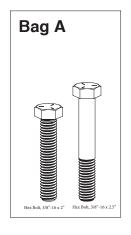

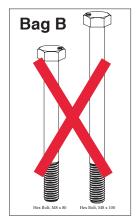

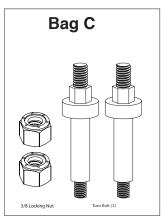 













Mower Type "C" Installation

Hardware Bags Required

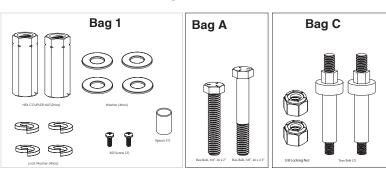


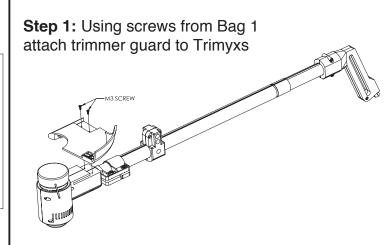


Step 2:

Remove wheel cover (if applicable)

Remove existing nut

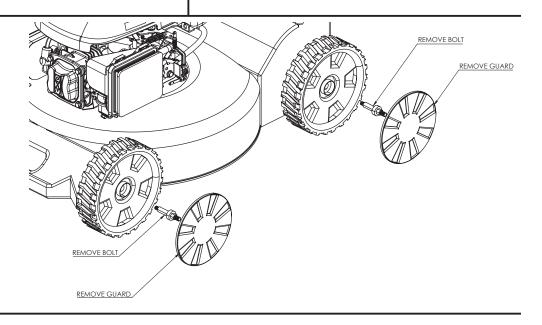



Step 3: Install Trimyxs Hardware

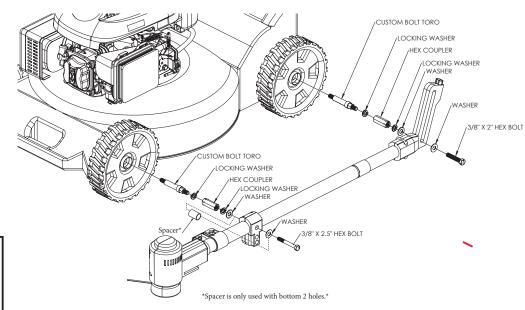





Installing the Wire Harness

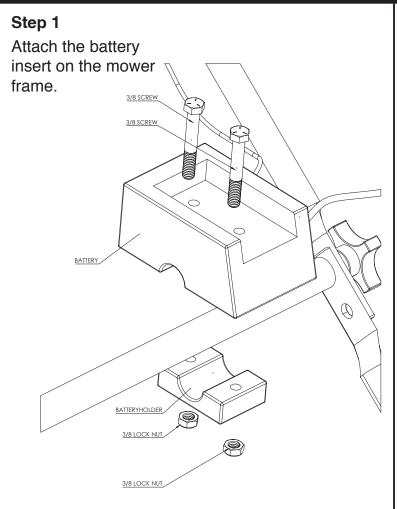

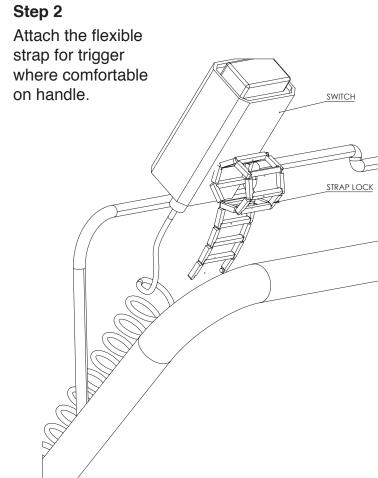

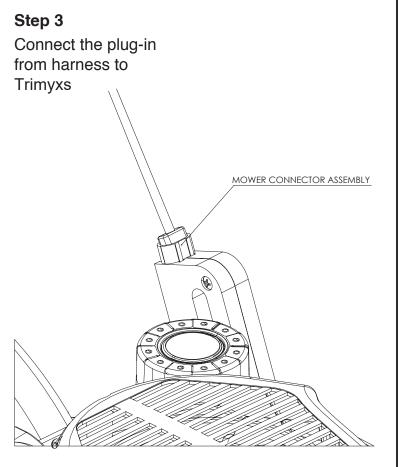

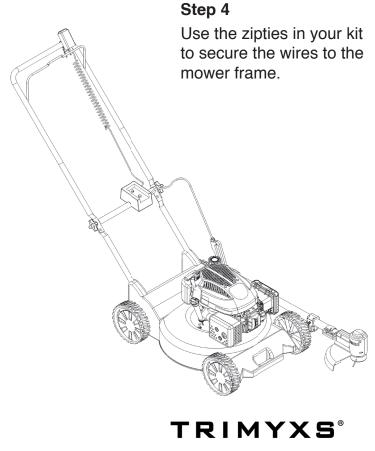


Advancing the String Trimmer Line

Once installed on mower

- 1. Press trigger for 3 seconds and release
- 2. Wait for trimmer head to come to a complete stop (Important for trimmer head to come to a complete stop)
- 3. Repeat steps 1 & 2 until trimmer line is desired length
- 4. If line does not feed properly, follow the steps below:
- 5. Remove battery
- 6. Turn trimmer head to edging position
- 7. Push & hold button on trimmer head and pull the line to manually extend the line to desired length
- 8. Note: A line cutter is attached to the guard to ensure length of line does not exceed the required length.
 - 1. Remove battery
 - 2. Turn trimmer head to edging position
 - 3. Press the release button on the trimmer head and pull the line to manually extend the line to desired length


Note: A line cutter is attached to the guard to ensure length of line does not exceed the required length.

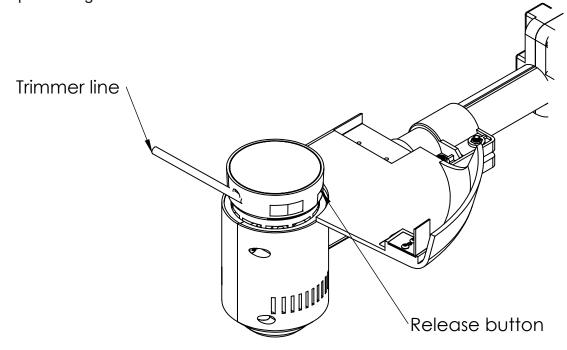

Changing the Trimmer Spool


Step 1

Press 2 release buttons on either side of trimmer head

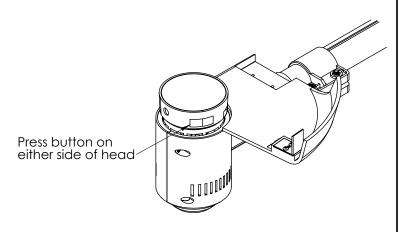


Step 2

Install trim line by threading line through hole in housing.

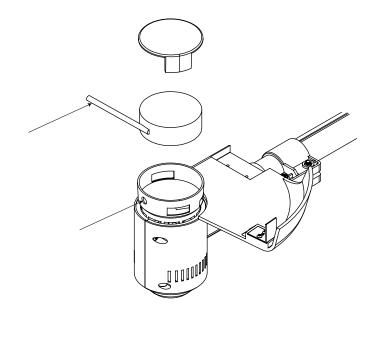

Step 3
Snap cover back in place.

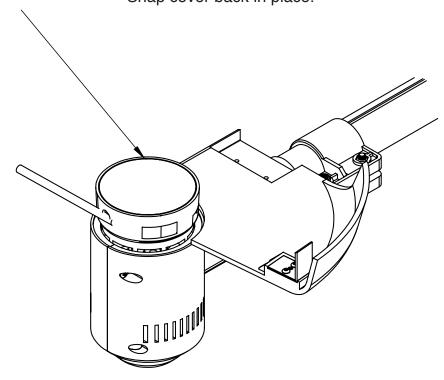

TRIMYXS®