



MOTOROLA SL7550 TRAINING PRESENTATION

Contact Champlin Wireless for more information.

(888) 845-4950 <u>info@champlinwireless.com</u>



See more detailed proper usage instructions, warnings and cautions in the Regulatory Compliance and Product Safety Guide.





To ensure a comfortable audio level and compliance with RF energy exposure limits, do not hold against the ear or alongside the head.



Use only in front of the face or with Motorola Solutions approved audio accessories and carry cases to ensure compliance with RF energy exposure limits.





You will be issued the following

- -Motorola SL7550
- -Belt Clip
- -Wall Charger





Important Buttons

-Push-to-Talk (PTT) Button

-Microphone

-Volume Button

- On/Off Button





Important Buttons

- -Speaker
- -4-way Navigation Disc
- -Back/Home Button
- -Menu/OK Button











To access your battery, release the battery door lock and slide the battery door off the radio.

To attach battery cover, align it in place and slide the battery latch until it snaps into place. Slide battery latch into lock position.







Micro USB

Connect the Micro USB Charging Cable to charge your battery





To attach your audio accessory, lift up the flap of the Audio jack cover. Align the indicators on both the connector and housing, then push until it fits in properly.

Rotate connector counter clockwise to lock.
To unlock, rotate until the indicators on both the connector and the housing are aligned. Pull out the connector gently to disconnect from radio.



Accessing Channel List

- -The Channel will be displayed on your screen
- -To Change Channels, press the left side of the 4-way Navigation Disc
- Using the Navigation Disc, scroll to the correct channel
- -When your channel is highlighted, press the Menu/OK Button





Transmitting a call on your SL7550

-To Place your call, press and hold the Push-to-Talk button (wait about 5 seconds) then begin speaking toward the microphone with the radio in front of you

-Release the PTT to listen

PTT Button







Accessing your Notification Settings

- -Press the Menu Button
- -Scroll to Utilities
- -Press OK
- -Scroll to Notifications
- -Press OK
- -All of your Notification Settings have been set to silent to save the battery life
- -Please go through and adjust the settings in your Notification options





Battery Chargers and Battery







