

# **DAHD0040**

#### **PRODUCTS FEATURES:**

This series Automatic Hand Dryer includes ABS Shell and metal shell.

There temperature protecting device in the machine. The dryer features high power. easy installation, user-friendly, safe and reliable.

Without touching anywhere when you use, just put your hands below the air outlet, you can get comfortable warm wind drying your wet hand. And as your hands leave the air outlet, this hand dryer can be closed automatically. to avoid cross infection of germs.

### **TECHNICAL DATA:**

Rated voltage: 230V~

Rated Frequency: 50Hz Rated power: 1650W

Action distance: 50~200mm

#### **INSTALLATION:**

1. position

This machine can be installed and used in bathroom. washroom.kitchen. etc. The distance shall be around 110cm from the ground. Keep certain distance between the dryer and the door to avoid hit when opening and closing the door.

- 2. METHOD
- 1. Size(chart 1)

By chart drilling 4 hole on the wall and bury with expansible vas.

- 2. Off screw by screw-driver and pull off shell. then fixed the machine body by self-screw.
- 3. After fixed body ins tall the shell and plug into AC230V (check the line is ok or not and the power supply before operation)

#### **HOW TO USE:**

The machine works automatically. After washing your hands. put your hands near the wind hole, it will work automatically. To short the working time, please whisk off the water before use.



#### **CAUTION:**

- 1. The device should be installed on fixed, shock less wall.
- 2. Bumping to the device is forbidden.
- 3. Keep away from water like electric liquid.
- 4. Do not install in room with rusty air or electric dust.
- 5. Do not fix it by man who has no experience to avoid accidents.
- 6. Cut off the power when it is not used for long time.

## 7. Meaning of crossed-out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain. damaging your health and well-being.

When replacing old appliances with new ones. the retailer is legally obligated to take back your old appliance for disposals at lease free of charge.

- 8. If the supply cord is damaged, it must replaced by the manufacturer . its service agent or similarly qualified persons in order to avoid a hazard.
- 9. This hand dryer must be fixed out of reach of a person taking a bath or shower.
- 10. This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety: children should be supervised to ensure that they do not play with the appliance.

## **MAINTAIN:**

It is need no special maintain. If you want clear please cut off power first then clear it with wet cloth by liquefied detergent During the process do not let the machine touch with water inside to avoid leakage.



