Troubleshooting

Fault	Probable Cause	Action
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call agent or qualified technician
	Power supply	Check power supply
	Internal wiring fault	Call agent or qualified technician
	Thermo control fault	Call agent or qualified technician

Electrical Wiring

This appliance is supplied with a 2 pin plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.



DKTL0009

INSTRUCTION MANUAL

ELECTRIC KETTLE



1300 605 313





Product Structure Graphic

- 1. Lid Button
- 2. Spout
- 3. Lid
- 4. Body
- 6. Handle

5. Light

7. On/Off Switch



Safety Tips

- Position on a flat, stable surface.
- ♦ A service agent/qualified technician should carry out installation and any repairs ifrequired. Do not remove any components on this product.
- ♦ Ensure the water level is between the 'MIN' and 'MAX' marks. If the kettle is overfilled, boiling water may be ejected.
- ♦ Always switch offthe appliance before removing from the base.
- ♦ The appliance must not be immersed in any liquid.
- Do not allow the base to become wet.
- ♦ Danger of scalding avoid steam from the spout or when opening the lid.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.
- ♦ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your product.

Pack Contents

The following is included:

- ♦ Kettle
- Instruction manual

We prides ourselves on quality and service, ensuring that at the time of packaging the contents supplied are fully functional and free of damage. Should you find any damage as a result of transit, please contact your dealer immediately,

Operation

To use:

- 1. Lift the lid and fill with cold water. Do not exceed the 'MAX' level.
- 2. Close the lid securely.
- 3. Connect the appliance to a mains power supply.
- 4. Push the power switch down to the T position. The power indicator light turns On and the water will begin to boil.
- 5. When the water has boiled the switch will flick back up to the '0' position. The power indicator light will turn Off.

Note: Before using the appliance for the first time fill and boil it twice. Discard the water each time.

Note: The boiling process can be interrupted at any time by manually flicking up the switch.

WARNING: There is a danger of scalding from steam. Take care during operation and when opening the lid.

Cleaning, Care & Maintenance

- ♦ Always turn off and disconnect the appliance from the power supply before cleaning.
- ♦ Use soapy water and a damp cloth to clean the exterior of the appliance. The appliance must not be immersed in any liquid.
- ♦ Dry thoroughly after cleaning.
- ♦ The spout filter slides out for ease of cleaning.
- Periodically clean the inside of the appliance using a suitable descaling solution.

