

* HITTER CROWN HAS A HOLDING POWER OF AROUND 1/10TH OF A GRAM OF YOUR PREFERRED SUBSTANCE.
† USE THE WAND AS YOUR COMPANION WITH OTHER ACCESSORIES AND PACKING NEEDS.

CUSTOMIZE YOUR HIT

- **Load**
 - Press and slide Hitter from Lighter Channel.
 - Press and twist Hitter Crown into your preferred substance to load. Use a soft to hard pressing motion to customize how much substance is loaded.
- **Pack**
 - If preferred, remove Lighter Wand and use Packer to further compress the load.
 - Then press and twist Hitter Crown back into your substance to load more.

Decide whether to consume your hit now or later. If later, slide the loaded Hitter back into the Lighter Channel to securely store.
- **Hit**
 - Place Hitter Socket between your lips.
 - Momentarily light Hitter Crown while taking a slow and steady inhale through Socket.
 - Place your finger over Socket in-between hits to help keep your substance ember hot.

Expect between 1 to 3 hits, depending on substance type, packing density and inhalation strength.

ASH YOUR HITTER


- Immediately after each use, push Hitter Socket toward Crown to activate Ash-Out™ Chute.
 - Then, softly blow through Hitter to expel hard-to-see ash.
 - If necessary, tap side of Hitter to release any additional ash.
- If contents do not easily ash, you may not have fully consumed your substance.*
- As residue builds up in Crown, use Wand Tip to clear.
 - When you sense air flow is reduced, insert Wand Tip into Socket, then push Wand and Socket toward Crown to expel residue. While still inserted, use a disposable tissue to wipe residue out of Crown.
 - Wipe Wand clean before re-inserting into device.
 - For a more robust clearing of debris, insert a dry pipe cleaner into Socket and push completely through Crown. Use end of pipe cleaner to clear inside of Crown.



CLEAN YOUR NIFTY

1. Insert Wand Tip into Hitter Socket.
2. To expel residue, push Wand and Socket toward Crown.
3. While still inserted, use a disposable tissue to wipe residue out of Crown.
4. Remove Wand and use Wand Tip to clear inside of Crown.
5. For a standard cleaning, place Hitter and Wand into a small container or watertight bag. For a robust cleaning, disassemble Hitter (Fig. 1) and place all Hitter Parts and Wand into the container or bag.

Fig. 1 – Disassembly

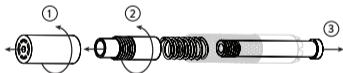

To reassemble, turn parts in opposite direction

6. Fill container with enough isopropyl alcohol or a pipe cleaning fluid to fully cover components.
7. Shake the container with an aggressive back-and-forth motion for 1 or more minute(s).
8. Remove components and discard liquid.

9. Thoroughly rinse Wand and Hitter (or Hitter Parts) in warm water. If necessary, reassemble Hitter (Fig. 1).
10. Soak a pipe cleaner with isopropyl alcohol or a pipe cleaning fluid.
11. Use one end of pipe cleaner to clean Lighter Channel.
12. Insert opposite end of pipe cleaner into Socket and push completely through Crown.
13. Use remaining clean areas of pipe cleaner to wipe Wand clean. Dispose of pipe cleaner.
14. Insert a dry pipe cleaner into Socket and push completely through Crown.
15. Wipe Lighter, Hitter and Wand dry.
16. Wait at least 5 minutes before using.

REFILL YOUR NIFTY

WARNING: Use ONLY butane fuel. Fill slowly. Do not overfill. Ensure butane fuel canister is securely mated into Fuel Port.


- When empty, fuel up your Nifty Hit.
- Turn Nifty Hit upside down and locate Fuel Port on bottom.
- Insert butane fuel canister nozzle upside down into Fuel Port.

- Depress canister with firm, even pressure for 3 to 5 seconds. Repeat if necessary.
- After filling, wipe Lighter, Hitter and hands dry and wait at least 5 minutes before using.

REPLACE YOUR NIFTY FLINT WHEEL

- When the sparks have faded, replace your Flint Wheel.
- Firmly grasp the used Flint Wheel and pull straight out from Lighter body.
- Take a new Nifty Flint Wheel and face the Short Tab toward Trigger. (Fig. 2).

Fig. 2 – Replacement

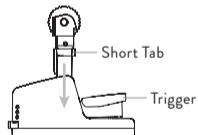

- Insert Nifty Flint Wheel into open hole and press straight downward until it fits snugly in place.