


Product Bulletin

4-15-22

Subject: Add Optional Selector Valve Kit to Existing Trailer Jack / Hoist Installation

WARNING To safely install the flow divider and selector valve, all hydraulic pressure must be released from the system. The trailer must be supported so all weight is removed from the trailer jack and the cylinder must be in the full down position.

Single Trailers Jack and Hoist Cylinder Installation

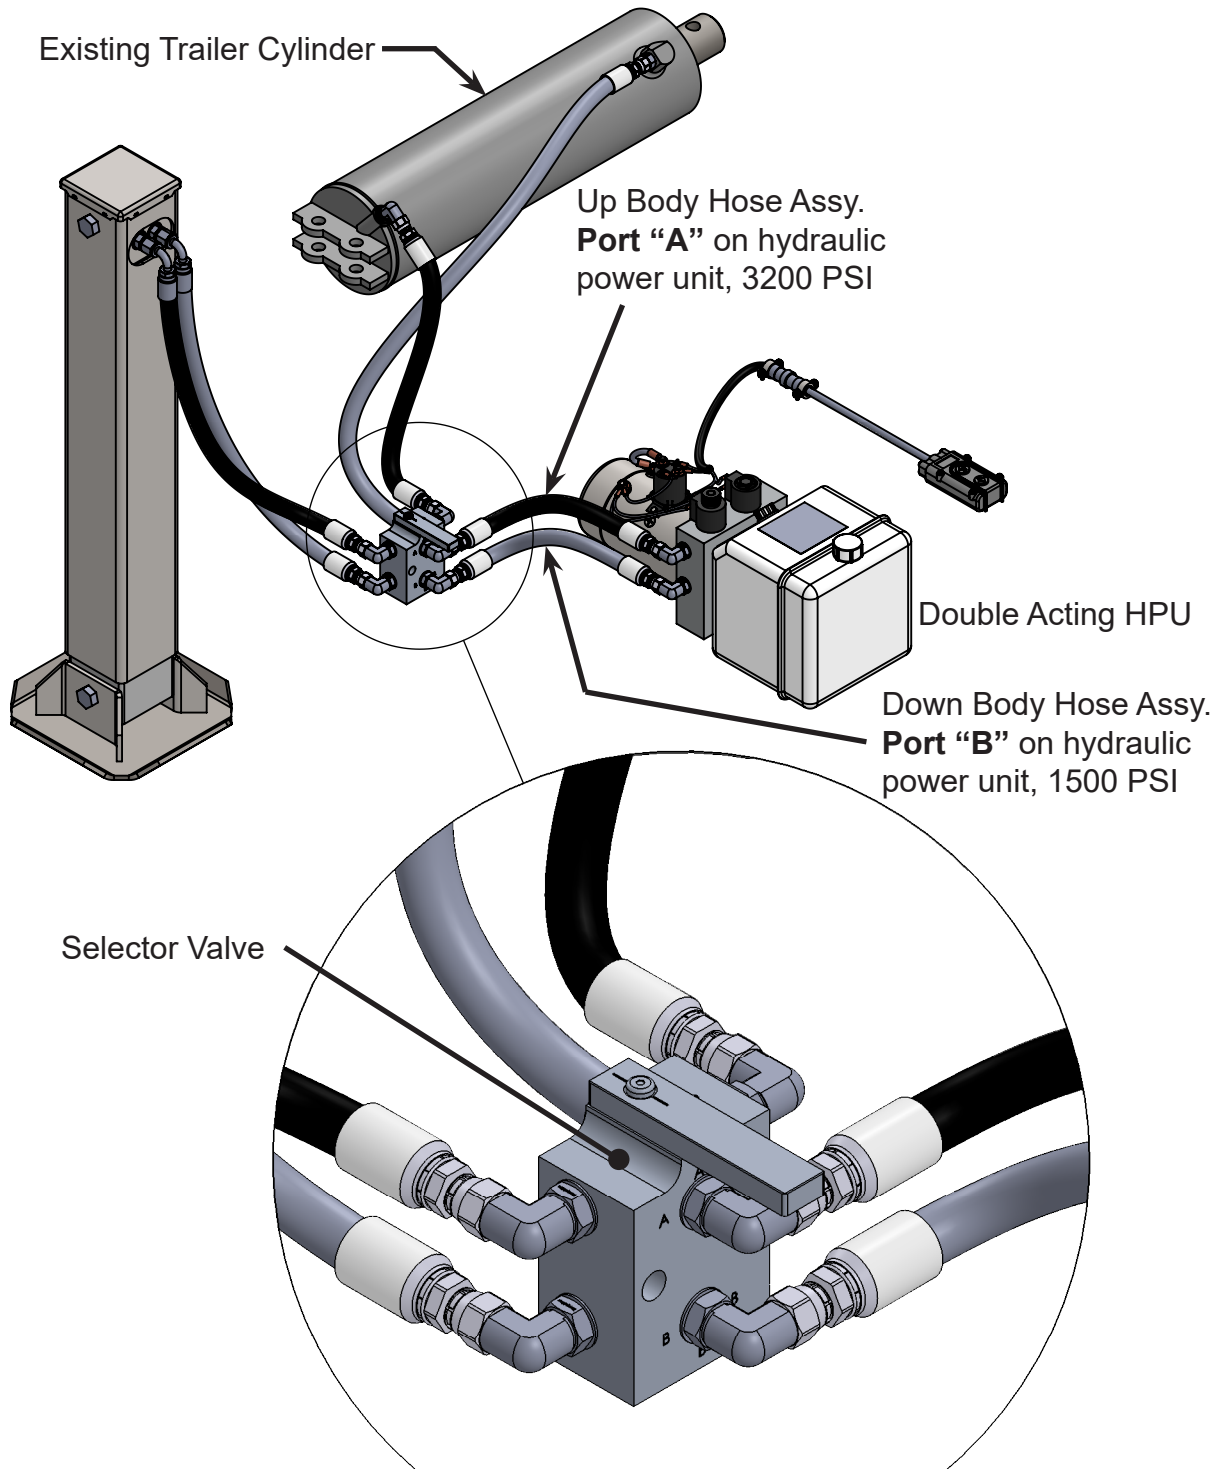

Dual Trailers Jacks and Hoist Cylinder Installation

