


3, 4 & 5 Way Selector Valve Kits

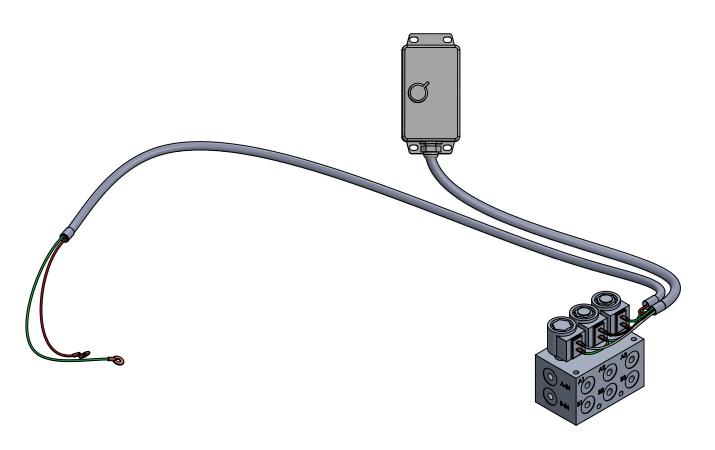

Operator's Manual and Installation Instructions

Premium Supply 2038 West Interstate 30 Greenville, Texas 866-934-0777 Proud members of:







Table of Contents

INTRODUCTION	3
PURPOSE OF THE KIT	
SPECIFICATIONS	3
LOCATION OF THE KIT.	
MOUNTING OF THE KIT	3
POWER	3
SELECTOR VALVE BLOCK HOSE CONNECTIONS	3
CORD LENGTHS	3
STANDARD WARRANTY AND WARRANTY EXTENSIONS	4
SAFETY FIRST	5
SAFETY SIGN LOCATIONS	5
SAFETY PRECAUTIONS	6
3 & 4 WAY SELECTOR VALVE KIT PARTS IDENTIFICATION	6
OVERALL LAYOUT 3 COMPONENTS (4 COMPONENTS SIMILAR)	7
OVERALL LAYOUT 5 COMPONENTS `	8



INTRODUCTION

This manual covers proper selector valve installation, hydraulic connections, and wiring of the Premium Supply electric 3,4 and 5 way selector valve kits.

NOTICE: READ THIS ENTIRE MANUAL BEFORE ATTEMPTING TO INSTALL ANY COMPONENT CONTAINED IN KIT.

This manual should be kept at all times with the trailer, jack, hoist or other equipment or device(s) with which this Premium Supply product is used or installed.

NOTE: Installation of Premium Supply products on your truck or trailer or other equipment may void or affect the truck or trailer or equipment warranty – contact the manufacturer to ensure continued warranty coverage or conditions or exceptions to warranty that may be affected.

PURPOSE OF THE KIT

This kit allows a user to select which one of 3,4 or 5 hydraulic cylinders or components will operate when the hydraulic pump is started. Component selection is by means of a selector knob on the included control box.

SPECIFICATIONS

LOCATION OF THE KIT.

The kit must be located in an weather protected enclosure.

MOUNTING OF THE KIT

Bolt holes for 1/4" bolts are provided for mounting the control box and selector valve block.

POWER

12VDC

SELECTOR VALVE BLOCK HOSE CONNECTIONS

All connections use #6 ORB

CORD LENGTHS

Control box to selector valve block approximately 2 feet long Selector valve block to hydraulic power unit approximately 3 feet long



STANDARD WARRANTY AND WARRANTY EXTENSIONS

→ STANDARD WARRANTY

Premium Supply makes no express warranty for this product except those specifically set forth herein. Premium Suppl warrants its products to be free from defect in design, material and workmanship for a period of 36 months from original date of purchase, and to be suitable for and to perform in accordance with the use(s) and specifications stated in product materials. This warranty supersedes all other warranties. Except for warranties herein stated, there are no other warranties.

EXCLUSION OF IMPLIED WARRANTIES: PREMIUM SUPPLY MAKES NO WARRANTY OF MERCHANTABILITY OF THE GOODS SOLD UNDER THIS AGREEMENT. PREMIUM SUPPLY MAKES NO WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OF THE GOODS SOLD.

This warranty applies only to parts manufactured by Premium Supply. Components not manufactured by Premium Supply shall be covered under the original manufacturer's warranty. Premium Supply will assist in administering all such warranties. If a defect in a product is discovered and is covered by this warranty, Premium Supply will have the option to repair, refurbish or replace any warrantied item(s), such option to be exercised in Premium Supply's sole discretion. This warranty inures to the benefit of the original purchaser only, is non-transferable, and has no cash value

→ WARRANTY EXTENSIONS

If the following conditions are met, the standard warranty will be extended as stated below if (1) the hydraulic oil is purchased from Premium Supply and (2) all single acting circuits are plumbed with a hydraulic hose installed on both sides of the cylinder.

4 years for battery optimizer kit that include: 20 amp. road charger with 7 way 5 amp battery charger SP-3 – 3watt SolarPulse panel

5 years for battery optimizer heavy duty kit that includes: 20 amp. road charger with 7 way 8 amp, battery charger SP-7-7 watt SolarPulse panel

6 years for battery optimizer extreme heavy duty kit that includes:

20 amp. road charger 18 amp. battery charger SP-12-12 watt SolarPulse panel

→ EXCLUSIONS

This warranty covers only defects in design, manufacturing and/or materials discovered while using the product as recommended by the manufacturer. The warranty does not cover: (1) loss or theft; (2) product failure or damage caused by user abuse or neglect, improper use, improper installation, improper maintenance, improper storage, or improper or unauthorized modification(s); (3) parts that are subject to normal wear and tear; (4) paint, finishes or paint preparation performed by anyone other than Premium Supply; (5) deterioration of paint and/or appearance caused by normal wear and tear and/or exposure to natural elements; (6) modifications not authorized by Premium Supply; and/or (7) loss brought about by natural disaster or acts of God. This warranty becomes VOID and of no force or effect upon modifications to product component performed by anyone other than Premium Supply if such modifications are not authorized by Premium Supply.



→ LIMITS OF LIABILITY

Should the product fail, the sole recourse is repair or replacement, as described in the preceding paragraphs. Premium Supply is not liable to any party for direct, indirect or consequential damage(s) resulting from failure of the product. Under no circumstances will Premium Supply be responsible for lost profit, lost savings, damage to other equipment, rental or replacement costs, or other incidental or consequential damages arising from use or inability to use the product. Damages, if any, recoverable against Premium Supply shall under no circumstances exceed the current list price of the product excluding tax, shipping and handling charges

By using the product, user accepts all terms stated herein. Premium Supply reserves the right to make improvements to any model or product without notice.

SAFETY FIRST

IT IS YOUR DUTY AND RESPONSIBILITY TO COMPLETELY READ THROUGH AND UNDERSTAND THIS MANUAL AND ALL OTHER MATERIALS PROVIDED WITH PREMIUM SUPPLY PRODUCT(S)(INCLUDING MATERIALS PROVIDED BY THIRD PARTY

MANUFACTURERS) BEFORE ATTEMPTING ANY INSTALLATION OR OPERATION OF PREMIUM SUPPLY OR THIRD PARTY PRODUCT(S) SUPPLIED BY PREMIUM SUPPLY. IF AT ANY TIME YOU HAVE QUESTIONS ABOUT THE INSTALLATION OR OPERATION OF PREMIUM SUPPLY OR PREMIUM SUPPLY SUPPLIED PRODUCT(S) OR ABOUT THE CONTENTS OF THIS MANUAL, CONTACT PREMIUM SUPPLY BEFORE PROCEEDING WITH THE CONTEMPLATED INSTALLATION OR

OPERATION. PREMIUM SUPPLY IS NOT RESPONSIBLE FOR PROPERTY DAMAGE OR PERSONAL INJURY OR DEATH THAT MAY OCCUR FOR YOUR FAILURE TO COMPLY WITH THESE REQUIREMENTS.

This symbol is used to call attention to instructions concerning personal safety. Be sure to observe and follow these instructions. Take time to read thoroughly and to be careful!

A brief description of signal words that are used in this manual follows:

ADANGER Indicates an imminently hazardous situation which, if not avoided, WILL result in property damage, death or serious injury.

Indicates a potentially hazardous situation which, if not avoided, COULD result in property damage, death or serious injury and includes hazards that are exposed when guards are removed.

Indicates a potentially hazardous situation which, if not avoided, MAY result in property damage or minor or moderate person injury including death. It is also used to alert against unsafe practices.

SAFETY SIGN LOCATIONS

Read all safety signs on the trailer and those included with or stated in this manual. Keep these signs clean and replace any lost, damaged or destroyed signs.




SAFETY PRECAUTIONS

Installing or operating this equipment without first understanding proper installation and operation procedures could lead to serious property damage, personal injury or even death. Always read and fully understand all installation and operation manuals before installing or operating this equipment. Contact Premium Supply with any questions.


ADANGER Before starting the hydraulic pump, the operator MUST check to make sure the selector valve control knob's position will control the desired hydraulic component. Failure to check the position of the knob could lead to death or personal injury if the wrong component is activated with a person in the vicinity of the equipment.


3 & 4 WAY SELECTOR VALVE KIT PARTS IDENTIFICATION

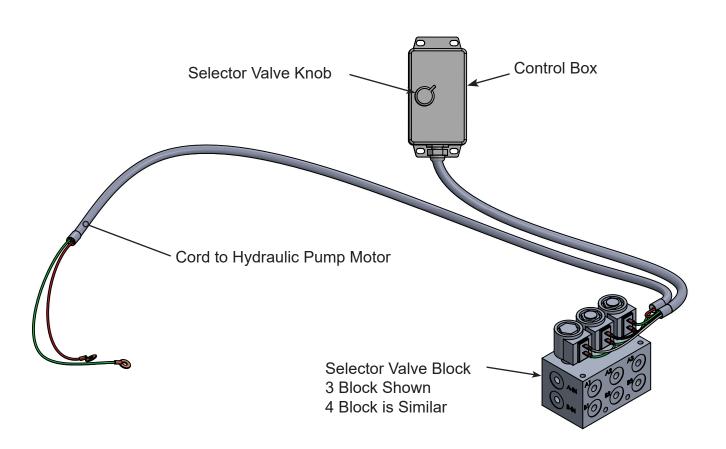



OVERALL LAYOUT 3 COMPONENTS (4 COMPONENTS SIMILAR)

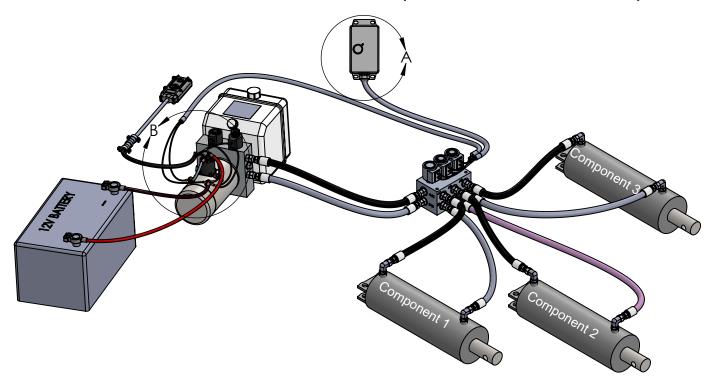

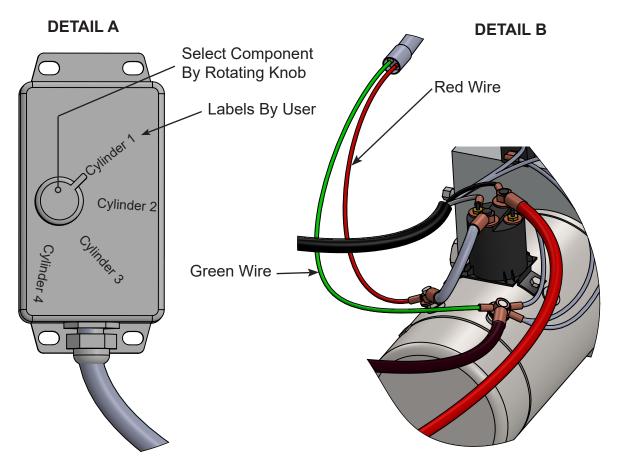



OVERALL LAYOUT 5 COMPONENTS

