


# ELECTRONIC CABINET INSTRUCTION MANUAL

**⚠ Please Do Not Put the Emergency Key in the Safe!**

## SCHEMATIC GUIDE

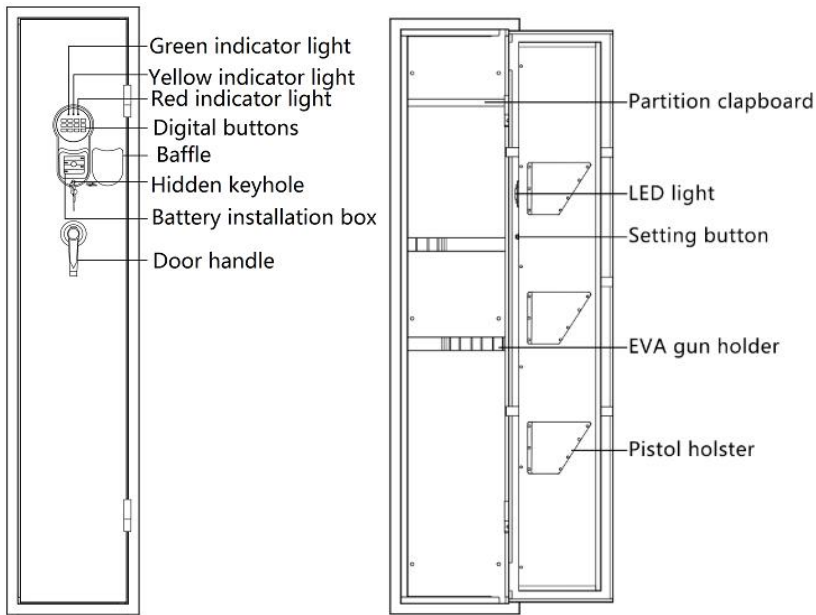

## PARTS LIST

English manual*1	
Emergency keys*2	
Expansion bolts*4	



**Pictures are subject to real product !**

### ⚠ WARNING



#### Tip Over Hazard

A child or adult can tip the safe and be killed or seriously injured. Serious injury may occur to children and adults if not secured before installation. Children should not play with or around the safe at any time.

## THE FIRST TIME OPENING

Use the configured emergency key to open the door.

<p>1. Push down the cover. Insert the emergency key and push it to rotate 45° counterclockwise.</p>		<p>2. Turn the handle clockwise and the safe door opens.</p>		<p>3. Insert 4 AAA alkaline batteries (not included) and restore the battery cover back.</p>	
<p><b>EMERGENCY PROBLEM SOLVING:</b></p> <ol style="list-style-type: none"> <li>1. Weak electricity: Unlock with emergency key.</li> <li>2. Forgot the password: Unlock with emergency key.</li> </ol> <p>▲ Remember not to put the emergency key inside the safe.</p>			<p><b>BATTERY INSTALLATION:</b></p> <ol style="list-style-type: none"> <li>1. Make sure the battery matches '+' and '-' in the box.</li> <li>2. Please do not use rechargeable or different brands of batteries.</li> </ol>		

## THERE ARE TWO WAYS TO OPEN THE SAFE

1. **Emergency key + handle:** Insert the emergency key vertically and turn the door handle clockwise to open the door.
2. **Password + handle:** Enter the correct password and press "#" to confirm, then turn the door handle clockwise to open the door.

## PERSONAL PASSWORD SETTING

Original factory password: 1234

1. In the open state, press the setting button, the buzzer will sound once and the yellow light will flash once.
2. Enter any new 3-8 digits code within 5 seconds. Press the "#" button to confirm. The yellow indicator light will be off and the sound mode will remind you, password is set successfully.

**Note: After setting your password, please test the new password to ensure it is valid. If the password is wrong, the safe will be self-locking while the buzzer will sound every second. After that, re-enter the correct password.**

## MANAGEMENT PASSWORD SETTING

### Original management password is blank

1. In the open state, press '00', the yellow light flashes twice. Then press the setting button inside the door, yellow light will be on.
2. Enter your proposed new management code within 3-8 digits, and then press the "#" key to confirm. The buzzer "beeps" and the yellow indicator light goes out, the management code is set or changed successfully.

## OPEN THE SAFE

After entering the correct management code or personal password, press the "#" key to confirm, the buzzer makes a 'beep' sounds, the electromagnet is inhaled for 6 seconds, the green indicator light is on, rotate the door handle clockwise.

## INPUT ERROR SELF-LOCKING FUNCTION

1. Input the wrong password three times in a row, the door will be locked for 20 seconds. It will return to normal after 20 seconds.
2. Input the wrong password six consecutive times, it will be locked for 5 minutes. After 5 minutes, the keyboard returns to normal.

**Note: When the keyboard is locked, the yellow light flashes and the buzzer rings once a second.**

## UNDER VOLTAGE WARNING

When opening the safe box, the red indicator on the panel lights up, indicating batteries are under voltage. Please replace the battery as soon as possible.

**Note: Working under voltage point: 4.6+/-0.3V, current: < 5UA.**

## MUTE TOGGLE BUTTON

1. Silent function: Long press '1' for 3 seconds, the green light will be on for a long time.
2. Remove the silent function: Long press '1' for 3 seconds, the green light will be on and the buzzer will ring for a long time.

## INSTALLATION INSTRUCTIONS

1. The gun cabinet can be mounted on the wall or the floor.
2. Use the appropriate drilling tool depending on the type of floor (wood, tile or concrete) on which the gun cabinet is to be installed. Aim carefully at the installation location to drill the hole. (Please verify the location and distance of the reserved holes before drilling)
3. Take out the expansion screws from the gun cabinet accessory kit to fix it to a safe position.

**Note: Mounting holes are based on the actual model.**

## SECURITY AND COMPLIANCE

1. To reduce risk, the gun safe must be mounted on the wall or floor to ensure security.
2. Please keep the keys carefully. Otherwise, the emergency key will not be able to open the safe after the battery runs out.
3. For the security of your property, you need to change the original factory password.
4. Do not spill liquid on the control panel, otherwise it may damage the internal electronic components.
5. Please do not disassemble the product by yourself. Unprofessional dis-assembly and installation may damage the circuit and affect its performance.

**I wish you have a happy online shopping.**