

IV. Precautions

1. Avoid humidity. Never let water or other liquid get into the unit.
2. Do not place the unit under direct sunlight or near heat.
3. Do not repair the unit yourself.
4. Prevent the unit from falling down on the ground, bending or strong impact.
5. Do not apply strong cleaning agents to clean the unit.
6. Do not touch the screen with sharp-headed object.

All upgrade editions are subject to change without any further notice. We apologize that there may be some minor differences between the contents stated in User's Manual and the actual operations of the product.


Warning: In case of malfunctioning due to electrostatic discharge, please reset the message memory.

Contents

I. Pager Layout.....	1
II. Feature Description.....	3
III. Guide to Operation.....	4
1. Power On/Off.....	4
1.1 Power On.....	4
1.2 Power Off.....	5
2. Private and Public Message.....	5
2.1 Read Private and Public Message.....	6
2.2 Protect Private Message.....	8
2.3 Delete Private Message.....	9
3. Function Setting.....	10
3.1 Alert Mode Setting.....	10
3.2 Alarm Setting.....	11
3.3 Date Setting.....	12
3.4 Time Setting.....	14
3.5 Melody Setting.....	15
3.6 Scroll Speed Setting.....	15
4. Backlight.....	16

5. Low Battery Warning.....	16
6. Battery Replacement.....	17
IV. Precautions.....	18



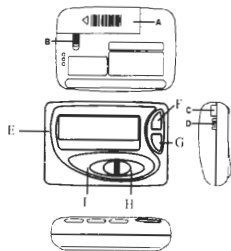




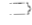

I. Pager Layout



- A. Battery Door
- B. Battery Lock
- C. Chain Slot
- D. Buzzer
- E. LCD Display Screen
- F. Up Key
- G. Down Key
- H. Set / Read Key
- I. Esc / Function Key

On the standby screen, real date and time are displayed. For 12 hours shows "A" (AM) or "P" (PM). For 24 hours, "A" or "P" will disappear.



-  Unread private message in memory
-  Repeated message
-  Locked message
-  Private message number ("1" is the oldest private message.)
"P" stands for public message.
-  Buzzer on
-  Alarm on
-  Range indicator (In range or out of range indicator)
-  Low battery
-  Next page

II. Feature Description

1. 14 characters in one line LCD display.
2. Up to 16 private messages and one public message can be stored.
Each message can be set up to 120 characters.
3. Up to 4 paging addresses (Address 1 and 2 for private message, the others for public message).
4. Private message can be locked, unlocked, deleted or all private messages deleted.
5. Message display by auto-scrolling with 3 scroll speed selectable.
6. Standby screen with real Date and Time display.
7. Unread private message indication with reminder alert.
8. Low battery indication with reminder alert.
9. Repeat message indication with special beep.


10. Error message indication.
11. In range or out of range indication
(Defined by service provider).
12. Two alert modes: buzzer or motor selectable.
13. 2 kinds of beep and 3 kinds of melody
available for selection.
14. Daily alarm function.
15. Message receiving date and time display.
16. Memory backup with minimum 30
seconds.
17. Backlight.

III. Guide to Operation

1. Power On / Off

1.1 Power On

Press any key for 2 seconds to switch on the pager. with the sound or vibration alert, the standby screen will then be displayed:

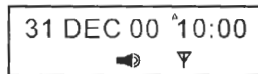

1.2 Power Off

On the standby screen, press “Esc / Function Key” for 2 seconds to the function selection mode, select PAGER OFF by pressing “▲” or “▼”. and then press “Set / Read Key” to confirm.

2. Private and Public Message

When a new message is received, the pager will sound simultaneously or vibrate to remind you. The new message will then be displayed automatically on the screen. Press any key to stop alert, then press “Set / Read Key” to read message. If message is not read, the new message will be stored and “!” will appear and unread reminder alert will be given every 15 minutes.

2.1 Read Private and Public Message

 
 
On the standby screen, press "Set / Read Key" to read the public message first, press "▲" to read the latest private message.


When reading the message, the message will scroll automatically after 2 seconds, and finally the receiving time stamp of the message is displayed. Press "Esc / Function Key" to read the message again. When reading the unread message, there will be a short beep as an indication. Once the message starts scrolling, it is treated as a read message.

Before scrolling, press "Set / Read Key" to skip to previous message and press "Esc / Function Key" to go to standby screen.

During scrolling, press "Esc / Function Key" to read this message again; press "Set / Read Key" to pause the scrolling and then press "Set / Read Key" again to resume scrolling (or automatically scroll after 30 seconds).

When viewing message, press "▲" or "▼" to go to previous old or next new message.




If the message is repeated,  will be displayed with special alert.

If there is no message in memory, "NO MESSAGE" will be displayed on the screen.

When a new message is received under memory full, the oldest unlocked message is automatically deleted and newly received message is stored.


2.2 Protect Private Message

While reading private message, press “Esc / Function Key” for 2 seconds, press “▲” or “▼” to select LOCK, and then press “Set / Read Key” to confirm locking (or press “Esc / Function Key” to exit without saving).

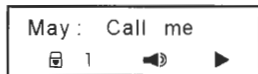

To unlock the protected message, press “Esc / Function Key” for 2 seconds while reading the locked message, press “▲” or “▼” to select UNLOCK, and then press “Set / Read Key” to confirm unlocking (or press “Esc /

Function Key” to exit without saving).

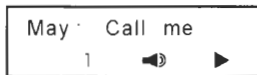

2.3 Delete Private Message

While reading private message, press “Esc / Function Key” for 2 seconds, press “▲” or “▼” to select DELETE and then press “Set / Read Key” to confirm deletion of the selected private message (or press “Esc / Function Key” to exit without saving).

To delete all messages, press “Esc / Function Key” for 2 seconds, press “▲” or “▼” to select ADEL and then press “Set / Read Key” to confirm, then the following screen will appear:



Choose “Y” to confirm deletion of all private messages. (Note: Locked messages cannot be deleted).

Choose “N” to cancel deletion and exit without saving.

3. Function Setting

On the standby screen, press “Esc /Function Key” for 2 seconds to enter the function selection screen.

3.1 Alert Mode Setting

On the function selection screen, press “▲” or “▼” to select VIBRATE or BEEP, and then press “Set / Read Key” to confirm the setting (or press “Esc /Function Key” to exit without saving).

If beep is selected,  will be displayed.

 
3.2 Alarm Setting

On the function selection screen, press “▲” or “▼” to select DAILY ALARM, and then press “Set / Read Key” to enter the Alarm setting screen:

If “off” is set before.



If “ON” and 12-hour are set in time setting.




If “ON” and 24-hour are set in time setting.



Press “▲” or “▼” to set alarm ON or OFF and time (holding “▲” or “▼” can increase

or decrease number continuously for fast setting). After each setting, press “Set / Read Key” to confirm. When confirming the last setting, there will be a short beep as indication of complete setting. (Or press “Esc / Function Key” to exit without saving.)

If alarm function is enabled,  will be shown. When alarm time (e.g. 11:00 AM) reaches, pager will give alarm alert and the display screen will be:

ALARM 11:00 AM

Press any key to stop the alarm alert and exit from this screen.

3.3 Date Setting

On the function selection screen, press “▲” or “▼” to select DATE, and then press “Set /

Read Key” to enter the Date setting screen:

 
31 DEC 2000

Press “▲” or “▼” to set Day, holding “▲” or “▼” can increase or decrease number continuously for fast setting, and then press “Set / Read Key” to set Month and Year. After each setting, press “Set / Read Key” to confirm. When confirming the last setting, there will be a short beep as indication of complete setting (or press “Esc / Function Key” to exit without saving).

If there is any wrong setting (e.g. 31 February), there will be no confirmation short beep, but just return to DATE? to reset again. If date setting is finished, the screen will display the Time setting screen directly.

3.4 Time Setting

On the function selection screen, press “▲” or “▼” to select TIME, and then press “Set / Read Key” to enter the Time setting screen:




Press “▲” or “▼” to set time format (24 HR or 12HR) and time, (holding “▲” or “▼” can increase or decrease number continuously for fast setting).

After each setting, press “Set / Read Key” to confirm. When confirming the last setting, there will be a short beep as indication of complete setting (or press “Esc / Function Key” to exit without saving).

3.5 Melody Setting


On the function selection screen, press “▲” or “▼” to select MELODY, and then press “Set / Read Key” to enter the Melody setting screen:

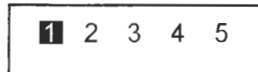

Press “▲” or “▼” to select the tone type (1 and 2 are tones; 3 to 5 are melodies), and then press “Set / Read Key” to confirm the setting (or press “Esc / Function Key” to exit without saving).

3.6 Scroll Speed Setting

On the function selection screen, press “▲” or “▼” to select SCROLL SPEED, and then press “Set / Read Key” to enter the Speed setting screen:

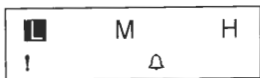


Press “▲” or “▼” to select the desired speed level (“L” stands for slow, “M” stands for medium speed. “H” stands for fast). Then press “Set / Read Key” to confirm the setting, (or press “Esc / Function Key” to exit without saving).

4. Backlight

Press “Set / Read Key” for 2 seconds to activate backlight, then backlighting will be on until no key activity. This function allows you to read message at dark environment.

5. Low Battery Warning

When the battery voltage is low, “Low voltage, please change the battery” will be displayed on the screen with special alert.

Press any key to stop the alert and remove the message, a low battery mark  will appear on the screen and reminder alert will be given every 15 minutes to remind you to replace the battery.

6. Battery Replacement

The pager will stop working if the power is too weak to support. Follow the steps below when replacing battery.

- a. Switch off the pager;
- b. Unlock the cover, push open the battery compartment door. Take out the old battery;
- c. Put the new AAA alkaline battery into the compartment. Make sure that the polarity is correct;
- d. Get the battery compartment covered and lock the compartment door;
- e. Switch on the pager.