

***Apollo Message Payer***

***USER MANUAL***

 
## Features :

- Smart LCD screen that displays 112 x 32 dots, 4 lines for English display, 2 lines for bigger character
- Message Capacity (Total 25,000 characters of English or 12,500 of Chinese memory capacity)
  - \* Personal message : 20 sets messages, dynamic characters memory per message
  - \* Mail-Drop message : 48 sets mail-drop, dynamic characters memory per message
- Four lines normal size Alpha display, 4x18 = 72 English characters per screen
- Two lines bigger size Alpha display, 2x14 =28 English characters or 16 Chinese per screen
- Memory retention, memory back-up under main battery replacement
- Unread message remainder alert every 3 minutes
- Custom selectable power-on LCD screen display function
- Timer function (down or up Timer)
- Battery voltage measuring function
- Date and Time display
- Date and Time Stamping of message
- Message Lock function
- Duplicate message indication
- Message full indication
- Message error indication
- Low battery indication
- Option to delete individual message or erase all
- Selectable alert mode, 4 kinds of beep tones, 10 kinds of Melodies, vibration and silent
- Alarm function, 3 sets of alarms with 10 event setting
- Adjustable LCD contrast
- Illumination backlight for easy night ready
- Automatic power on/off (silent receiving)







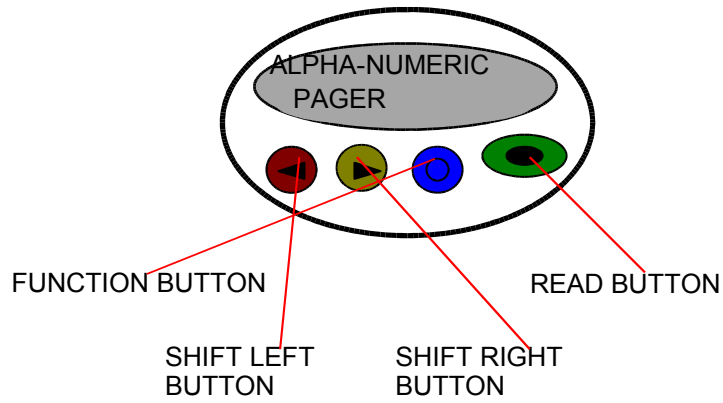



---

Page 3 :

1. Outward & Icons :



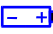





















**Icons**

-  In-Range indicator
  -  Tone Alert Indicator
  -  Vibration alert Indicator
  -  Silent Alert Indicator
  -  Unread Message Indicator
  -  Next Page Indicator
  -  Low Battery Indicator
  -  Alarm Function Active Indicator
  -  Mail-drop (set alert menu)
  -  Normal message (set alert menu)
-


---



Page 4 :



-  Escape
-  Set Alert
-  On / Off Set
-  Set Time
-  Duplicate Message
-  Silent Receiving t
-  Set Vibrator Alert
-  Set Alarm
-  Auto On / Off set
-  Timer
-  LCD contrast adjustment
-  Power on Indicator
-  Duplicate Message Indicator
-  Unread Message Indicator
-  Message Lock (Protect)
-  Read "Normal Message" Indicator
-  Unread "Mail-drop Message" Indicator (not alerted)
-  Read "Mail-drop Message" Indicator (not alerted)
-  Unread "Mail-drop Message" Indicator (alerted)
-  Read "Mail-drop Message" Indicator (alerted)
-  Notebook

READING NORMAL MESSAGES: FROM STANDBY, PRESS “READ KEY” 2 TIMES TO VIEW MESSAGE ICONS. WHEN A NORMAL MESSAGE IS STORED IN PAGER YOU WILL SEE  FOR EACH UNREAD MESSAGE STORED. USE THE “ARROW KEYS” TO SELECT MESSAGE TO READ. YOU WILL SEE A MESSAGE PREVIEW AT BOTTOM OF SCREEN. WHEN MESSAGE IS SELECTED PRESS “READ KEY” TO VIEW

READING MAIL-DROP MESSAGES: FROM STANDBY, PRESS “READ KEY” 2 TIMES TO VIEW MESSAGE ICONS. WHEN A MAIL-DROP MESSAGE IS STORED IN PAGER YOU WILL SEE A MAIL-DROP ICON. (see icon list for description) TO READ MESSAGE, PRESS AND HOLD “ARROW KEY” TO UNDERLINE MAIL-DROP ICON. PRESS “READ KEY” TO VIEW MESSAGES.

SAVING MESSAGES TO NOTEBOOK: WHEN NORMAL OR MAIL-DROP MESSAGE IS DISPLAYED, PRESS “FUNCTION KEY” ONE TIME. YOU WILL SEE A FUNCTION ICON MENU. UNDERLINE THE  USING THE “ARROW KEYS”. PRESS THE “FUNCTION KEY” ONE TIME AND YOUR MESSAGE WILL BE STORED IN THE NOTEBOOK MEMORY.

READING NOTEBOOK MESSAGES: FROM STANDBY, PRESS “READ KEY” 2 TIMES TO VIEW MESSAGE ICONS. WHEN A NOTEBOOK MESSAGE IS STORED YOU WILL SEE A  PRESS AND HOLD “ARROW KEY” TO UNDERLINE  PRESS “READ KEY” TO VIEW STORED MESSAGES.

 
ENABLE OR DISABLE MAIL-DROP ALERT: FROM STANDBY, PRESS “READ KEY” 2 TIMES TO VIEW MESSAGE ICONS. PRESS AND HOLD “ARROW KEY” TO UNDERLINE MAIL-DROP ICON. PRESS “FUNCTION KEY” ONE TIME. YOU WILL SEE  (alert on) AND  (alert off) SELECT DESIRED SETTING AND PRESS “FUNCTION KEY” ONE TIME.

---

### 3. Operation Description :

- Turn on the pager

Insert one AAA battery

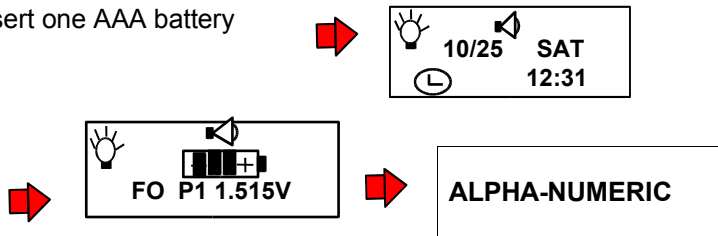


- FUNCTION OPERATION


#### 3.1. Time Date And Week setting :

 
Press the « Function Key » twice under the stand by mode




Press « Shift right key » 



Press « Function key » 



Press « Function Key » to set the right data, and   
 Press « Shift key » to move the cursor, then press  
 « Read Key » to return to stand-by mode after setting  
 « hour », « minute » «date » and « week »


#### 3.2. Alert Function

 Press « Function Key » twice under stand-by mode :



Press « Shift right key » 






Press « Function Key »



 Press « Function Key » to change the alert  
And press « Shift key » to move the cursor



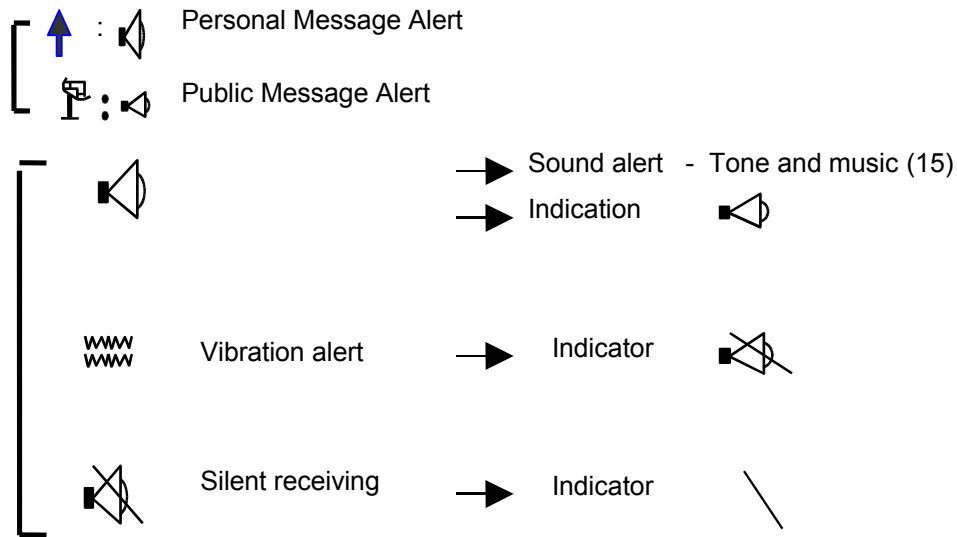

### 3-3. ON / OFF Pager :

« OFF »



 
Press « Function key » twice under the stand by mode



Press « Shift right key » twice



Press « Function key » to OFF the pager



« ON » Same as above steps.

### 3-4. Delete Message

Press « Function key » twice under stand-by mode



Press « Shift right key » three times



messages.

Press « Function key » to delete all messages  
In the memory except that unread and protected

 


### 3-5. Alarm Set :

Press « Function Key » twice under stand-by mode




Press « Shift right key » four times



Press « Function key » and then press « Shift right Key » twice



 Press « Function key »



Press « Shift key » to move the cursor and Press « Function Key » to set the data



Alarm Set : 1 – 3  
Hour : 1 – 24  
Minute : 00 – 59



: Alarm Indicator

And then press « Read Key » to return to stand-by mode

### 3-6. AUTO ON/OFF SET

Press « Function Key » twice



Press « Shift Key » four times






Press « Function Key » and then press « Shift Key » three times



Press « Function Key »





Press « Shift Key » to move the cursor and   
Press « Function Key » to set the ON/OFF time  
And  OFF or  ON, then press « Read Key »  
To return to stand-by mode

### 3-7. Timer Set :

Press « Function Key » twice



 
Press « Shift right key » four times



Press « Function Key » and then press « Shift Right Key » four times





Press « Function Key »



 - Down Counter

 - Up Counter

 - STOP

 - START



Press « Shift Key » to move the cursor and press « Function Key » to set the data and stop or start the counter, press « Read Key » to return to the stand-by mode

### 3-8. LCD Contrast Adjustment

Press « Function Key » twice



Press « Shift right Key » four times



Press « Function Key » and then



Press « Shift right key » 5 times, and then  
Press « Function key »



Press « Function key »  
Press « Function key » to adjust 1-21 for LCD  
Contrast and then press « Read key » to return to  
Stand-by model



### 3-9. Phone book set



Press « Function key » twice



Press « Shift right key » five times.



Press « Function key »





Press « Function key » and then  
Press « shift key » to select the set of phone book  
(00-99)



Press « Function key »



Press « Shift key », Press « Function key »,  
Press « Shift right key » to set the phone number  
and then press « Read Key » to return to stand-by



 
mode

### 3-10. 2/4 Line display set :

Press « Function key » twice



Press « Shift right key » 6 times



Press « Function key »






2 line display or press « Function key »  
To select 4 line display, Press « Read key »  
To return to stand-by mode



#### • Message receiving alert

Pager will alert the user accordingly to the alert set by the user (tone, music, vibratoion or silence)

When the message has been received, and pager will display  on the right top corner of LCD,  
And if the message is duplicate, then a  indicator will be shown beside the 

#### • 3 Minutes unread alert

Pager will alert user every 3 minutes if there is any message has not been read by the user

- **Alarm function alert**

Pager will alert and display as below when the alarm time arrived, then press « Read key »  
To return to stand-by mode.



 
- **Back light function**

Press and hold « Read key » for 2 seconds while reading the message, then the back light  
Will be on to help reading under the dark condition. The back light will be off automatically and return  
to the stand-by mode.

- **Low battery indicator**

Please replace a new battery asap when the low battery indicator

has been shown on the



## 4. Battery Replacement

### 4-1. Type of Battery -

Please use a good quality of AAA Alkaline 1.5V battery

### 4.2 Please Change a New Battery A.S.A.P-

When battery icon indicator has been displayed on the LCD of the pager

### 4.3 Battery Replacement

- A. Take out the battery cover according to the maker on the battery cover (dot and arrow)
- B. Then replace a new battery to the pager, (look out the ` + ` and ` - ` sign)  
And then replace the battery cover to the pager